

RSTS/E System Installation and Update Guide

Order Number: AA-2669J-TC

July 1989

This guide describes how to install and update a RSTS/E system.

Operating System and Version: RSTS/E V9.7

Software Version: RSTS/E V9.7

July 1989

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

© Digital Equipment Corporation 1989.

All Rights Reserved.
Printed in U.S.A.

The postpaid Reader's Comments forms at the end of this document request your critical evaluation to assist in preparing future documentation.

DATATRIEVE	FMS-11	RSX
DEC	LA	RT
DECmail	MASSBUS	UNIBUS
DECmate	PDP	VAX
DECnet	P/OS	VMS
DECsystem-10	Professional	VT
DECsystem-20	Q-Bus	Work Processor
DECtape	Rainbow	
DECUS	ReGIS	
DECwriter	RSTS	
DIBOL		digital [™]

IBM is a registered trademark of International Business Machines Corporation.

Contents

Preface	xiii
---------------	------

Introduction to System Installation	1
What Is System Installation?	1
Initialize System Disk (DSKINT)	1
RSTS/E Monitor	2
Run-Time Systems and Resident Libraries	2
System Programs	3
Layered Products	3
Types of System Installation	3
Dialogue Format	4
How to Use This Guide	5

Part 1 Installation

Installing RSTS/E V9.7 on a New System	9
Structure of Part 1	10
Phase 1: Getting Started	10
Phase 2: Prepare System	10
Phase 3: Configure RSTS/E Monitor	10
Phase 4: Select RSTS/E System Programs	10
Phase 5: Generate RSTS/E System	10
Phase 6: Create Accounts and Edit System Startup File	10
Phase 7: Start RSTS/E Monitor	10
Phase 8: Optional Tasks	11
System Installation Flowchart	11

Phase 1	Getting Started	
	Task 1: Collect Distribution Kits and Documentation	16
	Task 2: Physically Mount and Bootstrap Installation Media	17
	Tape Mount Session	17
	Disk Mount Session	17
	Bootstrap V9.7 Installation Media	18
Phase 2	Prepare System	
	Task 1: Physically Mount Target System Disk	22
	Task 2: Answer Preliminary INIT.SYS Questions	23
	Terminal Session	23
	Task 3: Initialize System Disk (DSKINT)	24
	Terminal Session	24
	Task 4: Start SYSGEN Monitor (START)	35
	Terminal Session	35
Phase 3	Configure RSTS/E Monitor	
	Task 1: Answer Preliminary Configuration Questions	38
	Terminal Session	38
	Task 2: Answer Disk Units Configuration Questions	43
	Terminal Session	43
	Task 3: Answer Peripheral Devices Configuration Questions	47
	Terminal Session	47
	Task 4: Calculate Number of Jobs	51
	Preparation Session	51
	Task 5: Answer Software Tuning and Features Configuration Questions	53
	Terminal Session	53
Phase 4	Select RSTS/E System Programs	
	Task 1: Answer System Program Installation Questions	56
	Terminal Session	57
	Task 2: Answer Layered Product-Related Questions	61
	Terminal Session	61

Phase 5	Generate RSTS/E System	
	Task 1: Create Additional System Files	64
	Terminal Session	64
	Task 2: Create RSTS/E Monitor	66
	Terminal Session	66
	Messages Produced While Building a RSTS/E Monitor	66
	Task 3: Install System Programs from the Installation Media	68
	Terminal Session	68
	Task 4A: Answer BASIC-PLUS Installation Questions	72
	Terminal Session	72
	Task 4B: Answer SORT/MERGE Installation Questions	75
	Terminal Session	75
Phase 6	Create Accounts and Edit System Startup File	
	Task 1: Create the System Management Account (CREATE/ACCOUNT)	82
	Terminal Session	82
	Task 2: Create User Accounts (CREATE/ACCOUNT)	83
	Terminal Session	83
	Task 3: Edit System Startup File	84
	Terminal Session	84
Phase 7	Start RSTS/E Monitor	
	Task 1: Shut Down SYSGEN Monitor (SHUTUP)	88
	Terminal Session	88
	Task 2: Start RSTS/E Monitor (START)	89
	Terminal Session	90
Phase 8	Optional Tasks	
	Task 1: Reposition System Program Packages	94
	Terminal Session	94
	Task 2: Apply Any Mandatory Patches	96

Installation Example

System Installation Example	99
-----------------------------------	----

Part 2 Upgrade

Installing RSTS/E on a Pre-V9.0 System	109
--	-----

Part 3 Online

Performing an Online System Installation	121
INSTAL.COM Entry Points	122
Online Installation Example	122

Part 4 Update

Updating a RSTS/E V9.0 through V9.6 System	127
Structure of Part 4	127
Phase 1: Getting Started	127
Phase 2: Prepare System	127
Phase 3: Configure New Monitor and Select Software Updates	128
Phase 4: Generate New System	128
Phase 5: Start New Monitor	128
Phase 6: Optional Tasks	128
System Update Flowchart	128

Phase 1	Getting Started	
	Task 1: Back Up System Disk (BACKUP)	132
	Task 1A: Back Up Nonsystem Disk (BACKUP)	132
	Task 2: Shut Down Current Monitor (SHUTUP)	133
	Terminal Session	133

Phase 2	Prepare System	
	Task 1: Physically Mount and Bootstrap Installation Media	136
	Tape Mount Session	136
	Disk Mount Session	136
	Bootstrap Installation Media	137
	Use the INIT.SYS BOOT Option	137
	Use the Hardware Bootstrap Loader	138
	Task 2: Copy Files to System Disk (COPY)	140
	Terminal Session	140
	COPY Error Messages	142
Phase 3	Configure New Monitor and Select Software Updates	
	Task 1: Answer Preliminary Questions	144
	Terminal Session	144
	Task 2: Use Information from a Template Monitor	146
	Terminal Session	146
	Task 3: Answer System Program Update Questions	149
	Terminal Session	149
	Task 4: Answer Layered Product Update Questions	152
	Terminal Session	152
Phase 4	Generate New System	
	Task 1: Create RSTS/E Monitor	156
	Terminal Session	156
	Task 2: Update System Programs and Transfer Layered Product Updates	159
	Terminal Session	159
Phase 5	Start New Monitor	
	Task 1: Shut Down SYSGEN Monitor (SHUTUP)	164
	Terminal Session	164
	Task 2: Start New RSTS/E Monitor (START)	166
	Terminal Session	166
Phase 6	Optional Tasks	
	Task 1: Perform a Selective Update	170
	UPDATE.COM Entry Points	170
	Selective Update Example	171

Part 5 Offline Options

Offline Options	175
BOOT—Bootstrap Devices	177
BOOT Dialogue	177
BOOT Error Messages	177
DATE—Set the Date and Time Format	178
DATE Dialogue	178
DEFAULT—Change RSTS/E Monitor Defaults	179
DEFAULT Dialogue	179
DEFAULT Suboptions—Adjust the Memory Allocation Table	181
LIST—List the Memory Allocation Table	181
LIST Dialogue	181
PARITY—List the Parity Memory Configuration	182
PARITY Dialogue	183
LOCK—Lock a Portion of Memory	184
LOCK Dialogue	184
Using the LOCK Suboption	185
UNLOCK—Unlock a Portion of Memory	186
UNLOCK Dialogue	186
RESET—Reset the Memory Allocation Table	187
RESET Dialogue	188
XBUF—Allocate Memory to the Extended Buffer Pool	188
XBUF Dialogue	189
Extended Buffer Pool Background Information	190
Extended Buffer Pool Worksheet	195
BUFFERS—Allocate Memory to the Small Buffer Pool	197
BUFFERS Dialogue	197
Small Buffer Pool Background Information	199
General and FIP Small Buffer Pool Worksheet	205
DSKINT—Initialize RSTS/E Disks	207
DSKINT Dialogue	207
DSKINT Error Messages	215
HARDWR—Adjust the Hardware Configuration	217
HARDWR LIST—List the Hardware Configuration Table	217
LIST Dialogue	217
HARDWR ECO—Show revision level of MSCP and TMSCP controllers	222
ECO Dialogue	222
HARDWR DISABLE—Disable a Device Controller	223
DISABLE Dialogue	223
HARDWR ENABLE—Enable a Device Controller	225
ENABLE Dialogue	225
HARDWR CSR—Declare a Nonstandard Controller Address	226
CSR Dialogue	227
HARDWR VECTOR—Declare a Nonstandard Vector Assignment	227
VECTOR Dialogue	229
HARDWR RESET—Set All Vector and CSR Addresses to the Standard, and Enable All Devices	229
RESET Dialogue	230

HARDWR DM—Declare DM11-BB and DH11 Associations	230
DM Dialogue	231
HARDWR HERTZ—Specify AC Line Frequency	231
HERTZ Dialogue	231
HARDWR SWITCH—Specify CPU Switch Register Characteristics	232
SWITCH Dialogue	233
HARDWR Error Messages	233
 IDENT—List the Version Number and Patch Information	235
IDENT Dialogue	235
 PATCH—Install a Patch	236
PATCH Dialogue	236
PATCH Error Messages	238
 REFRESH—Perform File-Related Tasks	239
REFRESH Error Messages	239
System File Background Information	240
REFRESH LIST—List File Status Table	245
LIST Dialogue	245
REFRESH FILE—Change Account [0,1] File Characteristics	247
FILE Dialogue	248
REFRESH BADS—Expand the Bad Block File	249
BADS Dialogue	249
 SAVRES—Restore and Copy Disks	251
RESTORE—Recreate a Disk From Tape or Disk	253
RESTORE Dialogue	254
IDENTIFY—Extract Label Information	257
IDENTIFY Dialogue	257
IMAGE - Make a Copy of a Disk	259
IMAGE Dialogue	259
 START—Start a RSTS/E Monitor	263
START Dialogue	263

Part 6 Appendixes

Appendix A System Installation Error Messages

Initialization Code Error Messages	267
--	-----

Appendix B Address and Vector Assignments

Floating Addresses	285
Floating Address Worksheet	286
Using the Worksheet	287
Floating Vectors	293
Fixed Addresses and Vectors	294
RH70 BAE and CS3 Addresses	296

Appendix C RSTS/E System Files

RSTS/E System Files	297
---------------------------	-----

Appendix D Bootstrapping the Distribution Medium

Bootstrapping Magnetic Tape Distribution	305
Bootstrapping Disk Distribution	306
Hardware Bootstrap Procedures	306
BM873-YA Procedure	307
BM873-YB Procedure	308
H324 Pushbutton Panel Procedure	308
MR11-DB Procedure	308
BM792-YB Procedure	308
M9301-YA and M9301-YB Procedures	309
M9301-YC Procedure	309
M9301-YF Procedure	310
M9312 Procedure	311
Using the M9312 Console Emulator	311
Determining the M9312 Bootstrap ROM Configuration	312
Bootstrapping with the M9312	314
Load Program Bootstrap for the RL01/RL02 and RK06/RK07	315
Load Program Bootstrap for the TU10, TE10, or TS03	317
Bootstrap Procedures for the 11/73, 11/83, or 11/84	318

Appendix E Additional System Installation-Related Programs

Using the BUILD/PATCH Program	319
Using the DSKCVT Program	320
Using the ONLPAT Program to Patch RSTS/E Binary Code	322
Using ONLPAT in Keyboard and Command File Mode	322
ONLPAT Dialogue Questions	323
Patching a Running Monitor with ONLPAT	325
Building ONLPAT Command Files	326

Appendix F Mixed Disk Drives on the Same Controller

Mixing RK06 and RK07 Drives on the Same Controller	327
Mixing RL01 and RL02 Drives on the Same Controller	327
Mixing RM02/RM03/RM05/RM80 Drives on the Same Controller	327
Mixing RM02/RM03/RM05/RM80 and RP04/RP05/RP06 Drives on Separate Controllers	328
Mixing RM02/RM03/RM05/RM80 and RP04/RP05/RP06 Drives on the Same Controller	328

Multiple RH Controllers for the Same Type of Disk	328
Random Mixing of RP and RM Disks on Multiple Controllers	329
Bootling Mixed RM02/RM03/RM05/RM80 and RP04/RP05/RP06 Disks	329
Avoiding Bootstrap Conflicts	329

Index

Figures

1	Video Terminal Display with a Prompt	4
2	Video Terminal Display with a Dynamic Message	5
3	System Installation Flowchart	13
4	Job Calculation Worksheet	52
5	System Upgrade Flowchart	111
6	System Update Flowchart	129
7	Extended Buffer Pool for Example RSTS/E System	191
8	Extended Buffer Pool Worksheet	196
9	Example Small Buffer Table Printed During System Installation	198
10	General and FIP Small Buffer Pools	200
11	General and FIP Small Buffer Pool Worksheet	206
12	System File Creation Worksheet	245
13	Floating Address Worksheet	289

Tables

1	Tape Device Designators	19
2	Bootable Disk Device Designators	19
3	Disk Pack Cluster Sizes	27
4	Device Cluster Sizes and Total Device Sizes	29
5	System Program Packages	56
6	System Program Package Logical Names	68
7	BASIC-PLUS Optional Features	73
8	Monitor Defaults	89
9	System Program Package Logical Names	94
10	INSTAL.COM Entry Points	122
11	Tape Device Designators	138
12	Bootable Disk Device Designators	139
13	System Program Package Logical Names	149
14	INIT.SYS Selected Defaults	166
15	UPDATE.COM Entry Points	171
16	INIT.SYS Options	175
17	Disk Pack Cluster Sizes	209
18	Device Cluster Sizes and Total Device Sizes	211
19	Hardware Comments Table	219
20	Summary Hardware Configuration Table	221
21	Reserved Hardware Locations	228

22	Possible Input to the PATCH Option	237
23	Summary of System File Creation	241
24	Swap Times	243
25	Device Vector Assignments	293
26	Devices with Fixed Addresses and Vectors	295
27	RH70 BAE and CS3 Addresses	296
28	Summary of Hardware Bootstrap Addresses	307
29	Device Codes for M9301-YA and M9301-YB Bootstraps	309
30	Device Codes for M9301-YC Bootstrap	310
31	Device Codes for M9301-YF Bootstrap	310
32	M9312 ROM Arrangement	311
33	ROM Locations	312
34	M9312 Bootstrap ROM Configuration	313
35	Device Name and Mnemonic	314
36	Switch Register Codes (SWR)	315
37	Console Switch Register Settings	315
38	Bootstrap Routines for the RL01/RL02 and the RK06/RK07	316
39	Responses to ONLPAT Questions	323

Preface

Objective

This guide provides a task-oriented procedure for RSTS/E system installation and update.

Audience

The audience for this guide includes:

- Anyone installing RSTS/E for the first time
- Anyone upgrading to RSTS/E V9.7 from a pre-V9.0 version of RSTS/E
- Anyone updating an existing RSTS/E V9.0 through V9.6 system
- Anyone performing an online or partial system installation

In addition, Part 5 of this guide provides reference material on all the INIT.SYS options and suboptions. System managers will find this section useful for system tuning.

Document Structure

The guide is divided into six parts:

Part 1	Tells how to build a new RSTS/E system. It is divided into seven phases plus one optional phase, each consisting of one or more tasks. A summary of the installation procedure is printed at the end of Part 1.
Part 2	Explains how to perform a system installation to upgrade an existing pre-V9.0 RSTS/E system to V9.7.
Part 3	Explains how to perform an online system installation to create a new monitor, install system programs, or perform a full installation.
Part 4	Explains how to update an existing V9.0 through V9.6 system to a new release. It is divided into five phases plus one optional phase, each consisting of one or more tasks.
Part 5	Is a reference section that describes the INIT.SYS offline options.
Appendixes	Appendixes A through F contain supplemental information that you may need for your particular installation.

Related Documents

You may find the following documents useful while performing a system installation:

- *RSTS/E V9.0 through V9.7 Release Notes*
- *RSTS/E System Manager's Guide*
- *RSTS/E Software Dispatch*

Conventions

This guide uses the following symbols and conventions:

<code>[RET]</code>	Represents a carriage-return/line-feed combination. Press the <code>[RETURN]</code> key on your keyboard to produce this combination.
<code>[CTRL/x]</code>	Represents the CTRL key and some other keyboard character. For example, to enter CTRL/U, hold down the <code>[CTRL]</code> key and press the key labeled "U." RSTS/E echoes or displays the character at your terminal as ^U.
<code>^</code>	Indicates the circumflex key.
<i>Italics</i>	Indicates that a definition follows the italicized technical term.
color	Red print indicates the response made in the example installation. Your response may differ from the response given in the example installation.

Introduction to System Installation

This section explains some basic concepts about system installation. It also explains how to use this guide.

What Is System Installation?

System installation is the process by which you create a RSTS/E system for your requirements. This includes:

- Optionally testing and initializing disk volumes
- Tailoring a RSTS/E monitor
- Installing one or more run-time systems
- Installing system programs
- Installing layered products

The following sections briefly explain each of these items.

Initialize System Disk (DSKINT)

You initialize the system disk using the DSKINT routine. This routine is an INIT.SYS program option.

DSKINT:

- Optionally formats some disks; this writes timing and sense marks on the disk and destroys any previously stored information.
- Optionally checks the disk for bad blocks. DSKINT locates bad blocks on the disk and allocates them to the bad block file (BADB.SYS).
- Writes a minimum RSTS/E file structure on the disk. The minimum RSTS/E file structure contains a pack label and five directories:
 - The Master File Directory (MFD)
 - The Group File Directory (GFD) for groups 0 and 1
 - The User File Directory (UFD) for account [0,1] and [1,2]
 - The RSTS/E file structure prepares the disk to accept RSTS/E system and other files.

RSTS/E Monitor

The RSTS/E monitor is a set of routines that controls:

- System scheduling - RSTS/E stands for Resource Sharing Time Sharing/Extended. This means the monitor makes sure that all users can work simultaneously without interruption or interference. For example, they can run and create programs, creating programs, access data files, or work with a text editor.
- Memory management - The monitor makes sure that computer memory is used efficiently.
- Input/output (I/O) services - The monitor handles requests to and from a wide variety of I/O devices, including disks, tapes, terminals, and DECnet networks.
- Device management - Your installation probably has a variety of hardware, such as tape drives, line printers, and disk drives. The monitor controls these hardware devices.
- Monitor directives - Monitor directives compose the functions available to user programs on RSTS/E. RSTS/E contains a rich set of monitor directives to simplify program development.

The RSTS/E system is designed to operate in a wide variety of environments. RSTS/E has many configuration options which may be used to tailor the RSTS/E system to your environment. Some options must be set during the installation process; others may be modified at any time. RSTS/E provides defaults for most of these options (determined by analyzing the system configuration) and additionally configures itself for certain system characteristics.

To get you started, DIGITAL supplies a temporary RSTS/E monitor (called the SYSGEN monitor) on the installation media. This monitor is prebuilt and requires no tailoring during system installation. Use it to build your RSTS/E system. After you build your own custom monitor, you no longer need the SYSGEN monitor. The installation procedure will shut down the SYSGEN monitor and automatically start your new monitor if you choose to do so. You can also perform the shut down and new monitor start at your convenience after the installation.

Run-Time Systems and Resident Libraries

A run-time system is software that provides a user interface and/or programming environment. Resident libraries are common routines used by various programming languages.

The run-time systems that DIGITAL supplies with RSTS/E are:

- DCL
- RSX
- BASIC-PLUS
- RT11

DCL is the default keyboard monitor.

You must have the CSPLIB resident library installed on your system because most of the system programs use CSPLIB.

System Programs

System programs provide you with tools for performing common tasks. For example, system programs allow you to efficiently develop programs, manage files, and perform special system management-related tasks. Some system programs are required on all RSTS/E systems while others are optional. During installation, you select which system program packages you want. Additionally, there are certain options you select about system programs during installation as well as bundled software packages that run on a RSTS/E system. These include RMS, EDT, SORT, and other packages.

Layered Products

A layered product, also called optional software, is software that you must purchase from DIGITAL. You can build layered products after you complete the system installation by processing the appropriate command file. Examples of optional software are BASIC-PLUS-2, COBOL-81, and DIBOL.

Types of System Installation

This guide describes four types of system installations:

- **New** - In this type of system installation, you create a RSTS/E system disk, tailor a RSTS/E monitor, install one or more run-time systems and resident libraries, install the required system programs, and install any other optional system programs.
- **Upgrade** - In this type of system installation, you upgrade a V8.0 or earlier version of the monitor to a V9.7 system. This system installation differs from the previous one in that you must perform tasks to move your old system disk to a new format disk using either the disk conversion utility (DSKCVT) or other methods to transfer data from the old disk.
- **Online** - In this type of system installation, you reinstall selected RSTS/E components during timesharing on a previously installed V9.7 system. Note that you cannot perform an online system installation to install a V9.7 system from a V9.6 or earlier system. Online installations are done to change selections made during a previous installation.
- **Update** - In this type of system installation, you update an existing V9.7 system to a new release. When you receive new Installation Kits from DIGITAL, use these procedures to update your present V9.6 system to a V9.7 system.

Another type of system installation is:

- **System installation for another PDP-11** - In this type of installation, you build a RSTS/E monitor on one PDP-11 for use on another PDP-11. This is called a "target" build. This means you must know the hardware characteristics of the PDP-11 for which you are building the RSTS/E system.


Dialogue Format

The installation and update dialogue format used in this manual assumes you are running the procedure from a hardcopy terminal. However, you can run the procedure from a video terminal. In this case, the dialogue format will be different. The top part of the screen is reserved for header information, which keeps you informed about progress through the phases of the procedure. The bottom part of the screen is reserved for prompts and status and error messages. The middle part of the screen displays the remaining general information as the procedure progresses through its phases. Figures 1 and 2 show two typical display examples.

Figure 1: Video Terminal Display with a Prompt

RSTS/E V9.7 Software Installation Procedure		13-Jun-89 09:31 AM
Dialogue Phase		
Please enter the name and unit number of the disk to which you want to install the software. This disk should be physically mounted and write-enabled.		
Target disk? <_SY:>		

Figure 2: Video Terminal Display with a Dynamic Message

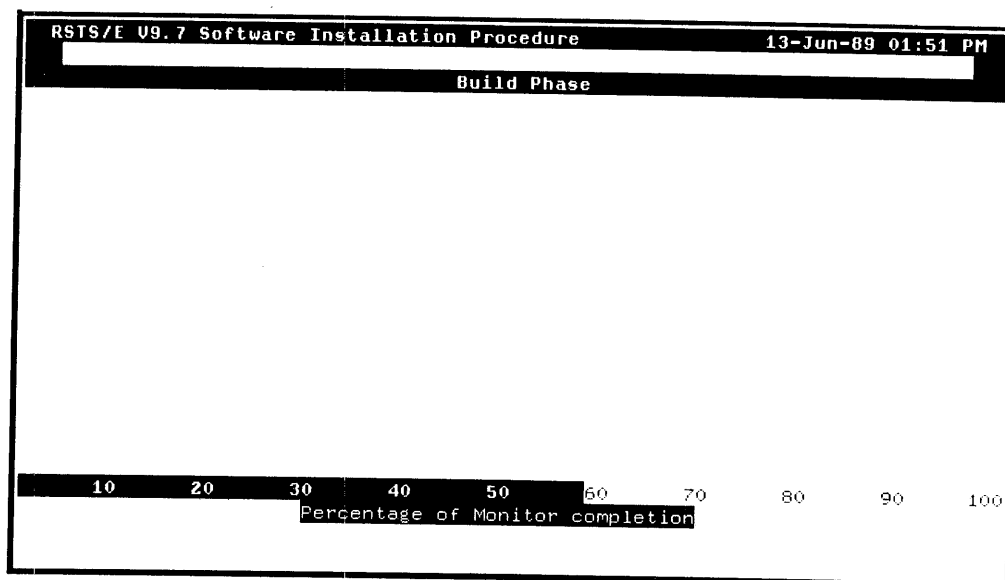

How to Use This Guide

The *RSTS/E System Installation and Update Guide* focuses on the tasks you must perform to install or update your system, rather than the option or program used to complete the task. The guide is divided into six parts:

- Part 1 tells how to build a new RSTS/E system. It is divided into seven phases plus one optional phase, each consisting of one or more tasks. This logical division of phases makes it easier to understand the process of system installation. A summary of the installation procedure is printed at the end of Part 1.
- Part 2 explains how to perform a system installation to upgrade an existing pre-V9.0 RSTS/E system to V9.7.
- Part 3 explains how to perform an online system installation to create a new monitor or perform a partial installation.
- Part 4 explains how to update an existing V9.5 system to a V9.7 release. It is divided into five phases plus one optional phase, each consisting of one or more tasks.
- Part 5 is a reference section that describes the INIT.SYS offline options.
- Appendixes A through F contain supplemental information that you may need for your particular installation.



**Part I:
Installation**

Insert tabbed divider here. Then discard this sheet.



Part 1

Installation



Installing RSTS/E V9.7 on a New System

This part describes the tasks you must perform to install a new RSTS/E V9.7 system. This part of the guide is for users who are less experienced and knowledgeable about performing a system installation. It also provides an example installation for use as an aid in explaining the tasks.

Some tasks require you to load and unload tapes or disks, depending on the RSTS/E installation kit you received. Other tasks require you to answer questions and to make decisions about some of the questions you need to answer.

The method of explanation depends on the type of task you perform. In tasks requiring you to load a tape or disk, the guide gives you general loading instructions.

In tasks requiring you to answer questions and make decisions about the answers to those questions, this guide first gives you any necessary background information, followed by a terminal session. Each terminal session explains the question and gives some possible responses. The response in red next to the question is from an example installation. Use the example installation as a guide when you are building your RSTS/E monitor. The example installation has the following characteristics:

- CPU: PDP-11/44
- Memory: 512K words
- System Disk: RA80
- RSTS/E Distribution Kit: 1600 bpi magnetic tape
- Installation Kit: V9.7

Your responses may differ from the ones you see in the example installation. The following example question is from a terminal session:

Disk? DU

Explanation—This question asks for the device designator of your system disk.

Response—Acceptable responses for the system disks are: DL, DM, DP, DR, DB, or DU. In the example installation, the response is DU because the system disk is an RA80.

In addition to the explanation in the guide, you also have access to online explanations. To print the online explanation of a question on your console terminal, type a question mark (?).

Structure of Part 1

Part 1 of this guide divides system installation into seven phases plus one optional phase, where each phase consists of one or more tasks. For convenience, all the tasks in a phase appear at the start of that section.

The contents of each phase follow:

Phase 1: Getting Started

Provides instructions on collecting the required installation kits and documentation, checking the kit order numbers, and physically mounting and bootstrapping the Installation tape or disk.

Bootstrap instructions are in Appendix C. However, Phase 1 contains an example of bootstrapping.

Phase 2: Prepare System

Describes how to mount, initialize, and copy files to your system disk. It also explains how to start the SYSGEN monitor.

Phase 3: Configure RSTS/E Monitor

Explains how to answer the configuration questions that determine the hardware and software your RSTS/E monitor will support.

Phase 4: Select RSTS/E System Programs

Describes how to select system programs. It also explains how to select layered product updates that will be transferred later.

Phase 5: Generate RSTS/E System

Explains how to generate the RSTS/E monitor. It also describes how to install system programs and transfer layered product updates. Finally, it describes the dialogue to install BASIC-PLUS and SORT/MERGE.

Phase 6: Create Accounts and Edit System Startup File

Describes how to tailor the START.COM file and create user accounts.

Phase 7: Start RSTS/E Monitor

Explains how to shut down the SYSGEN monitor and start the new RSTS/E monitor.

Phase 8: Optional Tasks

Explains how to relocate system program packages or apply a mandatory patch. This is an optional phase.

System Installation Flowchart

Figure 3, the System Installation Flowchart, summarizes the installation phases and tasks. You may want to use this flowchart while performing the system installation.



Phase 1 Getting Started

This phase describes the tasks you must perform to prepare for a RSTS/E system installation.

The tasks in this phase are:

- Task 1: Collect Distribution Kits and Documentation
- Task 2: Physically Mount and Bootstrap Installation Media

Task 1: Collect Distribution Kits and Documentation

DIGITAL sends you one of the following distribution kits:

- *A Kit* - for new RSTS/E customers. Contains complete RSTS/E documentation, all RSTS/E Release Notes, RSTS/E V9.7 Installation Kit, and all purchased optional software kits.
- *H Kit* - for those whose service contract or warranty has expired, for those who have purchased additional CPUs, or for customers who only need to update their system. Contains complete RSTS/E documentation, all RSTS/E Release Notes, RSTS/E V9.7 Installation Kit, and all purchased optional software kits.
- *W Kit* - for those under warranty or software product service contract. Contains complete RSTS/E documentation, RSTS/E V9.7 Installation Kit, and all purchased optional software kits (only if the original version has changed).

To perform a system installation, collect the following items from the A, H, or W kit:

- *RSTS/E V9.7 Installation Kit* - Consists of the tape or disk that contains feature and mandatory patches and replacement modules. It also contains the programs and files you need to perform a system installation. You receive this kit for every new release of RSTS/E. The kits are labeled V9.5, V9.6, V9.7, and so forth. Because each kit is cumulative, use only the most current one. For example, the V9.7 Installation Kit would contain all the patches and replacement modules that were on Kits V9.5 and V9.6, plus some new patches and replacement modules.
- *Kit(s)* - Optional software, also called layered products, is purchased separately from the RSTS/E Distribution Kit. Examples of optional software are COBOL-81, BASIC-PLUS-2, and DIBOL. Purchase optional software from an original equipment manufacturer or directly from DIGITAL. Each optional software kit consists of the disk or tape that contains the programs and files you need to install the optional software, along with the appropriate documentation and installation guide. Ensure that you have the appropriate version by checking the SPD Layered Product cross-reference chart.
- *RSTS/E V9.0 through V9.7 Release Notes* - Explains the differences between the most current and previous versions of RSTS/E.

You may want to keep the following items nearby for use as reference material:

- *RSTS/E System Manager's Guide* - Describes how to operate and manage a RSTS/E system. Refer to this manual during system installation for more information about creating accounts and editing the system startup file. Also use this manual to help manage your system on a day-to-day basis.
- *RSTS/E Software Dispatch* - Contains new and revised software product descriptions (SPD), programming notes, patches and announcements for system programs and optional software, and documentation corrections.

If one or more of these items is missing, contact your local DIGITAL software support specialist.

Check the order numbers that appear on the tapes or disks that make up your RSTS/E V9.7 Installation Kit to be sure they match the order numbers that appear in the *RSTS/E Release Notes*. To check the order numbers of any other optional software kits, refer to the bill of materials.

Go to Task 2.

Task 2: Physically Mount and Bootstrap Installation Media

This task requires you to mount and bootstrap the appropriate tape or disk from your RSTS/E Distribution Kit. First, the task provides instructions for mounting the tape on a tape drive, or mounting a disk on a disk drive. Choose the appropriate section for your type of installation media. Second, the task provides an example of bootstrapping the tape or disk.

In the example installation, the kit is a RSTS/E V9.7 Installation Kit, consisting of a 9-track, 1600 bits per inch (bpi) tape.

Tape Mount Session

Mount the 800 or 1600 bpi 9-track tape from your RSTS/E Distribution Kit that has the label V9.7 Installation. This tape contains the system installation files and programs. Note that there may be other programs and files on this tape.

To load the tape on the drive:

1. Physically mount the tape on drive unit 0 with the write-enable ring removed. If you have an 800 bpi distribution tape, mount it on unit 0 or 1 of the TE10 or TU10 tape drive. If you have a 1600 bpi distribution tape, mount it on unit 0 or 1 of the TU16, TE16, TU45, TU77, TS11, TSV05, TU80, or TU81 tape drive. If you have a TK50 installation medium, mount it on unit 0 or 1 of the TK50 tape drive.
2. Press the LOAD indicator.
3. The drive automatically winds the tape until the beginning of tape (BOT) indicator light comes on. This indicates the tape is at its load point.
4. Make sure that the write-lock (WR) indicator light is on. (If not, dismount the tape, remove the write-enable ring, and then remount the tape.)
5. Press the ONLINE indicator. The indicator light comes on.
6. Make sure the console terminal is on line. The console terminal is usually a hard-copy terminal that you use during system installation.

NOTE

If the previous instructions do not apply to your tape drive, see the hardware manual supplied with your tape drive for the load instructions.

The tape drive **MUST** be write-protected and online for the installation to proceed properly.

Disk Mount Session

Mount the disk from your RSTS/E Distribution Kit that has the label V9.7 Installation. This disk contains the system installation programs and files. Note that this disk may also contain other files and programs.

To load the disk onto the disk drive:

1. Physically mount the disk in drive unit 0 or 1. If you have an RL02 disk, you can mount the disk in any drive unit.
2. Make sure that the READY light is on.

3. Make sure that the write-protect (WR PROT) light is on.
4. Make sure that the console terminal is on line. The console terminal is usually a hard-copy terminal that you use during system installation.

Bootstrap V9.7 Installation Media

Now you must bootstrap the tape or disk, which means using the PDP-11 hardware bootstrap loader to activate the installation media. There are different types of hardware bootstrap loaders. If you do not know how to bootstrap the V9.7 Installation media, see Appendix C, which contains bootstrap instructions for most of the different types of hardware bootstrap loaders.

The hardware bootstrap loader is a device inside your PDP-11 that reads a bootstrap record from the tape or disk into memory. This bootstrap record contains a program that loads and executes additional program code from the tape or disk.

Your DIGITAL field service representative or software support specialist should already have identified the type of hardware bootstrap loader on your PDP-11. The representative should also have given instructions for bootstrapping your tape or disk.

The example installation shows how to bootstrap the 1600 bpi tape from a TU80 tape drive. These bootstrap instructions are:

1. Move the control switch (CONT) to the HALT position.
2. Move the control switch to the BOOT position.

The CPU prints some octal numbers on the console terminal, followed by three angle brackets:

```
>>>B MS0
```

The >>> prompts for a command. Type B to indicate a BOOT operation, followed by the device designator or device specification of the drive on which your tape or disk is mounted. A device designator consists of two letters that identify the device type, followed by the decimal unit number of the drive and a colon. (However, do not specify a colon here.) The example installation uses a TU80 tape drive: thus, the tape device designator is MS0.

Table 1 lists the tape device designators. Table 2 lists the bootable disk device designators. Enter the appropriate device designator for your installation.

The following are general guidelines for the time required for the next step:

1. Disks boot quickly.
2. Tapes boot medium quickly.
3. TK50 boots very slowly.

Anywhere from 30 seconds to 10 minutes after you type the device designator, the following prints on the console terminal:

```
Performing limited hardware scan.  
RSTS V9.7 (MS0)  INIT V9.7  
Today's date?
```

The "Today's date?" prompt means that INIT.SYS is loaded into memory. You have successfully bootstrapped your installation media. Note that the device designator of the tape or disk drive you bootstrapped appears within parentheses. In the example installation, the device designator is MS0.

Note that the time required for this step varies according to the bootable device you use and the size of your system. The following are some more specific guidelines for the time for this step:

- If you are booting a disk such as an RL02 or RK07, this step should take less than 30 seconds.
- If you are booting a TK50 on a large system with many devices attached, this step could take up to 10 minutes.

Table 1: Tape Device Designators

Designator	Devices Available During Installation
MM0: to MM1:	TE16/TU16/TU45/TU77 magnetic tape units 0 or 1
MS0: to MS1:	TS11/TSV05/TU80/TK25 ¹ magnetic tape units 0 or 1
MT0: to MT1:	TE10/TU10/TS03 ² magnetic tape units 0 or 1
MU0: to MU1:	TK50/TU81/TU81-PLUS magnetic tape units 0 or 1

¹ — Note: You cannot use a TK25 drive for system installation.
² — Note: You cannot use a TS03 drive for system installation.

Table 2 lists the bootable disk device designators.

Table 2: Bootable Disk Device Designators

Designator	Devices Available During Installation
DB0: to DB1:	RP04/RP05/RP06 disk drive units 0 or 1 ¹
DL0: to DL3:	RL01/RL02 disk drive units 0 to 3
DM0: to DM1:	RK06/RK07 disk drive units 0 or 1
DR0: to DR1:	RM02/RM03/RM05/RM80 disk drive units 0 or 1 ¹
DU0: to DU15:	RA60/RA80/RA81/RA82/RCF25/RC25/RD31/RD32/RD51/ RD52/RD53/RD54/RX33/RX50 disk drive units 0 to 15

¹ — See Appendix F for more information on multiple RH controller (otherwise known as DB and DR controllers) configurations.

Go to Phase 2.



Phase 2

Prepare System

After you bootstrap the V9.7 Installation tape or disk, you are ready to prepare your system for the installation. First you prepare your system disk. The system disk is the disk on which your RSTS/E monitor will reside. Nonsystem disks store other files and programs that might not fit on the system disk. Next you start the SYSGEN monitor, a prebuilt monitor supplied by DIGITAL. You use the SYSGEN monitor to generate your new monitor.

The tasks in this phase are:

- Task 1: Physically Mount Target System Disk
- Task 2: Answer Preliminary INIT.SYS Questions
- Task 3: Initialize System Disk (DSKINT)
- Task 4: Start SYSGEN Monitor (START)

Task 1: Physically Mount Target System Disk

Mount your system disk on a free drive, either 0 or 1. If you are performing an installation for another system, mount the target system disk instead.

NOTE

Unless your system disk is a DU or DL class device, you must mount your system disk (as well as your V9.7 Installation tape or disk) on drive 0 or 1 because the SYSGEN monitor recognizes only units 0 and 1 of each device type. For example, if you mount your system disk on drive 2 at this stage, the SYSGEN monitor fails during startup.

If your disk is a DL class device, you can mount it on any disk drive (0, 1, 2, or 3). If your disk is a DU, then you can mount it on disk drive 0 through 15. See Table 2 for a list of disk device designators.

Follow either the disk mount instructions in Task 2 of Phase 1 or the disk mount instructions in the appropriate hardware manual. Do not remove the V9.7 Installation tape or disk that contains the system installation programs and files.

Go to Task 2.

Task 2: Answer Preliminary INIT.SYS Questions

Your next task is to answer the Date and Time questions, and then to answer the preliminary INIT.SYS questions.

Terminal Session

You have now successfully bootstrapped your V9.7 Installation media, and the INIT.SYS program is loaded into memory. INIT.SYS prints its banner, and prompts you for the date and time.

```
RSTS V9.7 (MS0) INIT V9.7
```

```
Today's date? 13-Jun-89
```

```
Current time? 05:00 AM
```

Explanation—INIT.SYS prompts you for a valid date and time. You see the date and time prompts when you bootstrap a disk from the console boot/restart switch.

If you specified the date and time at some earlier point and you used the BOOT option of INIT.SYS to bootstrap the disk, then INIT.SYS simply displays today's date and time before proceeding to the next prompt.

Response—Type today's date and time in either of the RSTS/E date and time formats. Type a question mark (?) to print an online explanation of the response formats for this question on your console terminal.

```
Installing RSTS on a new system disk? <Yes> 
```

Explanation—INIT.SYS asks this question whenever you bootstrap a tape or disk read-only. (RSTS/E Distribution Kits are always read-only.) If you answer YES, INIT.SYS assumes you are performing a new V9.7 installation and you want to use the DSKINT option to initialize your system disk. INIT.SYS then prompts you for the location of the system disk.

If you answer NO, INIT.SYS asks if you are updating an existing RSTS system disk before proceeding with a COPY operation.

NOTE

In V9.0 or later, any system or public disk must be a RDS1.2 format disk. Answer YES to this question if you are performing a new installation. If you are upgrading to V9.7 from a pre-V9.0 release of RSTS/E, see Part 2 of this guide for instructions.

Response—Type YES or press to proceed with the disk initialization. Because the example installation is a new RSTS/E V9.7 installation, the response is to accept the default of YES.

If you answered YES to the previous question, go to Task 3.

If you answered NO to the previous question, go to Task 4.

Task 3: Initialize System Disk (DSKINT)

Your next task is to initialize the system disk with DSKINT, an INIT.SYS program option. DSKINT:

- Optionally formats some disks. DSKINT writes timing and sense marks on the disk and destroys any previously stored information.
- Optionally checks the disk for bad blocks. DSKINT locates bad blocks on the disk and allocates them to the bad block file (BADB.SYS).
- Writes a minimum RSTS/E file structure on the disk. The minimum RSTS/E file structure contains a pack label and five directories:
 - The Master File Directory (MFD)
 - The Group File Directory (GFD) for groups 0 and 1
 - The User File Directory (UFD) for account [0,1] and [1,2]
- Prepares the disk to accept RSTS/E system and other files.

Terminal Session

To initialize your system disk, you must answer the DSKINT questions. This terminal session lists the questions, explains them, and gives you some possible responses. After you understand the question, type the response at your console terminal. In some cases, your response will differ from the response shown in red in the example installation.

These responses have special meaning:

Response	Description
RET	Accept the default response
?	Obtain an online explanation of the question
^	Return to the previous question
CTRL/Z	Restart DSKINT dialogue
CTRL/C	Abort DSKINT and return to the Option:prompt

The common DSKINT dialogue error messages appear at the end of this task. If you receive an error message that does not appear there, see Appendix A.

13-Jun-89 - 05:02 AM

Disk? DU

Explanation—After you answer YES to the Installing RSTS on a new system disk? question, INIT.SYS automatically begins the DSKINT dialogue. DSKINT prints the current date and time, and then asks for the device designator of your system disk.

Response—Type one of the acceptable responses for system disks: DL, DM, DP, DR, DB, or DU. In the example installation, the response is DU because the system disk is an RA80.

Unit? <0> 0

Explanation—DSKINT asks for the unit number of the disk drive on which your system disk is mounted.

Response—Type one of the acceptable responses at this stage of system installation: 0 or 1. (If your system disk is a DL class device, acceptable responses are 0, 1, 2, or 3. If your system disk is a DU class device, acceptable responses are 0 through 15.) The response is 0 in the example installation.

NOTE

If the message "Performing limited hardware scan." was printed during this boot and you try to initialize or copy to a nonexistent DU type disk, then you will receive the following prompt:

That disk was not found during limited hardware scan.

Do you wish to perform a reboot with full hardware scan? <YES>

Response—If you answer YES, then the distribution device will be rebooted and the "Performing limited hardware scan." message will NOT reappear.

This disk appears to be a RSTS/E formatted disk with the following characteristics:

Pack ID:	NATHAN
Pack Cluster Size:	8
Pack is currently:	Private, Update access date on writes, Level: 1.2

Pack ID? SYSDSK

Explanation—After you type the unit number, DSKINT prints the disk's pack label information, if the disk has been initialized before. If the disk has not been initialized before, DSKINT does not print the identifying information. The pack label information lists:

- Pack ID
- Pack cluster size
- Pack status (public or private)
- Whether files are catalogued with the date they were last modified (written to) or accessed (read, opened, closed, and so forth)
- New files first information
- Whether the disk is read-only
- RSTS/E disk structure level

This private disk could be a system disk; DSKINT cannot determine whether a private disk is also a system disk. In the example installation, the pack ID is NATHAN, the pack cluster size is 8, the pack status is private, the files are catalogued with the date they were last written to, and the format level is RDS1.2.

This information lets you decide whether to initialize the disk. When you initialize a disk, you destroy any information stored on it. Because this disk contains no vital information, it will be initialized and used as the new system disk. If your disk contains vital information, see Part 2, Installing RSTS/E on a Pre-V9.0 System, for information on how to preserve the information.

After printing the pack label information, DSKINT asks for a pack ID. The pack ID becomes a systemwide logical name.

Response—Type a pack ID. The pack ID can be any combination of alphanumeric characters up to 6 characters long. The pack ID in the example installation is SYSDSK.

Pack cluster size <4>? **[RET]**

NOTE

Some questions show a response within brackets, such as the one in this question (<4>?). This is the default response. To accept any default response, press **[RETURN]**. (The **[RETURN]** response does not print on your console terminal. The **[RET]** symbol appears in the example installation to show you that the **[RETURN]** key was chosen as a response.)

Explanation—A cluster is a fixed number of 512-byte blocks of storage area allocated contiguously on a disk. The pack cluster size is the minimum number of blocks that your RSTS/E monitor can allocate to a file on the disk.

Your answer to this question depends on the type of processing and the disk requirements of your installation. The pack cluster size affects disk space and speed of file creation and access. A large pack cluster size improves access time to programs and user files because the monitor allocates space for data in cluster units. For example, if the pack cluster size is 16, the monitor allocates 16 blocks at a time. However, if the pack cluster size is 2, the monitor allocates only 2 blocks at a time. Thus, more disk accesses and CPU time are needed to allocate the same amount of space.

On the other hand, a large pack cluster size may waste disk space. For example, if you assign a pack cluster size of 16, the monitor allocates one cluster of 16 contiguous blocks (8,192 bytes) to a file that contains only one block (512 bytes) of information. Fifteen blocks (7,680 bytes) are wasted. Likewise, the monitor allocates one cluster of 16 contiguous blocks to a 15-block (7,680 bytes) file. In this case, only one block (512 bytes) is wasted.

Response—Type the disk pack cluster size. For system disks, DIGITAL recommends a pack cluster size of 4 or greater. In the example installation, the response is **RETURN** to accept the default cluster size of 4. Table 3 lists the disk cluster sizes.

Table 3: Disk Pack Cluster Sizes

Disk Type	Pack Cluster Size
RA60	8, 16, 32, 64
RA80	4, 8, 16, 32, 64
RA81	16, 32, 64
RA82	32, 64
RC25	1, 2, 4, 8, 16, 32, 64
RD31	2, 4, 8, 16, 32, 64
RD32	2, 4, 8, 16, 32, 64
RD51	1, 2, 4, 8, 16, 32, 64
RD52	1, 2, 4, 8, 16, 32, 64
RD53	4, 8, 16, 32, 64
RD54	8, 16, 32, 64
RK05 ¹	1, 2, 4, 8, 16, 32, 64
RK05F ¹	1, 2, 4, 8, 16, 32, 64
RK06	1, 2, 4, 8, 16, 32, 64
RK07	1, 2, 4, 8, 16, 32, 64
RL01 ¹	1, 2, 4, 8, 16, 32, 64
RL02	1, 2, 4, 8, 16, 32, 64
RM02	4, 8, 16, 32, 64
RM03	4, 8, 16, 32, 64
RM05	8, 16, 32, 64
RM80	4, 8, 16, 32, 64
RP04	4, 8, 16, 32, 64
RP05	4, 8, 16, 32, 64
RP06	8, 16, 32, 64
RX33 ¹	1, 2, 4, 8, 16, 32, 64
RX50 ¹	1, 2, 4, 8, 16, 32, 64

¹ — You cannot use these disks as system disks.

MFD cluster size <16>?

Explanation—The master file directory (MFD) stores information about all groups of accounts on a disk. The monitor accesses the MFD to locate and create files and accounts.

This question asks for the MFD cluster size, which is the maximum number of 512-byte blocks that each cluster allocated to the MFD can contain. The MFD can have a maximum of seven clusters (if you answer YES to the Pre-extend directories? question later in this task), and each directory is the size that you specify here. If you answer YES, the maximum of seven clusters is allocated now. The MFD cluster size must be greater than or equal to the pack cluster size unless the pack cluster size is 32 or 64. If the pack cluster size is 32 or 64, then the MFD cluster size will be 16.

Legal values for the example installation MFD cluster size are 4, 8, or 16.

Response—Type 4, 8, or 16. Or, press to accept the default response of 16, as in the example installation.

SATT.SYS base <18595>?

Explanation—The SATT.SYS file controls the use of storage space on a disk through a storage allocation table (SAT). The monitor accesses this file each time you extend or delete files. You are asked where you want to position this file on the disk. It is advantageous to position the SATT.SYS file near the center of the disk to reduce average seek times for the disk heads. On the other hand, if you use only the first half of a disk or need to create large contiguous files or use LOAD/INDEX commands, you may want to locate SATT.SYS in a place other than the center. This reduces fragmentation of the disk.

The position of the SATT.SYS file is also important because its position determines the default placement of the monitor and the default keyboard monitor, as well as the SWAP.SYS system file.

The number that appears within brackets is the center of the disk as calculated by DSKINT. (DSKINT may calculate a different number for your disk.) The device cluster number can range from 1 to the total device size divided by the device cluster size. See Table 4 for a list of disk device cluster sizes and total device sizes.

Response—Press to have DSKINT position the file near the center of the disk. In the example installation, the response is .

Or, type the device cluster number where you want the file placed.

Table 4 lists the disk device cluster sizes and total device sizes. Note that the table shows the total blocks that are available for use, not the total size of the disk. In addition, the number of available blocks may vary if your system has a different device cluster size.

Table 4: Device Cluster Sizes and Total Device Sizes

Disk Type	Device Cluster Size	Total Available Blocks ²
RA60	8	400168
RA80	4	237208
RA81	16	891056
RA82	32	1216640
RC25	1	50901 per unit; 2 units per spindle
RD31	2	41559
RD32	2	83204
RD51	1	21599
RD52	1	60479
RD53	4	138668
RD54	8	311200
RK05 ¹	1	4800
RK05F ¹	1	4800 per unit; 2 units per drive
RK06	1	27104
RK07	1	53768
RL01 ¹	1	10220
RL02	1	20460
RM02	4	131648
RM03	4	131648
RM05	8	500352
RM80	4	242572
RP04	4	171796
RP05	4	171796
RP06	8	340664
RX33 ¹	1	2400
RX50 ¹	1	800

¹ — You cannot use these disks as system disks.

² — Total available blocks represent the number of blocks when the disk is initialized at the device cluster size. The number of blocks on the RA/RC/RD class disks is subject to change with new revisions of these disks.

Pre-extend directories <NO>?

Explanation—This question asks if you want DSKINT to allocate automatically a maximum of seven clusters to the system account [0,1], the LB: library account [1,1], the system library account [1,2], and the MFD and GFDs for groups 0 and 1. The number of blocks each of these seven clusters contains depends on how you answered the cluster size questions for each of these accounts. For example, if you specify 16 as the cluster size for account [1,2] and answer YES to this question, DSKINT allocates the maximum of seven clusters to this account. Each cluster is 8,192 bytes (16 times 512 bytes). If you answer YES to this question,

you will have faster access time because the blocks will be next to each other in the accounts. You answer this question YES normally unless disk space usage is a concern for you.

Response—Type YES to have DSKINT automatically allocate a maximum of seven adjacent clusters to these accounts. In the example installation, the response is `[RETURN]`.

Or, type NO or press `[RETURN]` if you want DSKINT to allocate only the minimum of 0 or 1 clusters.

PUB, PRI, or SYS <SYS>? `[RET]`

Explanation—This question asks you to designate the disk you are initializing as either public, private, or system. The system disk is the disk on which the RSTS/E monitor resides. It always contains account [1,2].

Response—Type SYS or press `[RETURN]`, because you are initializing a system disk in this task. In the example installation, the response is `[RETURN]`.

[1,1] cluster size <16>? `[RET]`

Explanation—This question asks for the cluster size of the User File Directory (UFD) for account [1,1]. The UFD is an area on the disk that stores information about the files created under a particular user account number. The cluster size for account [1,1] is the maximum number of 512-byte blocks that each cluster allocated to this account can contain.

Response—Press `[RETURN]` to accept the default response of 16. In the example installation, the response is `[RETURN]`. Or, type the cluster size for account [1,1]: 1, 2, 4, 8, or 16. It must be greater than or equal to the pack cluster size unless the pack cluster size is 32 or 64. If the pack cluster size is 32 or 64, then the UFD cluster size will be 16. Specifying a large cluster size improves disk access time and allows more files to be stored in that account.

Because the example installation's answer to the Pre-extend directories? question was NO, DSKINT allocates one cluster containing 8,192 bytes (16 times 512 bytes) to this account.

[1,2] cluster size <16>? `[RET]`

Explanation—This question asks for the cluster size of the UFD for account [1,2]. The cluster size for account [1,2] is the maximum number of 512-byte blocks that each cluster allocated to this account can contain.

Response—Type the cluster size for account [1,2]: 1,2,4,8, or 16. It must be greater than or equal to the pack cluster size unless the pack cluster size is 32 or 64. If the pack cluster size is 32 or 64, then the UFD cluster size must be 16.

Press `[RETURN]` to accept the default response of 16 if the pack cluster size equals 32 or 64.

DIGITAL recommends that the cluster size for account [1,2] be 16, to improve disk access time. Press `[RETURN]` to accept the default response of 16, as in the example installation.

Because the example installation's answer to the Pre-extend directories? question was NO, DSKINT allocates one cluster containing 8192 bytes (16 times 512 bytes) to this account.

[1,1] and [1,2] account base <18595>? `[RET]`

Explanation—This question asks whether you want to place accounts [1,1] and [1,2] near the center of the disk or in some other place. The number that appears within brackets is the position of SATT.SYS, that is, the number you specified to the SATT.SYS base? question, or the middle of the disk as calculated by DSKINT if you specified to that question. DSKINT may show a different number for your disk.

Response—Press to place these accounts near the SATT.SYS file. In the example installation, the response is . Or, type the device cluster number where you want these files placed. The device cluster number can range from 1 to the total device size divided by the device cluster size. See Table 4 for a list of device cluster sizes and total device sizes.

Date last modified <YES>?

Explanation—This question asks whether you want to retain the date on which files were last modified (written to) or last accessed (written to, opened, read from, closed, and so forth).

Response—Type YES or press to retain the date on which files were last modified. This response is useful if you plan to use the BACKUP system program to back up files that have changed since the last backup. This response also decreases disk activity because the RSTS/E monitor updates the date only if the files are written to. In the example installation, the response is , which means the monitor updates the date each time the files are modified.

Or, type NO to retain the date on which files were last accessed. This response is useful for reordering the files, so the most frequently accessed files can be placed at the beginning of the directory. This response increases disk activity because the RSTS/E monitor updates the date no matter how the file is accessed for reads or writes.

New files first <NO>?

Explanation—This question asks if you want newly created files placed at the beginning or end of the directory of the account in which they are created.

Response—DIGITAL recommends that you type NO or press to place newly created files at the end of the directory, giving you overall faster access time. In the example installation, the response is .

Or, type YES to place newly created files at the beginning of the directory. This response is useful when you have a private disk on which the files you most frequently access are new files.

Read-only <NO>?

Explanation—This question asks if you want this disk to be, by default, a read-only or a read/write device when it is logically mounted. You can write to a read-only disk when you logically mount it with the /WRITE qualifier.

Response—Press to make your system disk read/write. In the example installation, the response is .

Use previous bad block info <YES>?

Explanation—This question does not appear if you are initializing a new disk. The question asks if you want DSKINT to create a new bad block file (BADB.SYS) in system account [0,1] by using information from the existing bad block file. DSKINT checks each block on the disk (if you answer 1, 2, or 3 to the Patterns? question that comes later). If DSKINT finds unreliable blocks, it allocates the pack cluster in which the block resides to the BADB.SYS file.

Response—DIGITAL recommends that you type YES or press **[RETURN]** to create the new bad block file, using information from the existing bad block file. In the example installation, the response is **[RETURN]**.

Or, type NO to have DSKINT ignore the current bad block file when creating the new one. You may want to answer NO, for example, if you are reinitializing a disk to decrease the pack cluster size. In this case, you want to obtain new bad block information.

Format <NO>?

Explanation—This question asks if you want DSKINT to format your disk. Formatting a disk means that DSKINT writes timing and sense marks onto the disk and destroys any information that previously existed on the disk. You must format the following disks if you are initializing them for the first time: RK05, RK05F, RP04, RP05, RP06, RX33.

You can optionally reformat these disks: RK06, RK07, RM02, RM03, RM05.

You cannot format or reformat (in which case this question would not appear) these disks: RL01, RL02, RA60, RA80, RA81, RA82, RC25, RCF25, RM80, RD51, RD52, RD53, RD54, RD31, RD32, RX50.

NOTE

If you are formatting a disk, DIGITAL recommends that you mount the disk on the drive and leave it spinning for 20-30 minutes before initializing it. This ensures that the disk temperature is stable and uniform during the formatting. Failure to do this may cause unreliable data storage on the disk.

Response—Type YES to format the disk; type NO or press **[RETURN]** if you do not need to format the disk. This question does not appear in the example installation.

Patterns <3>? **[RET]**

Explanation—This question asks for the number of patterns DSKINT should use in checking for bad blocks. You can select a number from 0 to 3. If you select 0 patterns, DSKINT also prints the Erase disk? prompt.

DSKINT writes a pattern to the disk, and then reads it to check that the data was written correctly. The time DSKINT takes to run these pattern checks for bad blocks depends on the disk you are initializing. Type a question mark (?) to have DSKINT print the time (in minutes) required for the different disks to complete one format check for bad blocks.

For DU class disks, with the exception of RX50 and RX33, bad blocks are handled transparently by the hardware. No blocks are ever added to the BADB.SYS file, since the hardware simply replaces the bad block with a new one. DIGITAL still recommends that you run 3 patterns the first time you initialize a DU class disk.

Response—Type the number of patterns (0 to 3). DIGITAL recommends you run 3. Any bad blocks discovered during pattern checking are added to the bad block file (BADB.SYS) so that data will not be written to these blocks. If you specify 0, DSKINT then asks the next question. In the example installation, the response is **[RETURN]**.

Erase disk <YES>?

Explanation—This question, which appears only if you answered 0 to the Patterns? question, asks if you want to erase the disk. If you answer YES, DSKINT wipes out all data on the disk. This is usually done for security purposes.

If you answer NO, DSKINT writes only the basic RSTS/E file structure on the disk. Use the NO response under the following conditions:

- You are initializing a disk that has been initialized before.
- You answered YES to the Use previous bad block info? question.
- You are confident no additional bad blocks are on the disk.
- You are not concerned about the security of old data that could still be accessed.

Response—The example installation did not see this question because it did not answer 0 to the Patterns? question.

Proceed (Y or N)? Y

Explanation—This question allows you to check your responses to the dialogue questions and abort the initialization if you have made any errors.

Response—Type Y to proceed with the disk initialization. In the example installation, the response is Y.

Or, type N to abort the initialization and return to the Option: prompt. If you type N, then you reboot your installation media.

DSKINT formats the disk, then begins pattern checking with pattern 3 and ends with pattern 1. If DSKINT prints a block and device cluster number during pattern checking, it adds the device cluster number (not the block number) to the BADB.SYS file. Note that this disk (a DU class disk) did not contain any bad blocks. Even if there were bad blocks, the hardware would have automatically replaced the bad blocks with good blocks. If the bad block replacement process fails, then DSKINT will abort with a fatal error.

13-Jun-89 - 05:17 AM

Copying required system files

Performing limited hardware scan.

RSTS V9.7 (DU0) INIT V9.7

Explanation—The disk initialization is complete. INIT.SYS now transfers files that are required for the installation to your new system disk.

When the transfer is complete, INIT.SYS automatically bootstraps your system disk, prints a message on your console terminal.

A list of the DSKINT error messages follows. If your error message does not appear there, see Appendix A.

BLOCK NUMBER TOO BIG

Explanation: The block number you typed is greater than or equal to the maximum logical block number for the disk.

?DRIVE NOT READY:

Explanation: The initialization cannot proceed because the disk to be initialized is not on line and ready.

User Action: You can make the drive ready and press **RETURN** to proceed, or you can press CTRL/C to abort the initialization.

?DSKINT NOT LEGAL ON SYSTEM DISK

Explanation: You specified the disk from which the initialization code was bootstrapped. You cannot initialize this disk now because the initialization code would be destroyed.

FORMATTING FAILURE:

Explanation: The disk could not be formatted.

User Action: Mount the disk on the drive and leave it spinning for 20-30 minutes before formatting the disk. If you still receive the same error message after one retry, then use a new disk.

?ILLEGAL DISK NAME

Explanation: The string you typed is not the name of a valid RSTS/E disk device.

User Action: Enter a valid name.

?ILLEGAL NUMBER OF PATTERNS

Explanation: The number of patterns must be 0 through 3.

?ILLEGAL NUMBER, TRY AGAIN

Explanation: The number you typed is not a valid octal number between 1 and 177777.

?ILLEGAL PACK ID

Explanation: The pack ID must consist only of characters from "A" to "Z" or "0" through "9."

?SORRY, BUT THAT DISK DOESN'T EXIST

Explanation: The string you typed is a valid RSTS/E disk name, but that disk controller or the unit number does not exist on this system.

THAT DISK WAS NOT FOUND DURING LIMITED HARDWARE SCAN

Explanation: You tried to initialize or copy to a nonexistent DU type disk.

User Action: If you answer YES to the "Do you wish to perform a reboot with full hardware scan ?", then the distribution device will be rebooted and the "Performing limited hardware scan." message will NOT reappear.

?UNABLE TO READ BAD BLOCK TRACK DATA

Explanation: The manufacturer's bad block information could not be read.

User Action: Either run 3 patterns on the pack or try a different pack.

Go to Task 4.

Task 4: Start SYSGEN Monitor (START)

DIGITAL supplies a prebuilt RSTS/E monitor, called the SYSGEN monitor, on the Installation tape or disk. It resides in account [0,1] with the file name SYSGEN.SIL. The SYSGEN monitor is a temporary monitor; you use it only to build your RSTS/E monitor. (Phase 7 describes how to shut down the SYSGEN monitor when it is no longer needed.)

Terminal Session

This terminal session lists the INIT.SYS questions, explains them, and gives you some possible responses. After you understand a question, type the response at your console terminal. In some cases, your response will differ from the response printed in red in the example installation.

Rebooting . . .

RSTS V9.7 (DU0) INIT V9.7

13-Jun-89 - 05:17 AM

Creating SWAP.SYS file with minimum size of 128 blocks

Memory allocation table:

0K:	00000000	-	00407777	(66K)	:	EXEC
66K:	00410000	-	03467777	(396K)	:	USER
462K:	03470000	-	03777777	(50K)	:	XBUF
512K:	04000000	-	End			:	NXM

Memory available to RSTS/E is 512K words.

Creating CRASH.SYS file with minimum size of 320 blocks

8 devices disabled

Explanation—INIT.SYS prints these messages as it starts the SYSGEN monitor. These messages may be slightly different due to configuration differences.

NOTE

It is sometimes necessary to use the HARDWR option to set non-standard CSR addresses during this part of the procedure. However, with RSTS/E V9.7, the SYSGEN.SIL is now started automatically, and the "Option" prompt is no longer asked.

If you need to access the "Option" prompt, you may do so by typing ^C (Control-C) twice immediately after the INIT header line is displayed. The ^C characters will not be echoed on the terminal. After a pause of ten seconds to two minutes, depending on your system configuration, the "Option" prompt will appear.

If you get the "Option" prompt again when you are finished with your changes, simply press RETURN to continue with the procedure.

Go to Phase 3.



Phase 3

Configure RSTS/E Monitor

You now have a temporary monitor to use in building your RSTS/E monitor. Unlike the SYSGEN monitor, which comes pre-built, you must configure your RSTS/E monitor. To configure a monitor means to select the hardware and software it will support. You select the hardware and software by answering configuration questions. These questions ask you what hardware (controllers, disk drives, tape drives, and so forth) and software features (EMT logging and so forth) your RSTS/E monitor will support.

This phase discusses the tasks you must perform to configure your RSTS/E monitor.

The tasks in this phase are:

- Task 1: Answer Preliminary Configuration Questions
- Task 2: Answer Disk Units Configuration Questions
- Task 3: Answer Peripheral Devices Configuration Questions
- Task 4: Calculate Number of Jobs
- Task 5: Answer Software Tuning and Features Configuration Questions

Each question in Phase 3 prints a default answer within brackets. If the system cannot determine a default response, it prints ?? within the brackets. Answer the questions based on the configuration of your system. If you are building a RSTS/E monitor for another PDP-11, answer the questions based on the configuration of the other PDP-11.

Note that you may see different default responses than the ones provided in the example installation.

If you want to start over at any time while answering the configuration questions, enter CTRL/Z. You return to the beginning of the task. These responses have special meaning:

Response	Description
<u>RET</u>	Accept the default response
?	Obtain an online explanation of the question
^	Return to the previous question
<u>CTRL/Z</u>	Return to the beginning of the dialogue section
<u>CTRL/C</u>	Abort the dialogue and return to the DCL \$ prompt

Task 1: Answer Preliminary Configuration Questions

Your next task is to answer the preliminary questions asked by the installation procedure. The system executes `INSTAL.COM` immediately after it starts the `SYSGEN` monitor.

Before `INSTAL.COM` asks any questions, it opens a log file named `INSTAL.LOG` in the account from which you are running the installation. This account is always [1,2] since you are logged in automatically. `INSTAL.COM` closes this log file at the end of the installation. You can then print `INSTAL.LOG` to obtain a record of the installation session.

Terminal Session

This terminal session lists the preliminary configuration questions and provides some possible responses. In some cases, your response will differ from the response shown in red in the example installation.

```
RSTS/E V9.7
13-Jun-89 05:19 AM
Please mount the RSTS/E Installation media and enter the name
and unit number of the device.
Valid device types are: 'MM', 'MS', 'MT', 'MU', 'DM' or 'DL'
Installation device <_mmn:>?
Restoring required _SY:[0,1] components
RSTS/E V9.7
Deleting all global symbols
13-Jun-89 05:21 AM
```

```
RSTS/E Software Installation Procedure
* Dialogue Phase *
```

During this installation procedure you may:

```
Type '?' for help
Type '^' to go back to the previous question
Type CTRL/Z to return to the beginning of the present section
```

Explanation—This question asks for the location of your Installation media. The default is the device on which you booted the Installation media.

Response—Press `RETURN` to accept the default response. In the example installation, the response is `MS0`.

Please enter the name and unit number of the disk to which you want to install the software. This disk should be physically mounted and write-enabled.

```
Target disk? <_SY:> : RET
```

Explanation—This question is for anyone building a RSTS/E system for another PDP-11. Your response to this question determines the disk where the new RSTS/E monitor and system programs will be installed.

If you specify a disk other than the system disk (`_SY:`), physically mount and write-enable the disk before you answer this question. The disk does not need to be initialized at this time, because the next question asks if you want to initialize it. If you don't type `_SY:`, you must have already updated your system disk.

Response—Type the disk name and unit number of the target disk if you are installing RSTS/E for another PDP-11. You then see the Do you want to initialize the target disk? question.

Type SY or press **[RETURN]** to install RSTS/E on your present system disk, the disk you initialized in Phase 2. In the example installation, the response is **[RETURN]**.

Restoring required _SY:[1,2] components

Assigning system logicals

Are you ready to proceed? <yes> **[RET]**

Explanation—This question asks if you are ready to continue. If you type YES or press **[RETURN]**, the dialogue continues. If you type NO, you see the \$ prompt.

Answer NO, for example, if you need to recover a corrupted system disk by issuing the \$RESTORE command. You resume the installation procedure by typing PROCEED.

Response—Type YES or press **[RETURN]** to continue with the installation. In the example installation, the response is **[RETURN]**.

** Starting Monitor Section **

13-Jun-89 05:22 AM

Do you want to install the RSTS/E monitor? <yes> **[RET]**

Explanation—This question asks if you want to install the monitor. Answer NO to this question if you want to install only system programs and/or layered product updates. You then skip the monitor installation. You can only skip this if you already have a current version monitor.

If you answer YES or press **[RETURN]** to this question, you continue with the dialogue to install a RSTS/E V9.7 monitor.

If you answer NO to this question, go to Phase 4.

Response—Type YES or press **[RETURN]** to proceed with the RSTS/E monitor installation. In the example installation, the response is **[RETURN]**.

There is a pre-built monitor available which is suitable for Micro-PDP-11 systems. You may use this pre-built monitor, or you may build your monitor. Building your monitor will allow you to specify the features you wish to include in the monitor.

You may now choose: (A) Build your monitor
 (B) Use pre-built monitor

Please type A or B <A> ?

The pre-built monitor MICRO.SIL offers the following features:

RK05's: 0	RL01/RL02's:4	Overlapped seek: Yes
RK06/RK07's: 0	Disks on DR controller: 0	Disks on DB controller: 0
MSCP support: Yes	TU16/TE16/TU45/TU77's: 0	TU10/TE10/TS03's: 0
TS11/TSV05/TU80's: 1	TMSCP tape drives: 2	Printers: 1
RX01/RX02's: 0	CR11/CM11 card reader: No	CD11 card reader: No
DMC11's/DMR11's: 0	DMP11's/DMV11's: 0	Simultaneous IBM Links: 0
RJ2780 support: No	Maximum jobs: 10	Small buffers: 250
EMT Logging: No		

Please type A or B <A> A

Explanation— The pre-built monitor has been configured for a Micro-PDP-11 system. However, you can also use this monitor on PDP-11 systems if the configuration is suitable for your system configuration. The default system configuration for the re-built monitor is:

Support	Default Value
RK05	00
RL01/RL02	04
Overlapped seek	Yes
RK06/RK07	00
Disks on DR controller	00
Disks on DB controller	00
MSCP support	Yes
TU16/TE16/TU45/TU77	00
TS11/TSV05/TU80	01
TMSCP tape drives	02
RX01/RX02	00
CR11/CM11 card reader	No
CD11 card reader	No
DMC11/DMR11	00
DMP11/DMV11	00
Simultaneous IBM links	00
RJ2780 support	No
Maximum jobs	10
Small buffers	250
EMT logging	No

Response— Type A to build your own monitor or type B to use the pre-built monitor. If you select B, go to the end of this task.

Restoring required SYSGEN components

Explanation—The system now copies files that you need to continue the installation. Then you begin the monitor configuration dialogue.

Starting System Generation

Use template monitor ? <N> NO

Explanation—This question asks if you want the system to obtain default answers from a previous monitor. If you do have a previous V9.0 through V9.6 monitor and want to use information from it, type YES and then follow the steps in Phase 3, Task 2 of Part 4. Type NO if you do not have a previous V9.0 through V9.6 monitor to serve as a template. The default response to this question is NO if the SYSGEN monitor is the current monitor, and YES if it is not.

Response—Type NO or press **[RETURN]**, because you do not have an existing V9.0 through V9.6 monitor to use as a template. In the example installation, the response is NO.

Template monitor's name? <??> ?

A monitor has a name from 1 to 6 alphanumeric characters and a filetype of "SIL". Enter the name of the template monitor whose parameters you wish to use

The following is a list of the .SILs in [0,1]:

File .Typ	Creation
V96.SIL	13-Jun-88
SYSGEN.SIL	13-Jun-89

Template monitor's name ? <??> V96

Explanation— You see this question only if you answered YES to the Use template monitor? question. You must type the name of an existing monitor.

Response— Type ? or **RETURN** to accept the default and see a list of monitors in [0,1], followed by a reprompt for the monitor name. This time type the name of the monitor you want to use as a template.

New Monitor name ? <RSTS> RSTS97

Explanation— This question asks for the name of your new RSTS/E monitor, which will be stored as a save image library (SIL) in account [0,1] on your system disk. The installation procedure performs a lookup to see if the monitor name you specify already exists. If it already exists and it is the currently installed SIL, the procedure returns an error message and then reprompts.

Response— Type a name for your RSTS/E monitor. The name can be any combination of alphanumeric characters up to 6 characters long. The default response is RSTS. In the example installation, the response is RSTS97.

Supersede existing monitor ? <N>

Explanation— You see this question only if the monitor name specified already exists and is not the currently installed SIL. If you type NO or press **RETURN** to accept the default, the program returns to the New monitor name? prompt. If you type YES, your new monitor supersedes the existing monitor.

Response— In the example installation, this question does not appear because no previous monitor named RSTS97 exists.

Accept defaults ? <N> **RET**

Explanation— This question gives you the opportunity to modify the configuration of your new SIL. If you answer NO, the installation procedure gives you the opportunity to make changes at the beginning of each specific configuration section (Tasks 2, 3, 4, 5).

If you answer YES, the installation procedure chooses the default configuration and asks no configuration questions.

You can type a ? to list the defaults that will be selected if you answer YES to this question.

Response—Type NO to continue with the configuration questions, as in the example installation. DIGITAL recommends that you answer NO if:

- You are performing a first time V9.7 system installation.
- You are not using a template monitor.

Type YES if you want to accept the default configuration.

You can type a ? to list the defaults that will be selected if you answer YES.

If you type NO, go to Task 2.

** End of Monitor Section **

Go to Phase 4.

Task 2: Answer Disk Units Configuration Questions

Your next task is to answer the disk units configuration questions. These questions deal with the number and types of disk drives supported by your RSTS/E monitor.

Terminal Session

This terminal session lists the disk units configuration questions, explains them, and gives some possible responses (printed in red). After you understand the question, type the response at your console terminal.

If you are generating a monitor for another PDP-11, answer the questions based on the configuration of the target system.

The following questions deal with the numbers and kinds of disk units on this system.

Accept Disk defaults ? <N> **RET**

Explanation—You see this question only if you answered NO to the Accept defaults? question in Task 1.

If you answer YES to this question, you receive the default disk configuration, and skip to the peripheral device configuration questions (Task 3). DIGITAL recommends that you answer YES to this question since the installation procedure chooses appropriate responses based on a hardware scan at system startup. Answer NO only if you anticipate changes in hardware or if devices were offline at times of system startup. If you answer NO or press **RETURN**, you see these disk configuration questions:

RK05's ?
RL01/RL02's ?
RK06/RK07's ?
Overlapped seek ?

Disks on DR controller ?
Disks on DB controller ?
MSCP support ?

Response—Answer NO or press **RETURN** to see the disk configuration questions. In the example installation, the response is **RETURN**.

RK05's ? <00> **RET**

Explanation—The RK05 disk system consists of an RK11 controller and from one to eight RK05 moving-head cartridge disk drives. The RK05F counts as two units.

Response—Type the number (0 to 8) of RK05 disk drives that your RSTS/E monitor supports. In the example installation, the default answer indicates that there are none of these drives; thus, the response is **RETURN**.

If you type 1 or 0, you skip the next question and go to the RL01/RL02's? question.

MSCP support ? <Y>

Explanation—This question asks whether you have MSCP disk drives supported by the MSCP controllers. The MSCP controllers include the UDA50, KDA50, RC25, RQDX1, RQDX2, RQDX3, and RUX50 controllers. Available disk drives include the RA60, RA80, RA81, RA82, RC25, RD31, RD32, RD51, RD52, RD53, RD54, RX33, and RX50 disk drives.

Response—Type Y if your RSTS/E monitor supports MSCP disk drives. In the example installation, the program indicates there are MSCP disk drives; thus the response is .

Go to Task 3.

Task 3: Answer Peripheral Devices Configuration Questions

Your next task is to answer the peripheral devices configuration questions. These questions deal with the number and types of tape drives, printers, and card readers that your RSTS/E monitor supports. There are also questions related to DECnet/E, RJ2780, 3271, and 2780/3780.

Terminal Session

This terminal session lists the peripheral devices configuration questions, explains them, and gives some possible responses (printed in red). After you understand the question, type the response at your console terminal.

If you are generating a monitor for another PDP-11, answer the questions based on the configuration of the target system.

The following questions deal with the peripheral devices attached to this RSTS/E system.

Accept Peripheral defaults ? <N> **RET**

Explanation—You see this question only if you answered NO to the Accept defaults? question in Task 1.

If you answer YES to this question, you receive the default peripheral devices configuration, and skip to the software tuning and features configuration questions (Task 5). DIGITAL recommends that you answer YES to this question unless you are not using a template monitor and you require 2780 or card reader support. The installation procedure chooses appropriate responses based on a hardware scan at system startup. If you answer NO or press **RETURN**, you see these peripheral devices configuration questions:

TU16/TE16/TU45/TU77's ?
TU10/TE10/TS03's ?
TS11/TK25/TSV05/TU80's ?
TMSCP tape drives ?

Printers ?
RX01/RX02's ?
CR11/CM11 card reader ?
CD11 card reader ?
DMC11's/DMR11's ?
DMV11's/DMP11's ?
IBM 3271 or 2780/3780 simultaneous links ?
RJ2780 support ?

Response—Type NO or press **RETURN** to see the peripheral configuration questions. In the example installation, the response is **RETURN**.

TU16/TE16/TU45/TU77's ? <00> **RET**

Explanation—The TU16/TE16/TU45/TU77 magnetic tape system consists of an RH11 or RH70 MASSBUS interface, a TM02 or TM03 controller, and a maximum of eight TU16, TE16, TU45, or four TU77 magnetic tape drives.

Response—Type the number (0 to 8) of these tape drives that your RSTS/E monitor supports. In the example installation, the response is **RETURN**.

TU10/TE10/TS03's ? <00> **RET**

Explanation—The TU10/TE10/TS03 magnetic tape system consists of a TM11, TMA11, or TMB11 magnetic tape controller and a maximum of eight TU10, TE10, or TS03 magnetic tape drives.

Response—Type the number (0 to 8) of these tape drives that your RSTS/E monitor supports. In the example installation, the response is RETURN.

TS11/TK25/TSV05/TU80's ? <01> RET

Explanation—The TS11 magnetic tape system consists of a TS11 controller and one TS11, TK25, TSV05, or TU80 magnetic tape drive.

Response—Type the number (0 to 4) of TS11, TK25, TSV05, or TU80 tape drives supported by your RSTS/E monitor. In the example installation, the response is RETURN to accept the default of 1.

TMSCP tape drives ? <00> RET

Explanation—RSTS/E can support up to two TMSCP class tape drives. Each TMSCP controller can support one TK50, TU81, or TU81-PLUS tape drive.

Response—Type the number (0 to 2) of TMSCP tape drives that your RSTS/E monitor supports. In the example installation, the response is RETURN.

Printers ? <01> RET

Explanation—A RSTS/E monitor can support a maximum of eight LP11 or LPV11 printers.

Response—Type the number of LP11 or LPV11 line printers (0 to 8) that your RSTS/E monitor supports. In the example installation, the response is RETURN to accept the default of 1. (Note that the LP11 and LPV11 line printers include the LP25, LP26, LP27, LA180-P, and so forth.)

RX01/RX02's ? <00> RET

Explanation—The RX11 or RX211 flexible diskette system consists of an interface and an RX01 single-density or RX02 double-density flexible diskette subsystem. The RXV11 flexible diskette system consists of an interface and an RX01 single-density subsystem. RSTS/E does not support the RXV12 flexible diskette subsystem. The RX01 and RX02 flexible diskette subsystems each consist of a disk controller and two flexible diskette drives. The RSTS/E monitor supports a maximum of four RX11, RX211, or RXV11 flexible diskette systems, for a maximum of eight RX01 or RX02 flexible diskette drives.

Response—Type the number (0 to 8) of RX01 or RX02 flexible diskette drives that your RSTS/E monitor supports. The example installation has none of these drives; thus, the response is RETURN.

CR11/CM11 card reader ? <N> RET

Explanation—This question asks if your RSTS/E monitor supports the CR11 punched card reader or the CM11 marked card reader.

Response—Type Y if your RSTS/E monitor supports either of these devices; type N if it does not support either of these devices. In the example installation, the response is RETURN.

CD11 card reader ? <N> RET

Explanation—This question asks if your RSTS/E monitor supports the CD11 high-speed punched card reader.

Response—Type Y if your RSTS/E monitor supports this device; type N if your RSTS/E monitor does not support this device. In the example installation, the response is RETURN.

Card decode ?

Explanation—This question appears only if you answered Y to the CR11/CM11 card reader? or the CD11 card reader? questions. The RSTS/E monitor interprets cards through the use of an ANSI standard card decoder. However, it is possible that your installation uses some other card decoder. This question asks you to type the card decoder you want your RSTS/E monitor to support. See the *RSTS/E Programming Manual* for more information on the card codes.

Response—In the example installation, there is no response because N was the response to the previous card reader questions. Possible responses are:

- ANSI
- 029 for cards punched in DEC 029
- 026 for cards punched in DEC 026
- 1401 for cards punched in IBM 1401

DMC11's/DMR11's ? <00> [RET]

Explanation—The DMC11 and DMR11 network links are synchronous communication line interfaces that implement the DDCMP line protocol in the hardware. These interfaces are used primarily with DECnet/E but can be used without it.

Response—Type the number (0 to 16) of DMC11 or DMR11 network links attached to your PDP-11. Because the example installation does not plan to use DECnet/E or the DMC's by themselves, the response is [RETURN].

DMV11's/DMP11's ?

Explanation—(Note that this question shows either DMV11 or DMP11, depending on the hardware on your system.) The DMV11 and DMP11 network links are synchronous communication line interfaces that implement the DDCMP line protocol in the hardware. The DMV11 and DMP11 links can be used only by DECnet. This question asks for the number of DMV11 or DMP11 network links attached to your PDP-11.

Response—Type the number (0 to 16) of DMV11 or DMP11 network links attached to your PDP-11. If you type 0, you go to the IBM 3271 or 2780/3780 simultaneous links ? configuration question. Because the example installation will not use DECnet/E, there is no response to this question.

DMV11/DMP11 unit xx tributaries ?

Explanation—This question asks for the number of tributaries you will activate at one time. The program prints this question for each DMV11/DMP11 supported by your RSTS/E monitor. For example, if you type 5 to the DMV11/DMP11's? question, this question appears five times. (The guide shows this question only once.) The question refers to either DMV11 or DMP11, depending on the hardware on your system.

The program repeats the DMV11's/DMP11's? configuration question if you specified a total of more than 128 tributaries. See the *DECnet/E Installation Guide* and *DECnet/E Release Notes* for information on this question.

Response—Type the number (1 to 12) for the DMV11, or type the number (1 to 32) for the DMP11. Because the example installation does not use either of these line interfaces, there is no response to this question.

IBM 3271 or 2780/3780 simultaneous links ? <00> **RET**

Explanation—Each KMC-11 microprocessor controls one DUP11 synchronous line interface to the 3271 or 2780/3780 host. The 3271 is a terminal; the 2780/3780 is a remote batch job entry device. An IBM host connected to a RSTS/E computer system can communicate with these devices as though they were actually present because the RSTS/E monitor emulates them. This question asks for the number of 3271 or 2780/3780 simultaneous links you want.

Response—Type the number (0 to 16) of KMC-11/3271 or KMC-11/2780/3780 simultaneous links you want attached to your PDP-11. Because the example installation does not support KMC-11s, the response to this question is 0 or **RETURN**.

RJ2780 support ? <N> **RET**

NOTE

The 3271 or 2780/3780 IBM protocol emulators are DECUS products.

Explanation—The RJ2780 Emulator Package is a DECUS software product that emulates the IBM RJ2780 Model 1 data transmission terminal. This software lets a RSTS/E monitor communicate with any IBM computer that supports these types of RJE terminals, or with another DIGITAL computer running the RJ2780 terminal emulator package.

Transmission of data can originate from a card reader or disk files. Received data can be directed to a line printer or disk files. All data is transmitted in EBCDIC or binary code, and communication is supported over synchronous, point-to-point contention mode only, at up to 4800 baud. This package also supports a spooling operation that allows RSTS/E users to queue files for transmission. DIGITAL does not provide support for this feature unless you have it in a DIGITAL Software Services Consultation contract. If you want to use the RJ2780 software, you must order the RJ2780 software kit from DECUS. For more information on this software package, see the RSTS/2780 User's Guide. In Phase 5, the system will tell you when to mount the tape or disk that contains the RJ2780 software.

Response—Type Y to add the code needed by the RSTS/E monitor to support this optional DECUS software; type N if you do not want to add this optional software. Type Y/Q if you intend to use the RJ2780 software on a Q-bus machine using a DUV11 interface. In the example installation, the response is **RETURN**.

Go to Task 4.

Task 4: Calculate Number of Jobs

This task helps you calculate the maximum number of jobs your system needs. You need to know the number of jobs in order to answer the Maximum jobs? question later in this task. There is no terminal session in this task, only a preparation session.

Preparation Session

The RSTS/E monitor assigns jobs to keep track of all user activities. To calculate the maximum number of jobs your system needs, add the following:

- Number of physical terminals you have or plan to have in use simultaneously.
- Number of LAT sessions that will be simultaneously active on your system. Note that a single user of a terminal server may create more than one session.
- Number of pseudo keyboards you need. A pseudo keyboard is a logical device that has the characteristics of a terminal, but has no physical terminal associated with it.
- Number of DECnet SET HOST connections you need.
- One detached job for ERRCPY, the error logger program that reads error-related information stored in the monitor area of memory. A detached job is a job that is not associated with a terminal. See the *RSTS/E System Manager's Guide* for information on ERRCPY.
- Number of detached jobs for print/batch requests. For the Print/Batch Services (PBS) package, allow one detached job for each copy of the PRINT and BATCH server programs. Each PBS package handles up to three batch requests and up to two print requests. If the PBS package gets requests for more print/batch requests than that and additional jobs are available, then PBS spawns a copy of itself. This copy can handle up to four additional batch requests and up to three additional print requests. For the OPSEr-based spooling package, allow two detached jobs plus one job for each line printer and batch server. See the *RSTS/E System Manager's Guide* for more information on these programs.
- Two to five jobs if your installation uses dial-up terminals. These terminals may become detached as a result of a faulty phone connection or users disconnecting without logging out. See the *RSTS/E System Manager's Guide* for more information.
- A number of detached jobs for optional software like WPS-PLUS and DECnet/E. See the appropriate installation guide for more information on job requirements.

The example installation calculates a total of 40 jobs:

- Terminals - 14
- LAT terminals - 16 (1 DECserver 200 with 2 sessions per terminal)
- Pseudo keyboards - 6
- System programs - 4 (1 for Print/Batch Services requests; 3 for OPSEr requests).

Figure 4 provides a job calculation worksheet to allow you to write the number of jobs needed by your installation. The maximum number of jobs allowed by the RSTS/E monitor is 63.

Figure 4: Job Calculation Worksheet

How many physical terminals do you plan to support?	_____
How many LAT sessions do you plan to have connected to your system?	_____
How many pseudo keyboards does your software require at any one time?	_____
How many DECnet SET HOST connections do you need?	_____
How many detached jobs do you need for ERRCPY, Print/Batch Services (PBS), and/or the OPSER-based spooling package?	_____
How many jobs do you need to accommodate detached dial-up jobs?	_____
How many detached jobs do you need for optional software?	_____
Total # of jobs	_____

ZK-9244-HC

Go to Task 5.

Task 5: Answer Software Tuning and Features Configuration Questions

Your next task is to answer the software tuning and features configuration questions. These questions deal with RSTS/E monitor software features, such as maximum number of jobs, small buffers, and so forth.

Terminal Session

This terminal session lists the software tuning and features configuration questions, explains them, and gives you some possible responses (printed in red). After you understand the question, type the response at your console terminal.

If you are generating a monitor for another PDP-11, answer the questions based on the configuration of the target system.

The following questions deal with the capacity and features of this RSTS/E system provided at the system manager's option.

Accept Software defaults? <N> **RET**

Explanation—You see this question only if you answered NO to the Accept defaults? question in Task 1.

If you answer YES to this question, you receive the software tuning and features defaults, and skip to the Proceed? prompt at the beginning of Phase 4. If you answer NO or press **RETURN**, you see these software tuning and features configuration questions:

Maximum jobs ?
Small buffers ?
EMT logging ?

Response—Answer NO or press **RETURN** to see the software tuning and features configuration questions. In the example installation, the response is **RETURN**.

Maximum jobs ? <25> 40

Explanation—In Task 4 you used the Job Calculation Worksheet to calculate the number of jobs your RSTS/E monitor supports. Once you establish the maximum number of jobs, you cannot increase the number unless you perform another system installation. However, you can decrease the number you enter here online during timesharing by using the SET LOGINS command (see the *RSTS/E System Manager's Guide*).

Response—Check your Job Calculation Worksheet (Task 4, Figure 2) and enter the maximum number of jobs (2 to 63) your RSTS/E monitor supports. In the example installation, the response is 40.

Small buffers ? <440> 550

Explanation—A small buffer is a 16-word storage area located in the monitor area of memory. There are two types of small buffers: general small buffers and FIP small buffers. You allocate the minimum number of general small buffers now by answering this question. Note that the installation procedure automatically calculates a recommended number of general small buffers you need for your installation. In the example installation, the installation procedure calculates a total of 440 general small buffers.

Your default may differ from the default in the example installation. Your installation may also need more than the number printed in the default. A more detailed explanation of how to add general and FIP small buffers is provided in the BUFFERS suboption of the DEFAULT option, located in Part 5 of this guide.

Response—Press to accept the default. In the example installation, the response is 550.

Or, type the number of small buffers (1-999) you want on your system. In general, a response within the range of 600 small buffers is acceptable for most systems.

NOTE

If the number of small buffers you specify is too high for your system, the command procedure may lower the number when it creates your new monitor (see Task 2 of Phase 5).

If you specify many more buffers than can fit on your system, the command procedure asks the configuration questions again before it creates your new monitor.

EMT logging ? <N>

Explanation—EMT logging is a feature that allows the monitor to pass information on selected monitor directives by means of send/receive to a program that you write after you build your monitor. Your program can then make use of these monitor directives to log selected kinds of system activity. See the *RSTS/E System Manager's Guide* for more information on EMT logging.

Response—Type Y if you want your monitor to support EMT logging, in which case you will have to write a program (the UNSUPP system program package contains a demonstration program); type N if you do not want this support. In the example installation, the response is , which accepts the default of NO.

** End of Monitor Section **

Go to Phase 4.

Phase 4

Select RSTS/E System Programs

Now that you have finished answering the configuration questions, you are ready to perform the second part of configuring your RSTS/E system. In this phase, you specify which system programs to install on your system.

The tasks in this phase are:

- Task 1: Answer System Program Installation Questions
- Task 2: Answer Layered Product-Related Questions

These responses have special meaning:

Response	Description
RET	Accept the default response
CTRL/Z	Return to the beginning of a dialogue section
?	Obtain an online explanation of the question
^	Return to the previous question

Task 1: Answer System Program Installation Questions

Your next task is to answer the system program installation questions.

System programs provide you with tools for performing common tasks during timesharing. For example, system programs allow you to efficiently develop programs, manage files, and perform special system management-related tasks.

DIGITAL supplies RSTS/E system programs on the V9 Library and update media. The programs are grouped into the packages listed in Table 5. See Appendix C for a complete list of system programs contained in each package as well as package sizes.

Table 5: System Program Packages

Package	Description
Auxiliary Library	System programs and data files used with certain peripheral devices and optional software.
BASIC-PLUS	BASIC-PLUS, a BASIC interpreter that lets you perform interactive BASIC programming and also gives you access to system programming features such as system function calls and block I/O. See the <i>BASIC-PLUS Language Manual</i> for more information. (You answer the BASIC-PLUS configuration questions in Task 4A of Phase 5.)
Device Testing	The Device Testing Package. See the <i>RSTS/E System Manager's Guide</i> for more information.
EDT	A text editor that provides line and character editing, screen editing, and journaling capabilities. See the <i>Introduction to the EDT Editor</i> and the <i>EDT Editor Manual</i> for more information.
Error	Programs that detect, log, and display errors, as well as perform crash analysis. You automatically receive this package.
File Restore	The pre-V9 BACKUP package. This package allows you to restore data from backup sets created prior to V9.0. See the <i>RSTS/E Utilities Reference Manual</i> for more information.
Help	Programs that display online help text.
OPSER-based Spooling	The OPSER-based spooling package. See the <i>RSTS/E System Manager's Guide</i> for more information.
Print/Batch Services (PBS)	The RSTS/E V9.x Print/Batch Services package. See the <i>RSTS/E System Manager's Guide</i> for more information.
RMS DAP	RMS DECnet Access Package, a set of routines that provides DECnet support for RMS-11. See the <i>RSTS/E RMS-11 User's Guide</i> and the <i>RSTS/E Release Notes</i> for more information.
RMS-11	<p>A set of routines that allows your programs to gain access to and process (add, modify, and delete) records and files. Many Layered Products and SORT/MERGE use RMS-11. Check your documentation on your specific Layered Product to see if you need RMS-11. For information about RMS-11, see the following manuals:</p> <ul style="list-style-type: none">• <i>RSTS/E RMS-11: An Introduction</i> and the <i>RSTS/E RMS-11 User's Guide</i> provide introductory and user information (MACRO-11 and high-level language programmer).• <i>RSTS/E RMS-11 Macro Programmer's Guide</i> contains reference information on the RMS-11 operation routines for MACRO-11 programmers.• <i>RSTS/E RMS-11 Utilities Manual</i> provides usage and reference information on the RMS-11 utility programs.
RSX Utilities	Programs that allow you to use programming tools for a variety of languages and other layered products or use the DCL LINK command from any language.

Table 5 (Cont.): System Program Packages

Package	Description
SORT/MERGE	SORT/MERGE V3.0, a set of routines that allows you to read an input file, sort it, and write the data to an output file. See the <i>PDP-11 SORT/MERGE User's Guide</i> for more information. (You answer the SORT/MERGE configuration questions in Task 4B of Phase 5.)
SOURCE	.BAS source file for selected system utilities
System Library	The standard system library. You automatically receive this package.
TECO	TECO (Text Editor and corrector), a text editing program that you can use to edit any form of ASCII text. DIGITAL does not support TECO. See the <i>PDP-11 TECO User's Guide</i> for more information.
Unsupported Utility	Utility programs that are unsupported by DIGITAL. See the <i>RSTS/E Release Notes</i> for more information.
Update	Programs you may need when installing optional software. This package contains the BUILD program. If you plan to install any layered products, you should select this package.

Note that the System Library and Error packages are automatically installed on your V9.7 system.

Terminal Session

This terminal session explains the system program installation dialogue and provides some possible responses. In some cases, your response will differ from the response shown in red in the example installation.

Are you ready to proceed? <yes> **RET**

Explanation—This question asks if you are ready to continue. If you type YES or press **RETURN**, the dialogue continues. If you type NO, you see the \$ prompt.

You resume the installation procedure by typing PROCEED.

Response—Type YES or press **RETURN** to continue with the installation. In the example installation, the response is **RETURN**.

**** Starting System Programs Section ****

13-Jun-89 05:23 AM

Do you want to install the System Program packages? <yes> **RET**

Explanation—You are at the beginning of the System Programs Section. If you answer YES, you begin the dialogue to install system programs.

Answer NO if you are only creating a RSTS/E monitor or if you are only installing layered products, or both, and do not want to install system programs. You then skip this phase and go to the Are you ready to proceed? question in Task 1 of Phase 5.

Response—Type YES or press **RETURN** to begin the dialogue. In the example installation, the response is **RETURN**.

Packages currently installed on the target disk:

<RSX,RMS,DAP,PBS,EDT,UPDATE,TEST,UNSUPP,TECO,AUXLIB,RESTORE,OPSER,
SORT,HELP,BASIC,SOURCES,BLDEDT>

Packages to install? <CURRENTLY INSTALLED LIST> :ALL,NODAP,NOUNSUPP,NOSORT,
SOURCE

Explanation—The system displays a list of the packages that are available and then displays a question that asks for the names of the packages you want to install on your system.

You see this display only if you are using a disk that already has RSTS/E on it.

Response—Type a list of the package names, separated by commas. Type ALL to install all the packages. If you plan to install nearly all of the packages, type:

ALL,NOnnnnnn,NOnnnnnn

where nnnnnn refers to a package you want to exclude.

In the example installation, the response is ALL,NODAP,NOUNSUPP,NOSORT,SOURCES.

Remember, if you make a mistake you can type ^ to return to the previous question, or enter CTRL/Z to return to the beginning of the section.

Packages to install? <ALL>: ?

The valid responses are:

DIALOGUE	Switches you to the long form of the System Software Packages dialogue where a more detailed description of each package is provided
ALL	Selects all packages
ALL,NOpkg[,...]	Selects all packages except pkg
,pkg[,...]	Adds pkg to the default list (during an update)
,NOpkg[,...]	Deletes pkg from the default list

Use a comma as a separator. e.g.: RSX,PBS,RMS

Package names:

AUXLIB	Auxiliary Library	RMS	RMS-11
BASIC	Basic-Plus		(includes RSX Utilities)
DAP	RMS DECnet Data Access Package	RSX	RSX Utilities
	(includes RMS-11)	SORT	Sort/Merge
EDT	EDT Editor		(includes RMS-11)
HELP	Help Package	TECO	TECO Editor
OPSER	Opser-based Spooler	TEST	Device Testing
PBS	Print/Batch Services	UNSUPP	Unsupported Utilities
RESTORE	File Restore	UPDATE	Update Package

Packages to install? : ALL,NODAP,NOUNSUPP,NOSORT,SOURCE

Explanation— If the disk you are using does not already have RSTS/E on it, you see this display of the available system programs.

After you type a ?, you see the list of available system program packages. Then the system reprompts for the packages to install. Note that the RMS, DAP, and SORT packages need other packages to work properly. If you specify any of these packages, you automatically receive the associated package.

Response— If you know what packages you want to install, type a list of the package names, separated by commas. Remember, if you make a mistake you can type ^ to return to the previous question, or enter CTRL/Z to return to the beginning of the section.

If you want more information before deciding whether to install a package, type DIALOGUE to see the long form of the dialogue.

Type ALL to install all the packages. If you plan to install nearly all of the packages, type:

ALL,NOnnnnnn,NOnnnnnn

where nnnnnn refers to a package you want to exclude.

In the example installation, the response is ALL,NODAP,NOUNSUPP,NOSORT, SOURCE.

The following will be installed:

RSX	RMS	PBS	EDT
UPDATE	TEST	TECO	AUXLIB
RESTORE	OPSER	HELP	

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes>

Explanation— The system lists the packages it will install and asks if this list of packages is the one you want. If you answer NO to this question, you return to the Packages to install: prompt.

Response—Type YES or press to continue with the installation. Or, type NO if you want to change the packages to install on your system. In the example installation, the response is .

Do you want the I&D versions of tasks? <Y> NO

Explanation—The system copies some required files and then asks if you want the I&D versions of tasks. You see this question only if you specified RSX and/or AUXLIB in response to the Packages to install: question.

Instruction and Data (I&D) space is available on the PDP-11/44, 45, 50, 53, 55, 70, 73, 83, or 84. DIGITAL does not recommend that systems with less than 256K words of memory (PDP-11/45, 50, or 55) use I&D space. If your system has more than 256K words of memory (PDP-11/44, 53, 70, 73, 83, or 84.), you may want to take advantage of this hardware feature which yields better performance from the following tasks: TKB, MAC, STK, and REORDR.

Note that if you answer YES to this question, you must specify a SWAP MAX of 64K words to accommodate the larger amount of physical memory required by the tasks. You will be asked to set the size of SWAP.MAX later in the installation.

The system uses your response to this question later in the installation when it asks whether you want to create a SWAP1.SYS file (see Task 1 of Phase 5). If you answer YES to this question, the system assumes a SWAP MAX of 64K words. Otherwise, the system assumes a SWAP MAX of 32K words.

Response—Type YES or press to receive the I&D versions of tasks. Type NO to receive the normal versions. The example installation does not plan to use I&D space; thus, the response is NO.

Use resident library version of RMS? <Y>

Use RMS resident libraries in DAP? <Y>

Use RMS resident libraries in PBS? <Y>

Use resident library version of EDT? <Y>

Explanation—If you choose RMS, DAP, PBS, or EDT, the system asks you to choose either the resident library or overlaid version. The example installation sees the RMS, PBS, and EDT resident library questions. In general, the overlaid version requires less memory, but can impact performance. The resident library version requires less disk space, but requires more memory. Choose the resident library versions if your system has sufficient memory and you have more than one user accessing a program simultaneously.

Response—Type YES or press to install the resident library version. Type NO to install the overlaid version. The response in the example installation is because it has sufficient memory to install the resident library versions.

During the build phase there will be further questions for BASIC-PLUS and SORT/MERGE

Explanation—You see these messages if you chose the BASIC-PLUS and/or SORT/MERGE packages. You answer the BASIC-PLUS configuration questions in Task 4A of Phase 5. You answer the SORT/MERGE questions in Task 4B of Phase 5.

**** End of System Programs Section ****

Are you ready to proceed? <yes>

Explanation—You are finished with the System Programs Section. This question asks if you are ready to continue. If you type YES or press , the dialogue continues. If you type NO, you see the \$ prompt.

You resume the installation procedure by typing PROCEED.

Response—Type YES or press to continue with the installation. In the example installation, the response is .

13-Jun-89 05:24 AM

**** Starting Layered Products Section ****

You may now transfer the layered product update components from the Installation kit.

Do you wish to do the transfer? <yes>

Explanation—This question asks if you want to transfer any layered product updates from the Installation kit while it is still mounted. Answer YES to this question if you plan to install any layered products on your system. If you answer YES, you continue the Layered Products Section.

Response—Type YES or press to continue the Layered Products Section. Type NO to skip the section. In the example installation, the response is YES.

If you answered YES to the previous question, go to Task 2.

If you answered NO to the previous question, go to Phase 5.

Task 2: Answer Layered Product-Related Questions

You perform this task if you plan to install layered products on your RSTS/E system. A layered product, also called optional software, is software that you must purchase from DIGITAL. Examples of layered products are BASIC-PLUS-2, COBOL-81, and DIBOL.

In this task, you specify which layered products you plan to install on your system, so that the installation procedure can transfer updates for those products from the Installation kit.

NOTE

The RSTS/E Installation Procedure does not perform a layered product installation. See the individual layered product installation guide for the procedures to perform the installation.

Terminal Session

This terminal session explains the layered product-related questions and provides some possible responses.

13-Jun-89 05:24 AM

** Starting Layered Products Section **

You may now transfer the layered product update components from the Installation kit.

Do you wish to do the transfer? <Yes>

Explanation—You see this question at the end of Task 1.

Response—Type YES or press to begin the dialogue to transfer layered products updates. Type NO to skip this section. The example installation response is .

Product updates to transfer: ALL

Explanation—This question asks for the names of the layered product updates you want to transfer to your system.

Response—Type a ? to list the layered product packages that are available with RSTS/E.

The valid responses are:

ALL	Transfers all product updates
ALL,NOprod[,...]	Transfers all product updated except prod
,pkg[,...]	Adds pkg to the default list (during an update)
,NOpkg[,...]	Deletes pkg from the default list

Use a comma as a separator. e.g.: BP2,C81

Product names:

BP2	DIBOL	FRTRN77	PLXY	3271
C81	DTR	MAIL	RJ2780	
DECDX	FMS	MENU	WPS	
DECNET	FORTRAN	PDPDBG	2780	3780

Product updates to transfer?:

Explanation—After you type a ?, you see the list of available layered products. Then the system reprompts for the product updates to transfer.

Response—Type a list of the product names, separated by commas. Remember, if you make a mistake you can type ^ to return to the previous question, or enter CTRL/Z to return to the beginning of the section.

Type ALL to transfer all the updates. If you plan to transfer nearly all of the product updates, type:

ALL,NOnnnnnn,NOnnnnnn

where nnnnnn refers to a product update you want to exclude.

The following will be transferred:

BP2	C81	DECDX	DECNET
DIBOL	DTR	FMS	FORTAN
FRTRN77	MAIL	MENU	PDPDBG
PLXY	RJ2780	WPS	27803780
3271			

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes>

Explanation—The system lists the product updates it will transfer to your system and then asks if you want to continue. If you type NO, you return to the Product updates to transfer?: prompt.

Response—Type YES or press to continue the layered product update transfer. Type NO if you want to specify a different list of layered product updates to transfer to your system.

Note: Any files currently in the PATCH ACCOUNT will be deleted.

Since some layered products may require the Update package (from the System Programs section), it will be included. To install a layered product please refer to the individual layered product installation guide.

Patch account <PATCH\$:>

Explanation—Now you must specify the account in which you want the layered product update information placed. The default account is PATCH\$:.

After you complete the RSTS/E installation, you must follow the installation procedures outlined in the specific layered product installation guide to install that layered product. Some of the layered products use the BUILD program to perform the installation. See Appendix E for a description of BUILD.

Response—Press to accept the default patch account, PATCH\$. Or specify a different account.

** End of Layered Products Section **

Explanation—You are finished with Phase 4. If any error messages appear in the printout, see Appendix A.

Go to Phase 5.

Phase 5

Generate RSTS/E System

You have answered all the configuration questions and are ready to install your RSTS/E system. In this phase, you create some required system files if they do not already exist. Then you create the RSTS/E monitor and install the system programs you selected in Phase 4. See the appropriate installation guides for instructions on building optional software such as BASIC-PLUS-2.

The tasks you perform in this phase are:

- Task 1: Create Additional System Files
- Task 2: Create RSTS/E Monitor
- Task 3: Install System Programs from the Installation Media
- Task 4A: Answer BASIC-PLUS Installation Questions
- Task 4B: Answer SORT/MERGE Installation Questions

These responses have special meaning:

Response	Description
RET	Accept the default response
?	Obtain an online explanation of the question

Task 1: Create Additional System Files

System files are files of special use to the system itself. They reside in account [0,1].

SWAP files are the most important system files. They store jobs transferred out of memory. Without at least one SWAP file, the system cannot swap jobs out of memory and will not work. There are four available SWAP files: SWAP0.SYS, SWAP1.SYS, SWAP.SYS (this is the primary file), and SWAP3.SYS.

During system start-up, INIT.SYS automatically creates the SWAP.SYS file at a size large enough to store one job at the maximum size of 32K words. In addition, INIT.SYS automatically creates the system file CRASH.SYS during system start-up.

In this task, the installation procedure creates the SWAP1.SYS file at a size large enough to hold the number of jobs you specified when you answered the Maximum jobs? question in Task 5 of Phase 3.

You can create other system files later by using the INIT.SYS REFRESH option or the DCL INSTALL command. For a detailed description of system files, see the REFRESH Option section in Part 5.

Terminal Session

This terminal session explains how to specify a password for account [1,2].

```
You must now set the password for account _SY:[1,2]
New password:
New password again, for verification:
Password set for account _SY:[1,2]
```

Explanation—This question asks you to specify a password for the system library account, [1,2]. This is a precautionary measure to provide you with an account that you can log into in case of unforeseen problems. DIGITAL does not recommend that you log into and use account [1,2] on a regular basis, because of the importance of the files that reside in the account.

Response—Type a password from 6 to 14 characters. You can specify any multinational character, including the space character, but not the ? character. Retype the password when prompted.

This is the end of the DIALOGUE phase.

The next phase is the BUILD phase.

Are you ready to proceed? <yes> **[RET]**

Explanation—The system asks if you are ready to generate your RSTS/E system. If you are ready to proceed, type YES or press **[RETURN]**.

If you are not ready, type NO. You then see the dollar sign (\$) prompt. You may need to answer NO, for example, if you want to modify the SYSGEN.COM or the CONFIG.MAC configuration files, which generate the RSTS/E monitor. Type the following to make EDT available at this point for unsupported modifications:

```
$ RUN SYSGEN$:EDT
```

After making any modifications, type PROCEED to continue the installation.

Response—Type YES or press to begin the build phase of the installation. In the example installation, the response is because it is ready to proceed.

* Build phase *

13-Jun-89 05:31 AM

What size would you like SWAPMAX to be? <64>

Explanation— This question is displayed only if you have Instruction and Data (I&D) space hardware, otherwise SWAPMAX is automatically set to 32.

The RSTS/E monitor moves jobs from memory to disk as needed. For a job to move to disk, a special file must exist to store the job. This file is called a swap file. The SWAP MAX or swap maximum is the maximum amount of disk storage space that a job can occupy in a swap file when the job is swapped from memory to disk during timesharing. The size of your SWAP MAX depends on the run-time systems you plan to use, and whether you plan to write programs using I&D space. You can specify a size up to 64K.

Response— Type the new SWAPMAX (a number from 32 to 64).

Do you want _SY0:SWAP1.SYS created (at xxxx blocks)? <yes>

Creating _SY0:[0,1]SWAP1.SYS at xxxx blocks

Explanation—The system checks for a SWAP1.SYS file on your system. If it does not find SWAP1.SYS, the system asks if you want to create a SWAP1.SYS file at a size large enough to hold all the jobs on your system. It automatically creates SWAP1.SYS as close to the center of the system disk as possible. The system determines the size of SWAP1.SYS according to this formula:

$(\text{JOB MAX}-1) * \text{SWAP MAX} * 4$

where:

JOB MAX-1 is the number of jobs you specified in Task 5 of Phase 3, minus 1.

SWAP MAX is the value given in answer to the SWAP MAX question, or is 32K words if you do not have I&D space hardware.

You do not see this message if your system has a SWAP1.SYS file and if you are performing an on-line installation.

You might not want to create SWAP1.SYS on your system disk. Type NO in this case. Use the following DCL command to create swap space manually:

\$ INSTALL/SWAPFILE name

Response—Type YES or press to create SWAP1.SYS. Type NO to skip the creation of SWAP1.SYS. Type a ? if you want to know the size of SWAP1.SYS before you answer the question. In the example, the response is . The system then creates SWAP1.SYS at a size of 4992 blocks.

Creating RSTS/E monitor

Go to Task 2.

Task 2: Create RSTS/E Monitor

The command procedure now creates your RSTS/E monitor.

Note that the time required for this process varies according to the type of your CPU and the size of your monitor. The following are some general guidelines for the time for this step:

- If you are creating your RSTS/E monitor on an 11/70, 11/73, 11/83, or an 11/84 CPU, this process could take up to 30 minutes.
- If you are creating your RSTS/E monitor on an 11/45, 11/50, 11/55, or an 11/60 CPU, this process could take up to 1 hour.
- If you are creating your RSTS/E monitor on an 11/34, 11/35, or an 11/40 CPU, this process could take up to 2 hours.
- If you are creating your RSTS/E monitor on an 11/23 or an 11/24 CPU, this process could take up to 3 hours.

If the command procedure encounters an error during the monitor build, it prints the error and returns to the configuration questions in Phase 3. You see the Beginning of RSTS/E system generation message. If you see this message, return to Phase 3 and answer the configuration questions again. For example, you may have to answer the configuration questions again if the monitor you configured exceeds RSTS/E configuration limits.

Terminal Session

This terminal session explains the procedures that generate the RSTS/E monitor. The procedures will differ depending on your response to certain configuration questions in Phase 3.

Creating RSTS/E monitor

Explanation—The command procedure now begins the RSTS/E monitor generation.

If you answered YES to the RJ2780 support? question in Task 3 of Phase 3, the program prompts you to mount the RJ2780 Software Kit at this time. Mount the RJ2780 kit when you see this prompt:

```
Please mount the RJ2780 Installation kit and enter the name
and unit number of the device.
Valid device types are: 'MM', 'MS', 'MT', 'DM', 'DL' or 'SY'
Installation device <_dev:> :
```

You may have to dismount the RSTS/E Installation media to make room for the RJ2780 kit, if you do not have a free drive available. The system prompts you to remount the RSTS/E Installation media later. Remount the installation media on the indicated drive when prompted.

Messages Produced While Building a RSTS/E Monitor

```
%Small buffers lowered by xxx buffers
This will leave you with yyy buffers
```

Explanation—The command procedure checks whether the number of small buffers you specified in Task 5 of Phase 3 will fit on your system. If the number you specified is too high, the command procedure attempts to decrease the number of buffers so that the monitor fits on your system. If the number of small buffers you specified in Task 5 of Phase 3 is much too high for the maximum number allowed for your system, you see the message:

?LINK-F-Address space exceeded

Beginning of RSTS/E system generation

In general this indicates that the system you configured is too big. Rather than make such a radical adjustment to your monitor by significantly decreasing the small buffers, the command procedure returns to the configuration questions in Phase 3 of Part 1. If you see this message, return to Phase 3 and answer the configuration questions. You may want to decrease the size of your system by changing the answers to some of the questions such as fewer devices. Also, specify a much smaller number to the Small buffers? question in Task 5. In general, 600 to 700 is a good response to the Small buffers? question.

See the BUFFERS suboption of DEFAULT in Part 5 of this guide for more information on small buffers.

The command procedure did not lower the number of small buffers in the example installation.

This monitor has a valid buffer count
Monitor creation 20% complete.
Monitor creation 40% complete.
Monitor creation 60% complete.
Monitor creation 80% complete.
Directory of SIL V97 .SIL on 13-Jun-89 at 05:32 AM

Name	Ident	Load	Size	Transfer	Total
RSTS	09.703	000000	116500	000001	20K
MVR	09.701	120000	014100	000001	23K
.
OV2	09.702	002000	034000	000001	118K
DEFAULT	09.701	001000	003000	000001	119K

Maximum buffers available without using data space:
415 general small buffers.
90 FIP small buffers.

Maximum buffers available using data space:
668 general small buffers.
494 FIP small buffers.

If you choose to restart the installation, you may specify up to 573 small buffers for this system. Doing so will increase the number of general buffers available both with and without data space.

Monitor creation 100% complete.

Before attempting to start your new SIL, you must have swap file space of 11264 blocks and if you use files other than SWAP1.SYS you must also edit START.COM to install them.

Explanation—You see these messages if your new monitor is an acceptable size and the build progresses satisfactorily.

Go to Task 3.

Task 3: Install System Programs from the Installation Media

The system now installs the system programs according to the instructions you gave in Phase 4. First, the system transfers the remaining files from the Installation tape or disk. The system also transfers any layered product updates you specified in Phase 4. This task should take fifteen to twenty minutes, depending on the size of the installation.

The system installs each package at the location pointed to by its associated logical name. If the program finds no associated logical name, it installs the package at the default location. This is the case in a new installation.

Table 6 lists the logical names and default locations for each package.

Table 6: System Program Package Logical Names

Package	Logical Name	Location
Auxiliary Library	AUXLIB\$:	[0,14]
BASIC-PLUS	BASIC\$:	[0,12]
Device Testing	TEST\$:	[0,5]
EDT	EDT\$:	[0,11]
Error	ERROR\$:	[0,3]
File Restore	RESTOR\$:	[0,7]
Help	HELP\$:	[0,2]
OPSER-based Spooling	OPSER\$:	[0,8]
Print/Batch Services (PBS)	PBS\$:	[0,6]
RMS-11	RMS\$:	[0,10]
RSX Utilities	LB:	[1,1] [1,2]
SORT/MERGE	SORT\$:	[0,15]
SOURCE	SOURCE\$:	[0,17]
System Library	SYSLIB\$:	[1,2]
TECO	TECO\$:	[0,13]
Unsupported Utility	UNSUPP\$:	[0,9]
Update	UPDATE\$:	[0,4] [1,2]

Terminal Session

This terminal session explains the procedures that transfer the system programs from the Installation media.

```
13-Jun-89 05:48 AM
```

```
Restoring the xxxxxx package from the Installation kit
```

```
There are no updates for the xxxxxx package
```

Explanation—The system now installs the system programs. First it installs updates for the three packages that are automatically installed on all systems: System Startup, System Library, and Error. Then, as the system installs each optional package, it prints one of the above messages. In both messages, xxxxxx is the name of the specific software package.

In the example installation, the system prints the following messages. The messages for your installation may vary depending on how you answered the system program questions in Phase 4.

```
13-Jun-89 05:25 AM
Restoring the System Startup files from the Installation kit
Restoring the System Library package from the Installation kit
Restoring the Error package from the Installation kit
Restoring the RSX Libraries from the Installation kit
Restoring the RSX Utilities from the Installation kit
Restoring the RMS-11 package from the Installation kit
Restoring the RMS Libraries from the Installation kit
Restoring the Print/Batch Services package from the Installation kit
Restoring the EDT package from the Installation kit
Restoring the Update package from the Installation kit
Restoring the Device Testing package from the Installation kit
Restoring the Unsupported Utilities from the Installation kit
Restoring the TECO package from the Installation kit
Restoring the Auxiliary Libraries from the Installation kit
Restoring the File Restore package from the Installation kit
Restoring the Opser-based Spooling package from the Installation kit
Restoring the Help package from the Installation kit
Restoring the Program Sources from the Installation kit
Restoring the EDT Maintenance package from the Installation kit
Restoring the Resident Libraries from the Installation kit
```

After the system completes the system program file transfers, it restores the layered product updates you specified in Phase 4. As the system transfers each layered product update, it prints the message:

```
Restoring the xxxxxx update components from the Installation kit
```

where xxxxxx is the name of the layered product. For the sample installation, the system prints the following messages:

```
13-Jun-89 05:26 AM
Restoring BP2 update components from the installation kit
Restoring C81 update components from the installation kit
Restoring DECDX update components from the installation kit
Restoring DECNET update components from the installation kit
Restoring DIBOL update components from the installation kit
Restoring DTR update components from the installation kit
Restoring FMS update components from the installation kit
Restoring FORTRAN update components from the installation kit
Restoring FRTRN77 update components from the installation kit
Restoring MAIL update components from the installation kit
Restoring MENU update components from the installation kit
Restoring PDPDBG update components from the installation kit
Restoring PLXY update components from the installation kit
Restoring RJ2780 update components from the installation kit
Restoring WPS update components from the installation kit
Restoring 27803780 update components from the installation kit
Restoring 3271 update components from the installation kit
```

```
RSTS/E V9.7
```

```
13-Jun-89 05:26 AM
```

```
RSTS/E Software Installation Procedure
```

```
13-Jun-89 05:26 AM
```

```
START.097 and LOGIN.097 in account [0,1] are the templates
for those .COM files. Your present .COM files should be
edited to reflect any changes.
```

Explanation— This message indicates that there are two templates available for you to edit to create START.COM and LOGIN.COM for your system as directed in Phase 6.

You see this message only when your system already has a version of START.COM and LOGIN.COM. Otherwise, the procedure renames START.097 and LOGIN.097 to START.COM and LOGIN.COM.

13-Jun-89 05:26 AM

Installing system packages

Explanation— The system now begins installing the system packages.

If you specified BASIC-PLUS as one of the packages to install, then go to Task 4A for a complete description of the BASIC-PLUS dialogue and return to this point. Otherwise, continue with this task. The example installation does not plan to install BASIC-PLUS.

If you are not installing BASIC-PLUS but you want to install SORT/MERGE, then go to Task 4B for a complete description of the SORT/MERGE dialogue and return to this point. Otherwise, continue with this task. The example installation does not plan to install SORT/MERGE.

Finished installing system packages

13-Jun-89 05:26 AM

The RSTS/E Software Installation Procedure is complete

Would you like to start your new monitor now? <Y> YES

Explanation— After the system packages are installed, you are asked if you want to start your new monitor now.

Response— Type YES or press **RETURN** to have the system start your new monitor. If you type NO, you will have to shut down the SYSGEN monitor and start your new monitor as directed in Phase 7.

Deleting all global symbols

Deassigning system logicals

13-Jun-89 06:17 AM

System tape label default set to DOS

SY:[1,2]INSTAL.LOG is a log file of this session

Please wait for system to re-boot itself

Explanation—You have completed the installation. The command procedure prints informational messages and reminds you that the INSTAL.LOG file is a record of the installation. The procedure then automatically shuts down the SYSGEN monitor and starts your new monitor.

RSTS V9.7 SYSGEN (DU0) INIT V9.7

13-Jun-89 - 6:20 AM

Memory allocation table:

0K:	00000000 - 00413777 (67K)	: EXEC
67K:	00414000 - 03367777 (379K)	: USER
446K:	03370000 - 03777777 (66K)	: XBUF
512K:	04000000 - End	: NXM

Memory available to RSTS/E is 512K words.

Re-creating CRASH.SYS file with minimum size of 380 blocks

Explanation—INIT.SYS starts the currently installed monitor, RSTS97.SIL, and starts timesharing under it.

The procedure then prints the current memory allocation table and checks that the CRASH.SYS file exists in account [0,1] on the system disk, is large enough for the installed RSTS/E monitor and extended buffer pool allocation, and is contiguous.

13-Jun-89 - 06:22 AM

8 devices disabled

Proceed with system startup? <YES>

Beginning RSTS/E system startup...

13-Jun-89 06:22 AM	Mounting disks
13-Jun-89 06:22 AM	Assigning logical names
13-Jun-89 06:22 AM	Starting error logging
13-Jun-89 06:22 AM	Setting system characteristics
13-Jun-89 06:22 AM	Installing run-time systems and libraries
13-Jun-89 06:23 AM	Setting terminal characteristics
13-Jun-89 06:23 AM	Defining system commands
13-Jun-89 06:23 AM	Setting printer characteristics
13-Jun-89 06:23 AM	Starting spoolers

Print/Batch Services started at 06:23 AM

Explanation— The procedure pauses for several seconds while it performs the necessary tasks to start timesharing. It then asks if you are ready to proceed with the start up.

Response— Type YES or press to start timesharing. Or, type NO if you are not ready to start timesharing. You then see the DCL \$ prompt. In the example installation, the response is .

*** From [1,2] on KB0: at 06:23 AM on 13-Jun-89

** RSTS/E is on the air...

RSTS V9.7 13-Jun-89 06:24 AM

User:

Explanation— You are finished with the installation. You can now press to log in to the system. RSTS/E then prints its banner followed by the User: prompt. You can now enter 1,2 to log in to account [1,2], which is currently the only account on the system. You then see the password: prompt. Enter the password you specified during the installation procedure.

Go to Phase 6.

Task 4A: Answer BASIC-PLUS Installation Questions

You perform this task if you are installing BASIC-PLUS on your system. In this task you specify the particular BASIC-PLUS configuration for your system. The BASIC-PLUS installation questions relate to optional features of the BASIC-PLUS run-time system such as math precision, logarithmic functions, and trigonometric functions.

Certain combinations of features will cause your BASIC-PLUS run-time system to exceed 16K words. This limits programs running under BASIC-PLUS to a maximum size of 12K words.

If you select double-precision floating point math precision (see Math precision? question) and do not select FPP (see FPP? question), then you must omit some optional features to keep the size at or below 16K.

Terminal Session

This terminal session explains the BASIC-PLUS installation questions and provides some possible responses. For more information on any of these features, see the *BASIC-PLUS Language Manual*. In some cases, your response will differ from the response shown in red in the example installation.

Beginning of RSTS/E Basic-Plus generation.

BASIC-PLUS RTS name? <BASIC> **RET**

Explanation—This question asks for a BASIC-PLUS run-time system name. The system automatically assigns a file type of .RTS to this name. Your run-time system will be stored as a save image library (SIL) in account [0,1] on your system disk.

Response—Type a name for your BASIC-PLUS run-time system or press **RETURN** to accept the default of BASIC, as in the example installation. The name can be any combination of alphanumeric characters up to 6 characters long.

FPP? <Y> **RET**

Explanation—The floating point processor (FPP) is hardware that supports both single-precision (2-word) or double-precision (4-word) floating point instructions. FPP is available for the PDP-11/23 PLUS, 11/24, 11/34, 11/44, 11/45, 11/50, 11/55, and 11/70. It is standard hardware on the 11/53, 11/60, 11/73, 11/83, and 11/84.

Response—You see a Y default if your PDP-11 has FPP; you see a N default if your PDP-11 does not have FPP. Type YES or press **RETURN** if your PDP-11 has FPP; type NO or press **RETURN** if it does not. If you type YES, the program goes to the Math precision? question. If you type NO, the program goes to the FIS? question. In the example installation, the response is **RETURN**.

FIS ? <N> ?

Will this software run on a computer
with the floating instruction set
(YES or NO)?

Explanation—This question asks if you want the floating instruction set (FIS) installed. The FIS is hardware that provides single-precision floating point instructions. The FIS instructions are only available on the PDP-11/40 and 11/35.

Response—Type Y if you want the FIS installed. Press **RETURN** or type N if you do not want the software to use FIS installed on your system.

Math precision? <02> 4

Explanation—This question asks if you want your math package to support single-precision or double-precision floating point instructions. The single-precision floating point instructions provide floating-point numbers that are precise to 6 significant digits; the double-precision floating point instructions provide floating point numbers that are precise to 15 significant digits. In addition, the double-precision floating-point instructions provide a scaled arithmetic feature. Scaled arithmetic is useful for calculating sums that cannot be easily expressed as integer quantities, such as dollars and cents.

Response—Type 2 or press **[RETURN]** if you want the single-precision floating point instruction; type 4 if you want the double-precision floating point instruction. In the example installation, the response is 4.

Table 7 lists the BASIC-PLUS optional features. If you must omit some optional features, use Table 7 to determine which combinations you can select. You can include features with a total size of up to 6. Your choice of features will depend on which applications you plan on using.

Table 7: BASIC-PLUS Optional Features

Feature	Size
Log functions	1
Trig functions	1
Print using	2
Matrices	2
String arithmetic	3

Log functions? <Y> **[RET]**

Explanation—This question asks if you want the BASIC-PLUS run-time system to use the logarithmic functions SQR, EXP, LOG, and LOG10. Some installations may not need this feature, in which case you can reduce the size of the BASIC-PLUS run-time system by answering N to this question. Operations such as X^Y require the log functions if Y is not an integer.

Response—Type YES or press **[RETURN]** to add the logarithmic functions; type NO if you do not want to add the logarithmic functions. In the example installation, the response is **[RETURN]**.

Trig functions? <Y> **[RET]**

Explanation—This question asks if you want the BASIC-PLUS run-time system to use the trigonometric functions SIN, COS, TAN, and ATN. Some installations may not need this feature, in which case you can reduce the size of the BASIC-PLUS run-time system by answering N to this question.

Response—Type YES or press **[RETURN]** if you need to add these functions; type NO if you do not need to add these functions. In the example installation, the response is **[RETURN]**.

Print using? <Y> **[RET]**

Explanation—This question asks if you want special output formatting with the PRINT-USING statement of BASIC-PLUS. Some layered products require this feature. You can reduce the size of the BASIC-PLUS run-time system by answering N to this question.

Response—Type YES or press **[RETURN]** if you need this feature; type NO if you do not need this feature. In the example installation, the response is **[RETURN]**.

Matrices? <N> Y

Explanation—This question asks if you want BASIC-PLUS to operate on an entire matrix using single MAT statements.

Response—Type YES if you need this feature; type NO or press **[RETURN]** if you do not need this feature. In the example installation, the response is Y.

String arithmetic? <N> **[RET]**

Explanation—The BASIC-PLUS run-time system can use special string arithmetic functions like SUM\$, DIF\$, PROD\$, QUO\$, PLACE\$, and COMP%. These functions perform arithmetic functions on strings of numeric characters, minus signs, and decimal points with an accuracy of up to 56 significant digits. The string arithmetic functions, although slow to execute, are useful for applications that involve large numbers, such as monetary conversions.

Response—Type YES if you need this feature; type NO or press **[RETURN]** if you do not need this feature. In the example installation, the response is **[RETURN]** to accept the default of NO.

Return to the point in phase 5 task 3 from which you left.

Task 4B: Answer SORT/MERGE Installation Questions

This task describes the SORT/MERGE installation questions. You see these questions if you specified SORT/MERGE in response to the Packages to install: prompt in Task 1 of Phase 4. DIGITAL recommends that most users installing SORT/MERGE accept the system defaults for the SORT/MERGE package. The defaults will meet the needs of most users. Prior to starting any SORT/MERGE operation, you will be able to change the default response to a different response for that particular SORT/MERGE operation. See the *PDP-11 SORT/MERGE User's Guide* for more information on SORT/MERGE.

Terminal Session

This terminal session describes the SORT/MERGE installation questions and provides some possible responses.

Installing SORT/MERGE package

```
*****
*      This is the beginning of the dialogue to      *
* define the attributes of your SORT/MERGE utility. *
*****
```

This procedure will, by default, build and install
SORT and MERGE for optimum performance. The utility
SORT and MERGE tasks will have the following attributes:

```
SORT built at 32K/MERGE built at 32K
Have ASCII as the default character collating sequence
Process duplicate records
Do a nonstable SORT and MERGE
Retry 2000 times when trying to read a locked bucket
Allow 55% of the SORT work area for SORT tree structure
Allow 30% of the MERGE work area for MERGE data structure
Use five (5) work files for SORT
Use the RECORD sort process
Sequence check the input files for MERGE
```

Additionally, the default will NOT build the
SORT and MERGE callable subroutines as a resident library.

If you want the installation to proceed using
these defaults, answer YES. If you want to
change any of these defaults, answer NO.

Do you want to proceed with the default installation <Yes>?

If you answer YES, go to Question 22 to verify your selection of attributes. If you answer NO, go to Question 1.

1. If you want to change the default size of the SORT
or MERGE task, answer YES, otherwise answer NO.

Do you want to change the default task size <NO>?

If you answer NO, go to Question 5. If you answer YES, go to Question 2.

2. The size of the final SORT and MERGE tasks can be
varied by changing the default size of the work
area. The work area is currently set to be the
maximum allowed by your operating system in order
to give SORT/MERGE the optimum performance.

Which task size do you want to change
SORT MERGE BOTH NEITHER <BOTH>?

If your answer is either BOTH or SORT, go to Question 3. If your answer is MERGE, go to Question 4. If your answer is NEITHER, go to Question 5.

3. The maximum SORT task size is 32K on your system.
The minimum SORT task size is 17K words.
The chosen size must be a whole number between these inclusive limits. Decimals will be truncated.

What size do you want your SORT task to be <32K>?

If you answered SORT to Question 2, go to Question 5. If you answered BOTH to Question 2, go to Question 4, then go to Question 5.

4. The maximum MERGE task size is 32K on your system.
The minimum MERGE task size is 17K words.
The chosen size must be a whole number between these inclusive limits. Decimals will be truncated.

What size do you want your MERGE task to be <32K>?

5. If you want to change any of the default run-time options, answer YES, otherwise, answer NO.

Do you want to change any of the default run-time options <NO>?

```
*****
* IF YOU CHANGE ANY OF THE DEFAULTS, BE SURE TO *
* INFORM YOUR USERS, SINCE THOSE DEFAULTS MAY   *
* NOW BE DIFFERENT FROM THE DEFAULTS STATED IN  *
* THE SORT/MERGE DOCUMENTATION!                 *
*****
```

If you answer NO, go to Question 21. If you answer YES, go to Question 6.

6. By default, SORT/MERGE will use the ASCII collating sequence when operating on character data keys.

If you answer YES, you can change the ASCII collating sequence to another collating sequence in question 7.

Do you want to change the default collating sequence <NO>?

If you answer NO, go to Question 8. If you answer YES, go to Question 7, then go to Question 8.

7. The choices are ASCII, EBCDIC, or MULTINATIONAL.
What do you want the default character key collating sequence to be?

ASCII EBCDIC MULTI <ASCII>?

8. By default, SORT/MERGE will process records which are found to have duplicate key fields.

If you wish to have SORT/MERGE eliminate records with duplicate keys by default, answer YES.

If you wish to have SORT/MERGE keep all records with duplicate keys by default, answer NO.

Should SORT/MERGE eliminate duplicate records by default <NO>?

If you answer NO, go to Question 9 and then Question 10. If you answer YES, you see the following message:

```
*****
* YOU HAVE CHOSEN TO ELIMINATE DUPLICATE RECORDS BY DEFAULT. *
* STABLE SORT/MERGE AFFECTS DUPLICATE RECORDS. THEREFORE, THE *
* STABLE AND NODUPPLICATES OPTIONS ARE MUTUALLY EXCLUSIVE.    *
* YOUR DEFAULT FOR THE STABLE OPTION MUST BE NOSTABLE.        *
*****
```

If you answered YES, go to Question 10.

9. Stable SORT/MERGE imposes extra overhead during the key comparison process. For this reason, the default is for a nonstable SORT/MERGE. If you wish to change this default, answer YES, otherwise answer NO.

Do you wish the default to be a stable SORT/MERGE <NO>?

10. The SORT work area is divided into two areas, one for the SORT tree data structure, and one for the RMS I/O data structures. For SORT, the default division giving optimum performance is 55% to the tree and 45% to I/O. If the majority of the files you are sorting requires a large number of I/O data structures (for example, INDEXED files with many keys, or a consistently large number of input files), you may want to alter the split so that there will be enough room for the I/O requirements.

If you want to change the default split, answer YES, otherwise answer NO.

Do you want to change the SORT default split <NO>?

If you answer NO, go to Question 12. If you answer YES, go to Question 11 and then 12.

11. What percentage of the work area should be allotted to the SORT tree data structure? The lower limit is 45%.
The upper limit is 65%.
Your answer must be in whole numbers. <55>?

12. The MERGE work area is divided into two areas, one for the MERGE data structure and one for the RMS I/O data structures. For MERGE, the default division giving optimum performance is 30% to the data structure and 70% to the RMS data structures.

If the majority of the files you are merging requires a large number of I/O data structures (for example, INDEXED files with many keys, or a consistently large number of input files), you may want to alter the split so that there will be enough room for I/O requirements.

If you want to change the default split, answer YES, otherwise answer NO.

Do you wish to change the MERGE default split <NO>?

If you answer NO, go to Question 14. If you answer YES, answer Question 13 and then go to Question 14.

13. What percentage of work area should be allotted to the MERGE data structure? The lower limit is 20%.
The upper limit is 40%.
Your answer must be in whole numbers. <30>?

14. The optimum number of work files for SORT is 5.
If you wish to change this default, answer YES, otherwise answer NO. <NO>?

If you answer NO, go to Question 16. If you answer YES, go to Question 15 and then to Question 16.

15. The minimum number of work files is 3, the maximum is 10.

Changing the number of work files may change the performance of SORT depending on the data being sorted. See the *PDP-11 SORT/MERGE User's Guide* for more information on changing the number of work files.

How many work files should SORT use by default? <5>?

16. By default, SORT will carry complete records throughout the process and output complete records. If you are sorting large records with small keys and wish to conserve disk space, you may change this default.

```
*****
* PLEASE NOTE THAT FOR SORTS USING OTHER THAN THE RECORD *
* PROCESS, ALL INPUT FILES MUST RESIDE ON DISK.          *
*****
```

If you wish to change the default sort process, answer YES, otherwise answer NO.

Do you wish to change the default sort process <NO>?

If you answer NO, skip Question 17 and answer Questions 18 and 19. If your answer is YES, answer Questions 17-19.

17. What should the default sort process be?

RECORD TAG ADDRESS INDEX <RECORD>?

18. By default, MERGE will sequence check the input records.

If you want to change this default, answer YES, otherwise answer NO. <NO>?

19. SORT/MERGE will read input files which are in use and opened in a shareable mode. If SORT/MERGE encounters a locked bucket, the operation will be retried a maximum of 2000 times before a fatal error is returned. If you want to change the number of retries, answer YES, otherwise answer NO.

Do you want to change the number of retries <NO>?

If you answer NO, go to Question 21. If you answer YES, go to Question 20 and then to Question 21.

20. The maximum number of retries allowed is 9999.

The minimum number of retries allowed is 1.

How many times should SORT/MERGE try to re-read a locked bucket <2000>?

21. By default, the callable SORT and MERGE subroutines will be available via two object libraries. Additionally, if you want to build a combined callable SORT and MERGE resident library answer YES, otherwise answer NO.

If you answer NO, the object libraries will be built into your program upon completion of linking your program. If you answer YES, you will have more free disk space and a faster run-time than if you answered NO.

Do you want to build a combined callable SORT and MERGE cluster library <NO>?

This completes the selection of attributes for your SORT/MERGE utility. The installation procedure now shows you the attributes that you have selected, and you have the opportunity to change the attributes. (The attributes shown in this example are not necessarily the default attributes, nor does DIGITAL necessarily recommend them for your system—they are only a sample.)

22. *****
 * Your SORT and MERGE product will be built *
 * according to the following specifications: *

SORT TASK SIZE IS 32K WORDS
 MERGE TASK SIZE IS 32K WORDS
 YOU HAVE THE FOLLOWING RUNTIME DEFAULTS:
 ASCII CHARACTER COLLATING SEQUENCE
 RECORDS WITH DUPLICATE KEYS ELIMINATED
 NO STABLE PROCESS
 2000 LOCKED BUCKET RETRIES
 55% OF WORK AREA FOR SORT DATA STRUCTURES
 45% OF WORK AREA FOR SORT RMS DATA STRUCTURES
 30% OF WORK AREA FOR MERGE DATA STRUCTURES
 70% OF WORK AREA FOR MERGE RMS DATA STRUCTURES
 03 WORK FILES
 RECORD SORT
 DO NOT SEQUENCE CHECK MERGE INPUT
 A SORT/MERGE RESIDENT/CLUSTER LIBRARY WILL BE BUILT
 ARE THE ABOVE DEFAULTS THE DESIRED ONES <YES or NO> <YES>?

If you answer NO, go back to Question 1 and repeat the dialogue procedure. If you answer YES, you see the following message:

 * This is the end of the installation dialogue. *
 * The installation will now proceed without *
 * further operator intervention. *

Running SORT/MERGE certification tests

The installation procedure then continues without operator intervention. It will task build and install the utilities, place the callable overlay description files in [0,15], and automatically execute a SORT/MERGE operation to verify that SORT/MERGE has been properly installed. If an error is encountered, you see the following message:

??
 ? ?
 ? Either SORT or MERGE did not install ?
 ? properly. Contact your software ?
 ? specialist for further assistance! ?
 ???

If no errors are encountered, return to the point in phase 5 task 3 from which you left.



Phase 6

Create Accounts and Edit System Startup File

After you finish Phase 5, you are ready to tailor your new RSTS/E system.

The tasks in this phase are:

- Task 1: Create the System Management Account (CREATE/ACCOUNT)
- Task 2: Create User Accounts (CREATE/ACCOUNT)
- Task 3: Edit System Startup File

Task 1: Create the System Management Account (CREATE/ACCOUNT)

In this task you create the system management account on your system disk with the CREATE/ACCOUNT command. The system management account is the account you use to perform system management tasks. DIGITAL recommends that you make this account different from the account you are currently working in, [1,2]. Normally you grant all privileges to the system management account.

You use qualifiers with the CREATE/ACCOUNT command to establish such things as disk quotas and privileges. Because the detached jobs quota is set to zero by default, be sure to set it to some other value, such as 3, so you can start detached jobs from the system manager's account. If you are not familiar with the qualifiers for the CREATE/ACCOUNT command, see the *RSTS/E System Manager's Guide*.

Terminal Session

This terminal session explains how to use the CREATE/ACCOUNT command to create the system management account.

Type a command of the following format:

```
CREATE/ACCOUNT dev:[p,pn]/PRIVILEGES=(abc,def,...)
Password: <password>
Password again, for verification: <password>
```

Explanation—The CREATE/ACCOUNT command establishes accounts on your RSTS/E system. If you omit the device specification, the default is the system disk, SY0:. The only time you would specify a device is if you are building a target disk. You specify the account privileges as a list following the /PRIVILEGES qualifier. See the *RSTS/E System Manager's Guide* for more information about privileges. The password can be any combination of DEC MCS characters including the space character but not the ? character. The password can be from 6 to 14 characters long. The password is /NOLOOKUP by default. This makes it impossible to look up the password, thus providing additional account security. The example installation plans to create a fully privileged system management account [1,4] on the system disk. The command line in the example installation looks like:

```
CREATE/ACCOUNT [1,4]/PRIVILEGES=ALL
Password:
Password again, for verification:
Account _SY0:[1,4] created at DCN 27345
```

Explanation—These commands create a new account [1,4] on the system disk, SY0:. The account has all privileges. The account password cannot be looked up.

NOTE

It is recommended that you pick an account number other than the example [1,4] since it is very likely that a hostile user may attempt to attack these "sample" accounts.

Back Up the System Disk Onto Another Disk or Tape

Back up the system disk onto another disk or tape (Backup program) prior to creating user accounts. You can use the online V9.7 BACKUP utility to copy your system disk. See the *RSTS/E System Manager's Guide* for more information.

Go to Task 2.

Task 2: Create User Accounts (CREATE/ACCOUNT)

In this task you create user accounts on your system disk with the CREATE/ACCOUNT command. You use qualifiers with the command to establish such things as disk quotas and privileges. If you are not familiar with the qualifiers of the CREATE/ACCOUNT command, see the *RSTS/E System Manager's Guide*.

Terminal Session

This terminal session explains how to use the CREATE/ACCOUNT command. Type a command in the following format:

```
CREATE/ACCOUNT dev:[p,pn] [/QUALIFIERS]  
Password: <password>  
Password again, for verification: <password>
```

Explanation—The CREATE/ACCOUNT command establishes accounts on your RSTS/E system. If you omit the device specification, the default is the system disk, SY0:. The password can be any combination of DEC MCS characters including the space character but not the ? character. The password can be from 6 to 14 characters long.

Go to Task 3.

Task 3: Edit System Startup File

Your next task is to edit START.COM, the system startup file. This command file must contain the information required to properly initialize the system for both normal time-sharing operations and system recovery after a crash.

DIGITAL provides this file in the system account [0,1]. Edit this file as your installation requires. You may need to edit START.COM for one or more of these reasons:

- Add startup commands for terminals and line printers.
- Add system logical definitions or commands associated with optional products such as DECnet. See the installation guide for the particular optional product for specific information.
- Add startup commands for the OPSER-based spooling package.
- Add system logical definitions or commands associated with software not provided by DIGITAL.

See the *RSTS/E System Manager's Guide* for more information about editing the START.COM file.

NOTE

The START.COM file provided by DIGITAL contains sufficient commands to start your new V9.7 system. If you are using a hard-copy terminal to perform your installation, you may prefer to wait until you have started timesharing under your new monitor to edit START.COM. Then you can log in to a video terminal to edit the file.

If you choose to edit START.COM later, be sure to shut the system down after you make your edits. Then start timesharing again to make sure your new START.COM file works properly.

This session uses EDT to edit the system startup file. You have already installed EDT on your system..

Terminal Session

This terminal session explains how to edit the DIGITAL-provided START.COM command file. First you make a backup copy of START.COM. Responses in the example installation are printed in red.

```
$COPY [0,1]START.COM [0,1]START.OLD
```

Explanation—Use the DCL COPY command to make a backup copy of START.COM. This provides additional protection in case something goes wrong during your editing session. You can delete the backup version after you successfully start your system using START.COM.

Response—Type a command in the format shown. The example installation creates a copy of START.COM named START.OLD in account [0,1].

```
$TYPE [0,1]START.COM
```

Explanation—Use this command to print the START.COM command file at your terminal. You may want to study the file before deciding where to make your edits. If you are not using a hard-copy terminal and want to get a printed copy of START.COM, type PRINT [0,1]START.COM.

Response—Type the command as shown to list the START.COM file.

NOTE

If you built the resident library version of EDT, issue the
INSTAL/LIBRARY EDT\$:EDT command before editing START.COM.
Otherwise, the edit command will fail and display the **?Unable to
attach to resident library** error message.

```
$EDIT/EDT [0,1]START.COM
```

Explanation—Use this command to start the EDT editor. The first line of your file will be shown on the screen with an * prompt at the left margin. After you type C and press **[RET]**, the text of the file appears on your screen. Edit the file according to the needs of your installation. For more information on EDT, see the *Introduction to the EDT Editor* and the *EDT Editor Manual*.

Response—Type the command as shown. Type C and press **[RET]** at the * prompt to have your file shown on your screen.

```
*EXIT
```

```
$
```

Response—Press CTRL/Z to return to the * prompt. Type EXIT at the * prompt and then press the ENTER key on the keypad when you are ready to exit EDT.

When you use EDT to edit a file, the monitor replaces the sample file in account [0,1] with your version.

Go to Phase 7.



Phase 7

Start RSTS/E Monitor

This phase describes the tasks you must perform to start your RSTS/E monitor if you do not choose to have the installation procedure start it for you.

The tasks in this phase are:

- Task 1: Shut Down SYSGEN Monitor (SHUTUP)
- Task 2: Start your custom RSTS/E Monitor (START)

These responses have special meaning:

Response	Description
<input type="checkbox"/> RET	Accept the default response
?	Obtain an online explanation of the question

Task 1: Shut Down SYSGEN Monitor (SHUTUP)

Now that you have built your RSTS/E monitor, you no longer need the SYSGEN monitor. To shut down your monitor, run the SHUTUP program. Make sure you are logged in to the console terminal when you run SHUTUP.

Terminal Session

This terminal explains how to use SHUTUP to shut down your SYSGEN monitor.

```
$RUN $SHUTUP
```

Explanation—You are logged in to the console terminal and you see the DCL \$ prompt. You can now shut down the SYSGEN monitor.

Response—Type RUN \$SHUTUP to shut down the monitor.

```
SHUTUP V9.7-08  RSTS V9.7-11 SYSGEN
```

```
6:19 AM 13-Jun-89 #####      Set-up Dialogue Phase      #####
```

```
Type '^' to any query to backup one question
```

```
Minutes until system shutdown (0-99) <5>? 0
```

```
Shutdown with automatic RESTART <NO>? 
```

Explanation—SHUTUP prints a header and some preliminary information. It then asks you to type the minutes to wait before the RSTS/E monitor shuts down. This question is useful for giving system users fair warning when shutting down the system. The system also asks if you want an automatic RESTART to the system. The default response is NO.

Response—Type 0. Press or type No to accept the default response. You should never answer YES at this point in the installation procedure. You must shutdown the system in order to start the new monitor.

```
6:19 AM 13-Jun-89 #####      Warning Message Phase      #####
Further LOGINs are now disabled
```

```
6:19 AM 13-Jun-89 #####      Initial Job Killing Phase    #####
```

```
6:19 AM 13-Jun-89 #####      Remove RTS/RES LIB Phase    #####
```

```
6:19 AM 13-Jun-89 #####      SWAP File Removal Phase     #####
```

```
6:19 AM 13-Jun-89 #####      Disk DISMOUNT Phase        #####
```

```
6:19 AM 13-Jun-89 #####      Final Shutdown Phase        #####
```

```
Please wait for system to re-boot itself
```

```
RSTS V9.7 SYSGEN (DU0) INIT V9.7
```

```
13-Jun-89 - 6:20 AM
```

```
Start timesharing? <Yes>
```

Explanation—SHUTUP prints several messages before shutting down your system. It then returns to the Start timesharing? question. See the *RSTS/E System Manager's Guide* for more information on SHUTUP.

Go to Task 2.

Task 2: Start RSTS/E Monitor (START)

In Task 1 you ran the SHUTUP program to shut down the SYSGEN monitor. Now you need to start your RSTS/E monitor. You must first decide whether to perform the additional preparatory task:

- Change monitor defaults (INIT.SYS DEFAULT option)

Change Monitor Defaults (DEFAULT Option)

You can set RSTS/E monitor defaults in two ways:

- Accept preselected defaults (START option). INIT.SYS sets defaults for your RSTS/E monitor and then starts timesharing.
- Set your own RSTS/E monitor defaults (DEFAULT option).

INIT.SYS can determine many of your RSTS/E monitor defaults, based on the configuration of your system. You can set the others online during timesharing. Table 8 shows the default settings of your new monitor.

Table 8: Monitor Defaults

Default	Current Setting INIT.SYS Settable Defaults
Crash dump file	CRASH.SYS, if enough space is present
Extended buffer pool memory (XBUF)	15% of USER memory is allocated to XBUF, if the total amount of system memory exceeds 128K words. Otherwise, 10% of USER memory is allocated to XBUF. USER memory is memory that is not allocated to any other entity, such as the monitor or run-time system. The minimum size of XBUF without DECnet is 3K words. The minimum size of XBUF with DECnet and endnode is 3K words. The minimum size of XBUF with DECnet and router varies according to the size of your network, but is never less than 3K words. The maximum size is 496K words.
Small buffer pool memory	The maximum allowed for your system, over and above the minimum number you specified in Task 6 of Phase 3. The size varies based on your hardware and software configurations.
System clock	KW11-L Line Time Clock

If you do not plan to change any of the defaults selected by INIT.SYS, then you do not need to use the DEFAULT option before you start timesharing under your RSTS/E monitor. On the other hand, if you want to perform any of the following operations, you need to use the DEFAULT option before you start timesharing:

- Change the amount of memory allocated to the extended buffer pool (XBUF suboption of DEFAULT).
- Change the amount of memory allocated to the small buffer pool (BUFFERS suboption of DEFAULT).

See Part 5 of this guide for a complete description of DEFAULT.

Choose the monitor defaults that are suited to your needs. The example installation plans to accept the INIT.SYS selected defaults.

If you are ready to start your RSTS/E monitor, continue with this task.

If you need to change the monitor defaults or back up your system disk, answer NO to the Start timesharing? question. Then go to Part 5 before continuing with this task.

Terminal Session

To start your RSTS/E monitor, you must answer the START questions. This terminal session lists the START questions, explains them, and gives you some possible responses. After you understand the question, type the response at your console terminal. In some cases, your response will differ from the response shown in red in the example installation.

Start timesharing? <Yes> START RSTS97

Explanation—This question asks if you are ready to start timesharing. If you answer YES to this question, INIT.SYS starts the currently installed monitor, SYSGEN.SIL, and starts timesharing under it. To start timesharing under your new V9.7 monitor, type START <monitor name>, where <monitor name> is the name of the new monitor.

If you answer NO to this question, INIT.SYS prints its Option: prompt. You can then use the INIT.SYS offline options to perform additional preparatory tasks. Finally, when you are ready to start your RSTS/E monitor, use the INIT.SYS START option.

Response—Type START <monitor name> where <monitor name> is the name of your new RSTS/E monitor. In the example installation, the response is START RSTS97 because RSTS97 is the name of the new V9.7 RSTS/E monitor.

If you do not specify a monitor name, START installs and starts the monitor that was used in the previous timesharing session, which will be the SYSGEN monitor.

Memory allocation table:

```
OK: 00000000 - 00407777 ( 66K) : EXEC
66K: 00410000 - 03467777 ( 396K) : USER
462K: 03470000 - 03777777 ( 50K) : XBUF
512K: 04000000 - End          : NXM
```

Memory available to RSTS/E is 512K words.

Explanation—START prints the current memory allocation table. These messages may be slightly different due to configuration differences. Then START checks that the SWAP.SYS file exists in account [0,1] on the system disk, is large enough to hold one job at the current SWAP MAX, and is contiguous. If the file does not exist, START attempts to create SWAP.SYS at the required size. If the file exists but is not contiguous or large enough, START deletes the current SWAP.SYS file and attempts to create a new SWAP.SYS file that is both contiguous and large enough (SWAP MAX * 4). If START cannot find enough free contiguous disk space to create a minimum SWAP.SYS file, it prints the following error message:

?Not enough contiguous disk space to create minimum SWAP.SYS file

START then attempts to create a SWAP.SYS file that is smaller than the one you specified yet still meets the minimum requirements. This may take up to one minute. If START finds it can create a SWAP.SYS file, it prints these messages:

SWAP.SYS can be created if SWAP MAX is reduced to xxK

New SWAP MAX? <xxK>

Press **RETURN** to accept the default value, indicated by xx in the example. Or enter CTRL/C to return to the Option: prompt. You can then use the FILE suboption of REFRESH to create more disk space.

If START cannot find enough contiguous disk space to create a minimum SWAP.SYS file, it prints these messages:

You must free some disk space to start timesharing.

Option:

Use the FILE suboption of REFRESH to create more contiguous disk space.

Re-creating CRASH.SYS file with minimum size of xxx blocks

Explanation—START now checks that the CRASH.SYS file exists in account [0,1] on the system disk, is large enough for the installed RSTS/E monitor and extended buffer pool allocation, and is contiguous. If the file does not exist, START attempts to create CRASH.SYS at the required size. If the file exists but is not contiguous or large enough, START deletes the current CRASH.SYS file and attempts to create a new CRASH.SYS file that is both contiguous and large enough. If START is successful it prints the previous message. If START is unsuccessful, it prints the following error messages:

?Not enough contiguous disk space to create minimum CRASH.SYS file

Crash dump automatically disabled

The CRASH.SYS file is important because it is used to save diagnostic information during a system crash. When a crash occurs, the RSTS/E monitor dumps the contents of the read/write area of monitor memory into CRASH.SYS. Because the crash dump facility preserves the state of the system at the time of the crash, CRASH.SYS contains important diagnostic information. For these reasons, DIGITAL recommends that you always have crash dump enabled during timesharing. In general, SPRs submitted on system crashes without crash dumps will be answered by DIGITAL as "Insufficient information."

Therefore, if you see the error message, Crash dump automatically disabled, follow these steps to enable crash dump:

1. After you begin timesharing, delete unnecessary files to create more contiguous disk space. Or, move some files to a nonsystem disk.
2. Shut down the RSTS/E monitor using the SHUTUP program.
3. Use the START option to start timesharing. If you do not see the Crash dump disabled message, you know that INIT.SYS was able to create the CRASH.SYS file.

13-Jun-89 06:22 AM

8 devices disabled

Proceed with system startup? <YES>

Beginning RSTS/E system startup...

13-Jun-89 06:22 AM Mounting disks

13-Jun-89 06:22 AM Assigning logical names

13-Jun-89 06:22 AM Starting error logging

13-Jun-89 06:22 AM Setting system characteristics

13-Jun-89 06:22 AM Installing run-time systems and libraries

13-Jun-89 06:23 AM Setting terminal characteristics

13-Jun-89 06:23 AM Defining system commands

13-Jun-89 06:23 AM Setting printer characteristics

13-Jun-89 06:23 AM Starting spoolers

Print/Batch Services started at 06:23 AM

Explanation—START prints the current date and time and pauses for several seconds while it performs the necessary tasks to start timesharing. Then START transfers control to the START.COM command file. START.COM asks if you are ready to proceed with the start up. Then START.COM prints a message as it enters each section of commands. See the *RSTS/E System Manager's Guide* for more information on the START.COM command file.

Response—Type YES or press `[RETURN]` to start timesharing. Or, type NO if you are not ready to start timesharing. You then see the DCL \$ prompt. In the example installation, the response is `[RETURN]`.

```
*** From [1,2] on KB0: at 06:23 AM on 13-Jun-89
** RSTS/E is on the air...
```

`[RET]`

RSTS V9.7 13-Jun-89 06:24 AM

User:

Explanation—You are finished with the installation. You can now press the `[RETURN]` key to log in to the system. RSTS/E then prints its banner followed by the User: prompt.

Phase 8 lists some optional tasks that you may want to perform.

If you plan to install layered products, see the individual layered product installation guides for instructions.

Phase 8

Optional Tasks

This phase describes optional tasks you may want to perform to tune your RSTS/E system to your needs.

The tasks in this phase are:

- Task 1: Reposition System Program Packages
- Task 2: Apply Any Mandatory Patches

Task 1: Reposition System Program Packages

This task describes the procedures for moving system program packages to another disk. You may want to perform this task if your system disk is full or to better spread I/O across multiple devices and controllers.

If you have a two disk system and receive your RSTS/E Distribution Kits on disk distribution, DIGITAL does not recommend that you move any system program packages to a second disk. During updates you will not have a free drive on which to mount the second disk.

You selected the system program packages in Phase 4. Then the system installed each package at the default location on your system disk. The system also associated a logical name with each package.

Table 9 lists the logical names and default locations of the RSTS/E system programs.

Table 9: System Program Package Logical Names

Package	Logical Name	Location
RSX Utilities	LB:	[1,1] [1,2]
Help	HELP\$:	[0,2]
Error	ERROR\$:	[0,3]
Update	UPDATE\$:	[0,4] [1,2]
Device Testing	TEST\$:	[0,5]
Print/Batch Services (PBS)	PBS\$:	[0,6]
File Restore	RESTOR\$:	[0,7]
OPSER-based Spooling	OPSER\$:	[0,8]
Unsupported Utility	UNSUPP\$:	[0,9]
Auxiliary Library	AUXLIB\$:	[0,14]
RMS-11	RMS\$:	[0,10]
EDT	EDT\$:	[0,11]
TECO	TECO\$:	[0,13]
SORT/MERGE	SORT\$:	[0,15]
SOURCE	SOURCE\$:	[0,17]

You may increase performance by moving the RSX Object Libraries and the Help packages to a nonsystem disk.

If you need to free space on your system disk, you should consider moving any of the following packages to a nonsystem disk: Unsupported Utility, Auxiliary Library, SORT/MERGE, EDT, Error Reporting, Device Testing, Print/Batch Services, Opser-based spooling, and RMS-11.

Terminal Session

This terminal session outlines the procedures you use to reposition a system program package. For more information on a particular step in the process, see the manual or the task and phase referenced.

Step 1: Mount and Initialize a Nonsystem Disk

Mount and initialize the disk on which you intend to reposition the system program packages. Use the mount procedures described in Task 1 of Phase 2. Refer to the *RSTS/E System Managers Guide* for information on using the INITIALIZE command to initialize the disk.

Step 2: Create a New Directory

Create a new directory for the system package by typing a command of the format:

CREATE/ACCOUNT/NOUSER dev:[p,pn]/TEMPLATE=SY:[p,pn]

where:

dev: specifies the new disk.

[p,pn] specifies the new directory. Use the same [p,pn] as the existing directory.

See the *RSTS/E System Manager's Guide* for more information on the CREATE/ACCOUNT command.

Step 3: Copy the Package to the New Location

Transfer the package to the new location by typing a command of the format:

COPY <logical name>*. * dev:[p,pn]*. *

where:

<logical name>*. * specifies all the files in the current location of the system program package.

dev:[p,pn]*. * specifies the new location of the system program package.

See the *RSTS/E System User's Guide* for more information on the COPY command.

Step 4: Reassign the System Logical Name

Assign the new logical name by typing a command of the format:

ASSIGN/SYSTEM/REPLACE dev:[p,pn] <logical name>

where:

dev:[p,pn] refers to the new directory you created in step 3.

<logical name> is the name of the package from Table 9.

See the *RSTS/E System Manager's Guide* for more information on the ASSIGN commands.

Step 5: Point the Logical Name at the New Location

Edit the START.COM system startup file to point the logical name at the new location. See Task 3 of Phase 6 for more information on editing the START.COM file. During an update, the START.COM file uses the disk and directory that you pointed to with the logical name. You might use this when updating layered products.

Step 6: Delete the Old Directory

If you have no further use for the old account, delete the directory by typing a command of the format:

DELETE/ACCOUNT [p,pn]

where [p,pn] refers to the old location of the system package on the system disk.

The system then asks if you want to delete the files in the directory. Type YES.

Task 2: Apply Any Mandatory Patches

A mandatory patch applies an emergency correction to software that might otherwise cause a serious malfunction to your system. For example, DIGITAL would issue an emergency patch to the monitor if in certain instances you could not boot your system after an installation.

The *RSTS/E Software Dispatch* contains the latest software changes between releases. Published monthly, it also contains descriptions of mandatory patches.

You have to apply patches manually if you install:

- Paper patches from articles in the *RSTS/E Software Dispatch*
- Paper patches from the *RSTS/E Release Notes*
- Patches to non-DIGITAL software

There are several dangers when you type in a mandatory patch:

- You could enter incorrect values causing new problems, which you may not recognize as yours, to occur.
- You may not be able to "undo" an incorrect patch because you may not know the value that was there before you replaced it with a new value. (Because of the possibility of errors, you should keep a hard-copy log of patches installed manually.)

For example, if you entered an instruction incorrectly, the software could fail, and you may not be able to find the instruction you mistyped. Sometimes the only way to "undo" a bad patch is to reinstall the distributed version of the software. In the case of a monitor patch, you would have to do another monitor installation.

When you use manual patching to install a paper patch, follow the directions in the *RSTS/E Software Dispatch*, and type exactly what is printed. This way you do not need to understand fully the commands used for manual patching. If you catch a mistake before pressing the **RETURN** key on each line, you can use the standard keyboard editing characters, such as CTRL/R, CTRL/U, and the **DELETE** key. Furthermore, you can reenter input if you cause an error message and are reprompted.

You may need to use a RSTS/E program such as ONLPAT to install patches. See Appendix E for information on RSTS/E patching programs.

**Installation
Example**

Insert tabbed divider here. Then discard this sheet.





Installation Example



System Installation Example

This section summarizes the example RSTS/E system installation. This summary shows only those points in the installation where you type a command, respond to a prompt, or take an action. It does not show everything you see on your terminal during the installation. For more information on a question or procedure, see Part 1 of this guide.

Note the use of callouts in the right margin of the example. The purpose of these callouts is to direct your attention to points in the installation where you are required to perform an action, such as mounting a tape or disk.

This is only a sample. Your responses and output will probably differ from this example because your hardware and software requirements are not the same. Remember that you can type a question mark (?) in response to any question or prompt to obtain an online explanation.

The example installation has the following characteristics:

- CPU: PDP-11/44
- Memory: 512K words
- System Disk: RA80
- RSTS/E Distribution Kit: 1600 bpi magnetic tape
- Installation Kit: V9.7

Phase 1

Mount V9.7 Installation Media

Bootstrap V9.7 Installation Media

>>>B MS0

Performing limited hardware scan.

RSTS V9.7 (MS0) INIT V9.7

Phase 2

Mount Target System Disk

Today's date? 13-JUN-89

Current time? 11:55 AM

Installing RSTS on a new system disk? <Yes>

13-Jun-89 11:55 AM

Disk? DU

Unit? <0> 0

This disk appears to be a RSTS/E formatted disk with the following characteristics:

Pack ID: NATHAN
Pack cluster size: 8
Pack is currently: Private,
Update access on writes,
Level: 1.1

Pack ID? SYSDSK

Pack cluster size <4>?

MFD cluster size <16>?

SATT.SYS base <18595>?

Pre-extend directories <NO>?

PUB, PRI, or SYS <SYS>?

[1,1] cluster size <16>?

[1,2] cluster size <16>?

[1,1] and [1,2] account base <18595>?

Date last modified <YES>?

New files first <NO>?

Read-only <NO>?

Use previous bad block info <YES>?

Patterns <3>?

Proceed (Y or N)? Y

13-Jun-89 11:57 AM

Copying required system files

Performing limited hardware scan.

RSTS V9.7 (DU0) INIT V9.7

13-Jun-89 11:59 AM

Rebooting . . .

RSTS V9.7 (DU0) INIT V9.7

13-Jun-89 12:01 PM

Creating SWAP.SYS file with minimum size of 128 blocks

Memory allocation table:

```
0K: 00000000 - 00407777 ( 66K) : EXEC
66K: 00410000 - 03467777 ( 396K) : USER
462K: 03470000 - 03777777 ( 50K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Creating CRASH.SYS file with minimum size of 320 blocks

8 devices disabled

Phase 3

RSTS/E V9.7

13-Jun-89 12:01 PM

Please mount the RSTS/E Installation media and enter the name and unit number of the device.

Valid device types are: 'MM', 'MS', 'MT', 'MU', 'DM' or 'DL'

Installation device <_MS0:>?

Restoring required _SY:[0,1] components

Deleting all global symbols

RSTS/E V9.7

13-Jun-89 12:02 PM

RSTS/E Software Installation Procedure * Dialogue Phase *

During this installation procedure you may:

Type '?' for help

Type '^' to go back to the previous question

Type CTRL/Z to return to the beginning of the present section

Please enter the name and unit number of the disk to which you want to install the software. This disk should be physically mounted and write-enabled.

Target disk? <_SY:> :

Restoring required _SY:[1,2] components

Assigning system logicals

Are you ready to proceed? <yes>

** Starting Monitor Section **

13-Jun-89 12:03 PM

Do you want to install the RSTS/E monitor? <yes>

There is a pre-built monitor available which is suitable for Micro-PDP-11 systems. You may use this pre-built monitor, or you may build your monitor. Building your monitor will allow you to specify the features you wish to include in the monitor.

You may now choose: (A) Build your monitor
 (B) Use pre-built monitor

Please type A or B <A> ?

The pre-built monitor MICRO.SIL offers the following features:

```

RK05's: 0          RL01/RL02's:4      Overlapped seek: Yes
RK06/RK07's: 0     Disks on DR controller: 0  Disks on DB controller: 0
MSCP support: Yes   TU16/TE16/TU45/TU77's: 0  TU10/TE10/TS03's: 0
TS11/TSV05/TU80's: 1 TMSCP tape drives: 2    Printers: 1
RX01/RX02's: 0     CR11/CM11 card reader: No  CD11 card reader: No
DMC11's/DMR11's: 0  DMP11's/DMV11's: 0             Simultaneous IBM Links: 0
RJ2780 support: No  Maximum jobs: 10         Small buffers: 250
EMT Logging: No

```

Please type A or B <A> A

Restoring required SYSGEN components

Starting System Generation

Use template monitor ? <N> NO

New monitor name ? <RSTS> RSTS97

Accept defaults ? <N> ☐ RET

The following questions deal with the numbers and kinds of disk units on this system.

```

Accept Disk defaults ?      <N > ☐ RET
RK05's ?                    <00> ☐ RET
RL01/RL02's ?               <00> ☐ RET
RK06/RK07's ?               <02> ☐ RET
Overlapped seek ?          <Y > ☐ RET

Disks on DR controller ?    <02> ☐ RET
Overlapped seek ?          <Y > ☐ RET
Disks on DB controller ?    <00> ☐ RET
MSCP support ?              <Y > ☐ RET

```

The following questions deal with the peripheral devices attached to this RSTS/E system.

```

Accept Peripheral defaults ? <N > ☐ RET
TU16/TE16/TU45/TU77's ?    <00> ☐ RET
TU10/TE10/TS03's ?         <00> ☐ RET
TS11/TK25/TSV05/TU80's ?   <01> ☐ RET
TMSCP tape drives ?        <00> ☐ RET
Printers ?                  <01> ☐ RET
RX01/RX02's ?               <00> ☐ RET
CR11/CM11 card reader ?    <N > ☐ RET
CD11 card reader ?          <N > ☐ RET
DMC11's/DMR11's ?          <00> ☐ RET
DMV11's/DMP11's ?          <00> ☐ RET
IBM 3271 OR 2780/3780 simultaneous links? <00> ☐ RET
RJ2780 support ?            <N > ☐ RET

```

The following questions deal with the capacity and features of this RSTS/E system provided at the system manager's option.

```

Accept Software defaults ?  <N > ☐ RET
Maximum jobs ?               <25> 40
Small buffers ?              <440> 550
EMT logging ?                <N > ☐ RET

```

** End of Monitor Section **

Phase 4

Are you ready to proceed? <yes> ☐ RET

** Starting System Programs Section **

13-Jun-89 12:05 PM

Do you want to install the System Program packages? <yes> ☐ RET

Packages to install <ALL>: ?

The valid responses are:

DIALOGUE	Switches you to the long form of the System Software Packages dialogue where a more detailed description of each package is provided
ALL	Selects all packages
ALL,NOPkg[,...]	Selects all packages except pkg
,pkg[,...]	Adds pkg to the default list (during an update)
,NOPkg[,...]	Deletes pkg from the default list

Use a comma as a separator. e.g.: RSX,PBS,RMS

Package names:

AUXLIB	Auxiliary Library	RMS	RMS-11
BASIC	Basic-Plus		(includes RSX Utilities)
DAP	RMS DECnet Data Access Package	RSX	RSX Utilities
	(includes RMS-11)	SORT	Sort/Merge
EDT	EDT Editor		(includes RMS-11)
HELP	Help Package	TECO	TECO Editor
OPSER	Opser-based Spooler	TEST	Device Testing
PBS	Print/Batch Services	UNSUPP	Unsupported Utilities
RESTORE	File Restore	UPDATE	Update Package

Packages to install <ALL>: ALL,NODAP,NOUNSUPP,NOSORT,SOURCE

The following will be installed:

RSX	RMS	PBS	EDT
UPDATE	TEST	TECO	AUXLIB
RESTORE	OPSER	HELP	BASIC
SOURCES			

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes>

Do you want the I&D versions of tasks? <Y>

Use resident library version of RMS? <Y>

Use RMS resident libraries in PBS? <Y>

Use resident library version of EDT? <Y>

During the build phase there will be further questions for BASIC-PLUS.

** End of System Programs Section **

Are you ready to proceed? <yes>

13-Jun-89 12:06 PM

** Starting Layered Products Section **

You may now transfer the layered product update components from the Installation kit.

Do you wish to do the transfer? <yes>

Product updates to transfer: ALL

The following will be transferred:

BP2	C81	DECDX	DECNET
DIBOL	DTR	FMS	FORTTRAN
FRTRN77	MAIL	MENU	PDPDBG
PLXY	RJ2780	WPS	27803780
3271			

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes>

NOTE: Any files currently in the PATCH ACCOUNT will be deleted

Since some layered products may require the Update package (from the System Programs section), it will be included. To install a layered product please refer to the individual layered product installation guide.

Patch account <PATCH\$:>

** End of Layered Products Section **

Phase 5

You must now set the password for account _SY:[1,2]
New password:
New password again, for verification:
Password set for account _SY:[1,2]

This is the end of the DIALOGUE phase.

The next phase is the BUILD phase.

Are you ready to proceed? <yes>

* Build phase *

13-Jun-89 12:07 PM

What size would you like SWAPMAX to be? <64>

Do you want _SY0:SWAP1.SYS created? <yes>

Creating _SY0:[0,1]SWAP1.SYS at 4992 blocks

Creating RSTS/E monitor.

This monitor has a valid buffer count

Monitor creation 20% complete.

Monitor creation 40% complete.

Monitor creation 60% complete.

Monitor creation 80% complete.

Directory of SIL RSTS97 on 13-Jun-89 12:35 PM

Name	Ident	Load	Size	Transfer	Total
RSTS	09.703	000000	116500	000001	20K
MVR	09.701	120000	014100	000001	23K
.
OV2	09.702	002000	034000	000001	118K
DEFAULT	09.701	001000	003000	000001	119K

Maximum buffers available without using data space:

415 general small buffers.

90 FIP small buffers.

Maximum buffers available using data space:

668 general small buffers.

494 FIP small buffers.

If you choose to restart the installation, you may specify up to 573 small buffers for this system. Doing so will increase the number of general buffers available both with and without data space.

Monitor creation 100% complete.

Before attempting to start your new SIL, you must have swap file space of 11264 blocks and if you use files other than SWAP1.SYS you must also edit START.COM to install them.

13-Jun-89 12:37 PM
 Restoring the System Startup files from the Installation kit
 Restoring the System Library package from the Installation kit
 Restoring the Error package from the Installation kit
 Restoring the RSX Libraries from the Installation kit
 Restoring the RSX Utilities from the Installation kit
 Restoring the RMS-11 package from the Installation kit
 Restoring the RMS Libraries from the Installation kit
 Restoring the Print/Batch Services package from the Installation kit
 Restoring the EDT package from the Installation kit
 Restoring the Update package from the Installation kit
 Restoring the Device Testing package from the Installation kit
 Restoring the TECO package from the Installation kit
 Restoring the Auxiliary Libraries from the Installation kit
 Restoring the File Restore package from the Installation kit
 Restoring the Opser-based Spooling package from the Installation kit
 Restoring the Help package from the Installation kit
 Restoring the BASIC-PLUS package from the Installation kit
 Restoring the Program Sources from the Installation kit
 Restoring the Resident Libraries from the Installation kit

13-Jun-89 12:51 PM
 Restoring BP2 update components from the installation kit
 Restoring C81 update components from the installation kit
 Restoring DECDX update components from the installation kit
 Restoring DECNET update components from the installation kit
 Restoring DIBOL update components from the installation kit
 Restoring DTR update components from the installation kit
 Restoring FMS update components from the installation kit
 Restoring FORTRAN update components from the installation kit
 Restoring FRTRN77 update components from the installation kit
 Restoring MAIL update components from the installation kit
 Restoring MENU update components from the installation kit
 Restoring PDPDBG update components from the installation kit
 Restoring PLXY update components from the installation kit
 Restoring RJ2780 update components from the installation kit
 Restoring WPS update components from the installation kit
 Restoring 27803780 update components from the installation kit
 Restoring 3271 update components from the installation kit

RSTS/E V9.7

13-Jun-89 01:31 PM

RSTS/E Software Installation Procedure

13-Jun-89 01:31 PM

Installing system packages

13-Jun-89 01:31 PM

Beginning of RSTS/E Basic-Plus generation.

BASIC-PLUS RTS name?	<BASIC>	<input type="button" value="RET"/>
FPP?	<Y>	<input type="button" value="RET"/>
Math precision?	<02>	4
Log functions?	<Y>	<input type="button" value="RET"/>
Trig functions?	<Y>	<input type="button" value="RET"/>
Print using?	<Y>	<input type="button" value="RET"/>
Matrices?	<N>	Y
String arithmetic?	<N>	<input type="button" value="RET"/>

Finished installing system packages

13-Jun-89 01:49 PM

The RSTS/E Software Installation Procedure is complete

Would you like to start your new monitor now? <Y> YES

The monitor changes will take effect upon reboot

Deleting all global symbols

Deassigning system logicals

13-Jun-89 01:50 PM

System tape label default set to DOS

SY:[1,2]INSTAL.LOG is a log file of this session

Please wait for system to re-boot itself...

RSTS V9.7 SYSGEN (DU0) INIT V9.7

13-Jun-89 01:52 PM

Memory allocation table:

OK:	00000000	-	00413777	(67K)	:	EXEC
67K:	00414000	-	03367777	(379K)	:	USER
446K:	03370000	-	03777777	(66K)	:	XBUF
512K:	04000000	-	End			:	NXM

Memory available to RSTS/E is 512K words.

Re-creating CRASH.SYS file with minimum size of 380 blocks

8 devices disabled

Proceed with system startup? <YES>

Beginning RSTS/E system startup...

13-Jun-89 01:52 PM	Mounting disks
13-Jun-89 01:52 PM	Assigning logical names
13-Jun-89 01:52 PM	Starting error logging
13-Jun-89 01:52 PM	Setting system characteristics
13-Jun-89 01:52 PM	Installing run-time systems and libraries
13-Jun-89 01:52 PM	Setting terminal characteristics
13-Jun-89 01:53 PM	Defining system commands
13-Jun-89 01:53 PM	Setting printer characteristics
13-Jun-89 01:53 PM	Starting spoolers

Print/Batch Services started at 01:53 PM

*** From [1,2] on KB0: at 01:53 PM on 13-Jun-89

** RSTS/E is on the air...

RSTS V9.7 13-Jun-89 01:54 PM

User:

**Part II:
Upgrade**

Insert tabbed divider here. Then discard this sheet.



Part 2

Upgrade



Installing RSTS/E on a Pre-V9.0 System

Upgrading a previous version of RSTS/E (V7.2, V8.0, or earlier) to the latest version of RSTS is similar to building a new RSTS/E monitor, which is described in Part 1 of this guide. Part 4 of this guide outlines a number of tasks you perform to update a previous version of RSTS/E to the latest version. You should be familiar with the following V8.0 INIT.SYS program options, which are discussed in the V8.0 *RSTS/E System Generation Manual*:

- SET LIST
- HARDWR LIST
- DEFAULT
- START

Figure 5 is a flowchart that outlines how to do a system installation to upgrade an existing RSTS/E system. Keep the flowchart handy when you are performing the upgrade.



Follow these steps to upgrade your system:

Preliminary Steps

1. Collect distribution kits and documentation. (See Task 1 of Phase 1 in Part 1 of this guide.)
2. Check distribution kit order numbers. (See Task 2 of Phase 1 in Part 1 of this guide.)
3. Shut down your RSTS/E monitor, using the SHUTUP system program.
4. Use the SET LIST ALL option of INIT.SYS to list all of your devices. This list may be useful when you specify device characteristics on your new system disk. This list shows what devices were included on your old system.
5. Use the LIST suboption of HARDWR to list the hardware configuration table. The hardware configuration table may be useful when you specify hardware characteristics on your new system disk.
6. Use the DEFAULT option to check the defaults of your old monitor. When you get to the Any memory allocation changes? prompt, answer YES. Then use the memory allocation table suboption LIST to list the current memory allocation table. Exit from the memory allocation table suboptions and complete the DEFAULT questions. You can use these lists to help you establish defaults and make changes to the memory allocation table for the new system disk.
7. Find out how your current version of BASIC-PLUS is configured so you can build the new version to have the same configuration.
8. Physically mount your RSTS/E V9.7 Installation tape or disk. (See Task 2 of Phase 1 in Part 1 of this guide for instructions and an example of how to mount the Installation media.) If you do not have multiple removable disk drives, you should wait until step 2 of the next section to mount the Installation media.

If you do not have multiple removable disk drives, continue with the next section, No Multiple Removable Disk Drives. If you have multiple removable disk drives, go to the section, Multiple Removable Disk Drives.

No Multiple Removable Disk Drives

This section lists the steps you perform if your system does not have multiple removable disk drives.

NOTE

Although these upgrade steps may seem unorthodox, they provide the best method for you to re-create your current accounts on your V9.7 system. However, do not use these procedures until you have made a copy of your system disk (see step 1).

1. Use the BACKUP utility program that corresponds to your current version of RSTS/E to create a copy of your system disk. Use PIP if you are updating a pre-V6B RSTS/E system.
2. Bootstrap your RSTS/E V9.7 Installation tape or disk. (See Task 2 of Phase 1 in Part 1 of this guide for instructions and an example of how to bootstrap the installation media.)

NOTE

If your V9.7 installation media is a tape, you cannot use the Boot option on your current system. You must use the appropriate hardware bootstrap procedure. Refer to Appendix D for bootstrapping information.

Depending on the RSTS/E version you are upgrading from and the disk type of your V9.7 installation media, the Boot option may or may not function correctly. If it doesn't, you must use the hardware bootstrap procedure.

3. INIT.SYS prompts for the date and time, and then asks the following questions. Type the response as indicated:

Installing RSTS on a new system disk <Yes>? NO

Are you updating an existing RSTS system disk <Yes>? YES

To which disk? XXn

XXn is your device designator and unit number. After you answer these questions, INIT.SYS performs a COPY operation to transfer the components you need to perform the installation. One of these components is the V9 BACKUP program.

4. The procedure automatically starts the V9.7 SYSGEN monitor, a prebuilt monitor supplied by DIGITAL.

The installation cannot continue at this point because your disk is not yet RDS1.2 format and therefore RSTS/E mounted your disk read-only. You will see the **?Unable to write to DCL work file** error message displayed several times, followed by the \$ prompt. You are now running under the V9.7 SYSGEN monitor, with DCL as the keyboard monitor.

5. Physically mount a backup tape or disk. Then use the V9 BACKUP program to do a full backup of your system. XXn: is the device designator of the backup media. Use a command of the format:

```
$BACKUP/ACCOUNT/FILE [RET]
From: [*,*]*./EXCLUDE=[0,1]*.SYS [RET]
To: XXn:OLDSYS.BCK
```

NOTE

This step will not back up your system files in [0,1].

You may want to include the /NOLIST qualifier to suppress the listing of backed-up files. If you have a tape drive capable of streaming (such as a TU80, TK50, or TU81-PLUS), you should include the /BUFF=MAXI qualifier to make BACKUP run faster. See the *RSTS/E System Manager's Guide* for more information on BACKUP.

6. When BACKUP completes, reboot your Installation tape or disk. Halt the system and use the hardware bootstrap loader on your PDP-11 to boot the media. (At this point you are not able to run SHUTUP, since your disk is mounted read-only.) See Task 2 of Phase 1 in Part 1 of this guide for instructions and an example of how to bootstrap the installation media.
7. See Part 1 of this guide and perform all of the tasks associated with Phases 2 through 6. This time answer the questions correctly as if you are performing a new installation. These phases build the RSTS/E V9.7 monitor and system programs onto your system disk.

8. Mount your backup tape or disk and use the RESTORE command to restore the accounts you saved earlier to your new system disk. XXn: is the device designator of the backup media. Use a command of the format:

```
$RESTORE/ACCOUNT/FILE/NOREPLACE [RET]
From: xxn:OLDSYS.BCK [RET]
To:  [*,*]*.*
```

NOTE

If you had system programs in any account other than [0,1], those accounts are still on your system. You should do a directory of all utilities that are on your system, particularly in account [1,2]. Prior to V9.0 of RSTS/E, these utilities could exist in any [1,*] account. Delete the utilities that are in accounts other than [0,1]. This will leave only the current versions of the utilities on your new V9.7 system. This will give you more space on your new V9.7 system and prevent confusion.

You may want to include the /NOLIST qualifier to suppress the listing of restored files. If you have a tape drive capable of streaming (such as a TU80, TK50, or TU81-PLUS), you should include the /BUFF=MAXI qualifier to make RESTORE run faster.

Note that when BACKUP restores account [1,2], it changes the password back to the value on your old system disk.

9. Remove your backup tape or disk.
10. See Part 1 of this guide and perform all of the tasks associated with Phase 7 and, optionally, Phase 8.
11. Use the SET ACCOUNT command to establish V9.7 quotas and privileges. Use the following command format:

```
SET ACCOUNT [1,*]/JOB=a/DETACH=b/INQUOTA=c -
              /PRIV=(ALL,NOSYSMOD,NOEXQTA)/NOEXPIRE
SET ACCOUNT [2-254,*]/JOB=w/DETACH=x -
              /INQUOTA=y/NOEXPIRE
```

You may want to use other qualifiers such as /PRIV to set different account privileges, or /NAME= to set the accounts name. Substitute the number you want for each of the options, (JOB, DETACH, PRIV, and INQUOTA) for the variables a, b, c, w, x, and y. The above commands (with appropriate values for a,b,c,w,x,y) make your accounts V8.0 compatible.

If you want your V9.7 system to function exactly like your pre-V9.0 system, then also execute the following command:

```
SET ACCOUNT [1,1]/PRIV=SYSMOD
```

Note that DIGITAL does not recommend that you do this procedure.

See the *RSTS/E System Manager's Guide* for more information on SET ACCOUNT.

12. Use the DSKCVT (Disk Convert) utility to convert accounts with "LOOKUP" passwords to "NOLOOKUP." Use the following command format:

```
$ run auxlib$:DSKCVT
DSKCVT V9.3-03 RSTS V9.7-11 SYSTEM:
Disk to convert? XXn:
* CURRENT DISK ATTRIBUTES *
  Disk:      XXn:
  Label:     V97
  Level:     1.1
Convert accounts to NOUSER <NO>? ☐
Convert passwords to NOLOOKUP <YES>? ☐
Display accounts <YES>? ☐
Proceed (YES or NO)? YES
```

See Appendix E for more information on DSKCVT.

NOTE

Some layered products may still require the use of LOOKUP passwords. Therefore, you need to reset the password for those products back to LOOKUP.

Multiple Removable Disk Drives

This section lists the steps you perform if your system has multiple removable disk drives.

1. Physically mount and bootstrap your RSTS/E V9.7 Installation tape or disk. (See Task 2 of Phase 1 in Part 1 of this guide for instructions and an example of how to mount and bootstrap the installation media.)
2. See Part 1 of this guide and perform all of the tasks associated with Phases 2 through 6. These phases build the RSTS/E V9.7 monitor and system programs onto your system disk.
3. Physically and logically mount your original system disk on a second disk drive. You can then create accounts on your new system disk with one of two options:

Option 1:

- a. Re-create selected accounts on your new system disk, using the CREATE/ACCOUNT command. See the *RSTS/E System Manager's Guide* for instructions on how to use CREATE/ACCOUNT.
- b. After you re-create all of your selected accounts, copy the files in the accounts from your old system disk to your new system disk, using the COPY command. Use the /NOREPLACE qualifier to ensure that it does not copy a file that already exists. See the *RSTS/E System User's Guide* for instructions on how to use COPY.

Option 2:

- a. Back up selected accounts to a tape or disk using the BACKUP (V9) program. To copy all the accounts, type a command of the format:

```
BACKUP/ACCOUNT/FILE ☐
From: [*,*]*.*/EXCLUDE=[0,1]*.SYS,[1,2]*.* ☐
To: XXn:OLDSYS.BCK
```

NOTE

This step will not backup your system files in [0,1] and [1,2].

You may want to include the /NOLIST qualifier to suppress the listing of backed-up files. If you have a tape drive capable of streaming (such as a TU80, TK50, or TU81-PLUS), you should include the /BUFF=MAXI qualifier to make BACKUP run faster. See the *RSTS/E System Manager's Guide* for more information on BACKUP.

- b. Restore selected account to your V9.7 system disk using the RESTORE command of the BACKUP program. To restore all accounts, type a command of the format:

```
$RESTORE/ACCOUNT/FILE/NOREPLACE RET  
From: xxn:OLDSYS.BCK RET  
To:  [*,*]*.*
```

NOTE

If you had system programs in any account other than [0,1] or [1,2], those accounts are still on your system. You should do a directory of all utilities that are on your system. Prior to V9.0 of RSTS/E, these utilities could exist in any [1,*] account. Delete the utilities that are in accounts other than [0,1] or [1,2]. This will leave only the current versions of the utilities on your new V9.7 system. This will give you more space on your new V9.7 system and prevent confusion.

You may want to include the /NOLIST qualifier to suppress the listing of restored files. If you have a tape drive capable of streaming (such as a TU80, TK50, or TU81-PLUS), you should include the /BUFF=MAXI qualifier to make BACKUP run faster. Note that when BACKUP restores account [1,2], it changes the password back to the value on your old system disk. Also, all accounts restored are as they were on the old disk with LOOKUP passwords.

4. Remove your old system disk (if used) and/or backup tape or disk.
5. See Part 1 of this guide and perform all of the tasks associated with Phase 7 and, optionally, Phase 8.
6. Use the SET ACCOUNT command to establish V9.7 quotas and privileges. Use the following command format:

```
SET ACCOUNT [1,*]/JOB=a/DETACH=b/INQUOTA=c -  
/PRIV=(ALL,NOSYSMOD,NOEXQTA)/NOEXPIRE  
SET ACCOUNT [2-254,*]/JOB=w/DETACH=x -  
/INQUOTA=y/NOEXPIRE
```

You may want to use other qualifiers such as /PRIV to set different account privileges, or /NAME= to set the accounts name. Substitute the number you want for each of the options, (JOB, DETACH, PRIV, and INQUOTA) for the variables a, b, c, w, x, and y. The above commands (with appropriate values for a,b,c,w,x,y) make your accounts V8.0 compatible.

If you want your V9.7 system to function exactly like your pre-V9.0 system, then run the following command:

```
SET ACCOUNT [1,1]/PRIV=SYSMOD
```

Note that DIGITAL does not recommend that you do this procedure.

See the *RSTS/E System Manager's Guide* for more information on SET ACCOUNT.

7. Use the DSKCVT (Disk Convert) utility to convert accounts with "LOOKUP" passwords to "NOLOOKUP." Use the following command format:

```
$ run auxlib$:DSKCVT
DSKCVT V9.3-03  RSTS V9.7-11 SYSTEM:
Disk to convert? XXn:
* CURRENT DISK ATTRIBUTES *
  Disk:      XXn:
  Label:     V97
  Level:     1.1
Convert accounts to NOUSER <NO>? ☐RET
Convert passwords to NOLOOKUP <YES>? ☐RET
Display accounts <YES>? ☐RET
Proceed (YES or NO)? YES
```

See Appendix E for more information on DSKCVT. See the *RSTS/E System Manager's Guide* for more information on SET ACCOUNT.

Part III:
Online

Insert tabbed divider here. Then discard this sheet.





Part 3
Online



Performing an Online System Installation

You can use the `INSTAL.COM` command file to perform an online RSTS/E installation, without disturbing your existing system.

You used the `INSTAL.COM` command file to perform your original V9.7 installation. `INSTAL.COM` resides in account [0,1]. You can also use it to:

- Generate a new monitor
- Install one or more system program packages
- Install layered products (integrated layered products only)
- Transfer layered product updates to your system
- Perform a full installation

NOTE

You cannot perform an online system installation to build a V9.0 RSTS/E monitor from a V8.0 or earlier monitor. You also cannot perform an online system installation to build a V9.7 monitor from a V9.6 or earlier monitor.

In order for the installation to succeed, you must be logged in to an account with the following privileges: `MOUNT`, `INSTAL`, `TUNE`, `WREAD`, `WWRITE`, and `WACNT`. In addition, if you have `DATES` privilege, the creation date of the new files will be the date the files were placed on the installation kit. If you do not have `DATES` privilege, the file creation date will be the current date. To access `INSTAL.COM`, type a command of the following format:

`@[0,1]INSTAL function [package,...]`

where:

<code>@[0,1]INSTAL</code>	invokes the <code>INSTAL.COM</code> command procedure.
function	specifies the operation to perform. Legal functions are: <code>ALL</code> (the default), <code>MONITOR</code> , <code>SYSTEM_PROGRAMS</code> , and <code>LAYERED_PRODUCTS</code> .
[package,...]	specifies the software package(s) to install when performing a <code>SYSTEM_PROGRAMS</code> , <code>LAYERED_PRODUCTS</code> , or <code>COPYUP</code> operation (see Table 10). See Task 1 of Phase 4 in Part 1 for a complete list of RSTS/E system program packages. See Task 2 of Phase 4 in Part 1 for a list of layered products.

INSTAL.COM Entry Points

When you use INSTAL.COM to perform an installation, you enter the installation process at different points depending on the command format. Table 10 lists the INSTAL.COM commands and the resulting entry points into the installation process. See the appropriate Phase and Task in Part 1 for details on the actual installation procedures.

When you use INSTAL.COM to perform an online installation, you first see this question:

Please mount the installation media and enter the name and unit number of the device.

Valid device types are: 'MM', 'MS', 'MT', 'MU', 'DM', 'DL' or 'SY' (a response of SY allows monitor only)

Installation device:? <_MM0:>

This question prompts you to mount the installation tape or disk and specify its location. See the example later in this section if you need help answering this question.

Table 10 lists the INSTAL.COM commands and the resulting entry points into the installation process.

Table 10: INSTAL.COM Entry Points

Command	Installation Entry Point	Comment
@[0,1]INSTAL	Phase 3, Task 1	Performs new installation (same as INSTAL ALL).
@[0,1]INSTAL ALL	Phase 3, Task 1	Performs new installation (the default).
@[0,1]INSTAL SYSTEM_PROGRAMS	Phase 4, Task 1	Begins system program installation questions.
@[0,1]INSTAL SYSTEM_PROGRAMS [pkg,...]	Phase 5, Task 3	Installs specified package while preserving existing software packages.
@[0,1]INSTAL MONITOR	Phase 3, Task 1	Begins monitor installation section. Skips system program and layered product sections.
@[0,1]INSTAL LAYERED_PRODUCTS	—	This function is available only to integrated layered products. Use this function only if you are directed to do so by a specific layered product installation guide.
@[0,1]INSTAL LAYERED_PRODUCTS [pkg,...]	—	This function is available only to integrated layered products. Use this function only if you are directed to do so by a specific layered product installation guide.
@[0,1]COPYUP	Phase 4, Task 2	Begins dialogue to transfer layered product updates from the installation kit.
@[0,1]COPYUP [pkg,...]	Phase 5, Task 3	Transfers specific layered product updates from the installation kit.

Online Installation Example

This example uses INSTAL.COM to install the RSX system program package. Before you run INSTAL.COM, you must mount the installation media. Mount the tape or disk on a free drive. Follow the tape or disk mount instructions in Task 2 of Phase 1 in Part 1.

\$ @[0,1]INSTAL SYSTEM_PROGRAMS RSX

RSTS/E V9.7

13-Jun-89 11:10 AM

RSTS/E Software Installation Procedure

* Dialogue phase *

During this installation procedure you may:

Type '?' for help

Type '^' to go back to the previous question

Type CTRL/Z to return to the beginning of the present section

Please mount the RSTS/E Installation media and enter the name and unit number of the device.

Valid device types are: 'MM', 'MS', 'MT', 'MU', 'DM', 'DL' or 'SY'
(a response of SY allows monitor only)

Installation device? <_MM0:>

Please enter the name and unit number of the disk to which you want to install the software. This disk should be physically mounted and write-enabled.

Target disk? <SY:>

Assigning system logicals

The following will be installed:

RSX

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes>

Do you want the I&D versions of tasks? <Y> N

** End of System Programs Section **

This is the end of the DIALOGUE phase.

The next phase is the BUILD phase.

Are you ready to proceed? <yes>

* Build phase *

13-Jun-89 11:17 AM

Restoring the RSX Libraries from the Installation kit

Restoring the RSX Utilities from the Installation kit

13-Jun-89 11:21 AM

Installing system packages

Finished installing system packages

The RSTS/E Software Installation Procedure is complete

13-Jun-89 11:21 AM

Deleting all global symbols

Deassigning system logicals

13-Jun-89 11:21 AM

System tape label default set to DOS

SY:[1,2]INSTAL.LOG is a log file of this session

\$

You have successfully installed the RSX package on your system.



**Part IV:
Update**

Insert tabbed divider here. Then discard this sheet.



Part 4
Update



Updating a RSTS/E V9.0 through V9.6 System

This part describes how to update a RSTS/E V9.0 through V9.6 system to a new release.

DIGITAL supplies an Installation Kit with each new release of RSTS/E. After V9.0, subsequent kits are labeled in numeric sequence. For example, the first kit distributed after the V9.0 release is called V9.1; the second kit is V9.2.

Each new Installation Kit contains new software features as well as updates to existing software. In addition, the kit may contain mandatory corrections to RSTS/E software.

The contents of each Installation Kit are cumulative. This means that each new installation kit includes updates from all previous kits, as well as any new ones. For example, the V9.7 Installation Kit would include all features of the V9.0 through V9.6 kits.

Each new release of RSTS/E also contains the *RSTS/E Release Notes* for the latest version only. The *RSTS/E Release Notes* describe new features of RSTS/E and explain differences between the latest version and previous version. Read the *RSTS/E Release Notes* before performing a system update.

Structure of Part 4

This part divides the system update into five phases plus one optional phase, each consisting of one or more task(s).

For convenience, a summary of all the tasks in a phase appears at the start of that section. The option, program, or command file you use in a task (such as DSKINT or COPY) appears in parentheses next to the task.

The contents of each phase follow:

Phase 1: Getting Started

Explains how to make backup copies of your system disk and shut down your current monitor.

Phase 2: Prepare System

Describes how to mount your installation media, copy files to your system disk, and start the SYSGEN monitor.

Phase 3: Configure New Monitor and Select Software Updates

Explains how to use information from a template monitor to configure your new monitor. It also explains how to answer the software update questions.

Phase 4: Generate New System

Explains how to create the new RSTS/E monitor. It also describes how to update system programs and layered products.

Phase 5: Start New Monitor

Explains how to shut down the SYSGEN monitor and start the new RSTS/E monitor.

Phase 6: Optional Tasks

Explains how to use the UPDATE.COM command procedure to perform a selective update.

System Update Flowchart

Figure 6, the System Update Flowchart, summarizes how to update a V9.0 through V9.6 RSTS/E system to a V9.7 RSTS/E system. You may want to use this flowchart while you perform the update.

Phase 1 Getting Started

This phase describes the tasks you must perform to prepare for a RSTS/E system update. For the update to succeed, you must be logged in to an account with the following privileges: SHUTUP, MOUNT, WREAD, WWRITE, WACNT, INSTAL, and TUNE. In addition, if you have DATES privilege, the creation date of new files will be the date they were placed on the installation media. If you do not have DATES privilege, the creation date will be the current date.

The tasks in this phase are:

- Task 1: Back Up System Disk (BACKUP)
- Task 1A: Back Up Nonsystem Disk (BACKUP)
- Task 2: Shut Down Current Monitor (SHUTUP)

Task 1: Back Up System Disk (BACKUP)

In this task you use the RSTS/E BACKUP utility to make a backup copy of your system disk. (See the *RSTS/E System Manager's Guide* for a full description of BACKUP.)

This example backs up a RA80 system disk to 1600 bpi tape, mounted on a TU77 tape drive.

```
$ BACKUP DU0:[*,*]**.* MM0:SYSBK
```

Explanation—You see the DCL \$ prompt. Type a command of the format:

BACKUP <input-file-spec> <output-file-spec>

where:

BACKUP	invokes the RSTS/E BACKUP utility.
<input-file-spec>	specifies the disk, accounts, and files to back up.
<output-file-spec>	specifies the disk or tape on which to copy the data, and the save set name.

Response—Type an appropriate BACKUP command line for your system. The example BACKUP command line backs up all files in all accounts on the system disk (DU0:) to a magnetic tape mounted on drive MM0:, and names the save set SYSBK.

Please mount volume 1 of Backup set SYSBK.BCK

Where can this volume be located? <MM0:/NOINITIALIZE>
MM0:/INITIALIZE

Explanation—BACKUP asks for the location of your save set volume. BACKUP prints the device designator you specified in the command line as the default answer (MM0 in this example).

Response—Type the device designator and unit number of the drive on which the output volume is mounted. If you want to initialize the tape, append /INITIALIZE to your response. In the example, the response is MM0:/INITIALIZE.

Go to Task 1A if you want to back up your nonsystem disk(s).

Go to Task 2 if you do not want to back up your nonsystem disk(s).

Task 1A: Back Up Nonsystem Disk (BACKUP)

You should perform this task if you intend to update system programs and you have moved any system programs packages to a nonsystem disk.

To back up your nonsystem disk, follow the procedures described in Task 1.

Go to Task 2.

Task 2: Shut Down Current Monitor (SHUTUP)

In this task, you run the SHUTUP program to shut down your current monitor. To run SHUTUP, you must have SHUTUP privilege and be logged in to the console terminal.

Terminal Session

This terminal session shows how to run SHUTUP to shut down your system.

```
$RUN $SHUTUP
```

Explanation—You are logged in to the console terminal and see the DCL \$ prompt on your screen. You can now shut down the current monitor.

Response—Type RUN \$SHUTUP to shut down the monitor.

```
SHUTUP V9.7  RSTS V9.7 <monitor name>
```

```
11:55 AM 13-Jun-89 #####      Set-up Dialogue Phase      #####
```

```
Type '^' to any query to backup one question
```

```
Allow Print & Batch entries to complete (YES/NO) <Yes>?
```

Explanation—SHUTUP prints a header and some preliminary information. SHUTUP then asks you whether to allow print and batch entries to complete.

Response—Type YES or press **[RETURN]** to allow the entries to complete. Type NO to shut down the print and batch queues immediately.

```
Minutes until system shutdown (0-99) <5>?
```

Explanation—SHUTUP asks you to type the minutes to wait before the RSTS/E monitor shuts down. This question is useful for giving system users fair warning when shutting down the system.

Response—Type a number from 0 to 99. Or, press **[RETURN]** to accept the default of 5 minutes.

```
Shutdown with automatic RESTART <NO>?
```

Explanation— The system also asks if you want an automatic RESTART to the system. The default response is NO.

Response— Press **[RETURN]** or type No.

```
11:55 AM 13-Jun-89 #####      Warning Message Phase      #####
Further LOGINS are now disabled
```

```
11:55 AM 13-Jun-89 #####      Initial Job Killing Phase      #####
```

```
11:55 AM 13-Jun-89 #####      Print/Batch Shutdown Phase      #####
```

```
Print/Batch Services shutdown complete at 11:55 AM.
```

```

11:55 AM 13-Jun-89 ##### ' EVTLOG ' Shutdown Phase #####
11:55 AM 13-Jun-89 ##### ' ERRCPY ' Shutdown Phase #####
11:55 AM 13-Jun-89 ##### Remove RTS/RES LIB Phase #####
11:55 AM 13-Jun-89 ##### SWAP File Removal Phase #####
11:55 AM 13-Jun-89 ##### Disk DISMOUNT Phase #####
11:55 AM 13-Jun-89 ##### Final Shutdown Phase #####

```

Please wait for system to re-boot itself...

RSTS V9.7 RSTS/E V9.7 (dev) INIT V9.7

13-Jun-89 - 11:56 AM

Start timesharing <Yes>? NO

Option:

Explanation—SHUTUP prints several messages before shutting down your system. It then returns to the Start timesharing? question. See the *RSTS/E System Manager's Guide* for more information on SHUTUP.

Response—Type NO. INIT.SYS then prints its Option: prompt.

Go to Phase 2.

Phase 2

Prepare System

This phase describes the tasks you must perform to bootstrap the installation tape or disk and prepare your system disk for a RSTS/E system update. It also explains how to start your SYSGEN monitor.

The tasks in this phase are:

- Task 1: Physically Mount and Bootstrap Installation Media
- Task 2: Copy Files to System Disk (COPY)

These responses have special meaning:

Response	Description
RET	Accept the default response
?	Obtain an online explanation of the question

Task 1: Physically Mount and Bootstrap Installation Media

This task requires you to mount and bootstrap the appropriate tape or disk from your RSTS/E Installation Kit. First, the task provides instructions for mounting the tape on a tape drive, or mounting a disk on a disk drive. Choose the appropriate section depending on the type of media for your installation. Second, the task provides an example of bootstrapping the tape or disk.

Tape Mount Session

Mount the 800 or 1600 bpi 9-track installation tape. To load the tape on the drive:

1. Physically mount the tape on drive unit 0 or 1 with the write-enable ring removed. If you have a combination of TU10, TE10, TU16, TE16, TU45, and TU77 tape drives, load the 800 bpi distribution tape onto unit 0 or 1 of the TU10 or TE10 tape drive. If you have a combination of TU16, TE16, TU45, TU77, TS11, TSV05, and TU80 tape drives, load the 1600 bpi distribution tape on unit 0 or 1 of the TS11, TSV05, or TU80 drive. TK50 and TU81 tape drives can use either unit 0 or 1.
2. Press the LOAD indicator.
3. The drive automatically winds the tape until the beginning of tape (BOT) indicator light comes on. This indicates the tape is at its load point.
4. Make sure that the write-lock (WR) indicator light is on. (If not, dismount the tape, remove the write-enable ring, and then remount the tape.)
5. Press the ONLINE indicator. The indicator light comes on.
6. Make sure the console terminal is on line.

NOTE

The previous instructions may not apply to your tape drive. If so, see the hardware manual supplied with your tape drive for the load instructions.

Disk Mount Session

Mount the RSTS/E installation disk. To load the disk onto the disk drive:

1. Physically mount the disk in drive unit 0 or 1. For an RL02 disk, you can use drive units 0, 1, 2, or 3.
2. Make sure that the READY light is on.

NOTE

The tape drive **MUST** be write-protected and online for the installation to proceed properly.

3. Make sure that the write-protect (WR PROT) light is on.
4. Make sure that the console terminal is on line.

NOTE

The disk drive **MUST** be write-protected and online for the installation to proceed properly.

Bootstrap Installation Media

Now you must bootstrap the installation tape or disk. Depending on the RSTS/E version you are updating from and whether the V9.7 installation media is a disk or a tape, you use one of the following boot methods:

- If your V9.7 installation media is a disk or you are updating from V9.1 or later, use the INIT.SYS BOOT option.
- If you are updating from V9.0 and your V9.7 installation media is a tape, you can:
 - Use the PDP-11 Central Processing Unit (CPU) switches to activate a hardware bootstrap loader
 - Use the console emulator

These bootstrap methods are described in the following sections.

Use the INIT.SYS BOOT Option

The INIT.SYS BOOT option bootstraps magnetic tape and disk devices.

Option: BOOT

Explanation—After you shut down the system, answer NO to the Start timesharing? question. INIT.SYS returns to the Option: prompt.

Response—Type BOOT or BO.

Boot device:

Boot unit:

Explanation—BOOT asks for the device designator of the unit.

Response—Type the device designator and unit number of the drive on which you mounted the installation tape or disk. If you type both a device designator and a unit number, BOOT does not print the Boot unit: prompt. Table 11 lists the tape device designators. Table 12 lists the disk device designators.

About 30 seconds to 10 minutes after you type the device designator, the following prints on the console terminal:

Performing limited hardware scan.

RSTS V9.7 (dev) INIT V9.7

Today's date?

Current time?

The Today's Date? prompt means that INIT.SYS is loaded into memory. You have successfully bootstrapped your installation media. Note that the device designator of the tape or disk drive you bootstrapped appears within parentheses.

Note that the time required for this step varies according to the bootable device you use and the size of your system. The following are some general guidelines for the time for this step:

- If you are booting a disk such as an RL02 or RK07, this step should take less than 30 seconds.
- If you are booting a TK50 or on a large system with many devices attached, this step could take up to 10 minutes.

Go to Task 2.

Use the Hardware Bootstrap Loader

The hardware bootstrap loader is a device inside your PDP-11 that reads a bootstrap record from the tape or disk into memory. This bootstrap record contains a program that loads and executes additional program code from the tape or disk. There are different types of hardware bootstrap loaders; the type you have on your PDP-11 determines which CPU switches or commands you use.

Your DIGITAL field service representative or software support specialist should already have identified the type of hardware bootstrap loader on your PDP-11. The representative should also have given instructions for bootstrapping your tape or disk.

If you do not know how to bootstrap the Installation media, see Appendix D, which contains bootstrap instructions for the different types of hardware bootstrap loaders.

This example shows how to bootstrap the 1600 bpi tape from a TU80 tape drive, by activating switches on a PDP-11/44. These bootstrap instructions are:

1. Move the control switch (CONT) to the HALT position.
2. Move the control switch to the BOOT position.

The CPU prints some octal numbers on the console terminal, followed by three angle brackets:

```
>>>B MS0
```

The >>> asks for a command. Type B to indicate a BOOT operation, followed by the device designator of the drive on which your tape or disk is mounted. A device designator consists of two letters that identify the device type, followed by the decimal unit number of the drive and a colon. (However, do not specify a colon here.) The example uses a TU80 tape drive; thus, the tape device designator is MS0.

Table 11 lists the tape device designators. Table 12 lists the bootable disk device designators. Enter the appropriate device designator for your installation.

About 30 seconds to 10 minutes after you type the device designator, the following prints on the console terminal:

```
Performing limited hardware scan.
```

```
RSTS V9.7 (MS0) INIT V9.7
```

```
Today's date?
```

The Today's date? prompt means that INIT.SYS is loaded into memory. You have successfully bootstrapped your installation media. Note that the device designator of the tape or disk drive you bootstrapped appears within parentheses. In the example, the device designator is MS0.

Table 11: Tape Device Designators

Designator	Devices Available During Installation
MM0: to MM1:	TE16/TU16/TU45/TU77 magnetic tape units 0 or 1
MS0: to MS1:	TS11/TSV05/TU80/TK25 ¹ magnetic tape units 0 or 1
MT0: to MT1:	TE10/TU10/TS03 ² magnetic tape units 0 or 1
MU0: to MU1:	TK50/TU81/TU81-PLUS magnetic tape units 0 or 1

¹—Note: You cannot use a TK25 drive for system installation.
²—Note: You cannot use a TS03 drive for system installation.

Table 12: Bootable Disk Device Designators

Designator	Devices Available During Installation
DB0: to DB1:	RP04/RP05/RP06 disk drive units 0 or 1 ¹
DL0: to DL3:	RL01/RL02 disk drive units 0 to 3
DM0: to DM1:	RK06/RK07 disk drive units 0 or 1
DR0: to DR1:	RM02/RM03/RM05/RM80 disk drive units 0 or 1 ¹
DU0: to DU15:	RA60/RA80/RA81/RA82/RCF25/RC25/RD31/RD32/RD51/ RD52/RD53/RD54/RX33/RX50 disk drive units 0 to 15

¹—See Appendix F for more information on multiple RH controller (otherwise known as DB and DR controllers) configurations.

Go to Task 2.

Task 2: Copy Files to System Disk (COPY)

Your next task is to answer the preliminary INIT.SYS questions. Then the INIT.SYS COPY option transfers some necessary files from the installation media to your system disk.

Terminal Session

This terminal session lists the preliminary INIT.SYS questions, explains them, and gives you some possible responses. After you understand the question, type the response at your console terminal.

The common error messages appear at the end of this task. If your error message does not appear there, see Appendix A.

You have now successfully bootstrapped your installation media, and the INIT.SYS program is loaded into memory.

```
RSTS V9.7 (dev:) INIT V9.7
```

```
Today's date ?  
Current time ?
```

Explanation—INIT.SYS searches for a valid date and time and prompts you if it cannot find one. You see the date and time prompts, for example, when you bootstrap a tape or bootstrap a disk from the console boot/restart switch.

Response—Type today's date and time in either the alphabetic or numeric format. Type a question mark (?) to print an online explanation of the response formats for this question on your console terminal.

```
Installing RSTS on a new system disk <Yes> ? NO
```

Explanation—INIT.SYS asks this question whenever you bootstrap a tape or disk read-only. (RSTS/E Distribution Kits are always read-only). If you answer YES, INIT.SYS assumes you are performing a first time RSTS/E V9.7 system installation and want to use the DSKINT option to initialize your system disk.

If you answer NO, INIT.SYS assumes that you are bootstrapping the installation media to perform an update on the current system disk. INIT.SYS then asks the next question.

Response—Type NO because you are updating an existing RSTS/E V9.0 through V9.6 system.

```
Are you updating an existing RSTS system disk? <Yes> ☐ RET
```

Explanation—This question asks if you are updating a previously generated V9.0 through V9.6 system. If you answer YES, INIT.SYS executes the COPY operation with forced supersede of all files found on the system disk.

If you answer NO, INIT.SYS prints its Option: prompt.

Response—Type YES or press ☐ RETURN.

```
13-Jun-89 11:57 AM
```

```
Disk to update? DMO ☐ RET
```

Explanation—INIT.SYS asks you to specify the device designator and unit number of your system disk. You should type both the device designator and unit number of your system disk. If you only type the device designator, the system will prompt you for the unit number of your system disk. Possible device designator responses are: DL, DM, DP, DB, DR, or DU.

Response—Type the device designator and unit number of your system disk.

Note—If the message "Performing limited hardware scan." was printed during this boot and you try to initialize or copy to a nonexistent disk, then you will receive the following error messages:

That disk was not found during limited hardware scan.

Do you wish to perform a reboot with full hardware scan <YES>?

Response—If you answer YES, then the distribution device is rebooted and the "Performing limited hardware scan." message does NOT reappear.

Copying required system files

Performing limited hardware scan.

RSTS V9.7 (dev:) INIT V9.7

13-Jun-89 11:57 AM

Rebooting . . .

RSTS V9.7 (DU0) INIT V9.7

13-Jun-89 - 11:57 AM

Creating SWAP.SYS file with minimum size of 128 blocks

Memory allocation table:

0K:	00000000	-	00407777	(66K)	:	EXEC
66K:	00410000	-	03467777	(396K)	:	USER
462K:	03470000	-	03777777	(50K)	:	XBUF
512K:	04000000	-	End			:	NXM

Memory available to RSTS/E is 512K words.

Creating CRASH.SYS file with minimum size of 320 blocks

8 devices disabled

Explanation—After you type the system disk device designator and unit number, COPY transfers the files to the system disk. Because you answered YES to the Are you updating an existing RSTS system disk? question, COPY automatically supersedes existing files. COPY prints a message on your terminal as it supersedes each file.

On completion, INIT.SYS bootstraps your system disk and prints a message on your console terminal.

NOTE

It is sometimes necessary to use the HARDWR option to set non-standard CSR addresses during this part of the procedure. However, with RSTS/E V9.7, the SYSGEN.SIL is now started automatically, and the "Option" prompt is no longer asked.

If you need to access the "Option" prompt, you may do so by typing ^C (Control-C) twice immediately after the INIT header line is displayed. The ^C characters will not be echoed on the terminal. After a pause of ten seconds to two minutes, depending on your system configuration, the "Option" prompt will appear.

If you get the "Option" prompt again when you are finished with your changes, simply press RETURN to continue with the procedure.

Go to Task 3.

A list of the COPY error messages follows.

COPY Error Messages

CANNOT COPY TO THE SYSTEM DISK

Explanation: You specified the RSTS/E installation media, which is invalid as an output disk for the COPY option. Specify another disk.

ILLEGAL DISK NAME

Explanation: You typed an invalid disk name. All DF, DK, and DS disks are illegal.

INVALID UNIT NUMBER

Explanation: The disk unit number you specified does not exist on this system.

INVALID RESPONSE

Explanation: The only valid responses to the FILE FILNAM.TYP EXISTS: prompt are Y, N, or CTRL/C, and you typed something else.

SORRY, BUT THAT DISK DOESN'T EXIST

Explanation: The disk type you specified does not exist on this system or the disk is not properly configured. All properly configured disks on the system are listed in the HARDWR LIST suboption.

THAT DISK WAS NOT FOUND DURING LIMITED HARDWARE SCAN

Explanation: The disk you specified to initialize or copy to was a nonexistent disk. If you answer YES to the "Do you wish to perform a reboot with full hardware scan <YES>?" question, then the distribution device is rebooted and the "Performing limited hardware scan." message does NOT reappear.

Phase 3

Configure New Monitor and Select Software Updates

This phase describes the tasks you must perform to configure your RSTS/E monitor. In this phase you also select the software packages you want to update.

The tasks in this phase are:

- Task 1: Answer Preliminary Questions
- Task 2: Use Information from a Template Monitor
- Task 3: Answer System Program Update Questions
- Task 4: Answer Layered Product Update Questions

These responses have special meaning:

Response	Description
RET	Accept the default response
CTRL/Z	Return to the beginning of the dialogue section
CTRL/C	Abort the operation and return to the DCL \$ prompt
?	Obtain an online explanation of the question
^	Return to the previous question

Task 1: Answer Preliminary Questions

Your next task is to answer the questions asked by the the `INSTAL.COM` command file. The system executes `INSTAL.COM` immediately after it starts your monitor.

Before `INSTAL.COM` asks any questions, it opens a log file named `INSTAL.LOG` in the account from which you are running the update ([1,2] in most cases). `INSTAL.COM` closes this log file at the end of the update. You can then print `INSTAL.LOG` to obtain a record of the update session.

NOTE

The update procedure does not replace your existing [0,1]`START.COM` and [0,1]`LOGIN.COM` files. If `START.COM` and `LOGIN.COM` already exist on your system, the update procedure copies new versions of the files to account [0,1] with the names `START.09x` and `LOGIN.09x`, where `x` refers to the specific release of `RSTS/E`.

You may want to examine these files for any new features, then delete the files if you do not need them.

Terminal Session

This terminal session lists the preliminary installation questions, and provides some possible responses. In some cases, your response will differ from the response shown in the example.

```
RSTS/E V9.7
13-Jun-89 11:57 AM

Please mount the RSTS/E installation media and enter the name
and unit number of the device.
Valid device types are: 'MM', 'MS', 'MT', 'MU', 'DM' or 'DL'

Installation device <_MS0:>? 
Restoring required _SY0:[0,1] components
Deleting all global symbols

RSTS/E V9.7
13-Jun-89 - 11:58 AM

                RSTS/E Software Update Procedure
                * Dialogue Phase *

During this update procedure you may:
Type '?' for help
Type '^' to go back to the previous section
Type CTRL/Z to return to the beginning of the present section

Explanation—This question asks for the location of your installation media and
starts the dialogue phase of the update. The default is the device on which you
booted the installation media.

Response—Press  to accept the default response. In the example
installation, the response is MS0.

Please enter the name and unit number of the disk to
which you want to update the software. This disk
should be physically mounted and write-enabled.

Target disk? <_SY:> : 
```

Explanation—This question is for anyone updating a RSTS/E system for another PDP-11. Your response to this question determines the disk where the new RSTS/E monitor and updated system programs will be updated.

If you specify a disk other than the system disk (_SY:), physically mount and write-enable the disk before you answer this question. The disk does not need to be initialized at this time, because the next question asks if you want to initialize it.

Response—Type the disk name and unit number of the target disk if you are updating RSTS/E for another PDP-11. You then see the "Do you want to initialize the target disk?" question.

Type SY or press to update RSTS/E on your present system disk.

Restoring required _SY:[1,2] components

Assigning system logicals

Are you ready to proceed? <yes>

Explanation—This question asks if you are ready to continue. If you type YES or press , the dialogue continues. If you type NO, you see the \$ prompt.

Answer NO, for example, if you need to recover a corrupted system disk by issuing the \$RESTORE command. You resume the installation procedure by typing PROCEED.

Response—Type YES or press to continue with the installation. In the example installation, the response is .

Go to Task 2.

Task 2: Use Information from a Template Monitor

In this task you use a template monitor to help configure your new monitor. A template monitor is a previous V9.0 through V9.6 monitor that you use as a model for another monitor.

Terminal Session

This terminal session lists the configuration questions, explains them, and gives you some possible responses. After you understand the question, type the response at your console terminal.

If you want to start over at any time while answering the configuration questions, press CTRL/C. Then type @[0,1]INSTAL when you see the DCL \$ prompt. You return to the beginning of Phase 3.

****Starting Monitor Section ****

13-Jun-89 12:05 PM

Do you want to install the RSTS/E monitor? <yes> **[RET]**

Explanation—This question asks if you want to update the monitor. Answer NO to this question if you want to update only system programs and/or layered products. You then skip the monitor update. You can only skip this if you already have a current version monitor.

If you answer YES or press **[RETURN]** to this question, you continue with the dialogue to update a pre-V9.7 monitor.

If you answer NO to this question, go to Task 3.

Response—Type YES or press **[RETURN]** to proceed with the RSTS/E monitor update. In the example installation, the response is **[RETURN]**.

There is a pre-built monitor available which is suitable for Micro-PDP-11 systems. You may use this pre-built monitor, or you may build your monitor. Building your monitor will allow you to specify the features you wish to include in the monitor.

You may now choose: (A) Build your monitor
 (B) Use pre-built monitor

Please type A or B <A> A

Explanation— The pre-built monitor has been configured for a Micro-PDP-11 systems. However, you can use this monitor on PDP-11 systems also if the configuration is suitable for your system configuration. Enter ? to display a list of the pre-built monitor features.

Response— Type A to build your own monitor or type B to use the pre-built monitor. If you select B, go to Task 3.

Restoring required SYSGEN components

Explanation—The system now copies files that you need to continue the update. Then you begin the monitor configuration dialogue.

Starting System Generation

Use template monitor? <N>

Explanation—This question asks if you want the program to obtain the information it needs from a template monitor. Answer N if you do not have a template monitor already on your system. If you answer YES to this question, you need to answer only the remaining questions in this task to complete Phase 3. You can still answer YES to this question, even if you intend to make some changes to your new monitor's configuration. You have the opportunity to make changes later in this task.

Response—Type YES to use an existing monitor as the template. Or, type NO to this question. You then see the configuration questions in Phase 3 of Part 1 of this guide.

If you answer YES to this question, continue with this task.

If you answer NO to this question, go to the "Use template monitor?" question in Task 1 of Phase 3 in Part 1 of this guide. Perform the rest of the tasks in that Phase. Then proceed to Task 3 of this section.

Template monitor name? <RSTS>

Explanation—You can use an existing V9.0 through V9.6 monitor as a template. The template monitor can be in any account on any disk that is both physically and logically mounted. If you do not specify the location, the default location is account [0,1] on the system disk. The program looks up the file and reads the necessary information from it. If the file does not exist, the program returns an error message and reprompts you.

If you type a ? to this prompt, a list of all the monitors in account [0,1] on the system disk is displayed.

Response—Type the name of the SIL you want to use as a template monitor.

New Monitor name? <RSTS>

Explanation—This question asks for the name of your new RSTS/E monitor, which will be stored in account [0,1] on your system disk. The program performs a lookup to see if the monitor name you specify already exists. If you call the new monitor SYSGEN, the program returns an error message and reprompts you.

Response—Type a name for your RSTS/E monitor. The name can be any combination of alphanumeric characters up to 6 characters long. The default response is RSTS.

A monitor by that name already exists.
Do you wish to supersede this monitor?

Supersede existing monitor? <N>

Explanation—You see this question only if the monitor name specified already exists and is not the currently installed SIL. If you type NO or press **RETURN** to accept the default, the program returns to the New monitor name? question. If you type YES, the program supersedes the existing monitor.

Response—Type NO or press **RETURN** to return to the New monitor name? prompt. Type YES to supersede the existing monitor.

Accept defaults? <N>

Explanation—This question lets you modify the configuration of your new monitor. If you answer NO, you have the opportunity to make changes at the beginning of each configuration section. If you answer YES, the program selects the entire configuration from the template monitor and asks no configuration questions.

If you type a ?, you see a list of the default configuration you will receive if you answer YES to the question.

Answer YES if you do not need to change the configuration.

Answer NO if you need to make configuration changes. This can occur, for instance, when you perform a monitor update to add support for new hardware.

Response—Type NO or press **[RETURN]** if you want to make changes. Type YES if you do not want to make changes.

If you answered YES to the Accept defaults? question, go to Task 3.

If you answered NO to the Accept defaults? question, perform Tasks 2 through 6 of Phase 3 in Part 1 of this guide. Then proceed to Task 3 of this section.

Task 3: Answer System Program Update Questions

Your next task is to answer the system program update questions. Your responses determine which system programs are updated on your system. You must update all the system programs you selected during system installation. For a complete description of the system programs available with RSTS/E, see Phase 4 in Part 1 of this guide.

DIGITAL supplies updates to RSTS/E system programs on the installation media. The programs are grouped into the packages listed in Table 13. See Appendix C for a complete list of system programs contained in each package.

The system updates each package at the location pointed to by its associated logical name. The update occurs in Phase 4.

NOTE

If you have moved a software package from its default location to a disk other than the system disk, you will need to mount the other disk on a free drive at the beginning of Phase 4.

Table 13 lists the logical names for each system program package.

Table 13: System Program Package Logical Names

Package	Logical Name
System Library	always [1,2]
RSX Utilities	LB:
Help	HELP\$:
Error	ERROR\$:
Update	UPDATE\$:
Device Testing	TEST\$:
Print/Batch Services (PBS)	PBS\$:
File Restore	RESTOR\$:
OPSER-based Spooling	OPSER\$:
Unsupported Utility	UNSUPP\$:
Auxiliary Library	AUXLIB\$:
RMS-11	RMS\$:
EDT	EDT\$:
TECO	TECO\$:
SORT/MERGE	SORT\$:
BASIC-PLUS	BASIC\$:
SOURCE	SOURCE\$:

Terminal Session

This terminal session explains the procedures to update system programs.

**** End of Monitor Section ****

Are you ready to proceed? <yes>

Explanation—This question asks if you are ready to continue. If you type YES or press **RETURN**, the dialogue continues. If you type NO, you see the \$ prompt.

You resume the installation procedure by typing PROCEED.

Response—Type YES or press to continue with the installation. In the example installation, the response is .

** Starting System Programs Section **

13-Jun-89 11:58 AM

Do you want to install the System Program packages? <yes>

Explanation—You are at the beginning of the System Programs Section. If you answer YES, you begin the dialogue to install system programs.

Answer NO if you are only creating a RSTS/E monitor and do not want to install system programs. You then skip this phase and go to the Are you ready to proceed? question in Task 1 of Phase 4.

Response—Type YES or press to begin the dialogue. In the example installation, the response is .

Packages currently installed on the target disk:

<RSX,RMS,DAP,PBS,EDT,UPDATE,TEST,UNSUPP,TECO,AUXLIB,RESTORE,OPSER,
SORT,HELP,BASIC,SOURCES,BLDETD>

Packages to install? <CURRENTLY INSTALLED LIST> :

Explanation—This question asks for the names of the packages you want to update on your system.

Response—Type a ? to list the packages that are available.

The following will be installed:

RSX	RMS	PBS	EDT
UPDATE	TEST	TECO	AUXLIB
RESTORE	OPSER	HELP	BASIC
SOURCES			

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes>

Explanation—The system lists the packages it will update on your system and then asks if you want to use this list. If you type NO, you return to the "Packages to install:" prompt.

Response—Type YES or press to continue the system program update. Type NO if you want to specify a different list of packages to update on your system.

Do you want the I&D versions of tasks? <Y> ?

Explanation—The system copies some required files and then asks if you want the I&D versions of tasks. You see this question only if you specified RSX and/or AUXLIB in response to the Packages to install: question.

Instruction and Data (I&D) space is available on the PDP-11/44, 45, 50, 53, 55, 70, 73, 83, and 84. DIGITAL does not recommend that systems with less than 256K words of memory (PDP-11/45, 50, or 55) use I&D space. If your system has more than 256K words of memory (PDP-11/44, 53, 70, 73, 83, or 84.), you may want to take advantage of this hardware feature which yields better performance from the following programs: TKB, MAC, STK, and REORDR.

Note that if you answer YES to this question, you must specify a SWAP MAX of 64K words to accommodate the larger amount of physical memory required by the tasks.

The system uses your response to this question later in the update when it asks whether you want to create a SWAP1.SYS file (see Task 1 of Phase 4). If you answer YES to this question, the system assumes a SWAP MAX of 64K words. Otherwise, the system assumes a SWAP MAX of 32K words.

Response—Type YES to receive the I&D versions of tasks. Type NO or press to receive the normal versions.

Use resident library version of RMS? <Y>

Use RMS resident libraries in DAP? <Y>

Use RMS resident libraries in PBS? <Y>

Use resident library version of EDT? <Y>

Explanation—If you choose RMS, DAP, PBS, or EDT, the system asks you to choose either the resident library or overlaid version. In general, the overlaid version requires less memory, but can severely impact performance. The resident library version requires less disk space, but requires more memory. Choose the resident library versions if your system has sufficient memory and you have more than one user accessing a program simultaneously.

Response—Type YES or press to use the resident library version. Type NO to use the overlaid version.

During the build phase there will be further questions for BASIC-PLUS and SORT/MERGE

Explanation—You see these messages if you specified the BASIC-PLUS and/or SORT/MERGE packages. You answer the BASIC-PLUS and SORT/MERGE questions in Phase 5 of Part 1.

** End of System Programs Section **

Are you ready to proceed? <yes>

Explanation—You are finished with the System Programs Section. This question asks if you are ready to continue. If you type YES or press , the dialogue continues. If you type NO, you see the \$ prompt.

Response—Type YES or press to continue with the installation. You resume the installation procedure by typing PROCEED. In the example installation, the response is .

13-Jun-89 11:59 AM

** Starting Layered Products Section **

You may now transfer the layered product update components from the installation kit.

Do you wish to do the transfer? <yes>

Explanation—This question asks if you want to transfer any layered product updates from the installation kit while it is still mounted. Answer YES to this question if you plan to install any layered products on your system. If you answer YES, you continue with the Layered Products Section.

Response—Type YES or press to continue the Layered Products Section. Type NO to skip the section. In the example installation, the response is YES.

If you answered YES to the previous question, go to Task 4.

If you answered NO to the previous question, go to Phase 4.

Task 4: Answer Layered Product Update Questions

You perform this task if you plan to update layered products on your RSTS/E system. A layered product, also called optional software, is software that you must purchase from DIGITAL. Examples of layered products are BASIC-PLUS-2, COBOL-81, and DIBOL.

In this task, you specify which layered products you plan to update on your system, so that the installation procedure can transfer updates for those products from the installation kit.

NOTE

The RSTS/E Update Procedure does not perform a layered product installation. See the individual layered product installation guide for the procedures to perform the layered product update.

Terminal Session

This terminal session explains the layered product update questions and provides some possible responses.

13-Jun-89 12:05 PM

** Starting Layered Products Section **

You may now transfer the layered product update components from the installation kit.

BP2	C81	DECDX	DECNET
DIBOL	DTR	FMS	FORTTRAN
FRTRN77	MAIL	MENU	PDPDBG
PLXY	RJ2780	WPS	27803780
3271			

Do you wish to do the transfer? <yes>

Explanation—You see this question at the end of Task 3.

Response—Type YES or press to begin the dialogue to transfer layered products updates. Type NO to skip this section.

Product updates to transfer:

Explanation—This question asks for the names of the layered product updates you want to transfer to your system.

Response—Type a ? to list the layered product packages that are available with RSTS/E.

Type a list of the product names, separated by commas. Remember, if you make a mistake you can type ^ to return to the previous question, or enter CTRL/Z to return to the beginning of the section.

Type ALL to transfer all the updates. If you plan to transfer nearly all of the product updates, type:

ALL,NOnnnnnnn,NOnnnnnnn

where nnnnnn refers to a product update you want to exclude.

The following will be transferred:

BP2	C81	DECDX	DECNET
DIBOL	DTR	FMS	FORTTRAN
FRTRN77	MAIL	MENU	PDPDBG
PLXY	RJ2780	WPS	27803780
3271			

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes> **RET**

Explanation—The system lists the product updates it will transfer to your system and then asks if you want to use this list. If you type NO, you return to the Product updates to transfer: prompt.

Response—Type YES or press **RETURN** to continue the layered product update transfer. Type NO if you want to specify a different list of layered product updates to transfer to your system.

Note: Any files currently in the PATCH ACCOUNT will be deleted

Since some layered products may require the Update package (from the System Programs section), it will be included. To install a layered product please refer to the individual layered product installation guide.

Patch account <PATCH\$:>

Explanation—Now you must specify the account in which you want the layered product update information placed. The default account is PATCH\$:. Note that the update procedure deletes any existing files in the current PATCH account before it transfers the updates. If you have files in the PATCH account that you want to keep, specify a different account for PATCH\$:.

After you complete the RSTS/E update, you must follow the update procedures outlined in the specific layered product installation guide to update a layered product. Some of the layered products use the BUILD program to perform the update. See Appendix E for a description of BUILD.

Response—Press **RETURN** to accept the default patch account, PATCH\$. Or, specify a different account.

** End of Layered Products Section **

Explanation—You are finished with the Layered Products Section.

Go to Phase 4.



Phase 4

Generate New System

You are now ready to generate your updated RSTS/E system. In this phase, you create the new RSTS/E monitor and update the system programs you specified in Phase 3. See the appropriate installation guides for instructions on updating layered products such as COBOL-81 or DIBOL.

The tasks you perform in this phase are:

- Task 1: Create RSTS/E Monitor
- Task 2: Update System Programs and Transfer Layered Product Updates

Task 1: Create RSTS/E Monitor

The system now generates your new monitor according to the instructions you gave it in Phase 3.

Terminal Session

This terminal session explains the procedures that generate the RSTS/E monitor. The procedures will differ depending on your response to certain configuration questions in Phase 3.

You must now set the password for account _SY:[1,2]
New password:
New password again, for verification:
Password set for account _SY:[1,2]

Explanation—This question asks you to specify a password for the system library account, [1,2]. This is a precautionary measure to provide you with an account that you can log in to in case of unforeseen problems. DIGITAL does not recommend that you log in to and use account [1,2] on a regular basis because of the importance of the files that reside in the account.

Response—Type a password from 6 to 14 characters. The password can be any combination of DEC MCS characters including the space character but not the ? character. The password is /NOLOOKUP by default. Retype the password when prompted.

This is the end of the DIALOGUE phase.

The next phase is the BUILD phase.

Are you ready to proceed? <yes>

Explanation—This question asks if you are ready to generate your RSTS/E system. You are not ready to proceed if you need to mount a disk other than the system disk on which any of the software packages targeted for update reside. Before you proceed you must:

1. Physically mount the nonsystem disk
2. Issue the MOUNT command to logically mount the disk
3. Assign the appropriate system logicals

If you are ready to proceed, type YES or press . If you are not ready, type NO. You then see the \$ prompt. When you are ready to proceed, type PROCEED.

Response—Type YES or press to proceed.

* Build phase *

13-Jun-89 - 12:18 PM

What size would you like SWAPMAX to be? <64>

Explanation— This question is only displayed if you have I&D space hardware, otherwise SWAPMAX is set to 32.

The RSTS/E monitor moves jobs from memory to disk as needed. For a job to move to disk, a special file must exist to store the job. This file is called a swap file. The SWAP MAX or swap maximum is the maximum amount of disk storage space that a job can occupy in a swap file when the job is swapped from memory to disk during timesharing. The size of your SWAP MAX depends on the run-time systems you plan to use, and whether you plan to write programs using I&D space. You can specify a size up to 64K.

Response— Type the new SWAPMAX (a number from 32 to 64).

Do you want _SY0:SWAP1.SYS created (at xxxx blocks)? <yes>

Creating _SY0:[0,1]SWAP1.SYS at xxxx blocks

Explanation—The command procedure asks if you want to create a SWAP1.SYS file at a size large enough to hold all the jobs on your system. It creates SWAP1.SYS as close to the center of the system disk as possible. The system determines the size of SWAP1.SYS according to this formula:

$(\text{JOB MAX}-1) * \text{SWAP MAX} * 4$

where:

JOB MAX-1 is the number of jobs you specified in Task 6 of Phase 3 in Part 1, minus 1.

SWAP MAX is the value given in answer to the SWAP MAX question, or is 32K words if you do not have I&D space hardware.

Response—Type YES or press **RETURN** to create SWAP1.SYS. Type NO to skip the creation of SWAP1.SYS. Type a ? if you want to know the size of SWAP1.SYS before you answer the question.

Creating RSTS/E monitor

Explanation—The command procedure now begins the RSTS/E monitor generation. The entire process should take 30 to 45 minutes, depending on the size of your monitor and the type of your CPU. If you have an 11/23 or an 11/24 CPU, this process may take up to three hours.

If your template monitor supports RJ2780 or you answered YES to the RJ2780 support? question in Phase 3 of Part 1, the program prompts you to mount the RJ2780 Software Kit at this time. Mount the RJ2780 kit when you see this prompt:

Please mount the RJ2780 installation kit and enter the name and unit number of the device.

Valid device types are: 'MM', 'MS', 'MT', 'DM', 'DL' or 'SY'

Installation device <_dev:> :

You may have to dismount the installation media to make room for the RJ2780 kit, if you do not have a free drive available. The system prompts you to remount the installation media later. Remount the installation media on the indicated drive (dev: in the example) when you see this prompt:

Please ensure that the installation media is mounted on dev: and press **RETURN** when ready:

%Small buffers lowered by xxx buffers
This will leave you with yyy buffers

Explanation—The command procedure checks whether the number of small buffers you specified in Task 6 of Phase 3 in Part 1 will fit on your system. If the number you specified is too high, the command procedure attempts to decrease the number of buffers so that the monitor fits on your system.

If the number of small buffers you specified is much too high for the maximum number allowed for your system, you see the message:

?LINK-F-Address space exceeded

Beginning of RSTS/E system generation

In general, this indicates that the system you configured is too big. Rather than make such a radical adjustment to your monitor by significantly decreasing the small buffers, the command procedure returns to the configuration questions in Phase 3 of Part 1. If you see this message, return to Phase 3 in Part 1 of this guide and answer the configuration questions. You may want to decrease the size of your system by changing the answers to some of the questions such as fewer devices. Also, specify a much smaller number to the Small buffers? question in Task 6. In general, 600 to 700 is a good response to the Small buffers? question.

See the BUFFERS suboption of DEFAULT in Part 5 of this guide for more information on small buffers.

This monitor has a valid buffer count
 Monitor creation 20% complete.
 Monitor creation 40% complete.
 Monitor creation 60% complete.
 Monitor creation 80% complete.
 Directory of SIL V973 .SIL on 13-Jun-89 at 12:14 PM

Name	Ident	Load	Size	Transfer	Total
RSTS	09.703	000000	116500	000001	20K
MVR	09.701	120000	014100	000001	23K
.
OV2	09.702	002000	034000	000001	118K
DEFAULT	09.701	001000	003000	000001	119K

Maximum buffers available without using data space:
 415 general small buffers.
 90 FIP small buffers.

Maximum buffers available using data space:
 668 general small buffers.
 494 FIP small buffers.

If you choose to restart the update, you may specify up to 573 small buffers for this system. Doing so will increase the number of general buffers available both with and without data space.

Monitor creation 100% complete.

Before attempting to start your new SIL, you must have swap file space of 11264 blocks and if you use files other than SWAP1.SYS you must also edit START.COM to install them.

Explanation—You see these messages if your new monitor is an acceptable size and the build progresses satisfactorily.

Go to Task 2.

Task 2: Update System Programs and Transfer Layered Product Updates

The update procedure now updates the system programs and layered products according to the instructions you gave in Phase 3.

Note that the time required for this process varies according to the type of your CPU and the size of your monitor. The following are some general guidelines for the time for this step:

- If you are updating the system programs and layered products on an 11/70, 11/73, 11/83, or an 11/84 CPU, this process could take up to 30 minutes.
- If you are updating the system programs and layered products on an 11/45, 11/50, 11/55, or an 11/60 CPU, this process could take up to 1 hour.
- If you are updating the system programs and layered products on an 11/34, 11/35, or an 11/40 CPU, this process could take up to 2 hours.
- If you are updating the system programs and layered products on an 11/23 or an 11/24 CPU, this process could take up to 3 hours.

If the installation media contains multiple volumes, the program prompts you to change media at the appropriate time.

Terminal Session

This terminal session explains the procedures that update the system programs.

```
13-Jun-89 - 12:15 PM
```

```
Restoring the xxxxxx package from the Installation kit
```

```
There are no updates for the xxxxxx package
```

Explanation—The system now updates the system programs. As the system updates each system program package, it prints one of the above messages. In both messages, xxxxxx is the name of the specific software package.

```
Restoring the xxxxxx update components from the Installation kit
```

Explanation—After the system completes the system program file transfers, it restores the layered product updates you specified in Phase 3. As the system transfers each layered product update, it prints the above message, where xxxxxx is the name of the layered product.

To install/update layered products, please see the individual layered product installation guides.

Explanation—You see this message only if you transferred layered product updates to your system (see Task 4 of Phase 3).

See the installation instructions that came with each layered product for a complete description of the installation procedures.

```
RSTS/E V9.7
```

```
13-Jun-89 12:20 PM
```

```
RSTS/E Software Update Procedure
```

```
13-Jun-89 12:20 PM
```

```
START.097 and LOGIN.097 in account [0,1] are the templates  
for those .COM files. Your present .COM files should be  
edited to reflect any changes.
```

Explanation— This message indicates that there are two templates available for you to edit to create START.COM and LOGIN.COM for your system as directed in Phase 6.

13-Jun-89 12:20 PM

Installing System packages

Explanation— The system now begins installing the system packages.

Beginning of RSTS/E Basic-Plus generation

BASIC-PLUS RTS name? <BASIC>

Explanation— You see this question if you are updating BASIC-PLUS. You must now answer the BASIC-PLUS questions. See Task 4A of Phase 5 in Part 1 for a description of the dialogue. Otherwise, continue with this task.

Beginning SORT/MERGE installation

Explanation— You see this question if you are updating SORT/MERGE. You must now answer the SORT/MERGE questions. See Task 4B of Phase 5 in Part 1 for a description of the dialogue. Otherwise, continue with this task.

Finished installing system packages

13-Jun-89 12:35 PM

The RSTS/E software update procedure is complete

Would you like to start your new monitor now? <Y> YES

Explanation— After the system packages are installed, you are asked if you want to start your new monitor now.

Response— Type YES or press **RETURN** to have the system start your new monitor. If you type NO, you will have to shut down the SYSGEN monitor and start your new monitor as directed in Phase 5.

Deleting all global symbols

Deassigning system logicals

13-Jun-89 12:37 PM

System tape label default set to DOS

_SY:[p,pn]INSTAL.LOG is a log file of this session

Please wait for system to re-boot itself...

Explanation— You have completed the update. The command procedure prints informational messages and reminds you that the INSTAL.LOG file is a record of the update. The procedure then automatically shuts down the SYSGEN monitor and starts your new monitor.

RSTS V9.7 RSTS97 (DUO) INIT V9.7

13-Jun-89 12:45 PM

Start timesharing <Yes>? **RET**

Memory allocation table:

0K:	00000000	-	00413777	(67K)	:	EXEC
67K:	00414000	-	03367777	(379K)	:	USER
446K:	03370000	-	03777777	(66K)	:	XBUF
512K:	04000000	-	End			:	NXM

Memory available to RSTS/E is 512K words.

Re-creating CRASH.SYS file with minimum size of 380 blocks

Explanation—This question asks if you are ready to start timesharing. If you answer YES to this question, INIT.SYS starts the currently installed monitor and starts timesharing under it.

The procedure then prints the current memory allocation table and checks that the CRASH.SYS file exists in account [0,1] on the system disk, is large enough for the installed RSTS/E monitor and extended buffer pool allocation, and is contiguous.

Response—Type to start your new monitor. In the example update, the response is because RSTS97 is the name of the new V9.7 RSTS/E monitor.

If you answer NO to this question, INIT.SYS prints its Option: prompt. You can then use the INIT.SYS offline options to perform additional preparatory tasks. Finally, when you are ready to start your RSTS/E monitor, use the INIT.SYS START option.

13-Jun-89 12:45 PM

8 devices disabled

Proceed with system startup? <YES>

Beginning RSTS/E system startup...

13-Jun-89 12:45 PM Mounting disks

13-Jun-89 12:45 PM Assigning logical names

13-Jun-89 12:45 PM Starting error logging

13-Jun-89 12:45 PM Setting system characteristics

13-Jun-89 12:45 PM Installing run-time systems and libraries

13-Jun-89 12:45 PM Setting terminal characteristics

13-Jun-89 12:46 PM Defining system commands

13-Jun-89 12:46 PM Setting printer characteristics

13-Jun-89 12:46 PM Starting spoolers

Print/Batch Services started at 12:46 PM

Explanation— The procedure pauses for several seconds while it performs the necessary tasks to start timesharing. It then asks if you are ready to proceed with the start up.

Response— Type YES or press to start timesharing. Or, type NO if you are not ready to start timesharing. You then see the DCL \$ prompt. In the example update, the response is .

*** From [1,2] on KB0: at 12:47 PM on 13-Jun-89

** RSTS/E is on the air...

RSTS V9.7 13-Jun-89 12:47 PM

User:

Explanation— You are finished with the update. You can now press to log in to the system. RSTS/E then prints its banner followed by the User: prompt.

Save System Disk Onto Another Disk or Tape

You may want to create a backup copy of your system disk. If so, use the Backup program to copy your system disk before you start your RSTS/E monitor.

Go to Phase 5.



Phase 5

Start New Monitor

This phase describes the tasks you must perform to start your new RSTS/E monitor if you did not choose to have the update procedure start your monitor in Phase 4.

The tasks in this phase are:

- Task 1: Shut Down SYSGEN Monitor (SHUTUP)
- Task 2: Start New RSTS/E Monitor (START)

Task 1: Shut Down SYSGEN Monitor (SHUTUP)

Now that you have built an updated RSTS/E monitor, you no longer need the SYSGEN monitor. To shut down your monitor, run the SHUTUP program.

You should install any paper patches at this time. Install the paper patches to your currently built monitor, not to your currently installed monitor. You want the patches to apply to your newly-built monitor.

Use the ONLPAT commands found in [1,2] to install paper patches online if you want to install them before running SHUTUP. Use the PATCH option of INIT.SYS if you want to install patches after running SHUTUP.

Terminal Session

This terminal session explains how to use SHUTUP to shut down your SYSGEN monitor.

\$RUN \$SHUTUP

Explanation—You see the DCL \$ prompt on your screen. You can now shut down the SYSGEN monitor.

Response—Type RUN \$SHUTUP to shut down the monitor.

SHUTUP V9.7-08 RSTS V9.7 <SYSGEN>

12:54 PM 13-Jun-89 ##### Set-up Dialogue Phase #####

Type '^' to any query to backup one question

Minutes until system shutdown (0-99) <5>?

Explanation—SHUTUP asks you to type the minutes to wait before the RSTS/E monitor shuts down. This question is useful for giving system users fair warning when shutting down the system.

Response—Type a number from 0 to 99. Or, press **RETURN** to accept the default of 5 minutes.

Shutdown with automatic RESTART <NO>? **RET**

Explanation— The system asks if you want an automatic RESTART to the system. The default response is NO.

Response— Press **RETURN** or type No to accept the default response. You should never answer YES at this point in the update procedure. You must shutdown the system in order to start the new monitor.

12:55 PM 13-Jun-89 ##### Warning Message Phase #####
Further LOGINS are now disabled

12:55 PM 13-Jun-89 ##### Initial Job Killing Phase #####

12:55 PM 13-Jun-89 ##### Print/Batch Shutdown Phase #####

Print/Batch Services shutdown complete at 12:55 PM.


```

12:55 PM 13-Jun-89 ##### ' EVTLOG ' Shutdown Phase #####
12:55 PM 13-Jun-89 ##### ' ERRCPY ' Shutdown Phase #####
12:55 PM 13-Jun-89 ##### Remove RTS/RES LIB Phase #####
12:55 PM 13-Jun-89 ##### SWAP File Removal Phase #####
12:55 PM 13-Jun-89 ##### Disk DISMOUNT Phase #####
12:55 PM 13-Jun-89 ##### Final Shutdown Phase #####

```

RSTS V9.7 <SYSGEN> (dev:) INIT V9.7

dd-mmm-yy - hh:mm AM/PM

Start timesharing <Yes>?

Explanation—SHUTUP prints several messages before shutting down your system. It then returns to the Start timesharing? question. See the *RSTS/E System Manager's Guide* for more information on SHUTUP.

Go to Task 2.

Task 2: Start New RSTS/E Monitor (START)

In Task 1 you ran the SHUTUP program to shut down the SYSGEN monitor. Now you need to start your updated RSTS/E monitor. You must first decide whether to perform the additional preparatory task:

- Change monitor defaults (INIT.SYS DEFAULT option)

Change Monitor Defaults (DEFAULT Option)

When you start your new monitor, it will receive the standard monitor defaults. Table 14 shows the defaults that INIT.SYS selects.

Table 14: INIT.SYS Selected Defaults

Default	Current Setting
Crash dump file	CRASH.SYS, if enough space is present
Extended buffer pool memory (XBUF)	15% of USER memory is allocated to XBUF, if the total amount of system memory exceeds 128K words. Otherwise, 10% of USER memory is allocated to XBUF. USER memory is memory that is not allocated to any other entity, such as the monitor or run-time system. The minimum size of XBUF without DECnet is 3K words. The minimum size of XBUF with DECnet and endnode is 3K words. The minimum size of XBUF with DECnet and router varies according to the size of your network, but is never less than 3K words. The maximum size is 496K words.
Small buffer pool memory	The maximum allowed for your system, over and above the minimum number you specified during system installation (see Part 1, Phase 3, Task 6). The size varies based on your hardware and software configurations.
System clock	KW11-L Line Time Clock

If you do not plan to change any of the defaults selected by INIT.SYS, then you do not need to use the DEFAULT option before you start timesharing under your RSTS/E monitor. See Part 5 of this guide for a complete description of DEFAULT.

If you need to perform additional preparatory tasks, go to Part 5 of this guide. Then continue with this task.

Terminal Session

To start your RSTS/E monitor, you must answer the START questions. This terminal session lists the questions, explains them, and gives you some possible responses. After you understand the question, type the response at your console terminal.

```
Start timesharing? <Yes> START <monitor name>
```

Explanation—You see this question at the end of Phase 4. This question asks if you are ready to start timesharing. If you answer YES to this question, INIT.SYS restarts timesharing under the currently installed monitor.

If you answer NO to this question, INIT.SYS prints its Option: prompt. You can then use the INIT.SYS offline options to perform additional preparatory tasks. Finally, when you are ready to start your RSTS/E monitor, use the INIT.SYS START option.

Response—Type START <monitor name>, where <monitor name> is the name of your new RSTS/E monitor.

If you do not specify a monitor name, START starts the monitor that was used in the previous timesharing session. The SYSGEN monitor was used in this case.

Memory allocation table:

```
OK: 00000000 - 00413777 ( 67K) : EXEC
67K: 00414000 - 03367777 ( 379K) : USER
446K: 03370000 - 03777777 ( 66K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Explanation—START prints the current memory allocation table. The sample memory allocation table is from the example installation in Part 1. These messages may be slightly different due to configuration differences. Then START checks that the SWAP.SYS file exists in account [0,1] on the system disk, is large enough to hold one job at the current SWAP MAX, and is contiguous. If the file does not exist, START attempts to create SWAP.SYS at the required size. If the file exists but is not contiguous or large enough, START deletes the current SWAP.SYS file and attempts to create a new SWAP.SYS file that is both contiguous and large enough (SWAP MAX * 4). If START cannot find enough free contiguous disk space to create a minimum SWAP.SYS file, it prints the following error message:

?Not enough contiguous disk space to create minimum SWAP.SYS file

START then attempts to create a SWAP.SYS file that is smaller than the one you specified yet still meets the minimum requirements. This may take up to one minute. If START finds it can create a SWAP.SYS file, it prints these messages:

SWAP.SYS can be created if SWAP MAX is reduced to xxK

New SWAP MAX <xxK>?

Press **[RETURN]** to accept the default value, indicated by xx in the example. Or, enter CTRL/C to return to the Option: prompt. You can then use the FILE suboption of REFRESH to create more disk space.

If START cannot find enough contiguous disk space to create a minimum SWAP.SYS file, it prints these messages:

You must free some disk space to start timesharing.

Option:

Use the FILE suboption of REFRESH to create more contiguous disk space.

Re-creating CRASH.SYS file with minimum size of xxx blocks

Explanation—START now checks that the CRASH.SYS file exists in account [0,1] on the system disk, is large enough for the RSTS/E monitor and extended buffer pool allocation, and is contiguous. If the file does not exist, START attempts to create CRASH.SYS at the required size. If the file exists but is not contiguous or large enough, START deletes the current CRASH.SYS file and attempts to create a new CRASH.SYS file that is both contiguous and large enough. If START is successful it prints the previous message. If START is unsuccessful, it prints the following error messages:

?Not enough contiguous disk space to create minimum CRASH.SYS file

Crash dump automatically disabled

When a crash occurs, the RSTS/E monitor dumps the contents of the read/write area of monitor memory into CRASH.SYS. Because the crash dump facility preserves the state of the system at the time of the crash, CRASH.SYS contains important diagnostic information. For these reasons, DIGITAL recommends that you always have crash dump enabled during timesharing. In general, SPRs submitted on system crashes without crash dumps will be answered by DIGITAL as "Insufficient information."

Therefore, if you see the error message Crash dump automatically disabled, follow these steps to enable crash dump:

1. After you begin timesharing, delete unnecessary files to create more contiguous disk space. Or, move some files to a nonsystem disk.
2. Shut down the RSTS/E monitor using the SHUTUP program.
3. Use the START option to start timesharing. If you do not see the Crash dump disabled message, you know that INIT.SYS was able to create the CRASH.SYS file.

```
.  
.  
.  
*** From [1,2] on KB0: at hh:mm AM/PM dd-mmm-yy  
** RSTS/E is on the air...
```

[RET]

RSTS V9.7 dd-mmm-yy hh:mm AM/PM
User:

Explanation—You are finished with the update. You can now press **[RETURN]** to log in to the system.

Remember, if you are updating layered products, see the individual layered product documentation for instructions on completing the installation.

Phase 6

Optional Tasks

This phase describes an optional task you may want to perform to tune your RSTS/E system to your needs.

The task in this phase is:

- Task 1: Perform a Selective Update

Task 1: Perform a Selective Update

You can use the UPDATE.COM command file to perform a selective RSTS/E update, without disturbing your existing system. UPDATE.COM resides in account [0,1]. You can use it to:

- Generate an updated monitor
- Update one or more system program packages
- Update layered products (integrated layered products only)
- Copy layered product updates to your system
- Perform a full system update

NOTE

You cannot perform a system update to V9.X on a pre-V9.X system. You must first perform a full V9.X installation. For example, you cannot perform a V9.7 update on a V9.6 system.

In order for the update to succeed, you must be logged in to an account with the following privileges: MOUNT, INSTAL, TUNE, WREAD, WWRITE, and WACNT. In addition, if you have DATES privilege, the creation date of the new files will be the date the files were placed on the Installation kit. If you do not have DATES privilege, the file creation date will be the current date.

To access UPDATE.COM, use the following command format:

@[0,1]UPDATE function [package,...]

where:

@[0,1]UPDATE	invokes the UPDATE.COM command procedure.
function	specifies the operation to perform. Legal functions are: ALL (the default), MONITOR, SYSTEM_PROGRAMS, and LAYERED_PRODUCTS.
[package,...]	specifies the software package(s) to install when performing a SYSTEM_PROGRAMS, LAYERED_PRODUCTS, or COPYUP operation (see Table 15). See Phase 4 in Part 1 for a complete list of RSTS/E system program packages and layered products.

UPDATE.COM Entry Points

When you use UPDATE.COM to perform an update, you enter the update process at different points depending on the command format. Table 15 lists the UPDATE.COM commands and the resulting entry points into the update process. See the appropriate Phase and Task in Part 4 for details on the actual installation procedures.

When you use UPDATE.COM to perform an online installation, you first see this question:

Please mount the Installation media.

Installation device <_mmn:>?

This question asks for the location of your Installation media. The default is the device on which you booted the Installation media.

Response—Press **RETURN** to accept the default response. In the example installation, the response is MS0.

The question also prompts you to mount the Installation tape or disk. The default response is the device used during the last installation. See the example later in this section if you need help answering this question.

Table 15 lists the UPDATE.COM commands and the resulting entry points into the update process.

Table 15: UPDATE.COM Entry Points

Command	Update Entry Point	Comment
@[0,1]UPDATE	Phase 3, Task 1	Performs full update (same as UPDATE ALL).
@[0,1]UPDATE ALL	Phase 3, Task 1	Performs full update (the default).
@[0,1]UPDATE SYSTEM_PROGRAMS	Phase 3, Task 3	Begins system program update questions.
@[0,1]UPDATE SYSTEM_PROGRAMS [pkg,...]	Phase 4, Task 2	Updates specified package.
@[0,1]UPDATE MONITOR	Phase 3, Task 1	Begins monitor update section. Skips system program and layered product sections.
@[0,1]UPDATE LAYERED_PRODUCTS	—	Use this function when you are directed to do so by a specific layered product installation guide.
@[0,1]UPDATE LAYERED_PRODUCTS [pkg,...]	—	Use this function when you are directed to do so by a specific layered product installation guide.
@[0,1]COPYUP	Phase 3, Task 4	Begins dialogue to transfer layered product updates from the Installation kit.
@[0,1]COPYUP [pkg,...]	Phase 4, Task 2	Transfers specific layered product updates from the Installation kit.

Selective Update Example

This example uses UPDATE.COM to update the File Restore system program package. You would use UPDATE.COM to update packages that you did not update when you built your monitor. Before you run UPDATE.COM, you must mount the Installation media. Mount the tape or disk on a free drive. Follow the tape or disk mount instructions in Task 1 of Phase 2.

```
$ @[0,1]UPDATE SYSTEM_PROGRAMS RESTOR
```

```
Deleting all global symbols
```

```
RSTS/E Software Update Procedure
```

```
* Dialogue phase *
```

```
During this installation procedure you may:
```

```
Type '?' for help
```

```
Type '^' to go back to the previous question
```

```
Type CTRL/Z to return to the beginning of the present section
```

```
Please mount the RSTS/E Installation media and enter the name  
and unit number of the device.
```

```
Valid device types are: 'MM', 'MS', 'MT', 'MU', 'DM', 'DL' or 'SY'  
(a response of SY allows monitor only).
```

```
Installation device? <_MS0:>
```

```
Please enter the name and unit number of the disk to  
which you want to update the software. This disk  
should be physically mounted and write-enabled.
```

```
Target disk? <_SY:> [RET]
```

Assigning system logicals

The following will be updated:

RESTORE

You may answer "Yes" to accept this list, or "No" to change it.

Is this list OK? <yes> ☐

Do you want the I&D versions of tasks? <Y> ☐

** End of System Programs Section **

This is the end of the DIALOGUE phase.

The next phase is the BUILD phase.

Are you ready to proceed? <yes> ☐

* Build phase *

13-Jun-89 01:56 PM

Restoring the File Restore package from the Installation kit

13-Jun-89 01:58 PM

Updating system packages

Finished updating system packages

The RSTS/E Software Update Procedure is complete

Deleting all global symbols

Deassigning system logicals

13-Jun-89 01:59 PM

System tape label default set to DOS

_SY:[1,2]UPDATE.LOG is a log file of this session

\$

You have successfully updated the File Restore package. You can now type DIR
RESTOR\$: to list the files in the directory.

Part V:
Offline Options

Insert tabbed divider here. Then discard this sheet.



Part 5

Offline Options



Offline Options

This part describes the offline INIT.SYS options you may need to use in the management and maintenance of your RSTS/E system.

Table 16 lists the offline INIT.SYS options and suboptions.

Table 16: INIT.SYS Options

Option	Suboption	Function
BOOT	None	Bootstrap magnetic tape and disk devices.
DATE	None	Reset the current date and time.
DEFAULT	Memory Table Suboptions: LIST PARITY LOCK UNLOCK RESET XBUF BUFFERS	Change RSTS/E monitor defaults or allocation of memory entities.
DSKINT	None	Initialize disks.
HARDWR	LIST DISABLE ENABLE CSR VECTOR RESET DM HERTZ SWITCH ECO	Perform hardware-related tasks. Set non-standard CSR devices. Setting vectors for non-standard CR and CD devices.
IDENT	None	List ECO information for DU and MU devices. Print INIT.SYS creation date plus list of patches.
REFRESH	LIST FILE BADS	Create and list system files; add bad blocks to the bad block file.
SAVRES	RESTORE IDENTIFY IMAGE	Reconstruct RSTS/E disks; make an image copy of a RSTS/E disk; extract label information from a SAVE set or a RSTS/E formatted disk.
START	None	Start a RSTS/E monitor; print a list of disabled devices. This option differs from answering YES to the Start timesharing question.

The offline options are arranged in alphabetical order, and each is presented in a separate section. In most cases, the common error messages associated with an option appear at the end of the option description. If your error message does not appear there, see Appendix A.

In general, these responses have special meaning when using INIT.SYS:

Response	Description
<code>RET</code>	Accept the default response
<code>CTRL/C</code>	Abort the operation and return to the Option: prompt
<code>?</code>	Obtain an online explanation of the question
Option: <code>RET</code>	Invoke the INIT.SYS START option

BOOT—Bootstrap Devices

The BOOT option bootstraps magnetic tape and disk devices. Use the BOOT option if:

- You need to bootstrap another disk or tape.
- You need to reload INIT.SYS after you have patched it on disk.

BOOT Dialogue

Option: BOOT

Response—Type BOOT or BO to the Option: prompt.

Boot device:

Boot unit:

Explanation—BOOT asks for the device designator and unit number of the tape or disk you want to boot.

Response— Type a ? in response to the Boot device: prompt to get a list of bootable devices. Or, press RETURN to bootstrap the system disk, in which case BOOT automatically determines the system device and unit number.

RSTS V9.7 (dev) INIT V9.7-11

dd-mm-yy - hh:mm AM/PM

Start timesharing? <Yes>

Explanation—After booting the device, INIT.SYS displays its banner, the date, and the time. INIT.SYS prints the device name within parentheses in the banner. If you booted a tape device, INIT.SYS prompts you for the date and time instead.

INIT.SYS then returns to the Start timesharing? prompt.

BOOT Error Messages

A list of the BOOT error messages follows. If your error message does not appear, see Appendix A.

NOT A VALID BOOT DEVICE

Explanation: The device you named is not a valid bootable device.

User Action: Type a question mark (?) for a list of devices that you can bootstrap.

SORRY, BUT THAT DEVICE DOESN'T EXIST

Explanation: The device name you typed is valid, but the device does not exist on your PDP-11.

DATE—Set the Date and Time Format

The DATE option sets the date and time. Use the DATE option if:

- You need to reset or display the date.
- You need to reset or display the time.

DATE Dialogue

Option: DATE

Response—Type DATE or DA to the Option: prompt.

Today's date?

Current time?

Explanation—DATE asks for the new date and time. It prints the default format in brackets.

Response—Type the date and time. You can enter the date in either of these formats:

- DD-MMM-YY (day, month, year)
- YY.MM.DD (year, month, day)

You can enter the time in either of these formats:

- HH:MM AM/PM (hour, minute, AM or PM)
- HH:MM (24 hour clock)

Option:

Explanation—INIT.SYS returns to the Option: prompt.

DEFAULT—Change RSTS/E Monitor Defaults

You can set the following defaults for your RSTS/E monitor with the DEFAULT option of INIT.SYS:

- Memory for the extended buffer pool - INIT.SYS automatically allocates memory to the extended buffer pool. You can change the amount by adjusting the memory allocation table with the XBUF suboption.
- Memory for the small buffer pool - INIT.SYS automatically allocates as much memory as it can to the small buffer pool, depending on the monitor size. You can change the amount by adjusting the memory allocation table with the BUFFERS suboption.
- System clock - Choose the KW11-L line time clock or the KW11-P clock as the system clock if you have more than one clock.

DEFAULT Dialogue

Option: DEFAULT

Response—Type DEFAULT or DE to the INIT.SYS Option: prompt.

Any memory allocation changes?

Table suboption? LIST

Memory allocation table:

```
OK: 00000000 - 00323777 ( 53K) : EXEC
53K: 00324000 - 03363777 ( 392K) : USER
445K: 03364000 - 03777777 ( 67K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Explanation—DEFAULT now prints the memory allocation table prompt. These messages may be slightly different due to configuration differences. At this point you may want to adjust the memory allocation table. If so, answer YES to this question, then go to the DEFAULT suboption sections that follow. You will be forced into the Table suboption (with a message) if DEFAULT requires changes that cannot be done automatically. Note that DEFAULT automatically allocates memory to the Extended Buffer Pool and Small Buffer Pool, based on the size and configuration of your system. Use the XBUF suboption to change the amount of memory allocated to the Extended Buffer Pool, and the BUFFERS suboption to change size of the Small Buffer Pool.

Response—Type YES if you want to use one of the memory table suboptions to list or change the memory allocation table. Type NO to accept the current table.

If you want to list the current table, type YES to this question and then type LIST at the Table suboption? prompt. Press **RETURN** at the Table suboption? prompt to continue with the DEFAULT dialogue.

Preferred clock <L>?

Explanation—Your hardware configuration can include one or both of these system clocks: the KW11-L line time clock or the KW11-P programmable real-time clock. The *KW11-L line time clock* divides system time into intervals based on the AC line frequency of the power source used to run your PDP-11 computer system. AC line frequency can be either 50 Hz (the standard in many European countries) or 60 Hz (the standard in the United States).

The *KW11-P programmable real-time clock* can use the AC line frequency of the power source to provide a system time base, or it can be set to provide a crystal-controlled time base independent of the power source. This clock is useful in areas where fluctuations in AC line frequency would adversely affect system timing.

Response—Press `RETURN` to accept the default. If you have both clocks and the default is not the clock you want, type L to use the KW11-L line time clock, or, type P to use the KW11-P programmable real-time clock. If you type L, DEFAULT goes to the Option: prompt.

Interrupt frequency?

Explanation — This question appears only if you chose the KW11-P programmable real-time clock. It asks for the frequency (AC line frequency or the crystal oscillator) you will use for the time base.

Response—Type LINE to use the AC line frequency, unless you live in an area where the line frequency is not accurately maintained by the power supplier (for example, if diesel generators supply the power). In many areas, the AC line frequency is more accurate than the crystal oscillator.

Or, type a number (a multiple of 50 ranging from 50 to 1000 interrupts/second) to use the KW11-P's crystal oscillator for the time base.

Option:

Explanation—After you specify defaults for your RSTS/E monitor, DEFAULT returns to the Option: prompt.

DEFAULT Suboptions—Adjust the Memory Allocation Table

The following sections describe the memory allocation suboptions of DEFAULT. These suboptions allow you to adjust the memory allocation table of your installed monitor.

If you install a new monitor, you may need to use the memory allocation suboptions again to adjust the new monitor's memory allocation table.

The memory allocation table suboptions of DEFAULT are:

- LIST - List the Memory Allocation Table
- PARITY - List the Parity Memory Configuration
- LOCK - Lock a Portion of Memory
- UNLOCK - Unlock a Portion of Memory
- RESET - Reset the Memory Allocation Table
- XBUF - Allocate Memory to the Extended Buffer Pool
- BUFFERS - Allocate Memory to the Small Buffer Pools

LIST—List the Memory Allocation Table

The LIST suboption of DEFAULT lists the *memory allocation table*, which shows the allocation of each block of memory.

Use the LIST suboption if:

- You want to print the most current memory allocation table.
- You want to print the table after adjusting the memory allocation table with one of the other DEFAULT suboptions.

LIST Dialogue

Any memory allocation changes <NO>? YES

Explanation—This is one of the DEFAULT dialogue questions. If you answer YES, DEFAULT prompts for the table suboption.

Response—Type YES to adjust or list the memory allocation table. Or, type NO or press **[RETURN]** to continue with the DEFAULT dialogue.

Table suboption? LIST

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? question.

Response—Type LIST or LI to see the memory allocation table. Type EXIT or press **[RETURN]** to continue with the DEFAULT dialogue.

Memory allocation table:

```
OK: 00000000 - 00323777 ( 53K) : EXEC
53K: 00324000 - 03363777 ( 392K) : USER
445K: 03364000 - 03777777 ( 67K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Table suboption?

Explanation—Your table may not show the same values as the one in the example. These messages may be slightly different due to configuration differences. You read this table as follows:

- Column one contains the start range (in K words) of memory. You read this column vertically. In the example, the range starts at 0K words and ends at 512K words.
- Columns two and three contain the starting and ending octal addresses for the range of memory. In the example, 00000000 to 00323777 are the starting and ending octal addresses for the RSTS/E monitor (EXEC).
- Column four contains the amount of memory this range occupies in K words. In the first line of the example, the RSTS/E monitor (EXEC) occupies 53K words of memory.
- Column five specifies what occupies a particular range of memory:
 - EXEC—Represents the RSTS/E monitor, which always starts at 0K words.
 - USER—Represents memory available for user jobs.
 - LOCKED—Represents memory unavailable for use (appears if you use the LOCK suboption).
 - XBUF—Represents memory reserved for the extended buffer pool
 - NXM—Represents memory that does not exist on this PDP-11.

Response—After DEFAULT lists the memory allocation table, it returns to the Table suboption? prompt. Press **[RETURN]** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

PARITY—List the Parity Memory Configuration

The PARITY suboption of DEFAULT identifies and locates the types of parity memory. These types are parity memory and interleaved parity memory.

Use the PARITY suboption if you are a DIGITAL Field Service representative who needs to verify the memory configuration during the installation of a PDP-11.

Parity memory is memory that can detect certain errors. *Interleaved parity memory* is memory in which alternate banks respond to sequential memory addresses, as in the following:

Parity Register	Parity Register
00	02
BANK 0	BANK 1
Addresses	Addresses
000000	000002
000004	000006
000010	000012

Note that parity register 00 responds to the first address (000000), parity register 02 responds to the next address (000002), and so forth.

Core memory might have interleaved parity memory because it is a destructive read-out device. The central processor or DMA device requests data. The RSTS/E monitor reads the requested data from a memory bank located in core memory. After the central processor or DMA device receives the requested data, this memory bank remains busy until the memory hardware restores to it the original data. During this *restore cycle*, the RSTS/E monitor can perform other functions, including another read memory access in another bank.

If core memory has interleaved parity memory, the probability is low that the RSTS/E monitor will access the same bank of memory on the next memory cycle. This allows some overlap of memory read operations, resulting in faster program execution.

Some ECC MOS memory can be interleaved because on a write operation, it takes time for the memory controller to determine what error-correction bits to store with the data. After the memory bank has accepted the data and the RSTS/E monitor allows the central processor or DMA device to continue, the memory bank remains busy until it has stored the data and new ECC bits. Because ECC MOS memory exhibits the same characteristics as interleaved parity memory, the probability is low that the RSTS/E monitor will access the same bank of memory on the next memory cycle. This allows some overlap of memory write operations, thus resulting in faster program execution.

Nonparity memory is not supported by RSTS/E.

PARITY Dialogue

Table suboption? PARITY

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? DEFAULT question.

Response—Type PARITY or PA.

Parity register usage:

```
0K: 00000000 - 00777777 ( 128K) : 00 (ECC)
128K: 01000000 - 01777777 ( 128K) : 02 (ECC)
256K: 02000000 - 02777777 ( 128K) : 04 (ECC)
384K: 03000000 - 03777777 ( 128K) : 06 (ECC)
```

Table suboption?

Explanation—In the example, PARITY shows the memory configuration for a PDP-11/44. Your parity memory depends on the type of PDP-11 you have. After PARITY prints the parity memory configuration, it returns to the Table suboption? prompt.

The following defines the parity type codes you might see listed. The values nn and mm are the last two octal digits of the address of the parity register that controls that section of memory. Up to sixteen parity registers can exist. They are in the address range 772100 to 772136. When the system detects a parity error, the parity register responsible for that section of memory usually contains information on the location of the last error discovered. The code NA indicates that the parity register contains no error address information.

Symbol	Meaning
NO	Nonparity memory
NXM	Nonexistent memory
nn mm	Interleaved parity memory with address information
nn	Parity memory with address information
nn(NA)	Parity memory with no address information
nn(ECC)	Memory with ECC hardware
nn(ECC)/mm(ECC)	Interleaved memory with ECC hardware

Response—After DEFAULT lists the parity memory configuration, it returns to the Table suboption? prompt. Press **RETURN** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

LOCK—Lock a Portion of Memory

The LOCK suboption of DEFAULT locks certain portions of memory, which prevents the use of that memory during timesharing.

Use the LOCK suboption only if:

- You need to lock a portion of defective memory. If sufficient undamaged memory remains, you can start the monitor for normal timesharing.
- You want to start the RSTS/E monitor with less memory than is physically available. This could be useful for developing applications that can run on a smaller memory configuration.

Four examples of using the LOCK suboption are provided later in this section.

LOCK Dialogue

Table suboption? LOCK

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? DEFAULT question.

Response—Type LOCK or LO.

Lock address is? 90K+1

Explanation—LOCK asks you to specify the address or range of addresses you want to lock.

Response—Type the address as a decimal number followed by the letter K. The decimal number must be in the range from 0 to 1919. In the example, the response is 90K+1.

Or, type the absolute address as a four- to eight-digit octal address. The octal number must be a multiple of 4000 (8) that is less than or equal to 16774000.

Or, specify a range of addresses by typing either two addresses separated by a hyphen (for example, 45K-47K) or an address followed by a plus sign and a number that represents the size of the range (for example, 45K+3).

Table suboption?

Explanation—After you specify an address, LOCK returns to the Table suboption? prompt.

Response—Type LIST or LI to list the memory allocation table and check that you have locked the correct area of memory.

Memory allocation table:

```
0K: 00000000 - 00323777 ( 53K) : EXEC
53K: 00324000 - 00547777 ( 37K) : USER
90K: 00550000 - 00553777 ( 1K) : LOCK
91K: 00554000 - 03363777 ( 354K) : USER
445K: 03364000 - 03777777 ( 67K) : XBUF
512K: 04000000 - End : NXM
```

Memory available to RSTS/E is 512K words.

Table suboption?

Explanation—The memory allocation table shows that 1K of memory is now locked. These messages may be slightly different due to configuration differences.

Response—After DEFAULT lists the memory allocation table, it returns to the Table suboption? prompt. Press **RETURN** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

Using the LOCK Suboption

Certain types of memory failures affect only one word of memory; other types affect larger sections or even the entire hardware bank. You must carefully analyze any memory failure to determine the 1K section of memory to lock. Additionally, after you lock memory, list the memory allocation table to make sure that sufficient contiguous user memory is available to run your installation's programs.

Before you lock a portion of memory, you should be aware of the following restrictions:

- You cannot lock memory used by the monitor.
- You cannot lock memory currently reserved for the extended buffer pool (XBUF) until you relocate it to a usable area of memory.
- You cannot lock a full bank of memory, until you locate all of the 4, 8, 16, 32, 64, or 128 contiguous 1K sections that make up the hardware bank. If the bad memory is interleaved, you must lock an amount of memory equal to twice its length. On a PDP-11/70 with external interleaving, you must lock an amount of memory equal to four times its length.

If you attempt to lock any of these areas of memory, LOCK prints the error message: **Part of that area is already in use.**

RSTS/E can continue running with certain types of memory failures. The error handling routines in the monitor log parity errors when they are detected by the hardware. The recovery procedures depend on the use of the section of memory that failed. Consider the following four cases of memory failure and recovery procedures.

Case 1: A parity error occurs when the monitor is running. Since continued system operation would be risky, the monitor takes a crash dump (if the crash dump facility is enabled), and reloads the system. When the system restarts, you should use the ANALYS program to extract the error log information from the CRASH.SYS file.

The ERRDIS report, which the monitor automatically appends to the ANALYS report, provides sufficient information to identify the section that should be locked out. If the error occurred in the extended buffer area of memory, you can relocate these items and lock the section. If the error was in monitor memory, the hardware must be repaired or reconfigured. In either case, a hard failure may prevent the system from running at all; thus, you can run neither ANALYS nor ERRDIS. The only recourse in such cases is to run memory diagnostics to locate the problem. If the failure was transient, you can shut down the system to lock out memory or you can continue timesharing. If possible, you should run memory diagnostics to reproduce the failure.

Case 2: A parity error occurs when a user job is running. The parity error handling routines determine whether a single user job is affected (that is, resides in the malfunctioning section) or more than one user job is affected. If more than one user job is affected, the system is reloaded as Case 1 describes. If a single user job is affected, the system aborts that user job with the error message **?Memory parity failure**. The monitor logs the error, automatically locks out the section of memory from future use (for the duration of the timesharing session), and the system continues running. You should lock out the bad section of memory (until repaired), using the LOCK suboption the next time you start the system.

Case 3: Multiple parity errors occur in rapid succession. RSTS/E halts at location 54 (the program counter displays 56) if a second parity error occurs while the system is processing the first parity error. A DIGITAL Field Service representative will use memory diagnostics to locate the failing memory.

Case 4: A memory cache parity error occurs. If the hardware memory cache malfunctions and causes a parity error, the hardware again retrieves the needed word from main memory and causes a warning parity trap to occur. RSTS/E logs this type of error. If the error occurs twice within one minute, RSTS/E disables the part of the cache causing the malfunction. RSTS/E continues running, but with degraded performance. The system does not print a message, but two successive errors within the same minute in the ERRDIS print-out should alert you.

On systems without parity or ECC memory, the software cannot detect or locate a memory failure. Programs may get incorrect results, memory management errors may occur, or any number of random problems may happen. At worst, the system may crash with misleading clues as to the cause. It is for these reasons that RSTS/E is not supported on systems that use nonparity memory.

UNLOCK—Unlock a Portion of Memory

The UNLOCK suboption of DEFAULT unlocks certain portions of memory to make the memory available for use during timesharing by user jobs, or by the extended buffer pool (XBUF).

Use the UNLOCK suboption after you repaired the memory you previously locked with the LOCK suboption.

UNLOCK Dialogue

Table suboption? UNLOCK

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? DEFAULT question.

Response—Type UNLOCK or UN.

Unlock address is? 90K+1

Explanation—UNLOCK asks you to specify the address or range of addresses you want to unlock.

Response—Type the address as a decimal number followed by the letter K. The decimal number must be in the range from 0 to 1919. In the example, the response is 90K+1.

Or, type the absolute address as a four- to eight-digit octal address. The octal number must be a multiple of 4000 (8) that is less than or equal to 16774000.

Or, specify a range of addresses by typing either two addresses separated by a hyphen (for example, 45K-47K) or an address followed by a plus sign and a number that represents the size of the range (for example, 45K+3.)

Table suboption? LIST

Explanation—After you specify an address, UNLOCK returns to the Table suboption? prompt.

Response—Type LIST or LI to list the memory allocation table and check that you have unlocked the correct area of memory.

Memory allocation table:

```
0K: 00000000 - 00323777 ( 53K) : EXEC
53K: 00324000 - 03363777 ( 392K) : USER
445K: 03364000 - 03777777 ( 67K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Table suboption?

Explanation—Note that UNLOCK removes the 1K area of memory that was locked in the previous example. These messages may be slightly different due to configuration differences.

Response—After DEFAULT lists the memory allocation table, it returns to the Table suboption? prompt. Press **RETURN** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

RESET—Reset the Memory Allocation Table

The RESET suboption removes any changes made to the memory allocation table; for example, locked portions of memory and reserved memory for the extended buffer pool.

Use the RESET suboption only if you want to set up the memory allocation table in the following way:

- Release any memory previously allocated to the extended buffer pool (reduces the extended buffer pool to 2K words).
- Release any memory you previously locked.
- Release any memory you previously allocated to the virtual disk.

RESET Dialogue

Table suboption? LIST

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? DEFAULT question.

Response—Before you reset the memory allocation table, it is useful to list the current one. Type LIST or LI.

Memory allocation table:

```
0K: 00000000 - 00327777 ( 54K) : EXEC
54K: 00330000 - 03363777 ( 392K) : USER
445K: 03364000 - 03777777 ( 67K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Table suboption? RESET

Explanation—LIST shows a memory table for an example installation. These messages may be slightly different due to configuration differences. Note that the example table allocates 67K words of memory to XBUF.

Response—Type RESET or RE.

Table suboption? LIST

Explanation—DEFAULT immediately resets the memory allocation table and returns to the Table suboption? prompt.

Response—It is useful to list the current memory allocation table after you use the RESET suboption. Type LIST or LI.

Memory allocation table:

```
0K: 00000000 - 00327777 ( 54K) : EXEC
54K: 00330000 - 03767777 ( 456K) : USER
510K: 03770000 - 03777777 ( 3K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Table suboption?

Explanation—Note that RESET deallocated all memory previously allocated to XBUF and returned it to USER memory. These messages may be slightly different due to configuration differences.

Response—After DEFAULT lists the memory allocation table, it returns to the Table suboption? prompt. Press **[RETURN]** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

XBUF—Allocate Memory to the Extended Buffer Pool

The XBUF suboption reserves memory for the extended buffer pool.

INIT.SYS automatically allocates memory to the extended buffer pool during system installation. INIT.SYS determines how much memory to allocate based on the amount of USER memory available on the system. USER memory is memory that is not allocated to any other entity. It contains memory that is not locked and not allocated to the monitor.

INIT.SYS determines the size and position of XBUF based on the following guidelines:

- If the amount of USER memory exceeds 128K words, then INIT.SYS allocates 15% of that memory (rounded down to the nearest whole number) to XBUF.
- If the amount of USER memory is less than 128K words, then INIT.SYS allocates 10% of that memory (rounded down to the nearest whole number) to XBUF.
- INIT.SYS first attempts to position XBUF at the highest possible memory address. If for some reason INIT.SYS cannot allocate a sufficient amount of contiguous high memory, it positions XBUF at the lowest possible address.
- The minimum amount of memory allocated to XBUF is 3K words. The maximum is 496K words.
- The legal ranges for locating XBUF are between 16K and 511K (words), 528K and 1023K, 1040K and 1535K, and 1542K and 2043K.

If you are not familiar with the use of extended buffers on RSTS/E you should read the section, Extended Buffer Pool Background Information, before proceeding.

XBUF Dialogue

Table suboption? XBUF

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? DEFAULT question.

Response—Type XBUF.

Enter new extended buffer address size (3K-496K) <8K>? 67K

Explanation—XBUF asks for the amount of memory you want to reserve for the extended buffer pool (XBUF). You do not need to specify the location of XBUF, because INIT.SYS automatically positions it according to the guidelines given at the beginning of this section.

Response—Specify the new size of XBUF, followed by K to indicate K words. In the example, the response is 67K. To release previously allocated memory for the extended buffer pool to user memory, type RESET.

Table suboption? LIST

Explanation—After DEFAULT adjusts the memory allocation table, it returns to the Table suboption? prompt.

Response—Type LIST or LI to list the memory allocation table and check that you have reserved the correct area in memory.

Memory allocation table:

```
OK: 00000000 - 00323777 ( 53K) : EXEC
53K: 00324000 - 03363777 ( 392K) : USER
445K: 03364000 - 03777777 ( 67K) : XBUF
512K: 04000000 - End           : NXM
```

Memory available to RSTS/E is 512K words.

Table suboption?

Explanation—The memory allocation table shows the size and location of the memory you have reserved for the extended buffer pool. These messages may be slightly different due to configuration differences. For example, in this table 67K words are reserved for XBUF.


Response—After DEFAULT lists the memory allocation table, it returns to the Table suboption? prompt. Press **[RETURN]** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

Extended Buffer Pool Background Information

Figure 7 shows an example RSTS/E system. It shows that memory is divided into:

- *Monitor memory (EXEC)* - an area of memory reserved for your RSTS/E monitor. Monitor memory in the example occupies 53K words.
- *User memory (USER)* - an area of memory reserved for user jobs. In the example, user memory occupies 392K words.
- *Extended buffer pool (XBUF)* - an area of user memory reserved for *extended buffers*. An extended buffer is a block of storage located in the extended buffer pool that can range in size from 32 words to the maximum size of the extended buffer pool. In the example, the size of the extended buffer pool is 67K words. The extended buffer pool occupies USER memory; thus, releasing 67K words from the extended buffer pool would increase USER memory to 459K words.

Figure 7: Extended Buffer Pool for Example RSTS/E System

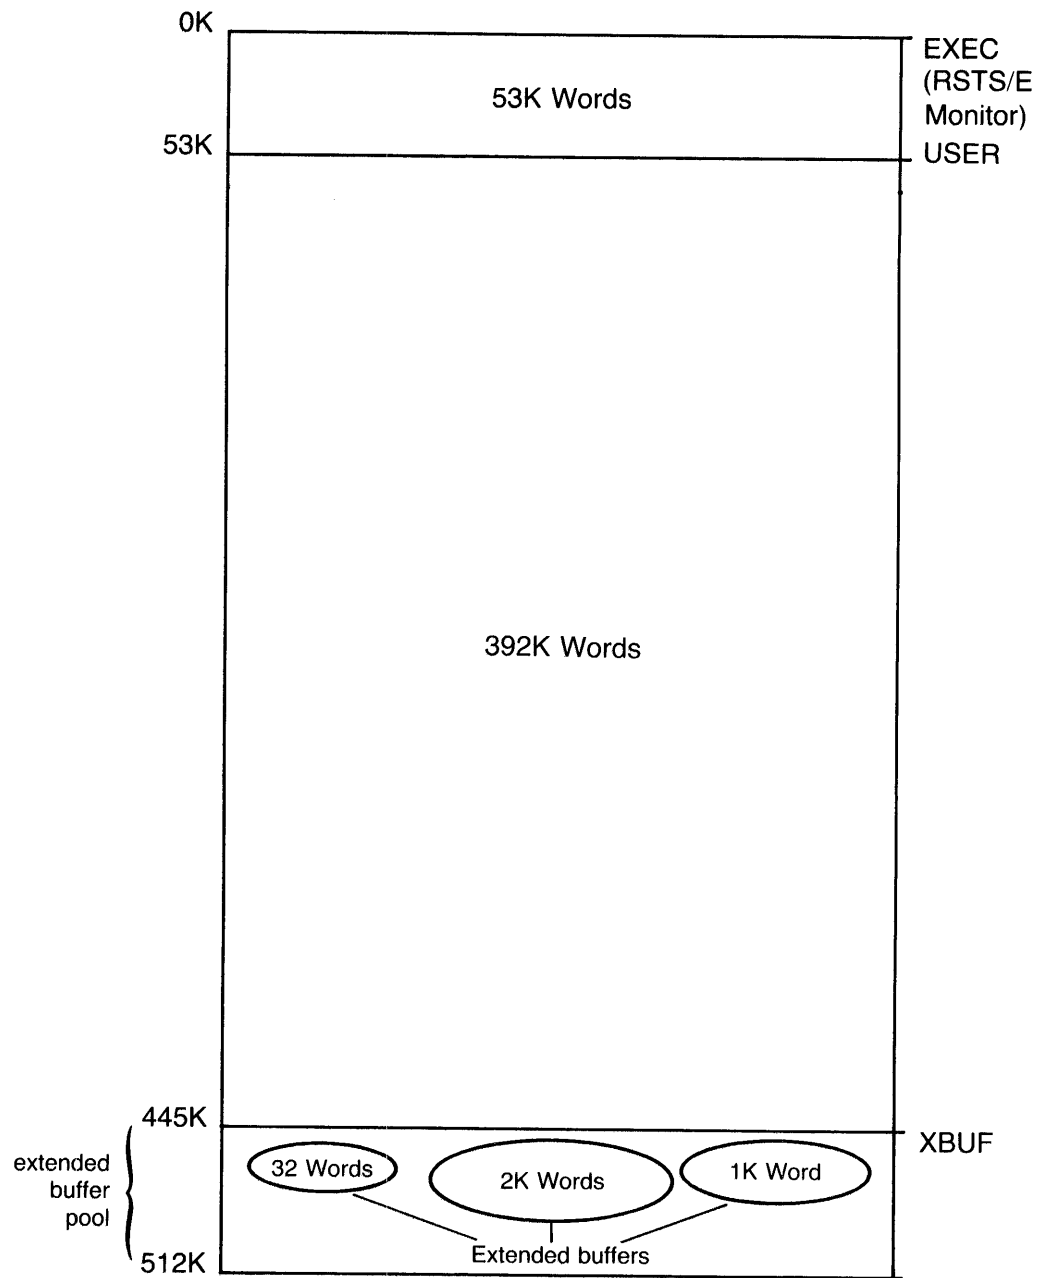

ZK-9242-HC

When the monitor needs an extended buffer to store information, it looks in the extended buffer pool. When the information stored in the extended buffer is no longer needed, the monitor returns the buffer to the extended buffer pool for reuse.

The size of the extended buffer pool depends on the type of processing and the amount of memory on your system. Allocating enough memory to the extended buffer pool increases the number of available extended buffers, which has the following advantages:

- The monitor can cache more data and/or directory information. This means the monitor stores certain data and directory-related information in the extended buffers. This reduces the number of disk accesses which results in improved system response.
- The monitor can output more line printer data reducing the stalling frequency of the line printer when printing data.
- The monitor can store some kinds of information in either extended buffers or in general small buffers (see the following BUFFERS suboption). Because the number of general small buffers is limited, the monitor uses extended buffers whenever they are available to reduce the demand for general small buffers.

The following only use XBUF:

- DECnet/E
- LAT
- LOAD/INDEX
- LOAD/OVERLAY
- Statistics
- Command/log files

Keep the following memory constraints in mind when you are deciding how much memory to allocate to the extended buffer pool:

- You should be able to fit at least two jobs at SWAP MAX (or the average job size, if known) in memory. If you cannot do this, then you may have to reduce the amount of memory you allocated to the extended buffer pool.
- During start-up, INIT.SYS uses a 12K word area of memory to complete the loading of the monitor. This 12K word area is allocated from USER (see the memory allocation table) and must be above the INIT.SYS image. If INIT.SYS cannot find an 12K word area of memory above the INIT.SYS image (72K words) and below 135K words (this value may be less depending on the size of memory on your system), it prints an error message of the following format:
Please allocate 12K words of memory for user space between xxxK and yyyK. Please note that the values for xxxK and yyyK are determined dynamically by your system. These values may differ from the values of 72K and 135K shown here.

The following sections discuss guidelines for determining the amount of user memory you should reserve for the extended buffer pool with respect to:

- Message send/receive code
- Line printers
- Data caching
- Loaded indexes

- File I/O window turns
- DCL indirect command file I/O and/or terminal logging
- System logicals
- DECnet/E software
- RJ2780 software
- 2780/3780 software
- Statistics
- Quota information
- Resident overlay code

Message Send/Receive Code

The RSTS/E monitor uses extended buffers to store messages generated by programs that use the message send/receive code. You might want to use the following as a guide in determining how many messages are generated for a typical system:

- Error logger - 2 messages
- OPSER-based spooling package:
 - OPSER—2 messages
 - QUEMAN—2 messages
 - 1 line printer spooler—2 messages
 - 1 batch spooler—2 messages
- Print/Batch services package—3 messages

Each message requires N words of extended buffers where N is the length of the message in words plus 4 words, rounded to the next multiple of 32 words. A message always uses at least 32 words of extended buffers. Each message can range from 32 to 288 words.

Line Printers

The RSTS/E monitor uses extended buffers (or general small buffers) to store characters awaiting printing on a line printer. You should allow 2.5K words of memory for the extended buffer pool for each line printer.

Data Caching

The monitor uses extended buffers to store the activities resulting from data caching. *Data caching* is a software feature that reduces the number of data transfers from disk to memory, thereby improving response times.

A general guideline is to allocate about 15% of total USER memory to the extended buffer pool to accommodate data caching. However, the monitor cannot use more than the following maximum values. If you allocate more memory than the maximum amount, it is used by LPDVR, DECnet, RJ2780, logicals, DCL command/log buffers, or others from the previous list.

Cache Cluster Size	Maximum XBUF Usage
1	130K words
2	257K words
4	496K words
8	496K words

NOTE

The monitor uses extended buffers for caching only when they are not needed for other purposes.

Loaded Indexes

During timesharing you can optionally load the System Allocation Table (SAT) for each disk (except read only) into memory. RSTS/E use extended buffers (XBUF) to store these tables.

To improve system performance, you need to allocate more XBUF to store the SATs. The amount of XBUF required for each disk SAT depends on the disk size and the disk pack cluster size. Use the following formula to calculate, in K words, the XBUF required:

$$(\text{disk size in blocks} / \text{pack cluster size}) / 16384$$

File I/O Window Turns

The monitor uses extended buffers when processing file I/O window turns. This can improve system performance, particularly on larger memory systems that allocate large amounts of XBUF and that have moderately fragmented files.

The actual amount of XBUF used at any given time is variable. You should initially allocate 2K words for storing file I/O window turns. Later, you can adjust the amount of XBUF if required. Use the SHOW CACHE command to display the largest amount of XBUF (in K words) used for file I/O window turns since the system was started. If file I/O window turns is using more than 4K words, increase XBUF.

DCL Indirect Command File I/O and Terminal Logging

The monitor uses extended buffers to store messages generated by indirect command file I/O and terminal logging. You should allow 1/4K word per simultaneous command file I/O and/or terminal logging.

System Logicals

The monitor uses extended buffers to store system logicals. You should allow 1K word per 320 logicals.

DECnet/E Software

The monitor uses extended buffers to store messages generated by DECnet/E software. See the *DECnet/E Installation Guide* for information on how much memory to reserve for the extended buffer pool.

LAT Usage

The monitor uses extended buffers to store messages generated by LAT. LAT requires 1.3K words to start. Creating the first session from a given terminal server requires 1K word. No additional extended buffers are required for additional sessions from that server.

RJ2780 Software

The monitor uses extended buffers to store messages generated by the RJ2780 software. This software requires 1K word of memory for the extended buffer pool.

2780/3780 Software

See the 2780/3780 documentation for extended buffer pool considerations.

Statistics

The monitor uses approximately 1K word per 14 disk units. If insufficient extended buffer space is available at system startup, the monitor disables statistics with no message.

Quota Information

The monitor requires 1K word of extended buffer space for every 96 different accounts for which there are open files or to which a user is logged in, on a per user basis. Note that the monitor considers a logged-in user as an open file on the system disk.

Resident Overlay Code

The monitor uses extended buffer space for resident overlay code. The amount can vary, depending on the overlay. After you load an overlay, use the SHOW CACHE command to see the extended buffer usage, and adjust XBUF accordingly.

Extended Buffer Pool Worksheet

Figure 8 summarizes the items requiring extended buffers, and the approximate amounts of memory each requires. Space is provided to enter the size needed for your system. Use this worksheet as a guide to reserving memory for the extended buffer pool. Remember, you can determine the optimal size only through experimentation. Use the SHOW CACHE command to show some of the extended buffer pool usage for your system.

Figure 8: Extended Buffer Pool Worksheet

Items Requiring Extended Buffers	Your Size
Contents of messages sent and waiting to be received*	_____
Line printer driver*	_____
Data caching	_____
DCL indirect command file I/O and terminal logging	_____
System logicals	_____
DECnet/E	_____
LAT	_____
RJ2780	_____
2780/3780 software	_____
Statistics	_____
Quota information	_____
Resident overlay code	_____
Total**	_____

*The RSTS/E monitor can also use general small buffers to store these items.

**Reduce the extended buffer pool if two jobs at SWAP MAX will not fit in the USER area of memory.

ZK-9243-HC

BUFFERS—Allocate Memory to the Small Buffer Pool

The BUFFERS suboption reserves more memory for the small buffer pool. Use the BUFFERS suboption if your RSTS/E monitor needs more small buffers to run efficiently.

Before you decide whether to change the amount of memory allocated to the small buffer pool, you should read the information in the section, Small Buffer Pool Background Information.

Consider the following when deciding when to increase the memory reserved for the small buffer pool:

- You should provide an adequate supply of small buffers for periods of heavy system use. Thus, you should assume that the system is using the maximum number of jobs, all terminals, and all printers.
- The number of small buffers a program uses depends on what it is doing. For example, a program that opens 12 files at once requires more buffers than other programs. This guide offers guidelines, which you must follow and adjust according to the needs of your installation.
- Some software features use buffers momentarily, but it is difficult to calculate how many small buffers you will need for momentary use. DIGITAL recommends that you add 100 to 150 small buffers to your final figure. Seventy-five of these buffers go towards keeping the number above 75 most of the time.

BUFFERS Dialogue

Table suboption? BUFFERS

Explanation—You see the Table suboption? prompt after you answer YES to the Any memory allocation changes? DEFAULT question.

Response—Type BUFFERS or BU.

How many K-words of extra buffer space (0K-2K) <0K>? 2K
You have 472 general + 132 FIP small buffers.
Adjusting memory table

Memory allocation table:

0K:	00000000	-	00333777	(55K)	:	EXEC
55K:	00340000	-	03363777	(390K)	:	USER
445K:	03364000	-	03777777	(67K)	:	XBUF
512K:	04000000	-	End			:	NXM

Memory available to RSTS/E is 512K words.

Table suboption?

Explanation—BUFFERS prints the range you can specify for your system. These messages may be slightly different due to configuration differences. In the example, the range is 0K words to 2K words. The default value depends on the memory size you have when you answer this question for the first time. The next time you select the BUFFERS suboption, the default value is the value you selected the last time you answered the question.

The range is larger for systems with processors that have data space. If you have data space, you can use the BUFFERS suboption to increase the memory reserved for the small buffer pool to accommodate more general and FIP small buffers. If you do not have data space, you can increase the memory reserved for the small

buffer pool to accommodate only FIP small buffers. (You must perform another system installation to add more general small buffers if you do not have data space.)

Response—Type the number of K words to reserve for the small buffer pool. DIGITAL recommends you specify the maximum. You can lower this later if you discover your system continually has over 250 free general small buffers.

After your response, BUFFERS prints the number of general and FIP small buffers that your system will have available for use during timesharing. Of the memory added, BUFFERS creates as many general small buffers as it can (if you have data space) and gives the remaining space to FIP small buffers. In the example, the response of 2K accommodates 132 FIP small buffers.

When you increase memory for the small buffer pool, the size of the monitor increases and the size of USER memory decreases. DEFAULT then lists the new memory allocation table.

The following should help you further in answering this question. Remember that in Task 6 of Phase 3 in Part 1 you answered the Small buffers? configuration question. The question printed a default response, which indicated how many general small buffers you currently had. Because the size of the RSTS/E monitor is always rounded up to a multiple of 1K word, there is usually some extra space. The RSTS/E monitor fills this extra space with FIP small buffers.

Remember also that during system installation you saw a buffer table that shows how many general and FIP small buffers you currently have. In addition, the table tells you how many you can add. Figure 9 shows a sample table. The table tells how many general and FIP small buffers you can add if you have data space and how many FIP small buffers you can add if you do not have data space. Because the PDP-11 in this example installation has data space, it can increase memory for the FIP small buffer pool to accommodate more FIP small buffers.

Figure 9: Example Small Buffer Table Printed During System Installation

Resident monitor size is 51K. By increasing this size with the DEFAULT option of INIT, you can get additional small buffers. This table shows the number and type of small buffers you can get with each size change.

Number of buffers		
K-words	General	FIP

0K	444	2
1K	472	36
2K	472	100
3K	620	18
4K	648	52
5K	648	116
6K	648	180
7K	648	244
8K	648	308
9K	648	372
10K	648	436
11K	648	494

If you choose to perform another installation, you may specify up to 572 small buffers for this system. Doing so will increase some of the buffer counts in the table.

A K word is equal to 64 small buffers; however, when you select the maximum number, the last K word generally contains fewer than the 64 maximum. When selecting the amount of extra buffer space, you should determine how many buffers the last K word contains and decide if you want to allocate 1K word of memory for the number of buffers you gain. For example, if the difference between specifying 2K or 3K words of extra buffer space gives you only 10 more small buffers, it may not be worth the cost of 1K word of physical memory.

Table suboption?

Response—After DEFAULT lists the memory allocation table, it returns to the Table suboption? prompt. Press **RETURN** to continue with the DEFAULT dialogue. Or, type one of the other DEFAULT table suboptions.

Small Buffer Pool Background Information


Figure 10 shows an example RSTS/E installation. It shows that memory is divided into:

- **Monitor memory (EXEC)** - An area of memory reserved for the RSTS/E monitor. Monitor memory in the example installation occupies 53K words. Note that the size of the monitor increases to 55K words after the example installation allocates 2K words for the FIP small buffer buffer pool. The size of your monitor may differ.
- **User memory (USER)** - An area of memory reserved for user jobs. In the example installation, USER memory occupies 392K words. Note that the size of USER memory decreases to 390K words after the example installation allocates 2K words for the FIP small buffer pool. The size of your USER memory may differ.
- **Extended buffer pool (XBUF)** - An area of memory reserved for the extended buffer pool. In the example, XBUF memory occupies 67K words. (See the previous section for a discussion of the extended buffer pool.)

Figure 10 also shows that monitor memory contains the:

- *General small buffer pool* - an area of monitor memory that contains *general small buffers*. Note that there are two types of general small buffer pools: one that is created as a result of answering the Small buffers? configuration question in Phase 3 of Part 1, and one that is created using the BUFFERS suboption. You can create this second small buffer pool only if you have a hardware feature on your CPU called *Instruction and data space*. Data space is available on the PDP-11/44, 11/45, 11/50, 11/53, 11/55, 11/70, 11/73, 11/83, or 11/84 and only if you do not use RJ2780 software.
- *FIP small buffer pool* - an area of monitor memory that contains *FIP small buffers*. There are also two types of FIP small buffer pools: one that you can create with the BUFFERS suboption alone, and the other you can create with the BUFFERS suboption and with data space. Figure 10 illustrates these two FIP small buffer pools.

Figure 10: General and FIP Small Buffer Pools

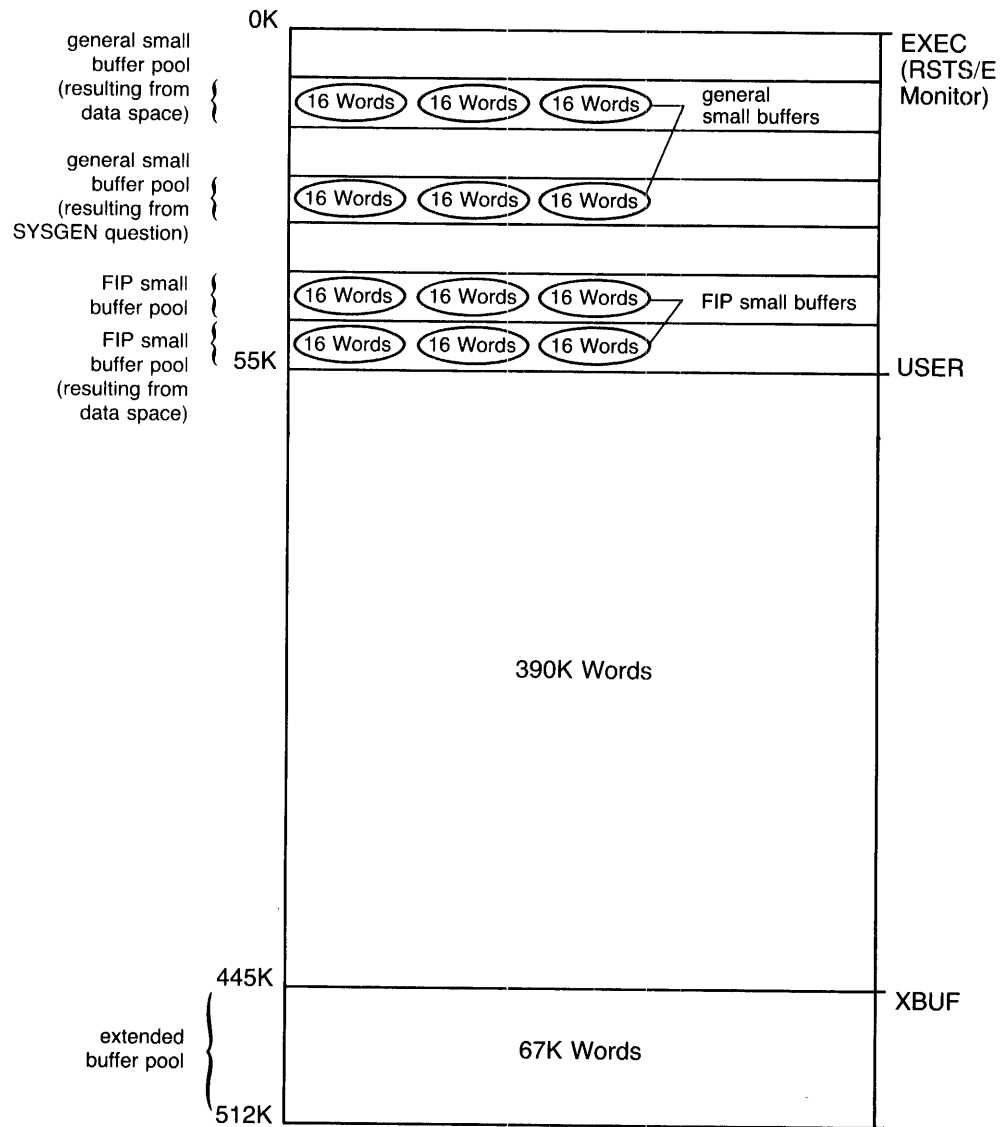

ZK-9239-HC

The RSTS/E monitor uses general small buffers as a temporary storage area for such things as:

- The input and output of characters
- Data transfers
- Send/receive messages
- File processing requests
- Information on open files and DCL file information
- CCL command definitions
- Asynchronous I/O requests
- Run-time system and library descriptions
- LAT connections
- DECnet connections

In contrast to general small buffers, FIP small buffers are used only to store open files information, CCL command definitions, resident library attachment information, and open channel status. When the monitor needs a small buffer for one of the above, it looks in the FIP small buffer pool for a FIP small buffer. This leaves the supply of general small buffers free to store other kinds of activity that the FIP small buffers cannot handle. If there are no free FIP small buffers, then the monitor uses general small buffers to store open files information, CCL command definitions, resident library attachment information, and open channel status. When the information stored by either small buffer is no longer needed, the monitor returns the small buffer to the appropriate small buffer pool for reuse.

The general small buffer supply is critical to your system's performance. The number of free general small buffers varies from second to second. When this number is less than 75, the following occurs:

- Jobs begin to stall, until some small buffers become available to process the jobs' requests. Thus, performance begins to suffer.
- The monitor discards error information destined for the error logger.
- The error message **?Logins are disabled - please try again later** appears when users try to log in. (This happens when the number of general small buffers falls below 40.)
- Batch jobs do not start. (This happens when the number of general small buffers falls below 40.)
- Programs begin to fail with the message **?No buffer space available**.
- DECnet or LAT connections are rejected.

The number of general small buffers should stay well above 75 for good system performance. Because FIP small buffers reduce the demand on general small buffers, the number of FIP small buffers may drop to zero without any loss to system performance.

The SHOW BUFFERS command gives the same display as the SYSTAT program. The *RSTS/E Utilities Reference Manual* describes SYSTAT. The /F (Free) switch of the SYSTAT program displays the number of available general small buffers and FIP small buffers as well as other system statistics.

The rest of this section discusses guidelines for determining how many small buffers you need with respect to:

- Jobs
- CCL command definitions
- Auxiliary run-time systems
- Resident libraries
- Open files and DCL file information
- Message receivers
- List of messages sent and waiting to be received
- Contents of messages sent and waiting to be received
- Terminals
- Line printers
- Paper tape readers and punches
- EMT logger
- Outstanding I/O requests
- BACKUP program
- LAT connections
- Dynamic Pseudo-Keyboards
- Margin of safety

Jobs

The monitor uses general and FIP small buffers to store information about each job. Allow two general and one FIP or general small buffers per job.

CCL Command Definitions

The monitor uses general or FIP small buffers to store CCL command definitions. Allow one general or FIP small buffer for each defined CCL command. See the *RSTS/E System Manager's Guide* for a description of CCL command definitions and the DCL DEFINE command, which you use to define CCL commands.

Auxiliary Run-Time Systems

The monitor uses general small buffers to store information about auxiliary run-time systems that you add with the DCL INSTALL command. Allow one general small buffer for each auxiliary run-time system.

Resident Libraries

The monitor uses general small buffers to store information about resident libraries. Allow one general small buffer for each resident library and each dynamic region. Allow one to four FIP small buffers for each program that uses libraries. Allow two FIP buffers for programs that use RMS libraries.

Open Files and DCL File Information

The monitor uses general or FIP small buffers to store descriptions of open files. The monitor uses FIP small buffers first, if they are available. A program can open a file on more than one I/O channel, and more than one program can open the same file at the same time.

For each program allow:

- One general or FIP small buffer for each open file, including files opened by DCL, command files, and log files.
- One general or FIP small buffer for each channel on which the file is open; however, you need two general or FIP small buffers for each channel on which the file is open if you use update mode. See the *RSTS/E Programming Manual* for a discussion of update mode.
- One FIP or general small buffer per open file on DCL's I/O channel.
- One FIP or general small buffer for each active command file or terminal command file.

List of Message Receivers

The monitor uses general small buffers to store a list of message receivers. Many system programs (including Print/Batch Services, QUEMAN, ERRCPY, and OPSER) receive messages through the send/receive system function calls. These system function (SYS) calls need one general small buffer for each message receiver.

Messages Sent and Waiting To Be Received

You need one general small buffer for each message waiting to be received including DECnet messages. This buffer does not store the contents of the message.

Contents of Error Logger Messages Sent and Waiting to be Received

The monitor stores the contents of error logger messages sent in general small buffers. The number of messages that the monitor can store in the general small buffer pool depends on the size of the messages and the speed with which the receiving job processes them.

You need N general small buffers for each message

where:

$$N = (\text{length of message in bytes} + 8) / 32$$

For example, you might figure that the average message contains 25 to 56 bytes, which occupies two general small buffers. If your system processes many messages, you can improve system performance by allocating memory to the extended buffer pool for these messages.

Terminals

The monitor uses general small buffers to store:

- Characters written by a job and awaiting display on a terminal
- Characters typed by a user and waiting to be read by a job
- Characters written by a job and awaiting printing on a hard-copy terminal

You should allow:

- Five general small buffers for each interactive terminal, several more if you use echo control and FMS
- Ten general small buffers for each hard-copy terminal

Line Printers

The RSTS/E monitor uses general small buffers (or the extended buffer pool) to store characters awaiting printing on a line printer. If you reserved memory in the extended buffer pool for line printers, you need not specify any small buffers. If you need general small buffers for this purpose, specify 20 for each line printer.

Paper Tape Reader/Punch

The monitor uses general small buffers to store characters awaiting punching or reading on a paper tape reader/punch. Allow for 10 general small buffers for the paper tape punch/reader.

EMT Logging

The monitor uses general small buffers to store messages generated by EMT logging. (You are concerned with this only if you answered YES to the EMT logging? question in Phase 3 of Part 1.) You should specify 1 general small buffer if you have EMT logging.

Outstanding Asynchronous I/O Requests

Each outstanding asynchronous I/O request needs one small buffer plus the following driver requirements:

- Asynchronous tape drivers - one general small buffer per outstanding request
- Disk drivers - at least one general small buffer per request. The number may be higher if the request is for multiple disk blocks, depending on the fragmentation of the directory structure.

Synchronous I/O requests require a varying number of buffers per request. The number varies according to the device. Allow 30 buffers for this purpose.

BACKUP Program

BACKUP makes extensive use of asynchronous I/O and therefore general small buffers. Depending on the qualifiers used and the device speed, BACKUP can use hundreds of buffers.

LAT connections

Creating the first session from a given terminal server requires 8 small buffers. Each additional session from that server requires 4 more small buffers. After creation, the session uses small buffers in the same manner as any terminal.

Dynamic Pseudo-Keyboards

Creating dynamic pseudo-keyboards requires allocating 3 small buffers. After creation, dynamic pseudo-keyboards use small buffers in the same manner way as any terminal.

Margin of Safety

After you finish calculating how many small buffers you will need, you should add 100 to 150 general small buffers to assure that the number of general small buffers remains above 75.

General and FIP Small Buffer Pool Worksheet

Figure 11 summarizes the items requiring general and/or FIP small buffers and the approximate number each requires. Space is provided to enter the number you need for your installation. Use the worksheet as a guide for calculating the number of general and FIP small buffers. You can determine the optimal number only through experimenting with your system.

NOTE

During start-up, INIT.SYS uses a 12K word area of memory to complete the loading of the monitor. This 12K word area is allocated from USER (see the memory allocation table) and must be above the INIT.SYS image. If INIT.SYS cannot find an 12K word area of memory above the INIT.SYS image (72K words) and below 135K words (this value may be less depending on the size of memory on your system), it prints an error message of the following format: **Please allocate 12K words of memory for user space between xxxK and yyyK.** Please note that the values for xxxK and yyyK are determined dynamically by your system. These values may differ from the values of 72K and 135K shown here.

Figure 11: General and FIP Small Buffer Pool Worksheet

Items Requiring General or FIP Small Buffers	Your Number
Jobs	_____
CCL commands	_____
Auxiliary run-time systems	_____
Resident libraries	_____
Open files and DCL file information	_____
List of message receivers	_____
List of messages sent by one job waiting to be received by another job	_____
Contents of messages sent and waiting to be received*	_____
Terminals	_____
Line printers*	_____
Paper tape reader/punch	_____
EMT logging	_____
Outstanding I/O requests	_____
BACKUP program	_____
LAT connections	_____
Dynamic Pseudo-Keyboards	_____
Margin of safety	_____
Total	_____

*The RSTS/E monitor can also use extended buffers to store these items.

ZK-9246-HC

DSKINT—Initialize RSTS/E Disks

The DSKINT option initializes a RSTS/E disk. DSKINT:

- Optionally formats the disk - DSKINT writes timing and sense marks on some disks and destroys any previously stored information.
- Optionally checks the disk for bad blocks - DSKINT locates bad blocks on the disk and allocates them to the *bad block file (BADB.SYS)*.
- Writes a minimum RSTS/E file structure on the disk - The minimum *RSTS/E file structure* contains a pack label and three directories:
 - The Master File Directory (MFD).
 - The Group File Directory (GFD) for group 0.
 - The User File Directory (UFD) for account [0,1].
 - Prepares the disk to accept RSTS/E system and other files.

For the DSKINT option, these responses have special meaning:

Response	Description
<input type="button" value="RET"/>	Accept the default response
?	Obtain an online explanation of the question
^	Return to the previous question
<input type="button" value="CTRL/Z"/>	Restart DSKINT dialogue
<input type="button" value="CTRL/C"/>	Abort DSKINT and return to the Option: prompt

DSKINT Dialogue

Option: DSKINT

Response—Type DSKINT to the INIT.SYS Option: prompt.

dd-mm-yy - hh:mm AM/PM

Disk?

Explanation—DSKINT prints the current date and time, and then asks for the device designator of your disk.

Response—Type the device designator of the drive on which your disk is mounted.

NOTE

If the message "Performing limited hardware scan." was printed during this boot and you try to initialize or copy to a nonexistent disk, then you will receive the following error messages:

That disk was not found during limited hardware scan.

Do you wish to perform a reboot with full hardware scan <YES>?

Response—If the user answers YES, then the distribution device will be rebooted and the "Performing limited hardware scan." message will NOT reappear.

Unit?

Explanation—DSKINT asks for the unit number of the disk drive on which your disk is mounted.

Response—Type the device unit number.

Response—If the user answers YES, then the distribution device will be rebooted and the "Performing limited hardware scan." message will NOT reappear.

This disk appears to be a RSTS/E formatted disk with the following characteristics:

Pack ID: PATTIE
Pack Cluster Size: 8
Pack is currently: Private,
 Update access date on writes.
 Level: 1.1

Pack ID?

Explanation—After you type the unit number, DSKINT prints the disk's pack label information, if the disk has been initialized before. If the disk has not been initialized before, DSKINT does not print this identifying information. The pack label information lists:

- Pack ID
- Pack cluster size
- Pack status (public or private)
- Whether files are catalogued with the date they were last modified (written to) or accessed (read, opened, closed, and so forth)
- New files first information
- Whether the disk is read-only
- Format level

This private disk could be a system disk; DSKINT cannot determine whether a private disk is also a system disk. In the example, the pack ID is PATTIE, the pack cluster size is 8, the pack status is private, the files are catalogued with the date they were last written to, and the format level is RDS1.1.

This information lets you decide whether to initialize the disk. When you initialize a disk, you destroy any information stored on it.

After printing the pack label information, DSKINT asks for a pack ID. The pack ID is a system-wide logical name. You must specify this pack ID when you logically mount the disk.

Response—Type a pack ID. The pack ID can be any combination of alphanumeric characters up to 6 characters long.

Pack cluster size <4>?

Explanation—A cluster is a fixed number of 512-byte blocks of storage area allocated contiguously on a disk. The pack cluster size is the minimum number of blocks that your RSTS/E monitor can allocate to a file on the disk.

Your answer to this question depends on the type of processing and the disk requirements of your system. The pack cluster size affects disk space and speed of file creation and access. A large pack cluster size improves access time to

programs and user files because the monitor allocates space for data in cluster units. For example, if the pack cluster size is 16, the monitor allocates 16 blocks at a time. However, if the pack cluster size is two, the monitor allocates only two blocks at a time. Thus, more disk accesses are needed to allocate the same amount of space.

On the other hand, a large pack cluster size may waste disk space. For example, if you assign a pack cluster size of 16, the monitor allocates one cluster of 16 contiguous blocks (8,192 bytes) to a file that contains only one block (512 bytes) of information. Fifteen blocks (7,680 bytes) are wasted. Likewise, the monitor allocates one cluster of 16 contiguous blocks to a 15-block (7,680 bytes) file. In this case, only one block (512 bytes) is wasted.

Response—Type one of the disk pack cluster sizes shown in Table 17. Or, press **RETURN** to accept the default value (4, in this example).

Table 17: Disk Pack Cluster Sizes

Disk Type	Pack Cluster Size
RA60	8, 16, 32, 64
RA80	4, 8, 16, 32, 64
RA81	16, 32, 64
RA82	32, 64
RC25	1, 2, 4, 8, 16, 32, 64
RD31	2, 4, 8, 16, 32, 64
RD32	2, 4, 8, 16, 32, 64
RD51	1, 2, 4, 8, 16, 32, 64
RD52	1, 2, 4, 8, 16, 32, 64
RD53	4, 8, 16, 32, 64
RD54	8, 16, 32, 64
RK05 ¹	1, 2, 4, 8, 16, 32, 64
RK05F ¹	1, 2, 4, 8, 16, 32, 64
RK06	1, 2, 4, 8, 16, 32, 64
RK07	1, 2, 4, 8, 16, 32, 64
RL01 ¹	1, 2, 4, 8, 16, 32, 64
RL02	1, 2, 4, 8, 16, 32, 64
RM02	4, 8, 16, 32, 64
RM03	4, 8, 16, 32, 64
RM05	8, 16, 32, 64
RM80	4, 8, 16, 32, 64
RP04	4, 8, 16, 32, 64
RP05	4, 8, 16, 32, 64
RP06	8, 16, 32, 64
RX33 ¹	1, 2, 4, 8, 16, 32, 64
RX50 ¹	1, 2, 4, 8, 16, 32, 64

¹ — You cannot use these disks as system disks.

MFD cluster size <16>?

Explanation—The master file directory (MFD) stores information about all groups on a disk. The monitor accesses the MFD each time you add accounts and rarely when you add or delete files from the disk.

This question asks for the MFD cluster size, which is the maximum number of 512-byte blocks that each cluster allocated to the MFD can contain. The MFD can have a maximum of seven clusters (if you answer YES to the Pre-extend directories? question later), and each directory is the size that you specify here.

The MFD cluster size must be greater than or equal to the pack cluster size unless the pack cluster size is 32 or 64. If the pack cluster size is 32 or 64, then the MFD cluster size must be 16. Legal values for the MFD cluster size are 4, 8, or 16.

Response—Press to accept the default response, (16, in this example). Or, specify the value 4, 8, or 16.

SATT.SYS base <13543>?

Explanation—The *SATT.SYS* file controls the use of storage space on a disk through a storage allocation table (SAT). The monitor accesses this file each time you extend or delete files. This question asks where you want to position this file on the disk. It is advantageous to position the SATT.SYS file near the center of the disk to reduce average seek times for the disk heads. On the other hand, if you use only the first half of a disk or need to create large contiguous files or use LOAD/INDEX, you may want to locate SATT.SYS in a place other than the center. This reduces fragmentation of the disk.

The number that appears within brackets is the center of the disk as calculated by DSKINT (13543, in this example). The device cluster number can range from 1 to the total device size divided by the device cluster size. See Table 18 for a list of device cluster sizes and total device sizes.

Response—Press to have DSKINT position the file near the center of the disk.

Or, type the device cluster number where you want the file placed.

Table 18: Device Cluster Sizes and Total Device Sizes

Disk Type	Device Cluster Size	Total Available Blocks ²
RA60	8	400168
RA80	4	237208
RA81	16	891056
RA82	32	1216640
RC25	1	50901 per unit; 2 units per spindle
RD31	2	41559
RD32	2	83204
RD51	1	21599
RD52	1	60479
RD53	4	138668
RD54	8	311200
RK05 ¹	1	4800
RK05F ¹	1	4800 per unit; 2 units per drive
RK06	1	27104
RK07	1	53768
RL01 ¹	1	10220
RL02	1	20460
RM02	4	131648
RM03	4	131648
RM05	8	500352
RM80	4	242572
RP04	4	171796
RP05	4	171796
RP06	8	340664
RX33 ¹	1	2400
RX50 ¹	1	800

¹You cannot use these disks as system disks.

²Total available blocks represent the number of blocks when the disk is initialized at the device cluster size. The number of blocks on the RA/RC/RD class disks is subject to change with new revisions of these disks.

Pre-extend directories <NO>?

Explanation—This question asks if you want DSKINT to automatically allocate a maximum of seven clusters to the system account [0,1], the LB: library account [1,1], the system library account [1,2], and the MFD and GFDs for groups 0 and 1. The number of blocks each of these seven clusters contains depends on how you answered the cluster size questions for each of these accounts. For example, if you specify 16 as the cluster size for account [1,2] and answer YES to this question, DSKINT allocates the maximum of seven clusters to this account. Each cluster is 8,192 bytes (16 times 512 bytes).

Response—Type YES to have DSKINT automatically allocate a maximum of seven adjacent clusters to these accounts. Or, type NO or press **[RETURN]** if you want DSKINT to allocate only the minimum of 0 or 1 clusters.

PUB, PRI, or SYS <PRI>?

Explanation—This question asks you to designate the disk you are initializing as either public, private, or system. The system disk is the disk on which the RSTS/E monitor resides. It always contains account [1,2].

Response—Type PUB, PRI, or SYS.

Create [1,1] account <NO>?

Explanation—This question appears only if you type PUB or PRI to the previous question. It asks if you want to create account [1,1]. DSKINT automatically creates account [1,1] if you typed SYS to the previous question.

Response—Type YES to create this account. DSKINT then prints the next question.

Or, type NO or press **RETURN** if you do not want to create account [1,1] at this time. DSKINT then skips the next question. You can also use the CREATE/ACCOUNT command to create, pre-extend, and position account [1,1] on line during timesharing.

[1,1] cluster size <16>?

Explanation—This question asks for the cluster size of the User File Directory (UFD) for account [1,1]. The UFD is an area on the disk that stores information about the files created under a particular user account number. The cluster size for account [1,1] is the maximum number of 512-byte blocks that each cluster allocated to this account can contain.

Response—Press **RETURN** to accept the default response of 16.

Or, type the cluster size for account [1,1]: 1,2,4,8, or 16. It must be greater than or equal to the pack cluster size unless the pack cluster size is 32 or 64. If the pack cluster size is 32 or 64, then the UFD cluster size must be 16.

DIGITAL recommends a cluster size of 16 to improve disk access time.

Create [1,2] account <NO>?

Explanation—This question appears only if you type PUB or PRI to the PUB, PRI, or SYS? question. It asks if you want to create account [1,2]. DSKINT automatically creates account [1,2] if you typed SYS to the PUB, PRI, or SYS? question.

Response—Type YES to create this account. DSKINT then prints the next question. Or, type NO or press **RETURN** if you do not want to create account [1,2] at this time. DSKINT then skips the next question. You can also use the CREATE/ACCOUNT command to create, pre-extend, and position account [1,2] on line during timesharing.

[1,2] cluster size <16>?

Explanation—This question asks for the cluster size of the UFD for account [1,2]. The cluster size for account [1,2] is the maximum number of 512-byte blocks that each cluster allocated to this account can contain.

Response—Type the cluster size for account [1,2]: 1,2,4,8, or 16. It must be greater than or equal to the pack cluster size unless the pack cluster size is 32 or 64. If the pack cluster size is 32 or 64, then the UFD cluster size must be 16.

Press **RETURN** to accept the default response of 16 if the pack cluster size equals 32 or 64. DIGITAL recommends a cluster size of 16 to improve disk access time.

[1,1] and [1,2] account base <13541>?

Explanation—This question asks whether you want to place accounts [1,1] and [1,2] near the center of the disk or in some other place. The number that appears within brackets is the position of SATT.SYS, that is, the number you specified to the SATT.SYS base? question, or the middle of the disk as calculated by DSKINT if you specified **RETURN** to that question (13541, in the example). DSKINT may show a different number for your disk.

Response—Press **RETURN** to place these accounts near the center of the disk.

Or, type the device cluster number where you want these files placed. The device cluster number can range from 1 to the total device size divided by the device cluster size. See Table 18 for a list of device cluster sizes and total device sizes.

Date last modified <YES>?

Explanation—This question asks whether you want to retain the date on which files were last modified (written to) or last accessed (written to, opened, read from, closed, and so forth).

Response—Type YES or press **RETURN** to retain the date on which files were last modified. This response is useful if you plan to use the BACKUP system program to back up files that have changed since the last backup. This response also decreases disk activity because the RSTS/E monitor updates the date only if the files are written to.

Or, type NO to retain the date on which files were last accessed. This response is useful for reordering the files, so the most frequently accessed files can be placed at the beginning of the directory. This response increases disk activity because the RSTS/E monitor updates the date no matter how the file is accessed for reads or writes.

New files first <NO>?

Explanation—This question asks if you want newly created files placed at the beginning or end of the directory of the account in which they are created.

Response—DIGITAL recommends that you type NO or press **RETURN** to place newly created files at the end of the directory, giving you overall faster access time.

Or, type YES to place newly created files at the beginning of the directory. This response is useful when you have a private disk on which the files you most frequently access are new files.

Read-only <NO>?

Explanation—This question asks if you want this disk to be by default a read-only or a read/write device when it is logically mounted. You can write to a read-only disk when you logically mount it with the /WRITE qualifier.

Response—Press **RETURN** to make the disk read/write.

Use previous bad block info <YES>?

Explanation—This question does not appear if you are initializing a new disk. The question asks if you want DSKINT to create a new bad block file (BADB.SYS) in system account [0,1] by using information from the existing bad block file. DSKINT checks each block on the disk (if you answer 1, 2, or 3 to the Patterns? question that comes later). If DSKINT finds unreliable blocks, it allocates the pack cluster in which the block resides to the BADB.SYS file.

Response—DIGITAL recommends that you type YES or press **[RETURN]** to create the new bad block file, using information from the existing bad block file.

Or, type NO to have DSKINT ignore the current bad block file when creating the new one. For example, you may want to answer NO if you are reinitializing a disk to decrease the pack cluster size. In this case, you will also obtain new bad block information using 3 patterns as explained in the Patterns? question later.

Format <NO>?

Explanation—This question asks if you need to format your disk. Formatting a disk means that DSKINT writes timing and sense marks onto the disk and destroys any information that previously existed on the disk. You must format the following disks if you are initializing them for the first time: RK05, RK05F, RP04, RP05, RP06, RX33.

You can optionally reformat these disks: RK06, RK07, RM02, RM03, RM05.

You cannot format or reformat (in which case this question would not appear) these disks: RL01, RL02, RA60, RA80, RA81, RA82, RC25, RCF25, RM80, RD31, RD32, RD51, RD52, RD53, RD54, and RX50.

NOTE

Except for an RX33, when you are formatting a disk, DIGITAL recommends that you mount the disk on the drive and leave it spinning for at least 20-30 minutes before initializing it. This ensures that the disk temperature is stable and uniform during the formatting. Failure to do this may cause unreliable data storage on the disk.

Response—Type YES to format the disk. Or, type NO or press **[RETURN]** if you do not need to format the disk.

Patterns <3>?

Explanation—This question asks for the number of patterns DSKINT should use in checking for bad blocks. DSKINT writes a pattern to the disk, and then reads it to check that the data was written correctly. The time DSKINT takes to run these pattern checks for bad blocks depends on the disk you are initializing. Type a ? to have DSKINT print the time (in minutes) required for the different disks to complete one format check for bad blocks.

Response—Type the number of patterns, from 0 to 3. DIGITAL recommends you run 3 to fully check for all bad blocks. Three patterns offer the greatest probability of finding all bad blocks on the disk. Any bad blocks discovered during pattern checking are added to the bad block file (BADB.SYS) so that data will not be written to these blocks. If you specify 0, DSKINT then asks the next question.

Erase disk <YES>?

Explanation—This question, which appears only if you answered 0 to the Patterns? question, asks if you want to erase the disk. If you answer YES, DSKINT wipes out all data on the disk: this is usually done for security purposes.

If you answer NO, DSKINT writes only the basic RSTS/E file structure on the disk. Use the NO response under the following conditions:

- You are initializing a disk that has been initialized before.
- You answered YES to the Use previous bad block info? question.

- You are confident no additional bad blocks are on the disk.
- You are not concerned about the security of old data that could still be accessed.

Response—Type YES or press **RETURN** to erase the disk. Or, type NO to write only the basic RSTS/E file structure on the disk.

Proceed (Y or N)?

Explanation—This question allows you to check your responses to the dialogue questions and abort the initialization if you have made any errors.

Response—Type Y to proceed with the disk initialization.

Or, type N to abort the initialization and return to the Option: prompt.

Option:

Explanation—INIT.SYS completes the disk initialization. Then it prints the Option: prompt.

DSKINT Error Messages

A list of the DSKINT error messages follows. If your error message does not appear, see Appendix A.

BLOCK NUMBER TOO BIG

Explanation: The block number you typed is greater than or equal to the maximum logical block number for the disk.

?DRIVE NOT READY:

Explanation: The initialization cannot proceed because the disk to be initialized is not on line and ready.

User Action: You can make the drive ready and press **RETURN** to proceed, or you can press CTRL/C to abort the initialization.

?DSKINT NOT LEGAL ON SYSTEM DISK

Explanation: You specified the disk from which the initialization code was bootstrapped. You cannot initialize this disk now because the initialization code would be destroyed.

FORMATTING FAILURE:

Explanation: The disk could not be formatted.

User Action: Mount the disk on the drive and leave it spinning for 20-30 minutes before formatting the disk. If you still receive the same error message after one retry, then use a new disk.

?ILLEGAL DISK NAME

Explanation: The string you typed is not the name of a valid RSTS/E disk device.

User Action: Enter a valid name.

?ILLEGAL NUMBER OF PATTERNS

Explanation: The number of patterns must be 0 through 3.

?ILLEGAL NUMBER, TRY AGAIN

Explanation: The number you typed is not a valid octal number between 1 and 177777.

?ILLEGAL PACK ID

Explanation: The pack ID must consist only of characters from "A" to "Z" or "0" through "9."

?SORRY, BUT THAT DISK DOESN'T EXIST

Explanation: The string you typed is a valid RSTS/E disk name, but that disk controller or the unit number does not exist on this system.

THAT DISK WAS NOT FOUND DURING LIMITED HARDWARE SCAN

Explanation: You tried to initialize or copy to a nonexistent DU type disk.

User Action: If you answer YES to the "Do you wish to perform a reboot with full hardware scan ?", then the distribution device will be rebooted and the "Performing limited hardware scan." message will NOT reappear.

?UNABLE TO READ BAD BLOCK TRACK DATA

Explanation: The manufacturer's bad block information could not be read.

User Action: Either run 3 patterns on the pack or try a different pack.

HARDWR—Adjust the Hardware Configuration

The HARDWR option performs tasks related to the hardware your RSTS/E monitor supports. The following sections describe the HARDWR suboptions. These suboptions affect your system disk, not your installed monitor. Thus, if you add or remove nonstandard hardware, you may need to use these suboptions again. However, if you only install a different monitor, you do not need to use these suboptions again. You must repeat the HARDWR option each time you install a new version of RSTS.

The HARDWR suboptions are:

- HARDWR LIST - List the Hardware Configuration Table
- HARDWR ECO - Show Revision Level of Controllers for which the Information is Available
- HARDWR DISABLE - Disable a Device Controller
- HARDWR ENABLE - Enable a Device Controller
- HARDWR CSR - Declare a Nonstandard Controller Address
- HARDWR VECTOR - Declare a Nonstandard Vector Assignment for a Card Reader
- HARDWR RESET - Set All Controller Addresses and Vector Assignments to the Standard, and Enable All Devices
- HARDWR DM - Declare DM11-BB and DH11 Associations
- HARDWR HERTZ - Specify AC Line Frequency
- HARDWR SWITCH - Specify CPU Switch Register Characteristics

HARDWR LIST—List the Hardware Configuration Table

The LIST suboption lists the *hardware configuration table*. This table shows the current hardware configuration and allows you to verify any changes you have made.

Use the LIST suboption if:

- You want to list the current hardware configuration table.
- You need to list the table to see what changes you have made to your hardware configuration.

LIST Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? LIST

Response—Type LIST or LI to list the hardware configuration table.

Name	Address	Vector	Comments
TT0:	177560	060	
RK:	177400	220	Units: 0 (RK05) 1 (RK05)
RL:	174400	160	Units: 0 (RL02)
RM:	177440	210	Units: 2 (RK07)
RR:	176700	254	Units: 0 (RM02 DP)
RU0:	172150	P340	UDA50 Units: 2 (RA80)
TU0:	172440	224	Units: 0 (TU16 @TM02 #0)
LP0:	177514	200	
DE0:	175610	300	
DE1:	175620	510	
KG0:	170700		
DM0:	170500	320	DH0
DH0:	160020	310	
D10:	160070	330	
XM0:	160120	340	Type: DMC, Local
XM1:	160130	350	Type: DMC, Local
XM2:	160140	360	Type: DMC, Remote
XM3:	160150	370	Type: DMC, Remote
XM4:	160160	400	Type: DMR, Remote DMC Mode integral modem
DZ0:	160200	420	Sub-lines: 8
DZ1:	160130	330	
XK0:	160220	420	
XD0:	160400	430	Type: DMP, Low speed, Programmable mode, Boot enable
XE0:	174510	120	DEUNA Address: 08-00-2B-01-0B-7F
KW11L	177546	100	
SR	177570		
DR	177570		

Hertz = 60.

Other: FPU, CIS, 22-Bit, Data space, Cache

HARDWR suboption?

Explanation—In this example, taken from a PDP-11/44, LIST prints the hardware configuration. (Note that LIST prints only a partial list of the hardware configuration table if you have not installed a monitor.)

If you have changed any of the configured hardware, LIST prints the number of changes that HARDWR will make when you exit from the option. When you exit from the HARDWR suboption? prompt, INIT.SYS scans the entire hardware configuration and reboots the disk. Because there are no changes pending in the example, LIST does not print anything.

The hardware configuration table contains one line for each device controller that exists on the system. The table also contains an additional line, printed in parentheses, for each controller that has changes pending. This line appears whether or not the controller has a listing line. Thus, if you declare a nonstandard characteristic for a controller that does not yet exist on the system, HARDWR prints a parenthetical change line noting the change. In addition, the table contains a line for controllers that are currently disabled or nonexistent.

Each line has four columns:

Name	The name and number of the device controller
Address	The address of the controller's CSR set
Vector	The controller's vector address. If the device has two vectors, HARDWR prints the lower address; an asterisk (*) precedes a nonstandard CSR or vector address. An uppercase "P" precedes a programmable vector, which indicates that the initialization code assigned the vector address.
Comments	Information about the controller or devices on that controller. Table 19 summarizes the comments that may be in the listing for each controller.

In a parenthetical change line, the Address column contains either a nonstandard address or the word **SYSTEM**. **SYSTEM** means that **INIT.SYS** will find the CSR set according to the standard fixed and floating address rules when it bootstraps the system disk. (See Appendix B for a discussion of fixed and floating address rules.) The Vector column in a change line is blank or contains the nonstandard vector address that you specified.

Following the hardware configuration table, **LIST** prints several lines of information. The information reported depends on what hardware your system supports. Table 20 summarizes what you might see on your hardware configuration table.

Response—Type **EXIT** or press **[RETURN]** to return to the Option: prompt.

Table 19: Hardware Comments Table

Device	Comment and Meaning
ALL	Disabled Device is (or will be) disabled.
ALL	Not found Device was not found.
RK	units:m(RK05,RKO5F) . . . t(RKO5,RKO5F) m through t are unit numbers of drives that exist on the controller (8 are possible). The disk type appears in parentheses after each unit number.
RL	units: m(RL01,RL02) . . . p(RL01,RL02) m through p are unit numbers of drives that exist on the controller (4 are possible). The disk type appears in parentheses after each unit number.
RM	units: m(RK06,RK07) . . . t(RK06,RK07) m through t are unit numbers of drives that exist on the controller (8 are possible). The disk type appears in parentheses after each unit number.
RB,RR	BAE=+xxx BAE indicates that the device controller supports 22-bit addressing and has a Bus Address Extension register at the specified offset from its CSR base. units: m(RM02, RM03, RM05, RM80, RP04, RP05, RP06) . . . t(RM02, RM03, RM05, RM80, RP04, RP05, RP06) m through t are unit numbers of drives that exist on the controller (8 are possible). The disk type appears in parentheses after each unit number. Following the disk type is DP, if that unit is a dual-ported disk.

Table 19 (Cont.): Hardware Comments Table

Device	Comment and Meaning
RU	<p>UDA50A units: m(RA60, RA80, RA81, RA82) . . . t(RA60, RA80, RA81, RA82)</p> <p>RC25 units: m(RCF25,RC25) . . . t(RCF25, RC25)</p> <p>RQDX units: m(RD31, RD32, RD51, RD52, RD53, RD54, RX33, RX50) . . . t(RD31, RD32, RD51, RD52, RD53, RD54, RX33, RX50)</p> <p>m through t are unit numbers of drives that exist on the controller (4 are possible). The disk type appears in parentheses after each unit number.</p>
MU	<p>TK50 unit: m(TK50)</p> <p>TU81 unit: n(TU81)</p> <p>m through n are unit numbers of drives that exist on the controller. The disk type appears in parentheses after each unit number.</p>
TS	<p>units: m(TS11,TK25,TS05,TU80) . . .</p> <p>m is the unit number of the drive that exists on the controller. The tape type appears in parenthesis after the drive type.</p>
TU	<p>BAE=+xxx</p> <p>BAE indicates that the device controller supports 22-bit addressing and has a Bus Address Extension register at the specified offset from its CSR base.</p> <p>units: m(TU16@TM02#X) . . . t(TU16@TM02#X)</p> <p>m through t are unit numbers of drives that exist on the controller (8 are possible). The tape type, formatter type, and the formatter number appear in parentheses after each unit number. The TU16, TE16, TU45, and TU77 represent the valid device types for the TU controller and the TM02 and TM03 are the valid formatter types. The formatter number (#X) can be any number from 0 to 7.</p>
DM	<p>DHn</p> <p>DH11 controller number n is logically associated with this DM11-BB unit.</p> <p>No DH11</p> <p>No DH11 controller is logically associated with this DM11-BB unit.</p>
DZ	<p>sublines:(4, 8)?</p> <p>This DZ type device has either 4 or 8 terminal ports.</p>
VH	<p>sublines: (8, 16)</p> <p>This DHV/DHU type device has either 8 or 16 terminal ports.</p>
XD	<p>Type: DMP or DMV, Low or High Speed, Programmable Mode or Remote Channel, FDX or HDX, Tributary or Controller, Boot Enable or Load Enable.</p> <p>You will either see DMP or DMV listed for the first entry because the DMP11 devices are UNIBUS devices while the DMV11 devices are QBUS devices.</p>
XE	<p>DEUNA Address: AA-00-03-01-0B-7F</p> <p>The XEn device will be reported as a DEUNA or as a DELUA device depending on which device exists on your controller. These devices will only exist on UNIBUS machines. The address is the "Ethernet Hardware Address" which is the 48-bit address built into the controller. This address ensures that the device will always have a unique address on any Ethernet it inhabits. For further information, see the RSTS/E Programming Manual or the DECnet documentation.</p>

Table 19 (Cont.): Hardware Comments Table

Device	Comment and Meaning
XH	<p>DEQNA Address: AA-00-3-AA-0C-4D</p> <p>The XHn device will be reported as a DEQNA or as a DELQA device depending on which device exists on your controller. These devices will only exist on a QBUS machine. The address is the "Ethernet Hardware Address" which is the 48-bit address built into the controller. This address ensures that the device will always have a unique address on any Ethernet it inhabits. For further information, see the RSTS/E Programming Manual or the DECnet documentation.</p>
XM	<p>Type: DMC or DMR</p> <p>A DMC device has the following options: Remote, Local Micro, Remote Line, or Remote Micro, Local Line.</p> <p>A DMR device is a more versatile device than the DMC. It has the following additional options:</p> <ul style="list-style-type: none"> • DMR mode, 1 megabaud, less than 1 megabaud, Local DMC mode, or Remote DMC mode. • Integral Modem - the DMR uses coax. • RS232/423 Interface, RS422 Interface, unknown Interface, or CCITT V.35.
RX	units: n(RX01,RX02)

Table 20: Summary Hardware Configuration Table

Mnemonic	Line and Meaning
KW11-L	<p>177546 100</p> <p>Reports the address and vector of the KW11-L line clock if the clock exists on the system.</p>
KW11-P	<p>172540 104</p> <p>If the system has a KW11-P clock, reports its address and vector.</p>
SR	<p>177570</p> <p>VOLATILE</p> <p>DISABLED</p> <p>If the CPU has a switch register, reports its address. If you have used the SWITCH suboption to specify that the switch register is VOLATILE or DISABLED, it reports that choice.</p>
SR	<p>VOLATILE</p> <p>DISABLED</p> <p>The CPU does not have a switch register, but you have used the SWITCH suboption to ENABLE or DISABLE it.</p>
(SR	<p>DISABLED)</p> <p>ENABLED</p> <p>VOLATILE</p> <p>There is a pending change from the SWITCH suboption.</p>
DR	<p>177570</p> <p>If the CPU has a display register, its address is reported.</p>
HERTZ 50	The system's AC line frequency is always reported.
60	
(HERTZ = 50)	There is a pending change to the system's AC line frequency.
60	
CIS	The CPU has the Commercial Instruction Set (CIS) option.

Table 20 (Cont.): Summary Hardware Configuration Table

Mnemonic	Line and Meaning
FPU with FPA	The CPU has the Floating Point Processor (FPP) option. FPA indicates that the CPU also includes the Floating Point Accelerator. You only see the with FPA on J11 or F11 CPUs.
FIS	The CPU has the Floating Instruction Set (FIS) option (PDP-11/35 and 11/40 only).
SL	The CPU has a stack limit register.
MED	The CPU has the Maintenance Examine/Deposit instruction (PDP-11/60 only).
CACHE	The CPU has main memory cache.
CACHE W/ADDRESS	The CPU retains address information on a memory fault.
22-BIT	The CPU supports more than 124KW of memory.
SYSTEM ID = nnnnn	The contents of the CPU identification register are reported, if the register exists.
F11 CPU	The processor type is F11 (PDP-11/23 or 11/24).
J11 CPU	The processor type is J11 (PDP-11/53, 11/73, 11/83, or 11/84).
11/44 CPU	The processor type is a PDP-11/44.
DATA SPACE	The CPU has Instruction and Data Space.

HARDWR ECO—Show revision level of MSCP and TMSCP controllers

The ECO suboption lists the hardware and software (microcode) revision levels for all controllers on your system for which this information is available. This is used by Field Service to ensure that your controllers are at current revision level.

ECO Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? ECO

Response—Type ECO to list MSCP/TMSCP revision levels.

Name	Address	SW Rev	HW Rev
RU0:	172520	3	None
MU0:	160334	4	2

HARDWR suboption?

NOTE

This is just an example. These numbers do NOT represent the actual revisions for any current hardware.

Explanation—The first column of this list contains the controller name; MSCP disks are shown as "RU" and TMSCP tapes are shown as "MU." The second column shows the CSR address for this controller. The third column shows the software (microcode) revision level of this controller, and the fourth column shows the hardware revision level of this controller.

On some controllers, the hardware or software revision levels (or perhaps both) are not program-readable. In this case, the word "None" appears in the appropriate place.

If, during system autosizing, it was discovered that a controller is so far out of revision so as to be unusable by RSTS/E, then the phrase "Not supported" will appear under the "SW Rev" and "HW Rev" columns.

If there are no MSCP or TMSCP controllers on the system, a message stating so will be printed instead of the table above.

Response—Type EXIT or press `[RETURN]` to return to the Option: prompt.

HARDWR DISABLE—Disable a Device Controller

The DISABLE suboption disables a device controller; that is, makes it unavailable for use. For example, the RM controller controls all RK06 and all RK07 disk drives. If you disable the RM controller, you disable all RK06 and RK07 disk drives.

Use the DISABLE suboption if:

- You need to disable a controller that needs repairs.
- You need to disable an erroneously detected controller. For example, you may have installed a TS11 magnetic tape drive at a nonstandard CSR address of 177170. However, INIT.SYS expects to find the RX01/RX02 flexible diskette controller at this address. If you do not use the CSR suboption to declare the TS11 as having a nonstandard CSR, then you must disable the device by disabling the RX (really TS11) controller.

In some cases, INIT.SYS interprets a nonstandard device (a device not supported by RSTS) as a normal PDP-11 device. This means INIT.SYS enables the nonexistent PDP-11 device.

- Your configuration contains too many devices to start timesharing. RSTS/E includes many features which are based on the presence of hardware. If too much hardware is present, you may exceed your memory limits or RSTS/E software limits.

DISABLE Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the the INIT.SYS Option: prompt.

HARDWR suboption? DISABLE

Response—Type DISABLE or DI to disable a controller.

Controller to disable?

Explanation—DISABLE asks for the name of the controller to disable. Before you do that, however, it may be useful to list the valid controller names.

Response—Type a ? to list the valid controller names.

Name	Max no	Description
TT	1	Console terminal
RK	1	RK05/RK05F disk
RL	1	RL01/RL02 disk
RM	1	RK06/RK07 disk
RB	1	RP04/RP05/RP06 disk
RR	1	RM02/RM03/RM05/RM80 disk
RU	4	MSCP class disks
TC	1	TC11 DECTape
TS	4	TS11/TSV05/TK25/TU80 magtape
TM	1	TU10/TE10/TS03 magtape
MU	4	TMSCP class tapes: TK50/TU81 cartridge magtape
TU	1	TU16/TE16/TU45/TU77 magtape
PR	1	Paper tape reader
PP	1	Paper tape punch
LP	8	Line printer
RX	4	RX11 flexible diskette
CR	1	CR11/CM11 card reader
CD	1	CD11 card reader
KL	16	KL11/DL11A/DL11B single-line interface
DL	31	DL11C/DL11D single-line interface
DE	31	DL11E single-line interface
DP	2	DP11 synchronous line interface
DC	2	DC11 single-line interface
KG	8	KG11 CRC arithmetic unit
DM	16	DM11-BB modem control for DH11
DH	16	DH11 16 line multiplexer
DU	16	DU11 single-line synchronous interface
D1	16	DUP11 single-line synchronous interface
XM	16	DMC11/DMR11 interprocessor link
DZ	16	DZ11/DZV11 8 line multiplexer
XK	16	KMC-11 microprocessor
XD	16	DMP11/DMV11 interprocessor link
XN	16	DN11 automatic calling unit interface
XE	4	DEUNA/DELUA Ethernet controller
VH	16	DHV11/DHU11 8/16 line multiplexer
XH	4	DEQNA/DELQA/DESQA Ethernet controller
BS	4	DT07 Bus Switch

Controller to disable?

Explanation—The first column of this list contains the name of the controller. The second column shows the maximum number of each type of controller that a RSTS/E monitor can support. The third column describes the devices controlled by the controller.

After DISABLE prints the list of valid controllers, it asks for the name of the controller to disable.

Response—Type the two-character name and unit number of the controller you need to disable. Controllers are numbered from 0 to the maximum number possible, minus 1. You can omit the controller number only if the maximum number of that controller is 1. For example, you could type RL to this question rather than RL0 because the maximum number of RL controllers that a RSTS/E monitor can support is 1. On the other hand, if you need to disable the line printer controller, you have to include the number because the RSTS/E monitor can support more than one line printer controller.

Press CTRL/Z or the **RETURN** key to exit from this suboption without specifying a controller name.

HARDWR suboption?

Explanation—HARDWR does not immediately disable the controller specified in the previous question, but returns to the HARDWR suboption? prompt. This lets you check your responses by listing the current hardware configuration table.

Response—Type LIST or LI. Type EXIT or press **[RETURN]** to return to the Option: prompt. Press CTRL/C to cancel any changes and return to the Option: prompt.

HARDWR makes the indicated changes, bootstraps your system disk, and prints one of three messages:

•

Option:

The Option: prompt indicates you have made no hardware changes or that INIT.SYS has previously completed a scan of the hardware configuration.

•

nn changes being made
Rebooting . . .

The value nn represents the number of changes that INIT.SYS will make after it bootstraps the system disk. INIT.SYS scans the entire hardware configuration as it reboots the system disk.

•

Enabling all devices.
nn changes pending
Rebooting . . .

This message indicates that INIT.SYS previously completed only a partial scan of the hardware configuration. The value nn represents the number of changes you have indicated (or it means you have used the RESET suboption). INIT.SYS makes the changes and scans the entire hardware configuration as it reboots the system disk.

HARDWR ENABLE—Enable a Device Controller

The ENABLE suboption of HARDWR enables a device controller; that is, makes it available for use. For example, the RM controller controls all RK06 and RK07 disk drives. If you enable the RM controller, you enable all RK06 and RK07 disk drives.

This suboption is related to the HARDWR DISABLE suboption. Just as you use the ENABLE suboption to enable a controller, you use the DISABLE suboption to disable a controller.

Use the ENABLE suboption only if you need to enable a controller that was previously disabled.

ENABLE Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? ENABLE

Response—Type ENABLE or EN to enable a controller.

Controller to enable?

Explanation—ENABLE asks for the name of the controller to enable. Before you do that, however, it may be useful to list the valid controller names by typing a question mark (?). The list you receive contains the name of the controller, the maximum number of each type that the RSTS/E monitor can support, and a description of the controller. See the previous section for an example of this list, or print it on your console terminal.

Response—Type the two-character name of the controller you need to enable. Controllers are numbered from 0 to the maximum number possible, minus 1. You can omit a controller number only if the maximum number supported by the RSTS/E monitor is 1. For example, you could type RL to this question rather than RL0 because the maximum number of RL controllers that a RSTS/E monitor can support is 1. On the other hand, if you need to enable the line printer controller, you have to include the number because the RSTS/E monitor can support more than 1 line printer controller.

Or, press CTRL/Z to exit from this suboption without specifying a controller name.

HARDWR suboption?

Explanation—HARDWR does not immediately enable the controller, but returns to the HARDWR suboption? prompt. This lets you check your responses by listing the current hardware configuration table.

Response—Type LIST or LI to see the current hardware configuration table. Type EXIT or press **RETURN** to return to the Option: prompt. Press CTRL/C to cancel any changes and return to the Option: prompt.

After you type EXIT or press **RETURN**, HARDWR makes the specified changes, bootstraps your system disk, and prints one of three messages (see the previous section, Disable a Device Controller).

HARDWR CSR—Declare a Nonstandard Controller Address

The CSR suboption of HARDWR sets a nonstandard controller address for a device controller's *Control Status Register (CSR)* set. The CSR set is the unique set of addresses on the UNIBUS associated with a particular device controller.

When you bootstrap the INIT.SYS program, it checks the number of each type of controller on the system by applying standard rules for locating the CSR set. See Appendix D for a discussion of the checks performed by INIT.SYS.

Use the CSR suboption only if:

- You need to install a controller at another address because you have nonstandard hardware.
- You need to rearrange device controller addresses.

However, in general it is not a good idea to assign controllers nonstandard addresses. Perform this task only as a temporary measure until you have the address assignment corrected.

CSR Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? CSR

Response—Type CSR to specify a nonstandard address for a device controller.

Controller with non-standard address?

Explanation—This question asks for the name of the controller that requires a nonstandard CSR address.

Response—Type the two-character controller name and its number. Controllers are numbered from 0 to the maximum possible number of controllers, minus 1. You can omit the controller number only if the maximum number of that controller is 1.

You can also type a ? to have HARDWR print a list of valid controller names. This list contains the name of the controller, the maximum number of each type that the RSTS/E monitor can support, and a description of the devices controlled by the controller. (See the section, Disable a Device Controller, for an example of this list, or print it on your console terminal.)

New controller address?

Explanation—This question asks for the nonstandard CSR address for the controller you specified in the previous question.

Response—Type the address of the lowest register in the controller's CSR set. The address must be an even 6-digit octal number greater than 160000.

Or, type REMOVE or RE to remove the nonstandard address (if you have used this option before) and return to the standard setting.

Press CTRL/Z to return to the HARDWR suboption? prompt without specifying a new CSR address.

HARDWR suboption?

Option:

Explanation—HARDWR does not immediately assign the address you specified to the nonstandard controller, but returns to the HARDWR suboption? prompt. This lets you check your responses by listing the current hardware configuration table.

Response—Type LIST or LI to list the current hardware configuration table. Type EXIT or press **[RETURN]** to return to the Option: prompt.

After you type EXIT or press **[RETURN]**, HARDWR makes the specified changes, bootstraps your system disk, and prints one of three messages (see the previous section, Disable a Device Controller).

HARDWR VECTOR—Declare a Nonstandard Vector Assignment

The VECTOR suboption of HARDWR specifies a nonstandard vector address for CR: or CD: devices.

NOTE

This task is for DIGITAL Field Service representatives who might have to perform it during hardware installation or during new version updates.

Use the VECTOR suboption only if:

- The hardware configuration includes more than one card reader.
- The hardware configuration includes a card reader that has a nonstandard vector.

In all other circumstances, INIT.SYS attempts to find the correct interrupt vector for the device and uses what it finds.

For controllers that contain a programmable vector register (MSCP and TMSCP class controllers), INIT.SYS assigns the first unused vector in the floating vector range to that controller.

A controller's vector address directs the central processor to the proper routines when that controller requests an interrupt. When you bootstrap the system, INIT.SYS checks each device controller's vector address assignment by forcing each device to interrupt. INIT.SYS checks these addresses against a table of reserved locations. If a device does not respond, INIT.SYS prints a message at your console terminal and disables the device.

INIT.SYS also checks whether more than one device has the same vector address. If so, INIT.SYS prints a message:

Vector for Device XXn: (vvv) already in use - device disabled.

where vvv represents the octal address of the incorrect vector.

Table 21 lists the locations reserved for hardware. You cannot use these locations as device vector assignments.

Table 21: Reserved Hardware Locations

Address	RSTS/E Usage
0-2	Detection of jumps to 0 and traps to 0
4-36	System trap vectors
40-56	Reload start addresses, failure HALT
100-102	KW11-L line frequency clock vector
104-106	KW11-P programmable crystal clock vector
110-112	Jump to 0 handling
114-116	Memory parity trap vector
144-146	Crash dump handling
234-236	Statistics handling
240-242	PIRQ trap vector
244-246	FPP or FIS exception trap vector
250-252	Memory Management Unit trap vector

VECTOR Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? VECTOR

Response—Type VECTOR or VEC.

Controller with non-standard vector?

Explanation—This question asks for the name of the controller that requires a nonstandard vector address.

Response—Type the two-character controller name of the card reader.

New vector address?

Explanation—This question asks for the nonstandard vector address for the controller you specified in the previous question.

Response—Type the nonstandard vector address, which is the 3-digit octal address of the lowest vector for the device controller. The address must be an even number. See Table 21 for the reserved addresses.

Or, type REMOVE or RE to remove a nonstandard vector address and return to the standard address.

Press CTRL/Z to return to the HARDWR suboption? prompt without specifying a new vector address.

HARDWR suboption?

Explanation—HARDWR does not immediately assign the nonstandard vector address to the controller, but returns to the HARDWR suboption? prompt. This lets you check your responses by listing the current configuration table.

Response—Type LIST or LI to list the current hardware configuration table. Type EXIT or press **[RETURN]** to return to the Option: prompt.

After you type EXIT or press **[RETURN]**, HARDWR makes the specified changes, bootstraps your system disk, and prints one of three messages (see the section, Disable a Device Controller).

HARDWR RESET—Set All Vector and CSR Addresses to the Standard, and Enable All Devices

The RESET suboption of HARDWR causes INIT.SYS to reboot your system disk and perform a complete hardware scan. Thus, INIT.SYS returns all CSR and vector addresses to their standard addresses, enables all devices, and associates each DM11-BB unit with the DH11 multiplexer that has the same unit number.

Use the RESET suboption only if you have made no changes to your hardware; that is, you have not assigned any nonstandard CSR or vector addresses.

RESET Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? LIST

Explanation—Before using RESET, always list the current hardware configuration to see if there are any CSR or VECTOR changes. See the section, HARDWR LIST, for an example of the hardware configuration table.

Response—Type LIST or LI. Or, type EXIT or press **RETURN** to return to the Option: prompt.

HARDWR suboption? RESET

Explanation—After LIST prints the current hardware configuration, it returns to the HARDWR suboption? prompt.

Response—Type RESET or RE.

HARDWR suboption?

Explanation—RESET returns all device characteristics to the standard CSR and VECTOR addresses. Then it returns to the HARDWR suboption? prompt.

Response—Type LIST or LI to list the current hardware configuration table. See the section, HARDWR LIST, for an example of the hardware configuration table. After you list the hardware configuration table, type EXIT or press **RETURN** to return to the Option: prompt.

HARDWR DM—Declare DM11-BB and DH11 Associations

The DM suboption of HARDWR associates each DM11-BB modem controller with the correct DH11 multiplexer.

Use the DM suboption if the DM11-BB modem controllers are not associated with the correct DH11 multiplexers.

The DH11 multiplexer allows you to connect from 1 to 16 terminals to your PDP-11. In other words, the DH11 multiplexer has 16 lines, numbered from 0 to 15.

The DM11-BB modem controller allows you to connect a dial-up telephone to the DH11 multiplexer. A DM11-BB modem controller also has 16 lines. A one-to-one relationship exists between these two pieces of hardware; thus, a PDP-11 can have only as many DM11-BB modem controllers as there are DH11 multiplexers. Therefore, a PDP-11 can support a maximum of 16 DH11 multiplexers.

DM11-BB modem controllers and DH11 multiplexers must meet the following conditions:

- A DM11-BB controller's lines can be connected to modem lines on only one DH11 multiplexer. For example, you could not connect the DM11-BB controller lines to DH11 units 0 and 1.
- A DM11-BB controller's line numbers must be the same as the line numbers of its associated DH11 multiplexer. For example, DM11-BB line number 4 can be connected only to DH11 line number 4.

The RSTS/E monitor cannot determine which DM11-BB modem controller is associated with a specific DH11 multiplexer (assuming of course that there is more than one DH11 multiplexer). Therefore, the RSTS/E monitor assumes that DM11-BB unit number 0 is associated with DH11 multiplexer unit 0. The RSTS/E monitor does not require that DM11-BB and DH11 unit numbers be the same. For example, you could connect DM11-BB unit number 2 to DH11 unit number 4.

DM Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? DM

Response—Type DM.

DH for DMO (0, NX)?

Explanation—This question asks for the unit number of the DH11 multiplexer you want to associate with DM11-BB unit 0. NX means that the unit is nonexistent. The DM suboption requests DH11 unit numbers for all 16 possible DM11-BB units, whether or not the system includes 16 units. Therefore, you can logically associate a DH11 unit number with a DM11-BB unit that is not on the system, but is expected in the future.

Response—Type the unit number or press **[RETURN]** to accept the default.

Or, press CTRL/Z to return to the HARDWR suboption? prompt without declaring any DM11-BB and DH11 associations.

HARDWR suboption?

Explanation—DM does not immediately assign the unit numbers of any DH11 multiplexers to their associated DM11-BB modem controllers, but returns to the HARDWR suboption? prompt. It is useful to list the hardware configuration table to verify that these changes will occur.

Response—Type LIST or LI to list the current hardware configuration table. (The hardware configuration table is not repeated here.) After you list the hardware configuration table, type EXIT or press **[RETURN]** to have DM make the changes and return to the Option: prompt.

HARDWR HERTZ—Specify AC Line Frequency

The HERTZ suboption of HARDWR specifies AC line frequency for your system.

Use the HERTZ suboption only if you need to specify the correct AC line frequency for your system.

HERTZ Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt.

HARDWR suboption? LIST

Explanation—HARDWR prints the HARDWR suboption? prompt. Before using HERTZ, always list the current hardware configuration to see if the AC line frequency is correct for your installation. (See the section, HARDWR LIST, for an example of the hardware configuration table.)

Response—Type LIST or LI. Or, type EXIT or press **[RETURN]** to return to the Option: prompt.

HARDWR suboption? HERTZ

Explanation—If the table shows an incorrect AC line frequency for your installation, then you must correct it. The AC line frequency is the basis for all system timing.

Response—Type HERTZ or HE.

New AC line hertz?

Explanation—The question asks for the AC line frequency for your installation.

Response—Type 50 if your AC line frequency is 50 Hz (commonly used in Europe); type 60 if your AC line frequency is 60 Hz (commonly used in the United States). The line frequency always defaults to 60 Hz when you install a new monitor. If your installation requires an AC line frequency of 50 Hz, then every time you install a new monitor, you need to use the HERTZ suboption to change the frequency from 60 to 50 Hz.

If you have both a KW11L and KW11P clock, INIT.SYS automatically determines the frequency of your power.

If you have an 11/73, 11/83, or an 11/84, INIT.SYS also automatically determines the frequency of your power.

HARDWR suboption?

Explanation—After you indicate the AC line frequency, you should list the hardware configuration table, to verify that the change will occur.

Response—Type LIST or LI to list the hardware configuration table. Type EXIT or press **[RETURN]** to return to the Option: prompt.

HARDWR SWITCH—Specify CPU Switch Register Characteristics

The SWITCH suboption of HARDWR specifies the characteristics of your CPUs console switch register. The console switch register controls the automatic restart feature of RSTS/E during system crashes.

When the monitor crashes, except for power failures, it looks at the switch register. If bit 0 is set to 1, the system performs an autorestart. If bit 0 is not set to 1, (regardless of the setting of the other switches), the system does not start automatically.

Use the SWITCH suboption only if you want to specify the characteristics of your CPUs console switch register.

SWITCH Dialogue

Option: HARDWR

Response—Type HARDWR or HA to the INIT.SYS Option: prompt,
HARDWR suboption? SWITCH

Response—Type SWITCH or SW.

Switch register?

Explanation—Because some CPUs do not have switch registers or have switch registers that cannot retain the original register contents after a power failure, SWITCH lets you put the switch register contents in one of three logical positions: ENABLE, DISABLE, or VOLATILE.

The response you select and your console switch register setting determine how your system recovers after a system crash. Systems that crash due to power failure have restart capabilities only if they are configured with both *nonvolatile memory* - memory that is not destroyed during power failure - and a nonvolatile switch register.

Response—Type DISABLE, ENABLE, or VOLATILE:

- **DISABLE** means RSTS/E does not look at the switch register. This means your system, by default, automatically restarts.
- **ENABLE** means that when the system crashes, RSTS/E looks at the switch register after the crash to see if it should restart.
- **VOLATILE** has the same meaning as **ENABLE** except that when power fails, RSTS/E always tries to restart automatically. The ability to restart a RSTS/E system after a power failure depends on the hardware memory configured on your system. Systems with volatile memory cannot perform autorestart, regardless of the switch contents. By specifying **VOLATILE**, systems with a volatile switch register but with nonvolatile memory can perform restarts after power failure.

HARDWR suboption?

Explanation—After you specify the switch register characteristics, you should list the hardware configuration table to verify that the change will occur.

Response—Type LIST or LI to list the hardware configuration table. Type EXIT or press **RETURN** to return to the Option: prompt.

HARDWR Error Messages

A list of the error messages for the various HARDWR suboptions follows. If your error message does not appear, see Appendix A.

ADDRESS MUST BE AN EVEN OCTAL NUMBER GREATER THAN 160000.

Suboption: CSR

Explanation: You specified an invalid address.

User Action: Type an address that meets the requirements.

CANNOT DISABLE CONSOLE TERMINAL

Suboption: DISABLE

Explanation: You tried to disable the console terminal.

CONTROLLER ALREADY DISABLED

Suboption: DISABLE

Explanation: You tried to disable a disabled controller.

CONTROLLER NOT DISABLED

Suboption: ENABLE

Explanation: You tried to enable an enabled controller.

CONTROLLER NUMBER MISSING

Suboption: DISABLE, ENABLE, CSR, VECTOR

Explanation: You did not specify a controller number for a device that has multiple controllers.

CONTROLLER NUMBER MUST BE LESS THAN nn

Suboption: DISABLE, ENABLE, CSR, VECTOR

Explanation: The controller number you typed is larger than the maximum of nn.

DH11 ALREADY ASSIGNED TO A DM11-BB

Suboption: DM

Explanation: The DH11 unit you specified is already assigned to a DM11-BB.

INVALID CONTROLLER NAME

Suboption: DISABLE, ENABLE, CSR, VECTOR

Explanation: The first two characters you typed did not name a valid device controller.

User Action: Type ? to obtain a list of valid controller names and try again.

INVALID CONTROLLER NUMBER

Suboption: DISABLE, ENABLE, CSR, VECTOR

Explanation: The controller number you typed is not an integer.

User Action: Type the number in the correct format.

INVALID RESPONSE

Suboption: DM

Explanation: The unit number you specified is not a decimal number from 0 to 15.

VECTOR MUST BE AN EVEN OCTAL NUMBER LESS THAN 1000.

Suboption: VECTOR

Explanation: You specified an invalid address.

User Action: Type an address that meets the requirements.

IDENT—List the Version Number and Patch Information

The IDENT option lists the INIT.SYS version number and information about the patches installed on your system. Use the IDENT option if you are submitting an SPR to DIGITAL and need to obtain this information.

IDENT Dialogue

Option: IDENT

Response—Type IDENT or ID to the INIT.SYS Option: prompt.

INIT V9.7-11 [Built DD-~~MMM~~-YY]

Option:

Explanation—IDENT prints the INIT.SYS version number, then returns to the Option: prompt.

PATCH—Install a Patch

The PATCH option provides a method for altering RSTS/E system code. Use the PATCH option if you need to correct errors in the system code. Use the PATCH option only as directed by DIGITAL.

Patching makes permanent changes to the code on disk and has no effect on the code currently in memory. Therefore, after patching the initialization code, you must bootstrap the system disk to load the corrected initialization code into memory.

DIGITAL publishes mandatory corrections to code in the *RSTS/E Release Notes* if the changes are concurrent with the release of the distribution kits. Between releases, patches are published in the monthly *RSTS/E Software Dispatch*. The following procedures describe the PATCH option in detail. In general, however, published patches include the necessary instructions.

When you install a new RSTS/E system, refer to the *RSTS/E Release Notes* and the *RSTS/E Software Dispatch* for patches and patching information. Unless instructed otherwise, you should install all required patches immediately after installing your RSTS/E monitor.

PATCH Dialogue

Option: PATCH

Response—Type PATCH or PA to the INIT.SYS Option: prompt.

File to patch?

Explanation—PATCH asks for the file to patch. You can patch any file in account [0,1]. This directory includes the initialization code (INIT.SYS) and any .SIL, .RTS, .LIB file, .TSK, or .SAV files.

Response—Type the name and extension of the file that requires patching. Or, press **RETURN** to patch the installed monitor SIL.

File found in account [p,pn]

Explanation—PATCH prints this message if it finds the file.

Module name?

Explanation—The module name designates the SIL module to be patched only if you are patching a monitor.

Response—Type the module name you want to patch.

Base address?

Explanation—The base address defines the actual locations to be patched.

Response—Type the base address of the file you want to patch. Responses can be numbers or expressions. Valid octal numbers are 0 to 177777, and leading zeros are optional. Valid decimal numbers are 0. to 65535., and are distinguished from octal numbers by the presence of a trailing decimal point.

Offset address?

Explanation—The offset address is the first location to be patched relative to the specified base.

Response—Type the offset address of the file you want to patch. See the previous response for a description of legal values.

Base	Offset	Old	New?
126466	001010	000034	?

Explanation—After you specify the base and offset addresses, PATCH opens the specified locations, prints the old contents, and accepts input. If the old contents do not match what is shown under "Old" in the published patch, then you may have made an error. Remove any changes you have already made and try again.

Response—Table 22 summarizes the possible responses to this prompt.

Table 22: Possible Input to the PATCH Option

Input	Meaning
Number, symbol, or expression	Enter the number, symbol, or expression as the new contents of the current location.
[RET]	Advance to the next location without altering the contents of the current location.
^ (circumflex)	Return to the previous location without altering the contents of the current location.
[CTRL/Z]	Return to the previous question.
[CTRL/C]	Finish all patching and return to the Option: prompt.

PATCH makes each specified change immediately after you press **[RETURN]**. Therefore, if you make an error, you must patch the location again to correct your mistake.

To check that an entire patch is correct, type CTRL/Z to return to the Offset address? question. Type the same offset, then press **[RETURN]** to examine all the patched locations. If the old contents listed for any location do not match the "New" column in the published patch, restore all locations to their original contents and install the patch again. If you have followed the published patch procedures correctly and the old contents do not match the published patch, consult your software support representative.

126466	001012	010523	? ^C
--------	--------	--------	------

Patch complete

Option:

Explanation—You terminate a PATCH operation by entering CTRL/C. PATCH then finishes all patching and returns to the Option: prompt.

If you patch the initialization code, you must reboot the system. Rebooting loads the changed version of the initialization code into memory. To perform the bootstrap procedure, follow the instructions in the published patch and use the INIT.SYS BOOT option.

Response—Type CTRL/C when you have finished the PATCH operation

PATCH Error Messages

A list of the PATCH error messages follows. If your error message does not appear, see Appendix A.

ADDRESS ABOVE MODULE BOUNDS

Explanation: The address you specified exceeds the upper bound of the module.

ADDRESS BELOW MODULE BOUNDS

Explanation: The address you specified is below the lower bound of the module.

BLOCK OFFSET BEYOND EOF

Explanation: The block offset address you typed is greater than or equal to the number of blocks in the file.

FILE NOT FOUND

Explanation: The initialization code did not find the file you specified in account [0,1] on the system disk.

ILLEGAL FILE NAME

Explanation: The file name you typed is in an incorrect format. Or, you pressed `RETURN` and no monitor SIL is installed.

INVALID MODULE NAME

Explanation: The module name you typed is in an incorrect format. The name must be a combination of alphanumeric characters up to 6 characters long.

INVALID CHARACTER

Explanation: The expression line contains an illegal character.

INVALID EXPRESSION

Explanation: The expression contains an illegal symbol name or an invalid operator. Symbol names must be a combination of alphanumeric characters up to 6 characters long. Valid operators are +, -, *, and /.

INVALID SIL FORMAT

Explanation: The file you specified does not contain a valid SIL directory.

User Action: If the file is not a SIL, append the /N qualifier to the file name.

MODULE NOT FOUND IN SIL

Explanation: The module you specified is not in the SIL.

User Action: Type a ? in response to the MODULE NAME question for a directory of SIL modules.

SYMBOL NOT FOUND IN STB

Explanation: A symbol you typed is not in the symbol table for the module.

REFRESH—Perform File-Related Tasks

The REFRESH option performs tasks associated with system files. System files are files that are of particular use to the system itself. They reside in account [0,1]. The following sections describe the REFRESH suboptions.

The REFRESH suboptions are:

- REFRESH LIST - List File Status Table
- REFRESH FILE - Change Account [0,1] File Characteristics
- REFRESH BADS - Expand the Bad Block File

REFRESH Error Messages

A list of the REFRESH error messages follows. If your error message does not appear, see Appendix A.

CANNOT REFRESH THIS DISK

User Action: Rerun DSKINT and then try REFRESH again.

CANNOT CHANGE OR MOVE .RTS OR .SIL WITH REFRESH

Explanation: You cannot move or change any files with a .RTS or .SIL file type.

ILLEGAL DISK NAME

Explanation: The response you typed is not a valid disk name. Valid disk names are DK, DL, DM, DP, DR, DB, and DU.

User Action: Press `RETURN` to use the system disk.

ILLEGAL SUBOPTION

Explanation: The response you typed is not a valid suboption name.

SORRY, BUT THAT DISK DOESN'T EXIST

Explanation: The disk device or unit number you specified does not exist on this PDP-11.

User Action: Use the HARDWR option to list the hardware configuration.

THAT FILE CANNOT BE CHANGED

Explanation: You cannot modify the file.

THAT FILE IS THE CURRENTLY INSTALLED SIL AND CANNOT BE MOVED OR DELETED

Explanation: You cannot move or delete the installed monitor SIL.

TOO MANY BAD BLOCKS

Explanation: There can be no more than 161 clusters in the bad block file.

System File Background Information

System files need contiguous space on the disk. It is better to create system files during system installation when there is sufficient contiguous space on the disk. If you initialized a nonsystem disk, you can create some of these files on the nonsystem disk, freeing space on the system disk.

This section explains the system files. It groups the files into two sets: those files that are automatically created during system installation, and those optional files that you can create according to the needs of your installation.

Automatically created during installation

- SWAP.SYS
- SWAP1.SYS
- BUFF.SYS
- CRASH.SYS

Optional

- SWAP0.SYS
- SWAP3.SYS
- OVR.SYS
- ERR.SYS

Use the `INSTALL/SWAP_FILE`, the `INSTALL/ERROR_FILE`, or the `INSTALL/OVERLAY_FILE` commands (see the *RSTS/E System Manager's Guide*) if you need to recreate some files at different sizes, or create optional files according to the needs of your particular installation.

Table 23 shows the system files, whether they are automatically created or optional, their optimal location, and a formula for calculating the size. The following sections explain this table in more detail.

Table 23: Summary of System File Creation

System File	Status	Location	Size
Automatically Created Files			
SWAP.SYS	INIT.SYS creates this file at the minimum size. (See Task 2 of Phase 7 in Part 1.)	First available location, starting from beginning of disk.	1 job * SWAP MAX* 4
SWAP1.SYS	INSTAL.COM creates this file at a size large enough to hold all the jobs on your system. (See Task 1 of Phase 5 in Part 1.)	Near SATT.SYS file, usually center of system disk.	(# of jobs - 1) *SWAP MAX * 4
CRASH.SYS	INIT.SYS creates this file. (See Task 2 of Phase 7 in Part 1.)	First available location on system disk.	Sum of low core data region, XBUF pool, FIP buffer pool, monitor regions (cannot be calculated)
Optional Files			
SWAP0.SYS	Optional	Center of nonsystem disk.	# of highly interactive jobs * SWAP MAX * 4
SWAP3.SYS	Optional	Center of nonsystem disk.	# of event-driven jobs * SWAP MAX * 4
OVR.SYS	Optional	Center of nonsystem disk.	Maximum of 128 blocks
ERR.SYS	Optional	Center of system or nonsystem disk.	Same size as ERR.ERR (16 blocks)

The SWAP.SYS File

Definition—The *SWAP.SYS* file is one of four available swap files, which stores jobs transferred out of memory.

Status—The SWAP.SYS file is required. Without this file, the monitor cannot swap jobs out of memory; your system will not work. INIT.SYS automatically creates a minimum SWAP.SYS file during system installation at a size large enough to hold 1 job. (See Task 2 of Phase 7 in Part 1.)

Location—INIT.SYS positions the SWAP.SYS file on the system disk at the first available location, starting at the beginning of the disk.

Size—The size of the SWAP.SYS file is:

$$1 \text{ job} * \text{SWAP MAX} * 4$$

The SWAP1.SYS File

Definition—The SWAP1.SYS swap file performs the same function as SWAP.SYS. The monitor uses this file to store *highly interactive jobs* – jobs that get transferred in and out of memory frequently.

Status—The INSTAL.COM command file automatically creates a SWAP1.SYS file during system installation (see Task 1 of Phase 5 in Part 1).

Location—INSTAL.COM places this file as close to the SATT.SYS file as possible, usually the center of the system disk.

Size—INSTAL.COM creates the SWAP1.SYS file at a size large enough to hold all the jobs on your system, according to this formula:

$(\# \text{ of jobs} - 1) * \text{SWAP MAX} * 4$

Reasons for Creating—This file provides enough swap file space to accommodate all the jobs on your system. When the monitor transfers a highly interactive job out of memory, it places the highly interactive job in the first available space in a swap file, starting with SWAP0.SYS. If it does not find any space (or SWAP0.SYS does not exist), the monitor looks for space on SWAP1.SYS, then SWAP.SYS, then SWAP3.SYS.

The CRASH.SYS File

Definition—The *CRASH.SYS* file stores information about the read/write area of the monitor and the extended buffer pool (often called XBUF) when a system crash occurs.

Status—You must have CRASH.SYS to enable the crash dump feature. This feature causes the read/write area of the monitor and the extended buffer pool to be dumped into CRASH.SYS when a system crash occurs. INIT.SYS automatically creates this file during system startup. (See Task 2 of Phase 7.)

Location—INIT.SYS positions the CRASH.SYS file at the first available location on the system disk.

Size—INIT.SYS creates CRASH.SYS at a size equal to R/W areas that the monitor may access.

Planning the SWAP0.SYS File

Definition—The SWAP0.SYS swap file performs the same function as SWAP1.SYS. The monitor uses this file to store highly interactive jobs.

Status—SWAP0.SYS is an optional system file.

Location—This file is usually located at the center of a nonsystem disk.

Reasons for Creating—Create this file if you have a system and a nonsystem disk, and you want more swap file space. There is no point in having this file on the system disk. When the monitor transfers a highly interactive job out of memory, it places the highly interactive job in the first available space in a swap file, starting with SWAP0.SYS. If it does not find any space (or SWAP0.SYS does not exist), the monitor looks for space on SWAP1.SYS, then SWAP.SYS, then SWAP3.SYS.

Thus, you can increase the speed of swapping highly interactive jobs by creating SWAP0.SYS at the center of the nonsystem disk. The SWAP1.SYS file would then not need to exist on your system disk, freeing valuable space and balancing the I/O load on your disks.

Size—Estimated # of highly interactive jobs * SWAP MAX * 4

Planning the SWAP3.SYS File

Definition—SWAP3.SYS is a swap file that performs the same function as SWAP.SYS. The monitor uses this file to store event-driven jobs—jobs that do not get transferred in and out of memory frequently. Examples of event-driven jobs are QUEMAN, ERRCPY, OPSER, and SPOOL.

Status—The SWAP3.SYS file is an optional system file.

Location—This file is usually located at the center of a nonsystem disk.

Reasons for Creating—Create SWAP3.SYS if you have a system and a nonsystem disk, and you want more swap file space. There is no point in creating this file on the system disk. The monitor uses a different method to swap event-driven jobs than it does for highly interactive jobs. Instead of starting with SWAP0.SYS, the monitor places the event-driven job in the first available space starting with SWAP3.SYS. If it does not find any space, the monitor looks for space on SWAP.SYS, then SWAP1.SYS, then SWAP0.SYS.

Thus, you can speed up the swapping of event-driven jobs by creating SWAP3.SYS at the center of the nonsystem disk. The SWAP1.SYS file would then not need to exist on your system disk, freeing valuable space and balancing the I/O load on your disks.

Size—Estimated # of event-driven jobs * SWAP MAX * 4

Table 24 shows the approximate amount of time in seconds needed to transfer different size job images for different disks. Use this information to create swap files on the disks that you feel will give you optimum performance.

Table 24: Swap Times

Disk	Job Size (in words)			
	16K	28K	32K	64K
RA60	.07	.08	.08	.11
RA80	.06	.08	.09	.14
RA81	.05	.06	.07	.10
RA82	.05	.06	.06	.09
RC25	.06	.07	.08	.13
RD31/32	.05	.06	.06	.09
RD51	.14	.17	.19	.29
RD52	.10	.14	.15	.26
RD53	.09	.13	.14	.24
RD54	.09	.13	.14	.24
RK05	.25	.38	.43	.78
RK06/07	.11	.15	.17	.29
RL01/02	.13	.18	.19	.32
RM02	.08	.11	.12	.20
RM03/05/80	.06	.08	.09	.14
RP04/05/06	.08	.11	.12	.20

The swap times for each disk were calculated using the formula:

Swap time = Avg access time + ((Job size * 2)/Transfer speed)

where:

Average access time measured in seconds, is defined as the sum of the average seek time and the average latency time.

Transfer speed is measured in kilo-bytes per second (KB/S).

Job size is measured in kilo-words (KW).

See the appropriate Peripherals Handbook for the average access time and transfer speed of a particular disk.

Planning the OVR.SYS File

Definition—The *OVR.SYS* file can store a copy of certain parts of the currently installed monitor save image library (SIL).

Status—You do not need to create OVR.SYS. It is an optional system file.

Location—You can create OVR.SYS on either the system or nonsystem disk. You should locate OVR.SYS as close as possible to the center of the disk, so that the monitor can access it quickly.

Reasons for Creating OVR.SYS—OVR.SYS stores part of the monitor code that is located in the installed monitor SIL. Since the installation procedure tries to locate your RSTS SIL at the center of the disk, the OVR.SYS file is not usually useful. Create it only if you are concerned that free space near the center of the disk is not available or create it in the center of a nonsystem disk to balance the I/O load.

Size—The maximum size of the OVR.SYS file is 128 blocks.

Planning the ERR.SYS File

Definition—The *ERR.SYS* file stores a copy of the system error messages, which are located in the ERR.ERR file. You copied ERR.ERR to your system disk in Phase 2 of Part 1.

Status—You do not need to create ERR.SYS; it is an optional system file.

Location—Create ERR.SYS on a nonsystem disk if you have one. Otherwise, create ERR.SYS on the system disk. Locate ERR.SYS as close as possible to the center of the system or nonsystem disk to improve access and response time for error messages.

Reasons for Creating ERR.SYS—ERR.SYS is merely a copy of ERR.ERR, but ERR.ERR may be located at the beginning of the disk rather than at the center. Files are more quickly accessed when they are located in the center of the disk. You cannot move ERR.ERR, but you can locate ERR.SYS as close to the center of the disk as possible. Thus, when the monitor needs to access system error messages, it will access ERR.SYS instead of ERR.ERR, thereby increasing system performance.

If you are not worried about error messages taking a few milliseconds longer, then you do not need to create ERR.SYS.

Size—ERR.SYS should be the same size as ERR.ERR. Use the LIST suboption of REFRESH to see the size of ERR.ERR (16 blocks).

Figure 12 provides a system file creation worksheet that allows you to write the sizes and locations of the system files you need to create or change. Note that the formula for calculating the center of the disk for these files is based on the assumption that you placed the SATT.SYS file at the center of your disk during disk initialization.

FORMULA FOR LOCATION:

$$(\text{STARTING LBN FOR SATT.SYS}) - \frac{(\text{X TOTAL BLOCKS})}{2} = \text{STARTING LOCATION OF FILES}$$

2

where:

**STARTING LBN
FOR SATT.SYS**

is the starting logical block number for the SATT.SYS file. You can find this by looking at the file status table in the LBN column.

**X TOTAL
BLOCKS**

is the total number of blocks for the system files you want to create on that disk.

Figure 12: System File Creation Worksheet

System File	Size (in blocks)	Location
SWAP.SYS	_____	_____
SWAP0.SYS	_____	_____
SWAP1.SYS	_____	_____
SWAP3.SYS	_____	_____
OVR.SYS	_____	_____
ERR.SYS	_____	_____
BUFF.SYS	_____	_____
CRASH.SYS	_____	_____

ZK-9241-HC

REFRESH LIST—List File Status Table

The LIST suboption of REFRESH lists the file status table. The *file status table* lists all the files that can reside in account [0,1] of your system and nonsystem disk. You should list the file status table before and after creating or changing any system files.

LIST Dialogue

Option: REFRESH

Response—Type REFRESH or RE to the INIT.SYS Option: prompt.

dd-mm-yy - hh:mm AM/PM

Disk?

Explanation—REFRESH prints the current date and time, then asks for the device designator of your disk.

Response—Possible responses for your disk are: DK, DL, DM, DP, DR, DB, or DU.

Unit?

Explanation—This question asks for the number of the drive on which your system disk is mounted.

Response—Type the unit number of the drive on which your disk is mounted.

Rebuild?

Explanation—This question asks if you want to force a rebuild of a disk that you think might be corrupt. The *rebuild* feature of REFRESH rebuilds the SATT.SYS file and checks the consistency of directories. Normally, you rebuild a disk if it was dismounted improperly.

Response—Type YES to force a rebuild of the disk; type NO if you do not want to force a rebuild of the disk. Even if you type NO, REFRESH rebuilds the disk if it is necessary.

REFRESH suboption? LIST

Explanation—You are now finished with the questions asked by REFRESH and are at the REFRESH suboption? prompt. Now you can list the file status table for the system disk.

Response—Type LIST or LI.

File Name	Required?	File Flags	Status	Current Size	Minimum Size	Start LBN
System files:						
SWAP .SYS	YES	NOD CTG	OK	128	128	1409
SWAP0 .SYS	NO		OK			
SWAP1 .SYS	NO	CTG	OK	4992		4865
SWAP3 .SYS	NO		OK			
OVR .SYS	NO		OK		85	
ERR .SYS	NO		OK		16	
BUFF .SYS	NO		OK			
CRASH .SYS	NO	NOD CTG	OK	313	86	1537
Others:						
BADB .SYS		NOD		20		
SATT .SYS		NOD CTG		4		26873
ERR .ERR		NOD CTG		16		49
BACKUP.TSK		CTG		100		
INIT .SYS		NOD CTG		554		165
SYSGEN.SIL		CTG		557		721
DCL .RTS		CTG		128		1281
UPDATE.COM		CTG		2		
RT11 .RTS		CTG		20		1873
RSX .RTS		NOD CTG		6		1893
ODT .SYS		CTG		14		
INSTAL.COM		CTG		24		1917
SYSINI.COM		CTG		3		
RSTS97.SIL		NOD CTG		574		12417
START .COM		CTG		13		4061
LOGIN .COM		CTG		4		
BASIC .RTS		CTG		73		11201

.
.
.

REFRESH suboption? **RET**

Option:

Explanation—LIST prints the file status table, which has seven columns:

- **File Name** - This column lists all of the files that can or currently reside in account [0,1]. The table lists the files in two categories: System Files and Others.
- **Required?** - This column has two possible entries: YES, which means the files are required for the operation of the current monitor; NO, which means the files are not required for the operation of the current monitor. This column is always blank for nonsystem files, which are listed under the Others column. The System File Background section explains how to determine what system files you need to create.
- **File Flags** - This column has two possible entries: NOD, which means you cannot delete the file during timesharing; CTG, which means the file is contiguous on the disk.
- **Status** - This column has three possible entries: OK, which means you do not have to change the file's characteristics; CRE, which means you must create the file; D/C, which means you must delete and then recreate the file.
- **Current Size** - This column shows the current file size in blocks. If the column is blank, it means the file has not been created. The column also shows the current size of the nonsystem files.
- **Minimum Size** - This column shows the minimum sizes, in blocks, of the system files.
- **Start LBN** - This column shows the logical block number n at which each contiguous file starts. Disk logical blocks are numbered from 0 to the disk size minus 1. If the column is blank, it means either the file is not contiguous, or if it is contiguous, it might be extended and become noncontiguous.

Response—After LIST prints the file status table, it returns to the REFRESH suboption? prompt. Type EXIT or press **[RETURN]** to return to the Option: prompt.

REFRESH FILE—Change Account [0,1] File Characteristics

The FILE suboption of REFRESH creates, deletes, or marks as deletable (or nondeletable) the files that reside in account [0,1].

Use the FILE suboption if:

- You need to delete obsolete run-time system files (files with file types of RTS).
- You need to mark other files (usually application files that you create) as deletable or nondeletable. You can also do this on line with the /DELETABLE and /NODELETABLE qualifiers of the SET FILE command.

NOTE

You can never modify the characteristics of the INIT.SYS, ERR.ERR, and installed monitor SIL files, which are located on the system disk.

FILE Dialogue

Option: REFRESH
dd-mm-yy - hh:mm AM/PM
Disk?
Unit?
Rebuild?

REFRESH suboption? FILE

Explanation—Answer the preliminary REFRESH questions. You then see the REFRESH suboption? prompt.

Response—Type FILE or FI.

File name?
File exists. Delete it?

Explanation—The next question asks for the name of the file whose characteristics you want to change.

Response—Respond with a file name and type. If the file exists in account [0,1], FILE asks if you want to delete it. Type YES or NO. If your response is NO, FILE asks the next question.

Size?

Response—To retain the current size, type OLD or press **[RETURN]**. Note that if you type any other response to this question, REFRESH may reallocate the file and you will lose the data.

Base?

Response—To retain the current location, type OLD or press **[RETURN]**. Note that if you type any other response to this question, REFRESH may reallocate the file and you will lose the data.

Deletable?

Explanation— This question asks if you want to mark a file as deletable or nondeletable. This feature is useful for installations that need to create other files. For example, you may want to mark some important accounting files as nondeletable.

During day-to-day system management you use the SET FILE/DELETABLE and SET FILE/NODELETABLE commands to mark files. See the *RSTS/E System Manager's Guide* for details.

Response—Type NO if you want to mark the file as nondeletable; type YES if you want to mark the file as deletable. Or, type OLD or press **[RETURN]** to retain the current status.

File name? **[RET]**

REFRESH suboption?

Response—Type another file name or press **[RETURN]** to return to the REFRESH suboption? prompt. Press RETURN once more to return to the Option: prompt. Or, specify another REFRESH suboption.

REFRESH BADS—Expand the Bad Block File

The BADS suboption of REFRESH lists the bad blocks currently in the bad block file (BADB.SYS) and adds bad blocks to this file.

Use the BADS suboption if you need to remove blocks from service because they have gone bad.

Do not use the BADS suboption for any DU class disk, except RX50 or RX33 floppies. In DU disks, the hardware automatically handles bad blocks and transparently replaces them with good blocks.

BADS Dialogue

```
Option: REFRESH
dd-mm-yy - hh:mm AM/PM
Disk?
Unit?
Rebuild?
```

```
REFRESH suboption? BADS
```

Explanation—Answer the preliminary REFRESH questions. You then see the REFRESH suboption? prompt.

Response—Type BADS, BAD, or BA.

```
Bads? LIST
```

Explanation—This question asks if you want to list the bad blocks or add bad blocks to the bad block file.

Response—To list the current contents of BADB.SYS, type LIST. BADS prints the contents or a message declaring that there are no bad blocks on the disk.

```
Bads?
```

Explanation—BADS returns to the Bads? question.

Response—Type ADD to add bad blocks to BADB.SYS.

```
Block number?
```

Response—BADS then asks for the bad block number. Type the logical block number (in decimal) of the bad block. This number can range from 2 to the disk size minus 1. You can obtain the logical block number of a bad block from the ERRDIS printout of the disk error.

```
Really add logical block XXXX to BADB.SYS?
```

Response—This question asks if the number you specified is the one you want added to BADB.SYS. Type YES to add it. If your response is YES, BADS allocates the pack cluster in which the block resides to BADB.SYS. Use caution, because the allocation of a cluster to BADB.SYS is irrevocable.

Type NO if you do not want to add it to this file. If you type NO, BADS repeats the Block numbers? question.

```
Bads? [RET]
```

```
Disk is being rebuilt - wait ...
```

```
REFRESH suboption?
```

Response—Press **[RETURN]** to exit the BADS suboption. Press **[RETURN]** again to return to the Option: prompt. If you added any bad blocks, **REFRESH** rebuilds the disk. The rebuilding operation allows you to delete all files that contain bad blocks.

SAVRES—Restore and Copy Disks

NOTE

Beginning with RSTS/E V9.7, the SAVE option of SAVRES is no longer supported and you need to use online BACKUP. You can produce a bootable save set using the RECOVER.COM procedure. See the *RSTS/E System Manager's Guide*.

The RESTORE, IMAGE, and IDENTIFY options have been retained for your convenience.

In the following discussions of the remaining SAVRES options, all references to SAVE sets and operations apply to pre-V9.7 tapes and disks.

The SAVRES option is a disk restore and copy utility. SAVRES has three operational functions:

- **RESTORE** - Recreate a like disk from pre-V9.7 tape or disk Save set
- **IMAGE** - Make a copy of a disk to a like disk
- **IDENTIFY** - Extract label information from a SAVRES volume or RSTS/E disk.

SAVRES provides a nonselective restore and copy capability that requires operator responses during the operational dialogue. Unlike the DCL BACKUP utility, SAVRES processes entire volumes only and does not allow selective file transfers. You **cannot** use SAVRES on a disk with a pack cluster size of 32 or 64. When SAVRES encounters bad blocks, it requires no operator intervention. For these reasons, use SAVRES when you need to:

- Create a copy of an entire RSTS/E disk.
- Make a copy to a disk containing bad blocks that may not be reflected in the BADB.SYS file.

To understand SAVRES, you should know these terms:

SAVE format	The format of the output written by a SAVE operation and read by a RESTORE operation.
SAVE set	The set of magnetic tapes or disks created by a SAVE operation. A SAVE set must be composed entirely of disks or tapes; it cannot be a combination of the two device types. However, you can mix different drive types within one set, for example, two RK05's and one RK06.
SAVE volume	One of the magnetic tapes or disks of a SAVE set.
SAVE set name	One-six alphanumeric characters used to identify a SAVE set. By default, the SAVE set name is the same as the pack ID from which it was created. However, you can specify another name for the SAVE set.
Like disks	<p>Like disks are units of the same device size (that is, the same number of data blocks.) SAVRES considers the following devices alike:</p> <ul style="list-style-type: none">— Two RP06 disks— An RM02 and an RM03— An RP04 and an RP05— An RK05 (RK05J) and one unit of an RK05F <p>Therefore, if you copied an RM02 to a SAVE set, the SAVE set can later be restored either to an RM03 or another RM02.</p>

Normally, you use the SAVRES program off line while running INIT.SYS. You can also use SAVRES on line, during timesharing. See the *RSTS/E System Manager's Guide* for more information about running SAVRES on line.

NOTE

You must run SAVRES off line to copy (IMAGE) or restore (RESTORE) the system disk with which you are currently running on line. To restore the system disk, you must boot the save set or image copy and select the SAVRES option.

SAVRES prints messages on your terminal during an operation to tell you its status. Some messages are for information only; other messages are error conditions that may require your attention during the dialogue, mount, transfer, or verification phases of SAVRES.

When the program encounters an error during a dialogue or mount operation, it asks you to correct the problem and to retype the appropriate command. Such errors never affect the integrity of the data being transferred.

Errors that occur while SAVRES is transferring or verifying data can, however, jeopardize data. In this case, SAVRES resolves the problem, aborts the run, or asks you to continue or to abort the program. The program gives you information to help you protect your data by printing informational messages and error messages on your terminal. When SAVRES completes a RESTORE or IMAGE operation, it prints an optional summary report. This report describes:

- The operation performed
- Device information
- Start date and time statistics
- Run total statistics

The run statistics include the number of errors encountered during the operation.

If you are not familiar with SAVRES or want more detailed information about it, see the *RSTS/E System Manager's Guide*.

RESTORE—Recreate a Disk From Tape or Disk

The RESTORE function recreates a RSTS/E file-structured disk from a pre-V9.7 SAVE set. Because SAVRES writes the SAVE set in the SAVE format, no other RSTS/E software can perform this rebuild process. Before transferring any data, SAVRES tries to extract bad block information from the destination disk and, if it finds any bad blocks, incorporates them into the new BADB.SYS file.

NOTE

When using RESTORE, you must ensure that the disks from which the data came and that which you are restoring to are **like disks** as described for SAVRES.

The SAVRES program may encounter bad blocks during a RESTORE operation. If it does, it scans the SATT.SYS file to determine if there is a place where the block corresponding to a bad block can be relocated. If a large enough area exists on the destination disk, the program simply moves the data to the new location and modifies the directory information accordingly.

The relocation of blocks may require RESTORE to change a file's characteristics. This can occur, for example, if the program encounters a bad cluster while transferring a contiguous file. To relocate the cluster that falls on the bad block, RESTORE must make the file noncontiguous. Changes of this type can cause a few problems, but RESTORE preserves the data and informs you of these adjustments.

The operation ends if there is no way RESTORE can relocate the data cluster. This can occur if:

- No unallocated pack cluster remains on the disk.
- The file cluster size is larger than the pack cluster size and there is not an equivalent number of contiguous pack clusters left on the disk.

When SAVRES creates a SAVE set, it includes on the output volume an extra set of directory blocks in case some directory blocks are found to be bad during a RESTORE operation. These additional blocks are reflected in the total block count for a SAVE Summary Report. Because the extra blocks are needed only when bad blocks are encountered during a RESTORE operation, it is unnecessary for SAVRES to transfer these blocks to the restored volume.

Thus, you will notice a discrepancy between the number of blocks transferred for a SAVE operation and the number transferred during a RESTORE. Furthermore, because the extra directory blocks are not transferred to the restored volume, under certain circumstances you may restore your data to one less volume than existed in the SAVE set.

The following example illustrates the restoration of an RM03 disk from a tape SAVE set named SAVSET. The two SAVE set volumes are mounted on drives MM1: and MM2:, write-locked. The destination disk is mounted on drive DR1:, write-enabled.

RESTORE Dialogue

Option: SAVRES

Response—Type SAVRES to the INIT.SYS Option: prompt.

SAV/RES Function: RESTORE

Explanation—SAVRES asks for the particular function you want to use.

Response—Type RESTORE to begin the RESTORE operation. The example plans to recreate an RM03 disk from a tape SAVE set.

From device? MM1:

Explanation—RESTORE prints the From device? question. Specify the device name and the unit number of the SAVE set medium. If you include a SAVE set name in the device specification, RESTORE checks it against the name already on the set. If they do not match, RESTORE issues a warning message informing you of the discrepancy.

Response—Type the device name and unit number of the input medium. In the example, the response is MM1: because the input medium is tape mounted on drive 1.

*** SAVE Set Name/default Pack ID is SAVSET

Explanation—RESTORE reads the SAVE set name from the input medium and displays it. Normally, RESTORE uses the name of the input SAVE set as the Pack ID of the output volume. If you want to use a different pack ID, you can include a new pack ID in your answer to the next question.

To RSTS Disk? DR1:TSTPAK

Explanation—RESTORE asks for the output disk of the RESTORE operation. DR indicates the device mnemonic of the RM03 disk.

NOTE

You cannot use SAVRES on a disk with a pack cluster size of 32 or 64. If you attempt to use SAVRES on a disk with these cluster sizes, the following messages will appear:

SAVRES cannot be used with disks of cluster size greater than 16.

```
Dismount Device:  MM1:
                  Set Name:  SAVSET
                  Seq #:    1
                  Creation date:  Friday, 13-Jun-89
                  Expiration date: Sunday, 1-Oct-89
```

Response—Type the device name, unit number, and pack ID of your output disk (if you want to change the pack ID name). In the example, the response is DR1:TSTPAK because it is recreating an RM03 disk mounted on drive 1. The new pack ID is TSTPAK.

Note—If the message "Performing limited hardware scan." was printed during this boot and you try to initialize or copy to a nonexistent disk, then you will receive the following error messages:

That disk was not found during limited hardware scan.

Do you wish to perform a reboot with full hardware scan <YES>?

Response—If the user answers YES, then the distribution device will be rebooted and the "Performing limited hardware scan." message will NOT reappear.

```
*** The volume on DR1: is a RSTS disk
*** Pack ID is MYPAK
*** Pack will be reinitialized
Mount it anyway <NO>? Y
*** Pack ID is TSTPAK
```

Explanation—RESTORE checks the pack ID of the output disk. It then prints a message showing you that the disk is a RSTS/E disk, has a Pack ID of MYPAK, and that RESTORE will reinitialize it. RESTORE issues a mount question that gives you the option to mount the disk or not.

Response—Type Y to mount the disk and reinitialize it. Type N or press **RETURN** to cancel the instruction. RESTORE then returns to the To RSTS Disk? question. In the example, the response is Y because the data on the disk is no longer valuable. RESTORE then initializes the disk and prints a message showing the new pack ID.

```
Verify (Yes or No) <NO>? RET
```

Explanation—RESTORE asks if you want to verify the accuracy of the data transfer. When RESTORE verifies the transferred data, it performs two operations rather than one. That is, the program performs two passes on the data: once for the transfer and once for the comparison.

Response—Type N or press **RETURN** to skip the verify pass. Or, type Y to perform the data verification. In the example, the response is **RETURN** because the comparison of the input data to the data already transferred to the destination disk is not essential during this particular run.

```
Proceed (Yes or No)? Y
```

Explanation—RESTORE asks if you are ready to proceed.

Response—Type Y to proceed. Or, type N to cancel the operation and return to the SAV/RES Function: prompt. In the example, the response is Y.

```
*** Begin RESTORE from MM1: to DR1: at 08:28 PM
```

```
Dismount Device:      MM1:
      Set Name:      SAVSET
      Seq #:         1
      Density:       800
      Creation date:  Friday, 13-Jun-89
      Expiration date: Sunday, 1-Oct-89
```

```
Mount volume # 2 of SAVE Set SAVSET
```

```
Device ? MM2:
```

```
Proceed (Yes or No)? Y
```

```
*** Begin RESTORE from MM2: to DR1: at 08:32 PM
```

```
Dismount Device:      MM2:
      Set Name:      SAVSET
      Seq #:         2
      Density:       800
      Creation date:  Friday, 13-Jun-89
      Expiration date: Sunday, 1-Oct-89
      Dismount Device: DR1:
```

Pack ID: TSTPAK
Pack Clustersize: 8
Creation date: Friday, 13-Jun-89
Please label this volume!

--- RESTORE operation completed at 08:37 PM

Explanation—RESTORE displays a message to indicate it has begun the transfer. If the transfer involves multiple volumes, RESTORE transfers the first volume, prints input medium information and prompts you for the next volume. After you mount the next volume, specify its device location, and type Y at the Proceed? prompt, RESTORE continues with the data transfer. RESTORE continues in this manner for each SAVE set volume. When RESTORE finishes the final volume, it prints an output dismount message and informs you that the operation is completed.

Response—Mount the additional Save set volumes when prompted. Type the device location and unit number of the drive on which the next volume is mounted. Type Y to the Proceed? prompt when you are ready to continue.

In the example, volume 2 of SAVE set SAVSET is mounted on tape drive MM2. Volume two is the final volume in the SAVE set.

Summary Report

RESTORE of SAVE Set SAVSET to DR1:TSTPAK

Input Device: Magtape
Set Name: SAVSET
of volumes: 2
Density: 800
Creation date: Friday, 13-Jun-89
Expiration date: Sunday, 1-Oct-89
Output Device: DR1:
Pack ID: TSTPAK
Pack Clustersize: 8
Creation date: Friday, 13-Jun-89

RESTORE started on Friday, 13-Jun-89, at 08:28 PM

Explanation—The Summary Report prints the SAVE set name, the pack ID, and label information for both the input and output medium, in addition to the date and time of the RESTORE operation.

Run Statistics

Transfer Totals:

Total of 54184 blocks transferred

Error Totals:

Total of 0 new bad blocks encountered on destination.

0 files structurally altered.

Timing Totals:

Total elapsed time: 0 hrs., 9 mins., 36 secs.

Total wait time: 0 hrs., 0 mins., 16 secs.

Total process time: 0 hrs., 9 mins., 20 secs.

SAV/RES Function: **RET**

Option:

Explanation—The Run Statistics Report prints the number of blocks transferred, the number of bad blocks encountered, and the times required to perform various operations. RESTORE returns to the SAV/RES Function: prompt when the operation has ended.

Response—Press **RETURN** or CTRL/Z to return to the INIT.SYS Option: prompt.

NOTE

If you are using the output of a RESTORE operation as a system disk, you must use the INIT.SYS START option to reinstall the desired monitor Save Image Library (SIL). Before you use START, you must also redo any necessary HARDWR suboptions (such as changing Hertz) because the SAVE option clears various items set up by the HARDWR suboptions. This procedure is necessary because a disk can be saved with SAVE from one system disk and restored with RESTORE on a system with a different hardware configuration.

IDENTIFY—Extract Label Information

The IDENTIFY function obtains label information from a SAVE set volume or a RSTS/E file-structured disk.

The following example lists the label characteristics of both a SAVE set and a RSTS/E disk. The SAVE set volume is mounted on drive MM1:, write-locked. The RSTS/E disk is mounted on drive DR1:, write-locked.

IDENTIFY Dialogue

Option: SAVRES

Response—Type SAVRES to the INIT.SYS Option: prompt.

SAV/RES Function: IDENTIFY

Explanation—SAVRES asks for the particular function you want to use.

Response—Type IDENTIFY or ID to begin the IDENTIFY operation. The example plans to identify a SAVE set volume mounted on drive MM1:.

From device? MM1:

Explanation—IDENTIFY prints the From device? question. Specify the device name and the unit number of the SAVE set you want to identify. If you include a SAVE set name or pack ID in the device specification, IDENTIFY checks it against the name already on the set. If the names do not match, RESTORE issues a warning message informing you of the discrepancy and then prints the From device? question again.

Response—Type the device name and unit number of the medium you want to identify. In the example, the response is MM1:, because the input medium is tape, mounted on drive number 1.

Device:	MM1:
Set Name:	SAVSET
Seq #:	1
Density:	1600
Creation date:	Friday, 13-Jun-89
Expiration date:	Sunday, 1-Oct-89

Explanation—IDENTIFY prints label information for the tape SAVE set.

SAV/RES Function: IDENTIFY DR1:

Explanation—IDENTIFY returns to the SAV/RES Function: prompt.

Response—Type the name of the next medium to identify. You can also include the device name and unit number of the medium in your response. IDENTIFY then skips the From Device? question.

If you do not need to identify any more media, press **[RETURN]** to return to the INIT.SYS Option: prompt.

In the example, the response is IDENTIFY DR1:. This requests SAVRES to identify the disk pack mounted on DR1:.

Device:	DR1:
Pack ID:	TSTPAK
Pack Clustersize:	8
Creation date:	Friday, 13-Jun-89

SAV/RES Function: **[RET]**

Option:

Explanation—IDENTIFY prints the label information of the disk pack mounted on DR1:. IDENTIFY returns to the SAV/RES Function: prompt when the operation has ended.

Response—If you do not need to identify any more media, press **[RETURN]** or CTRL/Z to return to the INIT.SYS Option: prompt.

IMAGE - Make a Copy of a Disk

The IMAGE function makes an equivalent copy of a RSTS/E file-structured disk; however, only transfers from disk to like disk are legal when using the IMAGE operation. Like disks are units that have exactly the same device size. The SAVRES program handles bad block recovery during an IMAGE operation in the same way as RESTORE.

NOTE

If you are using the output of a RESTORE operation as a system disk, you must use the INIT.SYS START option to reinstall the desired monitor Save Image Library (SIL). Before you use START, you must also redo any necessary HARDWR suboptions (such as changing Hertz) because the IMAGE option clears various items set up by the HARDWR suboptions. This procedure is necessary because a disk can be saved with IMAGE from one system disk and carried to a system with a different hardware configuration.

The following example shows an IMAGE operation that copies an RP04 disk to an RP04 disk and verifies the transfer in the same pass. The source disk is mounted on drive DB0:, write-locked. The destination disk is mounted on drive DB1:, write-enabled.

IMAGE Dialogue

Option: SAVRES

Response—Type SAVRES to the INIT.SYS Option: prompt.

SAV/RES Function: IMAGE/NOERROR

Explanation—SAVRES asks for the particular function you want to use.

Response—Type IMAGE to begin the IMAGE operation. The /NOERROR switch causes SAVRES to end the operation whenever the program encounters a run-time error. Before the program aborts, it prints an error message indicating the source of the problem.

From RSTS disk? DB0:

Explanation—IMAGE prints the From RSTS disk? question. Specify the disk from which you want to copy the data. If you include a pack ID in the device specification, SAVRES checks to see if it matches the actual pack ID on the disk. If the pack IDs do not match, SAVRES issues a warning message and prints the From RSTS Disk? question again.

NOTE

You cannot use SAVRES on a disk with a pack cluster size of 32 or 64. If you attempt to use SAVRES on a disk with these cluster sizes, the following messages will appear:

SAVRES cannot be used with disks of cluster size greater than 16.

```
Dismount Device:  MM1:
                  Set Name:  SAVSET
                  Seq #:    1
                  Creation date:  Friday, 13-Jun-89
                  Expiration date: Sunday, 1-Oct-89
```

Response—Type the device name and unit number of the disk you want to copy. In the example, the response is DB0: because the source disk is mounted on drive DB0:.

*** Input Pack ID/default Output Pack ID is SOURCE

Explanation—IMAGE reads the pack ID from the input disk and displays it on your terminal.

To RSTS DB: Disk? DB1:NICOLA

Explanation—IMAGE requests the device name and unit number of the output disk. DB indicates the device mnemonic of the RP04 disk.

Response—Type the device name, unit number, and pack ID of your output disk (if you want to change the pack ID name). In the example, the response is DB1:NICOLA because it is copying to an RP04 disk mounted on drive 1. The new pack ID is NICOLA.

*** The volume on DB1: is a RSTS disk

*** Pack ID is OUTPUT

*** Pack will be reinitialized

Mount it anyway <NO>? Y

*** Output Pack ID is NICOLA

Explanation—IMAGE checks the pack ID of the output disk. It then prints a message showing you that the disk is a RSTS/E disk, has a pack ID of OUTPUT and that IMAGE will reinitialize it. IMAGE issues a mount question that gives you the option to mount the disk or not.

Response—Type Y to mount the disk and reinitialize it. Type N or press **RETURN** to cancel the instruction. IMAGE then returns to the To RSTS DB: Disk? question. In the example, the response is Y because the data on the disk is no longer valuable. IMAGE then initializes the disk and prints a message showing the new pack ID.

Verify (Yes or No) <NO>? Y

Explanation—IMAGE asks if you want to verify the accuracy of the data transfer. When IMAGE verifies the transferred data, it performs two operations rather than one. That is, the program performs two passes on the data, once for the transfer and once for the comparison.

Response—Type N or press **RETURN** to skip the verify pass. Or, type Y to perform the data verification. In the example, the response is Y.

Proceed (Yes or No)? Y

Explanation—IMAGE asks if you are ready to proceed.

Response—Type Y to proceed. Or, type N to cancel the operation and return to the SAV/RES Function: prompt. In the example, the response is Y.

Begin IMAGE copy from DB0: to DB1: at 11:02 AM
Begin VERIFY pass from DB0: to DB1: at 11:04 AM
0 differences found
Dismount Device: DB1:
Set Name: NICOLA
Pack clustersize: 8
Creation date: Friday, 13-Jun-89
Please label this volume!
--- IMAGE copy operation completed at 11:07 AM

Explanation—IMAGE displays a message when it begins to transfer data and when it begins the verify pass. After completing the data comparison, IMAGE prints the number of differences found between the two devices. It then issues the output device dismount message. Immediately after IMAGE prints the dismount request, it prints a message to show you the copy operation ended successfully.

Summary Report
IMAGE copy of DB0:SOURCE to DB1:NICOLA
Input Device: DB0:
Set Name: SOURCE
Pack clustersize: 8
Creation date: Friday, 13-Jun-89
Output Device: DB1:
Pack ID: NICOLA
Pack Clustersize: 8
Creation date: Friday, 13-Jun-89
RESTORE started on Friday, 13-Jun-89, at 11:02 AM

Explanation—IMAGE prints the Summary Report unless you suppress it by using the /NOSTATS switch. The report includes the pack ID and label information of each disk, in addition to the date and time that the IMAGE operation was run.

Run Statistics

Transfer Totals:

Total of 24400 blocks transferred

Error Totals:

Total of 0 bad compares.

Total of 0 new bad blocks encountered on source.

Total of 0 new bad blocks encountered on destination.

0 files structurally altered.

Timing Totals:

Total elapsed time: 0 hrs., 5 mins., 22 secs.

Total wait time: 0 hrs., 0 mins., 0 secs.

Total process time: 0 hrs., 5 mins., 22 secs.

SAV/RES Function: **RET**

Option:

Explanation—The Run Statistics Report prints the number of blocks transferred, the number of bad blocks encountered, and the times required to perform various operations. IMAGE returns to the SAV/RES Function: prompt when the operation has ended.

Response—Press **RETURN** or CTRL/Z to return to the INIT.SYS Option: prompt.

Refer to the *RSTS/E System Manager's Guide* for a description of SAVRES error messages.

START—Start a RSTS/E Monitor

The START option activates a RSTS/E monitor. Use the START option if you need to start timesharing.

START Dialogue

Option: START

Response—Type START or START <monitor name> to the INIT.SYS Option: prompt.

If you do not specify a monitor name or press **RETURN** to the Option: prompt, START starts the monitor that was used in the previous timesharing session.

If you are starting timesharing for the first time on this system disk, INIT.SYS searches the list of monitors, which are stored in account [0,1] with the file type of .SIL. SIL stands for save image library, which is a file that stores the monitor code.

If INIT.SYS finds only one SIL, it installs that SIL and prints the message:

Starting xxxxxx monitor

If INIT.SYS finds more than one SIL, it prompts for the monitor name instead:

Monitor name to START <xxxxxx>?

Type the name of the monitor you want to install.

START now checks that the SWAP.SYS file exists in account [0,1] on the system disk, is large enough to hold one job at the current SWAP MAX, and is contiguous. If the file does not exist, START attempts to create SWAP.SYS at the required size. If the file exists but is not contiguous or large enough, START deletes the current SWAP.SYS file and attempts to create a new SWAP.SYS file that is both contiguous and large enough (SWAP MAX * 4). If START cannot find enough free contiguous disk space to create a minimum SWAP.SYS file, it prints the following error message:

?Not enough contiguous disk space to create minimum SWAP.SYS file

START then attempts to create a SWAP.SYS file that is smaller than the one you specified yet still meets the minimum requirements. This may take up to one minute. If START finds it can create a SWAP.SYS file, it prints these messages:

SWAP.SYS can be created if SWAP MAX is reduced to xxK

New SWAP MAX <xxK>?

Press **RETURN** to accept the default value, indicated by xx in the example. Or type CTRL/C to return to the Option: prompt. You can then use the FILE suboption of REFRESH to create more disk space.

If START cannot find enough contiguous disk space to create a minimum SWAP.SYS file, it prints these messages:

You must free some disk space to start timesharing.

Option:

Use the FILE suboption of REFRESH to create more contiguous disk space.

Any memory allocation changes?

Explanation—START asks if you want to make changes to the memory allocation table for this timesharing session. You can be forced to make memory allocation changes.

Response—Type YES to make changes to the memory allocation table. (See the section, DEFAULT Option.) Type NO or press **[RETURN]** if you do not want any changes.

START now checks that the CRASH.SYS file exists in account [0,1] on the system disk, is large enough for the installed RSTS/E monitor and extended buffer pool allocation, and is contiguous. If the file does not exist, START attempts to create CRASH.SYS at the required size. If the file exists but is not contiguous or large enough, START deletes the current CRASH.SYS file and attempts to create a new CRASH.SYS file that is both contiguous and large enough. If START is unsuccessful it prints these error messages:

```
?Not enough contiguous disk space to create minimum CRASH.SYS file
Crash dump automatically disabled
```

When a crash occurs, the RSTS/E monitor dumps the contents of the read/write area of monitor memory into CRASH.SYS. Because the crash dump facility preserves the state of the system at the time of the crash, CRASH.SYS contains important diagnostic information. For these reasons, DIGITAL recommends that you always have crash dump enabled during timesharing. In general, SPRs submitted on system crashes without crash dumps will be answered by DIGITAL as "Insufficient information."

Therefore, if you see the Crash dump automatically disabled message, follow these steps to enable crash dump:

1. After you begin timesharing, delete unnecessary files to create more contiguous disk space. Or, move some files to a nonsystem disk.
2. Shut down the RSTS/E monitor using the SHUTUP program.
3. Use the START option to start timesharing. If you do not see the Crash dump disabled message, you know that INIT.SYS was able to create the CRASH.SYS file.

```
dd-mmm-yy  hh:mm AM/PM
```

Explanation—START prints the current date and time. Then it pauses for several seconds to prepare the system for timesharing. START performs many preparatory tasks, among the more important being:

- Verify that all configured hardware exists and that it responds properly.
- Disable any device it cannot find or that you have disabled with the HARDWR option. If this is the case, START prints the devices it disables.
- Enable all configured terminal controllers and disable any that do not respond.
- Set up monitor, cache, and device tables.
- Load the installed monitor into memory.

START then transfers control to the SYSINI.COM command file, which executes the START.COM command file. See the *RSTS/E System Manager's Guide* for details about START.COM.

Refer to Appendix A for the description of START error messages.

Appendix

Insert tabbed divider here. Then discard this sheet.



Part 6
Appendixes



Appendix A

System Installation Error Messages

Initialization Code Error Messages

The RSTS/E system initialization code routines make many checks to ensure the consistency of system structures. Initialization routines compare existing structures with their definitions and with references in other parts of the system. The checks must be successful; if not, the routines detect a consistency error, which indicates that the system is corrupted.

The initialization routines may also encounter errors while attempting to execute initialization options. The error text for many of these errors is preceded by the message **FATAL RSTS/E SYSTEM INITIALIZATION ERROR**. The initialization code prints a descriptive error message and returns to the Option: prompt. If such an error occurs, follow the error recovery procedures listed below. If these procedures are unsuccessful, consult your DIGITAL Software Support Specialist.

For many of the errors, no recovery procedures exist. If such an error occurs, you should submit a Software Performance Report (SPR) as noted.

ACCOUNT [1,2] MISSING FROM OUTPUT DISK

User Action: Reinitialize the disk as a system disk and create the library account.

BAD [0,1] DIRECTORY

User Action: Reboot the system disk and retry the operation. If the retry fails, use DSKINT to reinitialize the disk.

BADB.SYS NOT FOUND - RESULTS UNPREDICTABLE

User Action: Reboot the system disk and retry the operation. If the retry fails, use DSKINT to reinitialize the disk.

BUFF.SYS NOT FOUND OR TOO SMALL-DECTAPE DISABLED

Explanation: Warning message only.

User Action: Shut down the system and use REFRESH to create the file at the required size.

CANNOT REFRESH THIS DISK

User Action: Reinitialize the disk.

CAN'T RESET MEMORY TABLE - NOT ENOUGH ROOM

User Action: Regenerate a smaller monitor to reduce the number of small buffers selected.

CANNOT START WITH THIS SWAP MAX AND MEMORY TABLE

User Action: Use DEFAULT to change the SWAP MAX and/or memory allocation table.

CLUSTER 1 (REQUIRED FOR PACK LABEL) CONTAINS A BAD BLOCK

User Action: If the pack cluster size for the disk is greater than the device cluster size, use DSKINT to reinitialize the disk with a lower pack cluster size. If the error recurs, use a different disk.

CLUSTER ALLOCATED TO [P,PN] filnam.typ IS NOT ON A PACK CLUSTER BOUNDARY

User Action: REBUILD asks whether to delete the file, then confirms your response.

[P,PN] CLUSTER MAP IN UFD DISAGREES WITH MFD

User Action: REBUILD asks whether to zero the account and confirms your response.

[P,PN] CLUSTER SIZE IS INCORRECT

User Action: REBUILD asks whether to delete the account and confirms your response.

DEFAULTS CORRUPTED. RESETTNG DEFAULTS...

Explanation: INIT found some defaults to be invalid. It will pick new values to be used.

DEFAULTS CANNOT BE SET - NOT A VALID SYSTEM DISK

User Action: Use the COPY option to copy the files from the distribution device to this disk.

DEVICE xx: DOES NOT INTERRUPT - DEVICE DISABLED

Explanation: The device may be broken or configured incorrectly.

User Action: Call your DIGITAL Field Service engineer. If the disk is an RC25 or a TU81, a cable may be disconnected.

**DEVICE CONTROLLER TABLE (DDCTBL) DECLARES TOO MANY UNITS FOR CONTROLLER
SIL CANNOT BE INSTALLED**

User Action: Submit an SPR with a copy of the SIL and INIT.SYS.

**DEVICE CONTROLLER TABLE (DDCTBL) HAS AN ILLEGAL FORMAT
SIL CANNOT BE INSTALLED**

User Action: Submit an SPR with a copy of the SIL and INIT.SYS. You may have a corrupt Distribution Kit.

DEVICE ERROR WHEN TRYING TO BOOTSTRAP DEVICE

User Action: Make sure that the device is on line and ready. If the error recurs, try a different device.

DEVICE HUNG OR WRITE-LOCKED

User Action: Make sure that the device is on line and ready. If the error recurs, try a different device.

**DEVICE XDn: CSR MUST BE DECLARED WITH HARDWR, CSR SUB-OPTION
- DEVICE DISABLED**

Explanation: The XD device is not located at a DIGITAL standard CSR assignment.

User Action: Use the CSR suboption of HARDWR to set the correct CSR address for XDn.

**DEVICE XDn: INTERNAL MICRO-DIAGNOSTIC FAILURE - DEVICE
DISABLED**

Explanation: The error message indicates that INIT encountered a device micro-diagnostic error.

User Action: Call your DIGITAL Field Service engineer.

**DEVICE XEn: MICRO-DIAGNOSTIC FAILURE, CODE nnn
DEVICE XHn: MICRO-DIAGNOSTIC FAILURE, CODE nnnnnn**

Explanation: These failures indicate that the specified device failed the micro-diagnostic test with the failure code shown. In most cases, the device should be checked by your field service representative. Some of the failure codes are interpreted by INIT. These codes display the additional message:

Device not connected to transceiver

**DEVICE VHn: INTERNAL MICRO-DIAGNOSTIC FAILURE, CODE xxxx -
DEVICE DISABLED**

Explanation: The error message indicates that INIT encountered a device micro-diagnostic error.

User Action: Call your DIGITAL Field Service Engineer.

**DIRECTORY ENTRY FOR [P,PN] filnam.typ CONTAINS PACK CLUSTER
NUMBER WHICH IS TOO BIG**

User Action: REBUILD asks whether to delete the file and confirms your response.

DIRECTORY ERROR DETECTED IN RDB

User Action: Reinitialize the disk.

DIRECTORY ERROR - FILE NOT FOUND

User Action: Reinitialize the disk.

DIRECTORY ERROR - [0,1] NOT FOUND

User Action: Reinitialize the disk.

[0,1] DIRECTORY NOT FOUND

User Action: Reinitialize the disk.

DISK BLOCK 0 (REQUIRED FOR BOOTSTRAPS) IS BAD

User Action: Reinitialize the disk. If the error recurs, use a different disk.

DISK ERROR DURING DSKINT BUILD PHASE

User Action: Reinitialize the disk. If the error recurs, use a different disk.

DISK HUNG OR DATA ERROR DURING OVERLAY

User Action: Make sure that the device is on line and ready. If the error recurs, try a different device.

DISK STRUCTURE CANNOT BE REBUILT

User Action: Reinitialize the disk.

DOUBLY ALLOCATED BLOCK FOUND AT DEVICE CLUSTER nn. THE BLOCK IS ALLOCATED TO [p,pn] filnam.typ AND [p,pn] filnam.typ

User Action: REBUILD lets you choose the file to delete, then confirms your response.

?DRIVE NOT READY:

User Action: Make sure that the disk drive is on line and READY. Press RETURN to retry the operation. Type any other character to abort the operation.

DSKINT ERROR - ATTEMPT TO FORMAT UNFORMATTABLE DISK

User Action: Submit an SPR and a copy of INIT.SYS and console output.

DSKINT OR SYSGEN ERROR - DSKINT ALLOCATION FAILURE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

EOF READING INIT.SYS

User Action: Submit an SPR and a copy of INIT.SYS and console output.

ERR FILE INVALID

User Action: Copy the file ERR.ERR from the distribution medium to the system disk.

ERR FILE NOT FOUND

User Action: Copy the file ERR.ERR from the distribution medium to the system disk.

ERROR FILE HAS AN INVALID FILE FORMAT

Explanation: The error message file you specified is not exactly sixteen blocks long.

User Action: Make sure you copied from the correct RSTS/E Distribution Kit.

ERROR DETECTED WHILE READING ERROR RECORD SECTOR #n

Explanation: Warning message only. Error occurred during reading of factory error records.

User Action: Disregard the error message.

ERROR-NO SETUP FOR DISK xx:

User Action: Regenerate your monitor. If the problem recurs, submit an SPR, your monitor .SIL file, and a copy of INIT.SYS and console output.

ERROR-UNKNOWN DISK xx:

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your .SIL file, and console output.

EXCESSIVE BAD CLUSTERS

User Action: If you need to use the current disk, use DSKINT to increase the pack cluster size. If the error recurs, use a different disk.

FATAL DISK ERROR DURING CONTROL RESET

User Action: Retry the DSKINT. If the error recurs, call the DIGITAL field service engineer to repair the disk drive.

FATAL ERROR - NO SMALL BUFFERS LEFT

User Action: Regenerate the system and configure more small buffers or use the Default Buffers sub-option to increase the number of small buffers available.

FATAL - ETHERNET PHASE EXCEEDS AN APR SIZE

User Action: Submit an SPR and include a copy of your monitor .SIL file.

FATAL - FIP PHASE EXCEEDS AN APR PHASE

User Action: Submit an SPR and include a copy of your monitor .SIL file.

FATAL I/O DURING OVERLAY

User Action: Make sure that the device is on line and ready. If the error recurs, try a different device.

FILE NOT CONTIGUOUS

Explanation: The file you specified is not contiguous on disk. The error message file must be contiguous.

FILE NOT FOUND

Explanation: The initialization code did not find the file you specified on disk.

xxx FILE NOT FOUND WHEN REMOVING IT

Explanation: Warning message only. xxx is SIL or ERR. The initialization code did not find a file when trying to make it deletable.

[P,PN] filnam.typ HAS A BAD BLOCK

User Action: REBUILD asks whether to delete the file and confirms your response.

[P,PN] filnam.typ HAS FIRST DCN OUT OF RANGE

User Action: REBUILD asks whether to zero the account and confirms your response.

[P,PN] filnam.typ HAS INVALID ACCOUNTING ENTRY LINK

User Action: REBUILD asks whether to delete the file and confirms your response.

filnam.typ HAS INVALID FORMAT AND CANNOT BE COPIED

User Action: Submit an SPR including a copy of INIT.SYS, CONFIG.SYS, and your monitor .SIL file if DIGITAL supplied the file on the distribution medium. Regenerate your system monitor if the system installation process created the file.

FORMATTING FAILURE

Explanation: This error may indicate a bad disk pack or a bad disk drive.

User Action: Press RETURN to retry. Type anything else to abort the DSKINT and return to the Option: prompt. Make sure that the disk drive is write enabled.

GETCFG IS MISPLACED

User Action: Submit an SPR and include a copy of INIT.SYS, CONFIG.SYS, and your monitor .SIL file.

[P,PN] HAS A BAD BLOCK

User Action: REBUILD asks whether to delete the account and confirms your response.

[P,PN] HAS CLUSTER NUMBER IN MAP WHICH IS TOO BIG

User Action: REBUILD asks whether to delete the account and confirms your response.

[P,PN] HAS HOLES IN CLUSTER MAP

User Action: REBUILD asks whether to zero the account and confirms your response.

[P,PN] HAS INCONSISTENT CLUSTER MAPS

User Action: REBUILD asks whether to zero the account and confirms your response.

[P,PN] HAS INVALID CLUSTER SIZE

User Action: REBUILD asks whether to delete the account and confirms your response.

ILLEGAL FILE NAME

Explanation: The file name you specified is not one to six alphanumeric characters.

User Action: Specify the correct file name.

INIT BUG - BAD DISK INDEX

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - CAN'T ALLOCATE FILE 2ND TIME

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - CAN'T CHECK PARITY

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - CAN'T FIND [0,1] AGAIN

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - CAN'T FIND FILE TO DELETE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - DIDN'T GET SAME CLUSTER 2ND TIME

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - DIDN'T GET SAME FILE CLUSTER 2ND TIME

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - FAILED TO CREATE FILE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - FAILED TO FIND FILE AGAIN

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - FAILED TO FIND FILE JUST CREATED

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - FILE EXISTS WHEN TRYING TO CREATE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - xxx - FILE NOT FOUND 2ND TIME

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - xxx - FILE NOT FOUND WHEN REMOVING IT

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - FILE SIZE COMPUTED WRONG

User Action: Make sure that the system device you are using contains valid system files from the distribution medium. If so, submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - FLOAT TABLE ERROR

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - INSTALL NOT SYNCHRONIZED at xxxxxx

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - MONITOR LAYOUT SCREWED UP

User Action: Submit an SPR and include a copy of your monitor .SIL file.

INIT BUG - NO SATT.SYS AT WIPEOUT TIME

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - NO UFD FOUND IN CREATE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - REBUILD FAILED TO FIND ALLOCATION ERROR

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - RNB TO WRONG DISK

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - SATT.SYS NONEXISTENT AT TIME OF WOMP

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - SETNEW TABLE TOO SMALL

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - START LINKED TOO LOW

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT BUG - UNKNOWN BA DEVICE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT LINK BUG - DEFBUF NOT ALIGNED

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT LINK BUG - DSTBL TOO LOW

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT LINK BUG - FIBUF NOT ALIGNED

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT LINK BUG - INSBUF NOT ALIGNED

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT LINK BUG - SATBUF NOT ALIGNED

User Action: Submit an SPR and a copy of INIT.SYS and console output.

INIT.SYS NOT FOUND - RESULTS ARE UNPREDICTABLE

User Action: Reboot the system disk and retry the operation. If the retry fails, reinitialize the disk.

INPUT FILE MISSING FROM SYSTEM DEVICE

User Action: Retry the procedure that generated the error. If the error recurs, submit an SPR and a copy of INIT.SYS and console output.

INSTALLED MONITOR DOES NOT SUPPORT THIS SYSTEM DISK

User Action: Regenerate a monitor that supports the system disk or use the COPY option to transfer the monitor to a disk it supports.

INSTALLED SIL INVALID

Explanation: The installed SIL is invalid as a monitor SIL.

User Action: Use the START option to install a valid SIL.

INVALID DATA IN ERROR RECORD SECTOR #n

Explanation: Warning message only. The error occurred during reading of factory error records.

User Action: Disregard the error message.

INVALID GROUP [255,*] FOUND IN MFD - ENTRY DELETED

Explanation: Informational message only.

INVALID RETRIEVAL ENTRIES FOR FILE [p,pn] filnam.typ - FIXED

Explanation: Warning message. REBUILD truncates the file.

INVALID SIL FORMAT - INIT AND MONITOR ARE DIFFERENT VERSIONS

User Action: Start a SIL that has the correct RSTS/E version number.

INVALID SIL FORMAT - MONITOR IS MISSING REQUIRED MODULES

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

I/O TO UNOPENED FILE

User Action: Submit an SPR and a copy of INIT.SYS and console output.

[P,PN] IS NOT A VALID ACCOUNT NUMBER

User Action: REBUILD asks whether to delete the account and confirms your response.

LABEL ID FIELDS FOR [p,pn] FIXED

Explanation: Warning message only.

LINK TO NAME BLOCK FOR [p,pn] IS BAD

User Action: Delete the account.

MAGTAPE ERROR OR INVALID FORMAT ON TAPE

User Action: Make sure that the tape drive heads are clean and correctly aligned. If the error recurs, try using a different drive.

MEMORY ADDRESSING PROBLEM

Explanation: Either the memory subsystem or the memory management hardware failed.

MFD NAME ENTRY CONTAINS A BAD LINK. ALL [1,1] FILES AND ACCOUNTS BEYOND [p,pn] filnam.typ WILL BE DELETED

User Action: REBUILD confirms your response.

MONITOR SIL CHANGED - REINSTALL IT

User Action: Use the START option to install the monitor SIL.

MONITOR SIL NOT FOUND

User Action: Use the START option again to install the SIL. If the error recurs, submit an SPR and a copy of INIT.SYS and console output.

MODULE xxxxxx HAS INVALID LENGTH

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx HAS INVALID TRANSFER ADDRESS

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx HAS WRONG LOAD ADDRESS

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx IS AN UNKNOWN NON-GENERIC PHASE

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx IS MISSING A REQUIRED SYMBOL

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx IS NOT ALIGNED ON A BLOCK BOUNDARY

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx NOT FOUND IN SIL

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx TOO LARGE

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx TOO SMALL

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MODULE xxxxxx TOTALLY MAPPED PORTION TOO LARGE

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

MUx: CONTROLLER TYPE IS UNSUPPORTED BY RSTS/E - DEVICE DISABLED

Explanation: During initialization, a controller identified itself as a type that RSTS/E does not support.

MUx: DOES NOT RESPOND TO DISK OR TAPE CONNECTS - DEVICE DISABLED

Explanation: The controller has identified itself as one that supports MSCP disks or TMSCP tapes, and yet does not respond correctly when we attempt to bring the disks or tapes online.

MUx: INTERNAL MICRO-DIAGNOSTIC FAILURE, CODE NNNNNN - DEVICE DISABLED

Explanation: The controller has failed its self-diagnostic tests and is not usable by RSTS/E. The code "nnnnnn" is an octal number that describes the cause of the failure.

MUn: IS MISSING THE FOLLOWING FCO: TQK50-I001 (EQ-1442-01)

Explanation: This message indicates that your TQK50 tape drive requires a hardware update in order to properly work under time-sharing.

User Action: Have your field service representative upgrade your TQK50 to the latest revision level.

MUx: TIMEOUT DURING INITIALIZATION, STEP nnnnnn - DEVICE DISABLED

Explanation: The controller did not complete its self-diagnostic tests within the required time period. The step number "nnnnnn" is for DIGITAL Field Service use.

MUx: TIMEOUT DURING TAPE SCC - DEVICE DISABLED

Explanation: The controller did not complete a Set Controller Characteristics command within the required time period. The message that appears depends on the type of controller (MSCP disk or TMSCP tape).

[P,PN] NAME BLOCK SPECIFIES WRONG PPN

User Action: Delete the account.

NO LIBRARY ACCOUNT ON THIS DISK

User Action: Reinitialize the disk and create a library account, or create account [1,2] on the disk.

NO ROOM FOR DIRECTORY ON OUTPUT DISK

User Action: Delete files, reinitialize the disk to create sufficient contiguous space on the disk for the file, or use a different disk.

NO ROOM FOR FILE ON OUTPUT DISK

User Action: Delete files, reinitialize the disk to create sufficient contiguous space on the disk for the new file, or use a different disk.

??? NO VALID V9.X MONITOR FILES IN [0,1]

User Action: Copy the required SIL to the system disk from the installation media.

NOT ENOUGH MEMORY FOR REQUIRED XBUF!

User Action: Regenerate a smaller monitor and reduce the number of small buffers selected.

NOT ENOUGH ROOM IN LOW MEMORY FOR MONITOR

Explanation: INIT cannot find enough contiguous, physical memory to place the monitor in low memory. Before printing this message, INIT attempts to position the monitor in the memory table, tries to reset the table, and prints the message ADJUSTING MEMORY TABLE at your terminal. When INIT cannot find enough space for the monitor, it prints the "NOT ENOUGH ROOM" message and returns to the Option: prompt.

User Action: You can then begin to generate a smaller monitor.

ONE OR MORE SYSTEM FILES MISSING

User Action: Use the COPY option to copy the files from the distribution media to [0,1] on this disk.

OPTION ATTEMPTED DURING BOOTSTRAP PHASE

User Action: Reboot the system and retry the operation. If the retry fails, submit an SPR and a copy of INIT.SYS and console output.

OPTION NOT AVAILABLE

Explanation: The option you requested is not available until you bootstrap the system disk.

OUTPUT DISK IS NOT A SYSTEM DISK

User Action: Reinitialize the disk as a system disk.

OVERLAY HANDLER IN ERROR

User Action: Submit an SPR and a copy of INIT.SYS and console output.

OVR NOT IN SIL

User Action: Regenerate the monitor.

PACK CLUSTER SIZE IS NOT 1, 2, 4, 8, 16, 32, OR 64

User Action: Reinitialize the disk.

PARITY CSR FOUND, BUT NOT RELATING TO MEMORY

User Action: Call your DIGITAL Field Service engineer.

PARITY CSR CONTROLS MORE THAN 31K

User Action: Call your DIGITAL Field Service engineer.

PRIORITY OF xx: INTERRUPT (PR_n) IS TOO HIGH - DEVICE DISABLED

User Action: Call the DIGITAL field service engineer to install the device correctly.

QUESTION ATTEMPTED DURING AUTO-RESTART

User Action: If the system disk needs rebuilding, start the system by typing START or pressing RETURN, thereby rebuilding the disk. If any other problem occurs, submit an SPR and a copy of INIT.SYS and console output.

REQUESTED DISK DRIVE NOT FOUND

User Action: Request a disk that is on the system.

REQUIRED SYMBOL xxxxxx MISSING FROM MONITOR

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

RLV DISK MUST BE STRAPPED FOR 22-BIT ADDRESSING

Explanation: The Q-BUS system has more than 256KB of memory, thus requiring 22-bit addressing. The system also contains an RL disk controller, but the controller is not set up for 22-bit addressing. The controller must be an RLV12, and it must be strapped for 22-bit addressing.

RSTS/E REQUIRES AT LEAST 124K WORDS OF MEMORY

Explanation: Your configuration is too small to run RSTS/E.

RSTS/E REQUIRES EIS!

User Action: Correct the hardware configuration to include EIS instructions.

RSTS/E REQUIRES A CLOCK!

User Action: Correct the hardware configuration to include a KW11P or KW11L clock.

RSTS/E REQUIRES MEMORY MANAGEMENT HARDWARE!

User Action: Correct the hardware configuration to include a memory management unit.

RUx: CONTROLLER TYPE IS UNSUPPORTED BY RSTS/E - DEVICE DISABLED

Explanation: During initialization, a controller identified itself as a type that RSTS/E does not support.

RUx: DOES NOT RESPOND TO DISK OR TAPE CONNECTS - DEVICE DISABLED

Explanation: The controller has identified itself as one that supports MSCP disks or TMSCP tapes, and yet does not respond correctly when we attempt to bring the disks or tapes online.

RUx: INTERNAL MICRO-DIAGNOSTIC FAILURE, CODE nnnnnn - DEVICE DISABLED

Explanation: The controller has failed its self-diagnostic tests and is not usable by RSTS/E. The code "nnnnnn" is an octal number that describes the cause of the failure.

RUx: TIMEOUT DURING INITIALIZATION, STEP nnnnnn - DEVICE DISABLED

Explanation: The controller did not complete its self-diagnostic test within the required time period. The step number "nnnnnn" is for DIGITAL Field Service use.

RUx: TIMEOUT DURING TAPE SCC - DEVICE DISABLED

Explanation: The controller did not complete a Set Controller Characteristics command within the required time period. The message that appears depends on the type of controller (MSCP disk or TMSCP tape).

[0,1] SATT.SYS IS NOT CONTIGUOUS

User Action: Reinitialize the disk.

SATT.SYS IS OVER 16 BLOCKS LONG

User Action: If the file structure on the disk is sound, submit an SPR and the disk. Otherwise, reinitialize the disk.

[0,1] SATT.SYS IS TOO SMALL FOR SAT

User Action: Reinitialize the disk.

SATT.SYS NON-EXISTENT AT TIME OF READ

User Action: If the file structure on the disk is sound, submit an SPR and a copy of INIT.SYS and console output. Otherwise, reinitialize the disk.

SATT.SYS NOT FOUND - RESULTS UNPREDICTABLE

User Action: Reboot the system and retry the operation. If the error recurs, reinitialize the disk.

filnam.SIL NOT FOUND - PLEASE INSTALL A SIL

Explanation: The SIL that you previously installed is not on the disk.

User Action: Use the START option to install a monitor SIL.

SWAP.SYS NOT CONTIGUOUS OR TOO SMALL

User Action: Re-create SWAP.SYS using the Refresh option.

SWAP.SYS NOT PRESENT IN [0,1]

User Action: Re-create SWAP.SYS using the Refresh option.

SYMBOL xxxxxx NOT FOUND IN MONITOR SYMBOL TABLE

User Action: Regenerate your monitor. If the problem recurs, submit an SPR and a copy of INIT.SYS and console output.

TOO MANY BA DEVICES

User Action: Submit an SPR and a copy of INIT.SYS, your monitor .SIL file, and console output.

TOO MANY BLOCKS IN DEVICE CONFIGURATION TABLE

User Action: Regenerate your monitor. If the problem recurs, submit an SPR, a copy of INIT.SYS and console output.

TOO MANY xx: CONTROLLERS GENERATED

User Action: Make sure that any edits to CONFIG.MAC are correct. If there are no editing errors, regenerate the system.

TOO MANY RH OR UNIBUS DEVICES

User Action: Submit an SPR and a copy of INIT.SYS and console output.

TOO MANY SUBLINES FOR nn:

Explanation: This message is a warning if the monitor generated for DHU (16 lines) or DZ11 (8 lines) is started on a QBUS system (DHU has only 8 lines and DZ11 has only 4 lines).

User Action: Make sure that any edits to CONFIG.MAC are correct. If there are no editing errors, regenerate the system.

TOO MANY UNIBUS DEVICES ON THIS 11/70

User Action: First, disable unnecessary devices with HARDWR or SET. If the error condition persists, use DEFAULT to lock all memory addresses above 124K. (The computer runs in 18-bit addressing mode instead of 22-bit addressing mode.) If the error condition is present after you lock memory, or if the computer has 124K or fewer words of memory, submit an SPR.

TOO MUCH MODIFICATION TO MONITOR REQUIRED

User Action: Regenerate to produce a monitor that is more closely configured to your system hardware.

TWO MAGTAPE UNITS HAVE THE SAME UNIT NUMBERS

User Action: Examine unit switches on magnetic tape drives and make sure that no two have the same unit number.

UFD HAS SIZE TOO LARGE FOR FILE [P,PN] filnam.typ - CHANGED TO XXX

Explanation: Warning message only. REBUILD corrects the condition.

UFD HAS SIZE TOO SMALL FOR FILE [P,PN] filnam.typ - CHANGED TO XXX

Explanation: Warning message only. REBUILD corrects the condition.

[0,1] UFD NOT FOUND

User Action: Reinitialize the disk.

UNABLE TO CREATE REQUESTED FILE(S)

User Action: Delete some files and retry the procedure, or request smaller files. Also, try using the FILE suboption of REFRESH to create files one at a time.

UNEXPECTED OVERLAY TRAP

User Action: Submit an SPR and a copy of INIT.SYS and console output.

UNEXPECTED TRAP THROUGH THE VECTOR AT nnn. TRAP OCCURRED FROM PC = nnnnnnn.

User Action: Submit an SPR and a copy of INIT.SYS and console output.

UNKNOWN DEVICE BOOTED

User Action: This error is of the result of a hardware failure. If this device has successfully booted this version of RSTS/E before, call the DIGITAL field service engineer to correct the hardware problem.

UNKNOWN RH CONTROLLER PRESENT

User Action: Call the DIGITAL field service engineer to correct the hardware configuration.

UNRECOVERABLE DISK ERROR ON xxn:

User Action: Make sure that the disk is mounted and write enabled (if necessary). If the disk is properly mounted, this error indicates a fatal disk error. Reformat and reinitialize the disk, or use a different disk.

This error is also often caused by a hardware failure. If this seems to be the case, contact the DIGITAL field service engineer.

USER-DEFINED ADDRESS FOR DEVICE xxn: NOT FOUND - DEVICE DISABLED

User Action: Use HARDWR to set the correct CSR address for xx:, or call the DIGITAL field service engineer.

USING KW11L CLOCK

Explanation: Warning message only. The installed SIL's defaults indicate a KW11P clock is preferred, but the KW11P clock is not present. RSTS/E uses the KW11L clock instead.

USING KW11P CLOCK AT LINE FREQUENCY

Explanation: Warning message only. The installed SIL's defaults indicate a KW11L clock is preferred, but the KW11L clock is not present. RSTS/E uses the KW11P clock instead.

VECTOR FOR DEVICE xx: (nnnn) ALREADY IN USE - DEVICE DISABLED

User Action: Use HARDWR to set the correct vector address for xx:, or call the DIGITAL field service engineer.

VECTOR TABLE FULL

User Action: Submit an SPR and a copy of INIT.SYS and console output.

WARNING - BAD BLOCK DOUBLY ALLOCATED TO BADB.SYS

Explanation: Warning message only.

WARNING - BOOTED DEVICE IS AT A NON-STANDARD CSR ADDRESS

Explanation: The initialization code successfully bootstrapped the device. The device is at a non-standard CSR address, but the device has not been declared at the non-standard CSR address.

Explanation: Before starting your RSTS/E monitor, use CSR (a HARDWR suboption) to declare this device at the non-standard address.

WARNING - DCN IN BADB.SYS TOO BIG

Explanation: Warning message only. The file structure on the disk being rebuilt appears invalid.

WARNING - DBn: IS DUAL PORTED

Explanation: Warning message only.

WARNING - DCN IN BADB.SYS NOT ON PACK CLUSTER BOUNDARY

Explanation: Warning message only.

WARNING - xxx FILE NOT FOUND - PLEASE SET DEFAULTS

Explanation: The SIL you are installing specifies a primary run-time system or error message file that is not present.

User Action: Use the DEFAULT option to specify a valid file.

WARNING - FILE filnam.typ NOT FOUND WHEN REMOVING OLD SIL

Explanation: Warning message only.

WARNING - LINK IN BADB.SYS IS BAD. BAD BLOCKS MAY BE LOST.

Explanation: Warning message only.

WARNING - MAIN MEMORY (cache) DISABLED AT STARTUP. RSTS/E WILL NOT USE (cache). SYSTEM MAY RUN SLOWLY.

Explanation: Warning message only. (cache) is CACHE, CACHE GROUP 0, or CACHE GROUP 1.

User Action: As this may cause your system to run slowly, contact the DIGITAL field service engineer.

WARNING - MAIN MEMORY (cache) IS FAILING REPEATEDLY. RSTS/E WILL NOT USE (cache). SYSTEM MAY RUN SLOWLY.

Explanation: Warning message only. (cache) is CACHE, CACHE GROUP 0, or CACHE GROUP 1.

User Action: As this may cause your system to run slowly, contact the DIGITAL field service engineer.

WARNING - NO SET UP FOR DEVICE xx

Explanation: You may have either a corrupt distribution kit or incompatible versions of INIT.SYS and the monitor .SIL.

User Action: Submit an SPR and a copy of INIT.SYS and console output.

XDn: DISABLED - LINE EXCEEDS CONTROLLER (XDn:) MAXIMUM

Explanation: This is an informational message only. No action is necessary. With the XD controller, it is possible to generate a monitor with DMPs and run the monitor on a system that has DMVs instead of DMPs. While the DMV physically supports a maximum of 12 lines, any RSTS/E system that was generated with DMPs could exceed this maximum. This error message tells you that the limit was exceeded.

XEn: TRANSCEIVER POWER FAILURE

XEn: PORT/LINK CABLE PROBLEM

Explanation: These failures point to a specific piece of the DEUNA/DELUA which is broken.

XHn: INITIALIZATION FAILURE

Explanation: This indicates that a checksum of either the hardware address registers or the micro-diagnostic ROM failed.

Appendix B

Address and Vector Assignments

The RSTS/E system initialization code performs a hardware configuration check each time the system disk (or distribution medium) is bootstrapped. In the absence of any information to the contrary, the initialization code assumes that all devices attached to the UNIBUS have been assigned addresses according to the manufacturing standards. The initialization code determines interrupt vectors automatically by forcing each supported device to interrupt. Although the HARDWR initialization option allows you to declare nonstandard address and vector assignments, DIGITAL recommends that you follow the standard configuration rules whenever possible.

Several devices have floating addresses. This means that the presence or absence of any floating address device will affect the assignment of addresses to other floating address devices. Similarly, many devices have floating vectors. According to the standard, interrupt vectors must be assigned in a specific sequence and the presence of one type of device will affect the correct assignment of interrupt vectors for other devices. Finally, there are many options that have fixed addresses and vectors. The following sections present the algorithms for assignment of floating addresses and vectors. Also included are the fixed assignments for devices supported by RSTS/E.

Floating Addresses

Currently the floating address devices include the devices listed in Table 25. Note that RSTS/E does not currently support all the devices listed. The following ground rules apply to these devices and future floating address devices:

- Only new devices will be assigned floating addresses. Devices now in production will keep their old addresses.
- Future devices may float both their address and interrupt vectors.
- The floating address space starts at 760010(8) and proceeds upward to 764000(8).
- A gap in the address space (no SLAVE SYNC) implies that a device does not exist.
- The first address of a new device type will always be on a 2^N word boundary, where N is the first integer greater than or equal to $\text{LOG}_2 M$ and M is the number of device registers.

Number of Registers in Device	Possible Boundaries
1	Any Word
2	XXXXXX0,XXXXXX4
3,4	XXXXXX0
5,6,7,8	XXXXX00,XXXXX20,XXXXX40,XXXXX60
9 thru 16	XXXXX00,XXXXX40

- A "gap" of at least one word will be left after each type of device, starting on the same boundary as the device. Note that the gap must be at least one word in length but may be longer than one word. Gap length is determined by the boundary on which the next must be addressed contiguously.

Address 760010 is reserved for the first DJ11. Since the DJ11 has four registers, additional DJ11s are assigned addresses modulo 10 (base 8) immediately following the first DJ11 (for example, 760010, 760020, and so forth). The modulo 10 (base 8) address following the last DJ11 is left empty and is known as the DJ11 gap. If there are no DJ11s, the gap is at 760010. If there is one DJ11, the gap will be at 760020. All gaps must be at least one word in length.

After all DJ11 addresses and the DJ11 gap are defined, the address for the first DH11 can be assigned. DH11s have eight registers, which implies a modulo 20 (base 8) boundary. The address of the first DH11 is the first modulo 20 address following the DJ11 gap. If there are no DJ11s (DJ11 gap at 760010), The first DH11 is assigned address 760020. Similarly, if there is one DJ11, the DJ11 gap will begin at 760020 and the next available modulo 20 boundary is 760040. All additional DH11s are assigned addresses modulo 20 immediately after the first DH11. The DH11 gap begins on the 20 boundary following the last DH11.

After all DH11 addresses and the DH11 gap are defined, DQ11, DU11, DUP11, LK11, DMC11, DZ11, and KMC11 through DMV11-AD addresses and the required gaps can be assigned in sequence by their rank. Addresses for any future floating address devices will be assigned in a similar manner.

Floating Address Worksheet

The algorithm for assignment of floating addresses is confusing for a configuration that consists of several types of floating address devices. The floating address worksheet, shown in Figure 13, is a graphic aid that allows you to quickly assign floating addresses to a device without referring to the formal rules. The floating address worksheet consists of 33 columns. The first column contains the floating addresses, from 760010 to 762000. The worksheet continues on for four pages, to accommodate all of the addresses. Note that the last address on the worksheet also appears as the first address of the worksheet on the following page. For example, the last address of the first worksheet is 760400. The first address of the worksheet on the next page is 760400. This allows you to carry over the information from the previous page.

NOTE

The floating address area continues to address 764000. If your configuration continues to this address, you can create an addition to the worksheet by adding 2000 to the last address listed on the worksheet, which is 762000.

Columns 2 through 33 contain the floating address device names. To the right of the worksheet is a List of Devices. Here you can enter the number of devices in your configuration. Below the List of Devices is a Record of Floating Addresses. Here you can record the device, the unit number, and the floating address.

You can also produce the information contained in this worksheet by running the FLOAT program. The FLOAT program is contained in the Unsupp system program package (see Phase 4 in Part 1).

Using the Worksheet

To use the worksheet:

1. In the spaces provided in the List of Devices, record the quantity of each type of floating address device in your configuration. For example, if you have two DJ11 and two DH11 devices, enter 2 in the space provided adjacent to the DJ11 and the DH11 in the List of Devices.
2. Begin at address 760010 of the worksheet under the DJ11 column and record the unit number for all DJ11s in your configuration. Begin with unit 0 and end with unit n-1, where n represents the number of DJ11s in your configuration. For example, if you have two DJ11 devices, enter a device unit of 0 in the unshaded box to the right of address 760010. Enter a device unit of 1 in the unshaded box to the right of address 760020. Use only the unshaded boxes when you enter the device unit number. The shaded boxes represent illegal addresses for a particular device unit.

NOTE

Where you begin in the worksheet depends upon what devices you have in your configuration. Suppose you have LPP11 and DWR70 devices. In this case you would start at address 760130 under the first unshaded box under the LPP11 column.

3. Immediately below the last device unit, mark an X for the required address gap. For example, the last DJ11 unit in the previous example is at address 760020. You would mark an X in the unshaded box to the right of address 760030. Use only the unshaded boxes when you mark the address gap. The shaded boxes also indicate an illegal address gap.
4. To the immediate right of the address gap, mark a Y. For example, you would enter Y in the shaded box to the right of the X at address 760300. When you mark a Y to the right of an address gap, use either the shaded or the unshaded boxes, depending on which is to the right of the address gap. If there are no units of a particular device type, enter an X to indicate the gap addresses; then enter a Y to the right of this. For example, if you have no DJ11 devices, you mark an X in the unshaded box to the right of address 760010. You would then mark a Y to the right of this. The Y is a marker that tells you which address to start at for the next device.
5. Continue below the Y in the previous column and enter the unit number of the next device in your configuration. Start with unit 0 and continue to unit n-1. (The first MSCP controller has a fixed address. This means you should fill in floating addresses starting with controller 1, not controller 0.) Skip the shaded boxes in numbering down the column. In the first unshaded box below the last DH11 unit, mark an X for the DH11 gap. Then mark a Y to the right of the address gap.

6. Continue with the remaining floating address devices. In each case, number the units from 0 to $n-1$ down the column, beginning in the first unshaded box below the X. Mark an X in the next unshaded box below the last unit and a Y in the box immediately to the right of the last unit.
7. After you complete the worksheet, you can record the device, the unit number, and its associated floating address in the spaces provided in the Record of Floating Addresses (to the right of the worksheet).

Figure 13: Floating Address Worksheet

DEVICE																																		
ADDRESS	D J 1 1	D H 1 1	D Q 1 1	①	D U P 1 1	L K 1 1	D M C 1 1	②	K M C 1 1	L M P 1 1	V M V 2 1	V M V 3 1	D W R 7 0	R L 1 1	L P A 1 1	K W 1 1	R e r v d	R X 1 1	D R 1 1 W	D R 1 1 B	D M P 1 1	D P V 1 1	I S B 1 1	D M V 1 1	U N A	③	D M F 3 2	K M S 1 1	V S 1 0 0	④	K M V 1 1	⑤		
76000																																		
76004																																		
76010																																		
76014																																		
76020																																		
76024																																		
76030																																		
76034																																		
76040																																		
76044																																		
76050																																		
76054																																		
76060																																		
76064																																		
76070																																		
76074																																		
76100																																		
76104																																		
76110																																		
76114																																		
76120																																		
76124																																		
76130																																		
76134																																		
76140																																		
76144																																		
76150																																		
76154																																		
76160																																		
76164																																		
76170																																		
76174																																		
76200																																		
76204																																		
76210																																		
76214																																		
76220																																		
76224																																		
76230																																		
76234																																		
76240																																		
76244																																		
76250																																		
76254																																		
76260																																		
76264																																		
76270																																		
76274																																		
76300																																		
76304																																		
76310																																		
76314																																		
76320																																		
76324																																		
76330																																		
76334																																		
76340																																		
76344																																		
76350																																		
76354																																		
76360																																		
76364																																		
76370																																		
76374																																		
76400																																		
	D J 1 1	D H 1 1	D Q 1 1	①	D U P 1 1	L K 1 1	D M C 1 1	②	K M C 1 1	L M P 1 1	V M V 2 1	V M V 3 1	D W R 7 0	R L 1 1	L P A 1 1	K W 1 1	R e r v d	R X 1 1	D R 1 1 W	D R 1 1 B	D M P 1 1	D P V 1 1	I S B 1 1	D M V 1 1	U N A	③	D M F 3 2	K M S 1 1	V S 1 0 0	④	K M V 1 1	⑤		

- ① = DU11, DUV11
 ② = DZ11, DZV11, DZQ11
 ③ = MSCP devices
 ④ = TMSCP devices
 ⑤ = DHU11, DHV11

LIST OF DEVICES

DJ11	—	KMC11	—
DH11	—	LPP11	—
DQ11	—	VMV21	—
DU11, DUV11	—	VMV31	—
DUP11	—	DWR70	—
LM11	—	RL11	—
DMC11	—	KW11	—
DZ11, DZV11, DZQ11	—	RX11	—
DR11-W	—	DMF32	—
DR11-B	—	KMS11	—
DMP11	—	VS100	—
DPV11	—	TMSCP	—
ISB11	—	KMV11	—
DMV11	—	DHU11, DHV11	—
UNA	—		
MSCP	—		

RECORD OF FLOATING ADDRESSES

DEVICE	UNIT	ADDRESS
—	—	—
—	—	—
—	—	—
—	—	—
—	—	—

DEVICE	UNIT	ADDRESS
—	—	—
—	—	—
—	—	—
—	—	—
—	—	—

(continued on next page)

Figure 13 (Cont.): Floating Address Worksheet

[illegible]

- ① DU11, DUV11
- ② DZ11, DZV11, DZQ11
- ③ MSCP devices
- ④ TMSCP devices
- ⑤ DHU11, DHV11

RECORD OF FLOATING ADDRESSES

DEVICE	UNIT	ADDRESS
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

[illegible]

(continued on next page)

Figure 13 (Cont.): Floating Address Worksheet

[illegible]

- ① DU11, DUV11
- ② DZ11, DZV11, DZQ11
- ③ MSCP devices
- ④ TMSCP devices
- ⑤ DHU11, DHV11

RECORD OF FLOATING ADDRESSES

[illegible]

DEVICE	UNIT	ADDRESS
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

(continued on next page)

Figure 13 (Cont.): Floating Address Worksheet

DEVICE																											
ADDRESS	D J 1 1	D H 1 1	D Q 1 1	① D U P 1 1	L K 1 1	② D M C 1 1	K M C 1 1	L P 1 1	V M V 2 1	V M V 3 1	D W R 7 0	R L 1 1	L P A 1 1	K W 1 1	R X 1 1	D R 1 1 B	D R 1 1 W	D M P 1 1	D P V 1 1	I S B 1 1	U N A	③ D M V 1 1	D M F 3 2	K M S 1 1	V S 1 0 0	④ K M V 1 1	
761400																											
761404																											
761410																											
761414																											
761420																											
761424																											
761430																											
761434																											
761440																											
761444																											
761450																											
761454																											
761460																											
761464																											
761470																											
761474																											
761500																											
761504																											
761510																											
761514																											
761520																											
761524																											
761530																											
761534																											
761540																											
761544																											
761550																											
761554																											
761560																											
761564																											
761570																											
761574																											
761600																											
761604																											
761610																											
761614																											
761620																											
761624																											
761630																											
761634																											
761640																											
761644																											
761650																											
761654																											
761660																											
761664																											
761670																											
761674																											
761700																											
761704																											
761710																											
761714																											
761720																											
761724																											
761730																											
761734																											
761740																											
761744																											
761750																											
761754																											
761761																											
761764																											
761770																											
761774																											
762000																											
	D J 1 1	D H 1 1	D Q 1 1	① D U P 1 1	L K 1 1	② D M C 1 1	K M C 1 1	L P 1 1	V M V 2 1	V M V 3 1	D W R 7 0	R L 1 1	L P A 1 1	K W 1 1	R X 1 1	D R 1 1 B	D R 1 1 W	D M P 1 1	D P V 1 1	I S B 1 1	U N A	③ D M V 1 1	D M F 3 2	K M S 1 1	V S 1 0 0	④ K M V 1 1	⑤ K M V 1 1

- ① DU11, DUV11
- ② DZ11, DZV11, DZQ11
- ③ MSCP devices
- ④ TMSCP devices
- ⑤ DHU11, DHV11

RECORD OF FLOATING ADDRESSES

DEVICE	UNIT	ADDRESS
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

DEVICE	UNIT	ADDRESS
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

ZK-9248-HC

Floating Vectors

Many devices have floating vectors. The vector assignment sequence is normally the same sequence as that in which the devices enter production. A vector for a new hardware option is not inserted before the vector for a device already in production. Gaps in the vector assignments are not required. The floating vectors begin at address 300 and proceed in ascending order.

Table 25 lists the vector assignment sequence for current devices.

Table 25: Device Vector Assignments

Device	First Address	Next Addr.	Vector Size	Max Units	BR Level	RSTS/E Notes
DC11	174000	+10	10	32	BR5	Not supported
DL11A,B	176500	+10	10	16	BR4	Non-console
DP11	174770	-10	10	32	BR5	Not supported
DM11A	175000	+10	10	16	BR5	Not supported
DN11	175200	+10	4	16	BR5	Not supported
DM11BB	170500	+10	4	16	BR4	DH11 modem control
DR11A,C	167770	-10	10 ¹	32	BR5	Not supported
PA611 Reader	172600	+4	4 ¹	16	BR4	Not supported
PA611 Punch	172700	+4	4 ¹	16	BR4	Not supported
LPD11			10			Not supported
DT11 (DT03_FP)	174200	+2	10 ¹	8	BR7	Not supported
DX11	176200	+40	10 ¹	4	BR4	Not supported
DL11C,D,E	175610	+10	10 ¹	31	BR4	
DJ11	FLOAT	+10	10 ¹	16	BR5	Not supported
DH11	FLOAT	+20	10 ¹	16	BR5	
GT40	172000		20 ¹		BR5	Not supported
VSV11	172000	+10	20			Not supported
LPS11	170400	+40	30 ¹	14	BR5,6	Not supported
DQ11	FLOAT	+10	10 ¹	16	BR5	Not supported
KW11W	172400	NA	10 ¹	1		Not supported
DU11/DUV11	FLOAT	+10	10 ¹	16	BR5 ²	2780 only
DUP11	FLOAT	+10	10 ¹	16	BR5 ²	2780, HP2780, 3271
DV11	175000	+40	20 ¹	4	BR5,6	Not supported
LK11	FLOAT	+10	10 ¹	1	BR4	Not supported
DMC11/DMR11	FLOAT	+10	10 ¹	16	BR5	
DZ11/DZV11/ DZQ11	FLOAT	+10	10 ¹	8	BR5	
KMC11	FLOAT	+10	10 ¹	16	BR5	
LPP11	FLOAT	+10	10			Not supported
VMV21	FLOAT	+10	10			Not supported

¹—The first vector for the first device of this type must always be on a 10(8) boundary.

²—Also supported at BR6 under RSTS/2780.

Table 25 (Cont.): Device Vector Assignments

Device	First Address	Next Addr.	Vector Size	Max Units	BR Level	RSTS/E Notes
VMV31	FLOAT	+20	10			Not supported
VTV01	172600		10	2		Not supported
DWR70	FLOAT	+10	10			Not supported
RL11	FLOAT	+10	4		BR5	Not supported after 1st
TS11	172520	+4	4	4	BR5	
LPA11-K	170460		10	1		
IP11	171000		4	2		Not supported
KW11-C	FLOAT	+10				Not supported
RX11, RX211, RXV11	FLOAT	+10	4	4	BR5	After 1st only
DR11-W	FLOAT	+10	4			Not supported
DR11-B	FLOAT	+10	4			Not supported
DMP11	FLOAT	+10	10	16	BR5	DECnet/E only
DPV11	FLOAT	+10	10		BR5	Not supported
ML11	176400		4	1		Not supported
ISB11	FLOAT	+10	10			Not supported
DMV11	FLOAT	+20	10	16	BR5	DECnet/E only
DHV11/DHU11/DHQ11	FLOAT	+20	10	16	BR5	

Fixed Addresses and Vectors

Table 26 lists the devices supported under RSTS/E that have fixed addresses and vectors.

Table 26: Devices with Fixed Addresses and Vectors

Device	Address	Vector	BR Level	RSTS/E Notes
MSCP	172150	¹	BR5	1st controller only
TMSCP	174500	¹	BR5	1st unit only
RF11	177460	204	BR5	Not supported
RS03/RS04	172040	204	BR5	Not supported
RK05/RK05F ²	177400	220	BR5	Up to 8 drives
RL01/RL02	174400	160	BR5	Up to 4 drives
RK06/RK07	177440	210	BR5	Up to 8 drives
RP02/RP03	176710	254	BR5	Not supported
Second RH11/70 RM02/RM03/RM05/RM80 RP04/RP05/RP06	176300	150	BR5	Up to 8 drives
First RH11/70 RP04/RP05/RP06 RM02/RM03/RM05/RM80	176700	254	BR5	Up to 8 drives
RX01/RX02	177170	264	BR5	First only
DECtape	177340	214	BR6	Not supported
TU10/TE10/TS03/TS11	172520	224	BR5	First TS11 drive only
TU16/TE16/TU45/TU77 ³	172440	224	BR5	Up to 8 drives
LP11 (LP0)	177514	200	BR4	
(LP1)	164004	170	BR4	
(LP2)	164014	174	BR4	
(LP3)	164024	270	BR4	
(LP4)	164034	274	BR4	
(LP5)	164044	774	BR4	
(LP6)	164054	770	BR4	
(LP7)	164064	764	BR4	
CR11,CM11	177160	230	BR5	
CD11	177160	230	BR4	
KW11L	177546	100	BR6	
KW11P	172540	104	BR6	
KG11	170700	NONE	NONE	2780 only
DL11A,DL11B	177560	60	BR4	Console inter- face
DEQNA,DELQA XH0	774440	¹	BR5	
XH1	774460	¹	BR5	Not supported
DEUNA,DELUA XE0	774510	120	BR5	

¹—These controllers have programmable vectors; INIT.SYS finds an available vector address and assigns it to them.

²—Each RK05F must be counted as two drives.

³—Maximum of 4 TU77's

RH70 BAE and CS3 Addresses

Table 27 lists the four possible RH70 High Speed I/O Controller addresses, their Bus Address Extension (BAE) and Control addresses, their BAE Control Status 3 (CS3) addresses, and their uses.

Table 27: RH70 BAE and CS3 Addresses

Device	Address	BAE	CS3
RS03/RS04 (Not supported)	172040	172070	172072
TU16/TE16/TU45/TU77	172440	172474	172476
Mixed/nonstandard	176300	176350	176352
RP04/RP05/RP06 or RM02/RM03/RM05/RM80	176700	176750	176752

Appendix C

RSTS/E System Files

RSTS/E System Files

This section shows a directory listing of the RSTS/E system programs. The directory listing for your installation may differ, depending on the packages you selected.

Account [0,1]

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,1]
BADB	.SYS	5 P	< 63>	SATT	.SYS	14CP	< 63>	
ERR	.ERR	16CP	< 40>	SYSGEN	.SIL	636C	< 60>	
DCL	.RTS	132C	<232>	RSX	.RTS	6CP	< 60>	
BACKUP	.TSK	102	<124>	INIT	.SYS	558CP	< 60>	
SWAP	.SYS	128CP	< 63>	RT11	.RTS	20C	< 60>	
ODT	.SYS	14	< 60>	CSPLIB	.LIB	41C	< 60>	
INSTAL	.COM	3C	<104>	UPDATE	.COM	3C	<104>	
COPYUP	.COM	2C	<104>	MAIN	.COM	12C	<104>	
CSPHLP	.COM	9C	<104>	LPRES	.COM	10C	<104>	
LISTER	.COM	3C	<104>	CHECK	.COM	3C	<104>	
MONITR	.COM	16C	<104>	CSPLNG	.COM	21C	<104>	
ASSLOG	.COM	16C	<104>	MONBLD	.COM	8C	<104>	
INSPKG	.COM	11C	<104>	DECNT1	.COM	14C	<104>	
DECNT2	.COM	7C	<104>	FLAG	.COM	3C	<104>	
DELLOG	.COM	4C	<104>	SYSINI	.COM	6C	<104>	
RECOVR	.COM	7C	<104>	CSP	.HLP	2C	<104>	
LP	.HLP	2C	<104>	CSPLST	.DAT	1C	<104>	
CSPRES	.COM	18C	<104>	LP	.COM	17C	<104>	
CSP	.COM	25C	<104>	SETPAS	.COM	1C	<104>	
BEGIN	.COM	16C	<104>	SWAP1	.SYS	4992CPL	< 60>	
RSTS97	.SIL	632CPL	< 60>	START	.COM	14C	<104>	
LOGIN	.COM	4	< 40>	BASIC	.RTS	73C	< 60>	
CRASH	.SYS	380CP	< 63>					

Total of 8007 blocks in 45 files in SY0:[0,1]

Help Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY:[0,2]
FILNAM.HLP		12	< 40>	KEYBRD.HLP		5	< 40>	
PLEASE.HLP		5	< 40>	PLEBAC.HLP		5	< 40>	
RSTS.HLP		17	< 40>	DISK.HLP		9	< 40>	
SETHLP.HLP		19	< 40>	TECO.HLP		4	< 40>	
TYPE.HLP		3	< 40>	UTHELP.HLP		16	< 40>	
VTEDIT.HLP		3	< 40>	DCEXP.R.HLP		3	< 40>	
DCFUNC.HLP		25	< 40>	DCLABE.HLP		2	< 40>	
DCOPER.HLP		7	< 40>	DCSYMB.HLP		12	< 40>	
MAIL.HLP		2	< 40>	DCAT.HLP		3	< 40>	
DCALLO.HLP		4	< 40>	DCASQU.HLP		2	< 40>	
DCATTA.HLP		4	< 40>	DCBYE.HLP		3	< 40>	
DCCCL.HLP		3	< 40>	DCCLOS.HLP		2	< 40>	
DCCLLG.HLP		2	< 40>	DCCLQU.HLP		2	< 40>	
DCDEAL.HLP		2	< 40>	DCDEAS.HLP		3	< 40>	
DCDSQU.HLP		3	< 40>	DCDSSY.HLP		1	< 40>	
DCDEFI.HLP		1	< 40>	DCDFCM.HLP		1	< 40>	
DCDLAC.HLP		8	< 40>	DCDLCM.HLP		1	< 40>	
DCDLCS.HLP		2	< 40>	DCDLEN.HLP		3	< 40>	
DCDLQU.HLP		2	< 40>	DCDLSV.HLP		2	< 40>	
DCDETA.HLP		5	< 40>	DCDISM.HLP		1	< 40>	
DCDMDK.HLP		3	< 40>	DCDMMT.HLP		3	< 40>	
DCDUMP.HLP		1	< 40>	DCDPSY.HLP		2	< 40>	
DCEOD.HLP		3	< 40>	DCFORT.HLP		2	< 40>	
DCHANG.HLP		2	< 40>	DCHELP.HLP		5	< 40>	
DCIF.HLP		4	< 40>	DCINIT.HLP		2	< 40>	
DCINSV.HLP		13	< 40>	DCINQU.HLP		8	< 40>	
DCINST.HLP		2	< 40>	DCLOOV.HLP		3	< 40>	
DCLOGI.HLP		6	< 40>	DCLOGO.HLP		5	< 40>	
DCMACR.HLP		2	< 40>	DCLMRG.HLP		1	< 40>	
DCMOUN.HLP		1	< 40>	DCON.HLP		9	< 40>	
DCONCC.HLP		5	< 40>	DCOPEN.HLP		10	< 40>	
DCOPLG.HLP		10	< 40>	DCOPQU.HLP		2	< 40>	
DCPRIN.HLP		19	< 40>	DCREMO.HLP		2	< 40>	
DCREJO.HLP		1	< 40>	DCRELI.HLP		2	< 40>	
DCRERU.HLP		2	< 40>	DCREQU.HLP		2	< 40>	
DCRUN.HLP		4	< 40>	DCSET.HLP		3	< 40>	
DCSECA.HLP		8	< 40>	DCSECO.HLP		1	< 40>	
DCSENC.HLP		2	< 40>	DCSEDA.HLP		4	< 40>	
DCSEND.HLP		3	< 40>	DCSEEC.HLP		3	< 40>	
DCSENE.HLP		3	< 40>	DCSEHO.HLP		3	< 40>	
DCSELG.HLP		2	< 40>	DCSEON.HLP		1	< 40>	
DCSENO.HLP		2	< 40>	DCSEPA.HLP		3	< 40>	
DCSEPR.HLP		9	< 40>	DCSEQU.HLP		13	< 40>	
DCSESV.HLP		9	< 40>	DCSETI.HLP		2	< 40>	
DCSEVE.HLP		3	< 40>	DCSENV.HLP		2	< 40>	
DCSHBU.HLP		3	< 40>	DCSHCM.HLP		1	< 40>	
DCSHCS.HLP		1	< 40>	DCSHDT.HLP		1	< 40>	
DCSHDA.HLP		1	< 40>	DCSHDV.HLP		2	< 40>	
DCSHFI.HLP		1	< 40>	DCSHJO.HLP		5	< 40>	
DCSHPV.HLP		2	< 40>	DCSHLB.HLP		1	< 40>	
DCSHLO.HLP		2	< 40>	DCSHLS.HLP		1	< 40>	
DCSHMY.HLP		1	< 40>	DCSHNT.HLP		1	< 40>	
DCSHPR.HLP		1	< 40>	DCSHRV.HLP		1	< 40>	
DCSHRT.HLP		1	< 40>	DCSHSV.HLP		13	< 40>	
DCSHSB.HLP		2	< 40>	DCSHSY.HLP		1	< 40>	
DCSHTI.HLP		1	< 40>	DCSTAR.HLP		1	< 40>	
DCSTQU.HLP		2	< 40>	DCSTQM.HLP		7	< 40>	
DCSTSV.HLP		8	< 40>	DCSTOP.HLP		2	< 40>	
DCSPQU.HLP		3	< 40>	DCSPQM.HLP		4	< 40>	
DCSPSV.HLP		7	< 40>	DCUNLI.HLP		3	< 40>	
DCUNOV.HLP		3	< 40>	DCUNRU.HLP		2	< 40>	
DCWRIT.HLP		6	< 40>	ACCNTS.HLP		30	< 40>	
ADVANC.HLP		20	< 40>	BPCHLP.HLP		4	< 40>	
BPCOMM.HLP		12	< 40>	BPFUNC.HLP		14	< 40>	
BPHELP.HLP		2	< 40>	BPSTAT.HLP		19	< 40>	

DATES .HLP	7	< 40>	DCL .HLP	3	< 40>
DCMAIL.HLP	3	< 40>	ENTRYS.HLP	11	< 40>
EXPRES.HLP	6	< 40>	FILES .HLP	19	< 40>
FORMS .HLP	18	< 40>	FUNCTN.HLP	28	< 40>
KEYS .HLP	5	< 40>	CTRLT .HLP	7	< 40>
LABELS.HLP	3	< 40>	MAGTAP.HLP	10	< 40>
OPERAT.HLP	7	< 40>	PRIVS .HLP	12	< 40>
PROGRM.HLP	2	< 40>	DIRHLP.HLP	4	< 40>
ERRHLP.HLP	7	< 40>	FITHLP.HLP	11	< 40>
PLEHLP.HLP	6	< 40>	PLEBAT.HLP	4	< 40>
PLEQUE.HLP	4	< 40>	PLESPL.HLP	6	< 40>
QUEHLP.HLP	8	< 40>	TECHLP.HLP	5	< 40>
TECOMD.HLP	12	< 40>	TECOFL.HLP	6	< 40>
TYPHLP.HLP	3	< 40>	VTEHLP.HLP	3	< 40>
VTEDKP.HLP	6	< 40>	UTLHLP.HLP	12	< 40>
QUEUES.HLP	20	< 40>	QUOTAS.HLP	11	< 40>
RSX .HLP	3	< 40>	RT11 .HLP	13	< 40>
RUNTIM.HLP	9	< 40>	SERVR.S.HLP	7	< 40>
SYMBOL.HLP	14	< 40>	TERMN.L.HLP	4	< 40>
TIMES .HLP	7	< 40>	B2CREF.HLP	12	< 40>
BPCREF.HLP	6	< 40>	DIRECT.HLP	4	< 40>
DSKDMF.HLP	26	< 40>	ERRDIS.HLP	7	< 40>
FIT .HLP	11	< 40>	RSTSFL.HLP	6	< 40>
BLDCSP.HLP	9	< 40>	CMSMGR.HLP	1	< 40>
DECDX .HLP	2C	< 40>	FRL .HLP	1	< 40>
FRLHLP.HLP	1	< 40>	DCEXIT.HLP	3	< 40>
DCLSRT.HLP	31	< 40>	DCLMGE.HLP	26	< 40>
WPS .HLP	2	< 40>	HELP .BAK	7	< 40>
NETCPY.HLP	4	< 40>	NFTC .HLP	12	< 40>
NFTS .HLP	28	< 40>	DCAPPE.HLP	8	< 40>
DCASSI.HLP	3	< 40>	DCASSY.HLP	3	< 40>
DCBACK.HLP	31	< 40>	DCBASI.HLP	3	< 40>
DCBP2 .HLP	2	< 40>	DCBROA.HLP	5	< 40>
DCCOPY.HLP	21	< 40>	DCCRAC.HLP	18	< 40>
DCCREA.HLP	8	< 40>	DCDELE.HLP	11	< 40>
DCDFCS.HLP	8	< 40>	DCDIBO.HLP	2	< 40>
DCDIFF.HLP	5	< 40>	DCDIRE.HLP	11	< 40>
DCDLSB.HLP	3	< 40>	DCEDIT.HLP	9	< 40>
DCFOFO.HLP	3	< 40>	DCFORC.HLP	5	< 40>
DCF77 .HLP	3	< 40>	DCGOSU.HLP	5	< 40>
DCGOTO.HLP	3	< 40>	DCINDK.HLP	15	< 40>
DCINER.HLP	6	< 40>	DCINIQ.HLP	22	< 40>
DCINLI.HLP	9	< 40>	DCINMT.HLP	6	< 40>
DCINOV.HLP	6	< 40>	DCINRU.HLP	11	< 40>
DCINSW.HLP	11	< 40>	DCLINK.HLP	5	< 40>
DCLOAD.HLP	1	< 40>	DCLOID.HLP	3	< 40>
DCMTDK.HLP	10	< 40>	DCMTMT.HLP	5	< 40>
DCREAD.HLP	5	< 40>	DCREER.HLP	2	< 40>
DCREOV.HLP	2	< 40>	DCRENA.HLP	12	< 40>
DCRESW.HLP	2	< 40>	DCREST.HLP	31	< 40>
DCRETU.HLP	5	< 40>	DCSEAC.HLP	14	< 40>
DCSEDT.HLP	2	< 40>	DCSEDV.HLP	2	< 40>
DCSEEN.HLP	9	< 40>	DCSEFI.HLP	6	< 40>
DCSEJO.HLP	6	< 40>	DCSEPN.HLP	9	< 40>
DCSEPT.HLP	4	< 40>	DCSESY.HLP	9	< 40>
DCSETE.HLP	36	< 40>	DCSHAC.HLP	9	< 40>
DCSHAL.HLP	3	< 40>	DCSHCA.HLP	5	< 40>
DCSHDK.HLP	6	< 40>	DCSHEN.HLP	9	< 40>
DCSHFO.HLP	2	< 40>	DCSHFS.HLP	5	< 40>
DCSHOW.HLP	3	< 40>	DCSHQU.HLP	11	< 40>
DCSHQT.HLP	2	< 40>	DCSHTE.HLP	6	< 40>
DCSHUS.HLP	7	< 40>	DCSUBM.HLP	19	< 40>
DCTYPE.HLP	8	< 40>	DCUNID.HLP	2	< 40>
DCUNLO.HLP	2	< 40>	COPHLP.HLP	4	< 40>
COPY .HLP	3	< 40>	DISKS .HLP	14	< 40>
HELP .TSK	29C	<232>	HELP .HLP	7	< 40>
PASSWD.HLP	10	< 40>	PIPHLP.HLP	31	< 40>
PIPDIR.HLP	3	< 40>	PIPSAV.HLP	31	< 40>

SYSHLP.HLP 22 < 40>

Total of 1827 blocks in 267 files in SY:[0,2]

Error Reporting Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,3]
ERRDAT.FIL		95C	< 60>	ERRINT.TSK		18C	<124>	
ERRCPY.TSK		14C	<124>	ERRDIS.TSK		39C	<124>	
ERRDET.TSK		40C	<124>	ANALYS.TSK		47C	<124>	
ANALY1.TSK		52C	<124>	ANALY2.TSK		46C	<124>	
ANALY3.TSK		44C	<124>	ERRLOG.FIL		2	< 60>	

Total of 397 blocks in 10 files in SY0:[0,3]

Device Testing Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,5]
DSKSEK.TSK		16C	<124>	DSKEXR.TSK		20C	<124>	
LPEXER.TSK		14C	<124>	PPEXER.TSK		11C	<124>	
PREXER.TSK		12C	<124>	DXEXER.TSK		20C	<124>	
DTEXER.TSK		19C	<124>	CPEXER.TSK		28C	<124>	
CPUTST.TSK		28C	<124>	KBEXER.TSK		16C	<124>	
MTEXER.TSK		25C	<124>	DDEXER.TSK		19C	<124>	

Total of 228 blocks in 12 files in SY0:[0,5]

Print/Batch Services Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,6]
PBS	.TSK	97C	<232>	PBSMGR.TSK		298C	<232>	
PBSERR.ERR		57	< 40>	FORMS	.SYS	2	< 40>	
PBS	.SYS	32	<188>					

Total of 486 blocks in 5 files in SY0:[0,6]

File Restore Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,7]
BACKUP.PRM		5	< 60>	BACKUP.HLP		12	< 60>	
RESTOR.TSK		50C	<232>	BACLST.TSK		54C	<232>	
BACCON.TSK		29C	<232>	BACDIR.TSK		56C	<232>	
BACMNT.TSK		60C	<232>	BACLAB.TSK		44C	<232>	
BACDSK.TSK		36C	<232>	BACCOM.TSK		46C	<232>	
BACLOD.TSK		51C	<232>	BACENT.TSK		40C	<232>	
BACFRM.TSK		51C	<232>					

Total of 534 blocks in 13 files in SY0:[0,7]

OPSER-based Spooling Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,8]
CHARS	.QUE	2	< 60>	BATCH	.DCD	12C	< 60>	
QUEMAN.TSK		32C	<232>	QUMRUN.TSK		61C	<232>	
OPSER	.TSK	24C	<232>	OPSRUN.TSK		59C	<232>	
SPOOL	.TSK	54C	<232>	SPLIDL.TSK		61C	<232>	
SPLRUN.TSK		59C	<232>	BATCH	.TSK	52C	<232>	
BATIDL.TSK		50C	<232>	BATDEC.TSK		62C	<232>	
BATRUN.TSK		55C	<232>					

Total of 583 blocks in 13 files in SY0:[0,8]

Unsupported Utility Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,9]
DSKPEK	.MAC	4	< 60>	DSKDMP	.HLP	26	<< 40>	
QSTATS	.DOC	32	< 60>	DIALER	.DOC	63	< 60>	
RSTSFL	.OBJ	42	< 60>	RSTSFL	.OLB	105C	< 60>	
RSTSFL	.DOC	2	< 60>	RSTSFL	.HLP	6	< 60>	
MONEY	.BAS	51	< 60>	MEMORY	.BAS	14	< 60>	
FLOAT	.BAS	19	< 60>	DSKDMP	.BAS	20	< 60>	
BPDA	.BAS	59	< 60>	CONNEC	.BAS	46	< 60>	
DIALER	.BAS	85	< 60>	EMTCPY	.BAS	102	< 60>	
STATUS	.B2S	69	< 60>	QSTATS	.B2S	46	< 60>	
LQSTAT	.BAS	19	< 60>	MONEY	.TSK	22C	<124>	
MEMORY	.TSK	12C	<124>	FLOAT	.TSK	21C	<124>	
DSKDMP	.TSK	18C	<124>	BPDA	.TSK	37C	<124>	
CONNEC	.TSK	28C	<124>	DIALER	.TSK	43C	<124>	
EMTCPY	.TSK	37C	<124>	STATUS	.TSK	43C	<124>	
QSTATS	.TSK	23C	<124>	LQSTAT	.TSK	22C	<124>	
B2CREF	.TSK	113C	<104>	RNO	.TSK	72C	<104>	
B2CREF	.HLP	12	< 60>	B2CREF	.DOC	2	< 40>	
RNO	.RNO	85	< 60>	RNOBLD	.CMD	6	< 60>	
RNOBLD	.ODL	2	< 60>	RNPRES	.MAC	5	< 60>	
COMND	.MAC	7	< 60>	CMTAB	.MAC	11	< 60>	
ERMSG	.MAC	10	< 60>	FMTCM	.MAC	26	< 60>	
HYPHEN	.MAC	54	< 60>	INDEX	.MAC	11	< 60>	
PINDX	.MAC	9	< 60>	RNCMD	.MAC	22	< 60>	
RNFIO	.MAC	9	< 60>	RNORSX	.MAC	5	< 60>	
RUNOFF	.MAC	71	< 60>	START	.MAC	8	< 60>	
DUMP	.SAV	10C	<104>	SRCCOM	.SAV	17C	<104>	

Total of 1683 blocks in 52 files in SY0:[0,9]

RMS-11 Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,10]
RMSBCK	.TSK	95C	<104>	RMSRST	.TSK	113C	<232>	
RMSDEF	.TSK	79C	<104>	RMSDSP	.TSK	79C	<104>	
RMSCNV	.TSK	82C	<104>	RMSDES	.TSK	116C	<104>	
RMSIFL	.TSK	88C	<104>	RMSRES	.LIB	17C	< 42>	
RMSLBA	.LIB	17C	< 42>	RMSLBB	.LIB	13C	< 42>	
RMSLBC	.LIB	9C	< 42>	RMSLBD	.LIB	9C	< 42>	
RMSLBE	.LIB	13C	< 42>	RMSLBF	.LIB	17C	< 42>	
DAPRES	.LIB	41C	< 42>					

Total of 788 blocks in 15 files in SY0:[0,10]

EDT Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,11]
EDT52	.DOC	3	< 60>	EDT100	.DOC	3	< 60>	
EDT200	.DOC	4	< 60>	EDTKIT	.DOC	39	< 60>	
EDT	.LIB	162C	< 42>	EDT	.TSK	49C	<104>	

Total of 260 blocks in 6 files in SY0:[0,11]

SYSGEN Components and BASIC-PLUS Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot
MONITR	.CMD	1	< 60>	RJ2780	.CMD	21	< 60>
RSXRTS	.CMD	1	< 60>	HOOK	.SAV	28C	<124>
CHECK	.MAC	22	< 60>	TBL	.MAC	118	< 60>
KBDEF	.MAC	32	< 60>	RSTS	.OBJ	1008	< 60>
CRA	.OBJ	7	< 60>	DSK	.OBJ	5	< 60>
MCP	.OBJ	3	< 60>	BBR	.OBJ	3	< 60>
OPN	.OBJ	3	< 60>	XVR	.OBJ	2	< 60>
KVR	.OBJ	3	< 60>	MVR	.OBJ	3	< 60>
EMT	.OBJ	3	< 60>	EM2	.OBJ	3	< 60>
GEN	.OBJ	3	< 60>	GRD	.OBJ	3	< 60>
RSX	.OBJ	2	< 60>	FIPLRG	.OBJ	2	< 60>
FMS	.OBJ	3	< 60>	NOD	.OBJ	4	< 60>
DHPORT	.OBJ	2	< 60>	DLPORT	.OBJ	2	< 60>
DZPORT	.OBJ	2	< 60>	VHPORT	.OBJ	2	< 60>
PKPORT	.OBJ	4	< 60>	PDVVEC	.OBJ	1	< 60>
TERCLS	.OBJ	13	< 60>	KBD	.OBJ	4	< 60>
KIN	.OBJ	3	< 60>	LAT	.OBJ	3	< 60>
SES	.OBJ	2	< 60>	NSP	.OBJ	3	< 60>
TRN	.OBJ	3	< 60>	RDM	.OBJ	2	< 60>
EVL	.OBJ	2	< 60>	DMP	.OBJ	2	< 60>
UNA	.OBJ	4	< 60>	QNA	.OBJ	4	< 60>
OVRLRG	.OBJ	4	< 60>	OVLHD	.OBJ	1	< 40>
DEFAULT	.SAV	4C	<124>	DEFAULT	.STB	1	< 60>
BUFCHK	.TSK	21C	<124>	SYSGEN	.SAV	102C	<124>
BPLGEN	.SAV	61C	<124>	RTS	.OBJ	83	< 60>
MA2	.OBJ	16	< 60>	MA2I	.OBJ	14	< 60>
MA2F	.OBJ	14	< 60>	MA4	.OBJ	19	< 60>
MA4F	.OBJ	16	< 60>	MA4D	.OBJ	14	< 60>
XL2	.OBJ	3	< 60>	XL2I	.OBJ	3	< 60>
XL2F	.OBJ	2	< 60>	XL4	.OBJ	4	< 60>
XL4F	.OBJ	2	< 60>	XT2	.OBJ	3	< 60>
XT2I	.OBJ	3	< 60>	XT2F	.OBJ	2	< 60>
XT4	.OBJ	3	< 60>	XT4F	.OBJ	2	< 60>
SF	.OBJ	6	< 60>	IO	.OBJ	6	< 60>
PU	.OBJ	5	< 60>	MX	.OBJ	8	< 60>
SN	.OBJ	2	< 60>	DBG	.OBJ	2	< 60>
VE	.OBJ	2	< 60>	BASIC	.COM	1C	<104>
BASIC	.CMD	1	< 60>				

Total of 1771 blocks in 75 files in SY:[0,12]

TECO Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot
TECO	.RTS	48C	< 60>	TECO	.TEC	10C	<104>
TYPE	.TEC	7C	<104>	VTEDIT	.TEC	24C	<104>
TECO	.HLP	4	< 60>	TECOMD	.HLP	11	< 60>
TECOFL	.HLP	4	< 60>	VTEDIT	.HLP	3	< 60>
VTEDKP	.HLP	6	< 40>	VTEDIT	.DOC	118	< 40>
TECORN	.DOC	108	< 40>	TECO	.INI	8	< 40>
TECKBM	.TEC	3C	<104>	LOCAL	.TEC	3C	<104>
SEARCH	.TEC	5C	<104>	SQU	.TEC	10C	<104>
TECO	.TES	28C	<104>	TYPE	.TES	17C	<104>
VTEDIT	.TES	34C	<104>	TECOIN	.TES	18	< 40>
TECKBM	.TES	3C	<104>	LOCAL	.TES	3C	<104>
SEARCH	.TES	9C	<104>	SQU	.TES	15C	<104>
TECOLB	.OBJ	68	< 60>	GEXIT	.OBJ	3	< 60>
SCREEN	.OBJ	13	< 60>	SCRINS	.OBJ	4	< 60>
SCROLL	.OBJ	4	< 60>	CRTRUB	.OBJ	8	< 60>
CRTRUB	.MAC	65	< 60>				

Total of 664 blocks in 31 files in SY0:[0,13]

Auxiliary Library Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,14]
REORDR	.TSK	74C	<232>	ODT	.TSK	27C	<104>	
COPY	.TSK	25C	<104>	TALK	.TSK	11C	<232>	
GRIPE	.TSK	16C	<232>	DISPLY	.TSK	61C	<232>	
FIT	.TSK	60C	<232>	BPCREF	.TSK	24C	<104>	
PMDUMP	.TSK	47C	<104>	RUNOFF	.TSK	58C	<104>	
BPCRF1	.TSK	49C	<104>	RUNOFF	.RNO	56	< 60>	
DSKCVT	.TSK	57C	<232>					

Total of 605 blocks in 14 files in SY0:[0,14]

SORT/MERGE Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[0,15]
SRTLIB	.OLB	209	< 60>	SRTUTL	.ODL	11	< 60>	
MGELIB	.OLB	189	< 60>	MGEUTL	.ODL	10	< 60>	
SRTMRG	.001	2	< 60>	SRTMRG	.003	5	< 60>	
SRTMRG	.004	179	< 60>	SRTFIL	.ODL	11	< 60>	
SRTREC	.ODL	10	< 60>	MGEFIL	.ODL	9	< 60>	
MGEREC	.ODL	9	< 60>	SRTMRG	.005	16	< 60>	
SRTMRG	.006	15	< 60>	SRTMRG	.007	5	< 60>	
SRTSHR	.OLB	214	< 60>	MGESHR	.OLB	194	< 60>	
SRTMRG	.008	10	< 60>	SRTTST	.DAT	81	< 60>	
SRTMGE	.MST	81	< 60>	SRTMRG	.009	33	< 60>	
SRTMRG	.010	48	< 60>	SRTMRG	.011	31	< 60>	
SRTMRG	.012	26	< 60>	SRTMRG	.013	3	< 60>	
SORT	.COM	10	< 60>	SRTMRG	.002	5	< 60>	
SRTUTL	.TSK	388C	<104>	MGEUTL	.TSK	370C	<104>	
SRTTRN	.TSK	103	<104>					

Total of 2277 blocks in 29 files in SY0:[0,15]

SOURCE Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY:[0,17]
ATPK	.BAS	97	< 60>	DIRECT	.BAS	99	< 60>	
DISPLY	.BAS	151	< 60>	HELP	.BAS	100	< 60>	
LOGIN	.BAS	79	< 60>	LOGOUT	.BAS	32	< 60>	
SHUTUP	.BAS	138	< 60>	SYSTAT	.BAS	138	< 60>	

Total of 834 blocks in 8 files in SY:[0,17]

RSX Utilities Package

Name	.Typ	Size	Prot	Name	.Typ	Size	Prot	SY0:[1,1]
SYSLIB	.OLB	250	< 40>	RSXMAC	.SML	264	< 40>	
BP2	.LNK	2	< 40>	C81	.LNK	1	< 40>	
DIBOL	.LNK	3	< 40>	DMS	.LNK	1	< 40>	
F77	.LNK	3	< 40>	RSX11	.LNK	2	< 40>	
RMSMAC	.MLB	185	< 40>	RMSLIB	.OLB	271	< 40>	
RMS11	.ODL	83	< 40>	RORMS1	.MAC	12	< 40>	
RMS11S	.ODL	3	< 40>	RMS12S	.ODL	3	< 40>	
RMS11X	.ODL	5	< 40>	RMS12X	.ODL	4	< 40>	
RMSRLX	.ODL	2	< 40>	DAP11X	.ODL	5	< 40>	
DAPRLX	.ODL	2	< 40>	RMSRES	.TSK	19	< 40>	
RMSRES	.STB	4	< 40>	DAPRES	.TSK	43	< 40>	
DAPRES	.STB	3	< 40>	ODT	.OBJ	8	< 40>	
ODTID	.OBJ	13	< 40>	EDTHEL	.HLP	223	< 40>	

Total of 1414 blocks in 26 files in SY0:[1,1]

System Library Package

Name .Typ	Size	Prot	Name .Typ	Size	Prot	SY0:[1,2]
INSTAL.LOG	31	< 60>	SHUTUP.TSK	64C	<232>	
UTLMGR.TSK	231C	<232>	DSKINT.TSK	124C	<124>	
ONLCLN.TSK	109C	<232>	ACTMGR.TSK	289C	<232>	
SILUS .SAV	41C	<104>	PIP .SAV	55C	<232>	
MACRO .SAV	60C	<104>	CREF .SAV	8C	<104>	
LINK .SAV	57C	<104>	LIBR .SAV	22C	<104>	
ERR .STB	3	< 40>	ONLPAT.SAV	68C	<104>	
COMMON.MAC	41	< 40>	KERNEL.MAC	133	< 60>	
DCLUTL.TSK	24C	<232>	TST090.SYS	0	< 60>	
CONFIG.MAC	7	< 60>	GLOBAL.COM	1	< 60>	
SYSGEN.COM	9	< 60>	SYSLIB.OBJ	6	< 40>	
LOGIN .TSK	37C	<232>	LOGOUT.TSK	20C	<232>	
DIRECT.TSK	52C	<232>	SYSTAT.TSK	53C	<232>	
FILCOM.TSK	48C	<104>	PLEASE.TSK	13C	<232>	
SWITCH.TSK	10C	<232>	SYSMAC.SML	46	< 40>	
SAVRES.SAV	206C	<124>	TERMGR.TSK	131C	<232>	
UTILTY.TSK	48C	<124>	PIPSAV.TXT	29	< 40>	
PAT .SAV	11C	<104>	MAKSIL.TSK	52C	<104>	
TKB .TSK	191C	<104>	STK .TSK	189C	<104>	
MAC .TSK	103C	<104>	LBR .TSK	65C	<104>	
PAT .TSK	55C	<104>	CRF .TSK	47C	<104>	
PRELIN.TSK	43C	<232>	BUILD .TSK	58C	<124>	
ATPK .TSK	29C	<252>	PBUILD.TSK	23C	<124>	
CPATCH.TSK	24C	<124>	AUTOED.TSK	26C	<124>	
QUE .TSK	56C	<232>	QUIT .	0	< 60>	
BPLGEN.COM	3	< 60>	START .LOG	14	< 60>	

Total of 3065 blocks in 52 files in SY0:[1,2]

Appendix D

Bootstrapping the Distribution Medium

The distribution medium is the tape or disk on which DIGITAL supplies the RSTS/E system. To bootstrap the distribution medium, use the switches on the Central Processing Unit (CPU) or type a command to the console emulator to activate a hardware loader that contains machine instructions for reading the first record of the distribution medium into memory. This record, called a bootstrap record, is a program that loads additional program code from the distribution medium into memory and executes that code. The code then prints a message on the console terminal, marking the successful completion of the bootstrap procedure. For example:

```
Performing limited hardware scan.  
RSTS V9.7 (MT0) INIT V9.7-11  
Today's date?  
Current time?  
Installing RSTS on a new system disk? <Yes>
```

For the bootstrap operation to succeed, the distribution medium must be on line, ready, and write-protected; the medium accessed must contain a proper bootstrap record; and the console terminal must be on line. The following two sections describe the bootstrap procedures for each of the distribution media. The third section details hardware bootstrap procedures.

Bootstrapping Magnetic Tape Distribution

The operation of the magnetic tape devices is described in the *RSTS/E System User's Guide*. To bootstrap the magnetic tape, do the following:

1. Physically mount the system installation tape on unit 0 with the write enable ring removed.

NOTE

The 9-track, 800 bpi magnetic tape bootstrap in the system initialization code will not use a TU16, TE16, TU45, or TU77 tape drive if a TU10, TE10, or TS03 drive is present. Therefore, if your system includes drives of both types (TU10/TE10/TS03 and TU16/TE16/TU45/TU77), bootstrap the 800 bpi distribution tape on the TU10, or TE10 drive. Similarly, the 1600 bpi magnetic tape bootstrap will not use a TU16, TE16, TU45, or TU77 tape drive if a tape is mounted and on line on a TS11 drive.

2. Make sure that the tape is at its load point. (The BOT indicator light comes on.) The computer does not bootstrap the device unless the tape is at its load point.

3. Set the ONLINE/OFFLINE switch on the tape unit to ONLINE and make sure that the RDY indicator is lighted.
4. Make sure that the console terminal is on line.
5. Follow the bootstrap instructions in the section, Hardware Bootstrap Procedures, for the type of hardware bootstrap device that is on the system.

NOTE

The tape drive **MUST** be write-protected and online for the installation to proceed properly.

Bootstrapping Disk Distribution

To bootstrap the disk cartridge, proceed as follows:

1. Insert the disk cartridge in a free unit, either 0 or 1. RLO2 disks can use any unit number.
2. Make sure that the RDY light is on.
3. Make sure that the WR PROT light is on.
4. Make sure that the console terminal is on line.
5. Follow the instructions in the section, Hardware Bootstrap Procedures, for the type of hardware bootstrap device that is on the system.

Hardware Bootstrap Procedures

Bootstrapping a device involves using the Central Processor Unit (CPU) console switches or typing a command to the console emulator to access and activate a hardware loader. The hardware loader contains machine instructions for reading a bootstrap record from the device. The bootstrap record is transferred into memory and executes a specially designed software program. For the bootstrap operation to succeed, the device accessed must be on line and ready; the medium accessed must contain a proper bootstrap record; and the console terminal must be on line.

The PDP-11 console switches and their use are described in the various processor handbooks. The bootstrap procedure that you should use depends upon the type of hardware bootstrap device on the system.

Table 28 summarizes the addresses needed to bootstrap each device. The detailed procedures to bootstrap a device are presented according to the types of hardware bootstrap devices available.

Table 28: Summary of Hardware Bootstrap Addresses

Device to Bootstrap	UNIBUS Bootstrap Type				
	M9301-YA	M9301-YB	M9301-YC	M9301-YF	M9312
RK05 disk cartridge unit 0	DK	DK	30	DK	DK
RP04/RP05/RP06/RM02/ RM03/RM05/ or RM80 disk pack unit 0 at 176700 CSR		DB	70	DB	DB
RK05 disk (unit n)	DKn	DKn	30+n	DKn	DKn
RL01/RL02 disk (unit n)					DLn
RK06 disk (unit n)				DMn	DMn
RK07 disk (unit n)					DMn
RP04/RP05/RP06/RM02/ RM03/RM05 or RM80 disk (unit n) at 176700 CSR		DBn	70+n	DBn	DBn
TU10/TE10 and TS03 magnetic tape	MT	MT	10	MT	MTn
TU16/TE16/TU45/TU77 magnetic tape		MM	60	MM	MMn
TS11 or TU80 magnetic tape					MSn
MSCP devices ¹ at 172150 CSR					DUn
TMSCP devices ² at 174500 CSR					MUn

¹—MSCP devices include the RA60, RA80, RA81, RA82, RC25, RCF25, and RX50 disk drives.
²—TMSCP devices include the TK50, TU81, and TU81-PLUS tape drives.

BM873-YA Procedure

If the BM873-YA Restart/Loader is on the system, perform the following steps:

1. Move the CPU Console ENABLE/HALT switch to its HALT position and back to its ENABLE position.
2. Set the CPU Switch Register to one of the following values:
773010 for RK05 disk cartridge
773050 for TU10/TE10/TS03 magnetic tape
3. Press the CPU LOAD ADRS switch.
4. Press the CPU START switch.

BM873-YB Procedure

If the BM873-YB Restart/Loader is on the system, perform the following steps:

1. Move the CPU Console ENABLE/HALT switch to its HALT position and back to its ENABLE position.
2. Set the CPU Switch Register to one of the following values:
 - 773030 for RK05 disk cartridge
 - 773320 for RP04, RP05, RP06, RM02, RM03, RM05, or RM80 disk pack
 - 773032 for RK05 disk unit specified in the Switch Register
 - 773322 for RP04, RP05, RP06, RM02, RM03, RM05, or RM80 disk unit specified in Switch Register
 - 773110 for TU10/TE10/TS03 magnetic tape
 - 773150 for TU16/TE16/TU45/TU77 magnetic tape
3. Press the CPU LOAD ADRS switch.
4. If necessary, set the CPU Switch Register to the unit number of the disk drive being bootstrapped.
5. Press the CPU START switch.

H324 Pushbutton Panel Procedure

If the system includes the H324 Pushbutton Panel option for the BM873 Restart/Loader, perform the following steps:

1. Move the CPU Console ENABLE/HALT switch to its HALT position and back to its ENABLE position.
2. While holding down the UNLOCK switch, press the appropriate switch to bootstrap the desired device. The DIGITAL Field Service engineer who installed the computer should have informed you of the device that each switch bootstraps.

MR11-DB Procedure

If the MR11-DB Bulk Storage Loader is on the system, perform the following steps:

1. Move the CPU Console ENABLE/HALT switch to its HALT position and back to its ENABLE position.
2. Set the CPU Switch Register to one of the following values:
 - 773110 for RK05 disk cartridge
 - 773136 for TU10/TE10/TS03 magnetic tape
3. Press the CPU LOAD ADRS switch.
4. Press the CPU START switch.

BM792-YB Procedure

If the BM792-YB Hardware Loader is on the system, perform the following steps:

1. Move the CPU Console ENABLE/HALT switch to its HALT position and back to its ENABLE position.
2. Set the CPU Switch Register to 773100.
3. Press the CPU LOAD ADRS switch.

4. Set the CPU Switch Register to 777406 for RK05 disk cartridge.
5. Press the CPU START switch.

M9301-YA and M9301-YB Procedures

If the M9301-YA or M9301-YB Bootstrap Terminator is on the system, perform the following steps:

1. While holding down the CTRL switch, press the BOOT switch on the front of the computer.

The bootstrap prints the contents (in octal) of registers R0, R4, and the Stack Pointer, and the Program Counter at the console terminal. It then prints a dollar sign (\$) prompt.

2. In response to the prompt, type the two-character device code and the unit number of the device to be bootstrapped. Terminate your response by pressing the **RETURN** key.

Table 29 describes the device codes.

Table 29: Device Codes for M9301-YA and M9301-YB Bootstraps

Device	Code
TU10/TE10/TS03 Magnetic Tape	MT
TU16/TE16/TU45/TU77 Magnetic Tape ¹	MM
RK05 Disk Cartridge	DK
RP04/RP05/RP06/RM02/RM03/RM05/RM80 Disk Pack ¹ at 176700 CSR	DB

¹—M9301-YB Bootstrap Terminator only.

M9301-YC Procedure

If the M9301-YC bootstrap is on the system, perform the following steps:

1. Move the CPU ENABLE/HALT switch to its HALT position and back to its ENABLE position.
2. Set the start address of 17765000 in the console switches.
3. Press the CPU LOAD ADDR switch.
4. Set the device unit number in switches 0 through 2.
5. Set the device code for the device to be bootstrapped in switches 3 through 6. Table 30 lists the device codes.
6. Make sure that switches 7 through 21 are off (down).
7. Press the CPU START switch.

Table 30: Device Codes for M9301-YC Bootstrap

Device	Code
TU10/TE10/TS03 Magnetic Tape	1
RK05 Disk Cartridge	3
RK06 Disk Cartridge	5
TU16/TE16/TU45/TU77 Magnetic Tape	6
RP04/RP05/RP06/RM02/RM03/RM05/RM80 Disk Pack at 176700 CSR	7

NOTE

Before the M9301-YC bootstrap actually bootstraps the system, it performs CPU tests, instruction and addressing tests, and memory and cache tests. If a hardware failure is detected, the diagnostic program halts. The lights contain the ROM address of the halt. If this occurs, call your DIGITAL Field Service engineer.

It may, however, be possible to continue with the bootstrap operation if the lights contain the address 1773764, which indicates a cache failure. To continue in this case, press CONT. This is the ONLY case in which it is possible to continue bootstrapping after the diagnostic program detects an error.

M9301-YF Procedure

If the M9301-YF Bootstrap Terminator is on the system, perform the following steps:

1. While holding down the CTRL switch, press the BOOT switch on the front of the computer.
The bootstrap prints the contents (in octal) of registers R0, R4, the Stack Pointer, and R5 at the console terminal. It then prints a dollar (\$) prompt.
2. In response to the prompt, type the two-character device code and the unit number of the device to be bootstrapped. Terminate your response by pressing the **[RETURN]** key.

Table 31 lists the device codes.

Table 31: Device Codes for M9301-YF Bootstrap

Device	Code
TU10/TE10/TS03 Magnetic Tape	MT
TU16/TE16/TU45/TU77 Magnetic Tape	MM
RK05 Disk Cartridge	DK
RK06 Disk Cartridge	DM
RP04/RP05/RP06/RM02/RM03/RM05/RM80 Disk Pack at 176700 CSR	DB

M9312 Procedure

The M9312 Bootstrap Module has five sockets that accommodate one CPU ROM and up to four peripheral boot ROMs. Each CPU and boot device has a unique ROM developed for it. The CPU ROM plugs into a specific socket location within the module. The peripheral ROMs, however, may be placed in any of the four peripheral socket locations as long as the sockets are filled in sequential order with no vacancies between loaded ROM sockets. Since a particular peripheral ROM has a different boot start address in each of the four sockets, it is sometimes important to know the locations of the ROMs in the bootstrap module. The ROM configuration is a diagram of where specific boot ROMs are located. This information must be known before the bootstrap procedure can begin. The following sections explain how to determine the ROM configuration if it is not known, and how to bootstrap a device when the ROM configuration is known.

Table 32 shows the ROM arrangement for the M9312 Bootstrap Module.

Table 32: M9312 ROM Arrangement

CPU ROM
BOOT #1 ROM
BOOT #2 ROM
BOOT #3 ROM
BOOT #4 ROM

If the M9312 Bootstrap/Terminator is on the system, perform one of the following procedures:

- If you have the M9312 console emulator on your system, follow the procedures in the section Using the M9312 Console Emulator (PDP-11/60s and PDP-11/70s usually do not have console emulators). If that procedure does not work, perform the next step to verify that you have a console emulator.
- If you have a CPU equipped with switch registers and do not know what devices the M9312 will boot, perform the procedures in the section Determining the M9312 Bootstrap ROM Configuration.
- If you have a CPU equipped with switch registers, know what device ROMs are on the M9312 Bootstrap Module, but do not have a console emulator, follow the procedures in the section Bootstrapping With the M9312.
- If you do not have the M9312 Bootstrap/Terminator Module on your system and need to boot the RL01, RL02, or the RK07 disk device, perform the manual load routine described in the section Load Program Bootstrap for the RL01/RL02 and RK07.

Using the M9312 Console Emulator

The M9312 console emulator can be initiated in two ways depending on the type of CPU (pushbutton or switch register) on the system.

1. Pushbutton boot procedures with the M9312 console emulator.

While holding down the CTRL button, press the BOOT button on the CPU.

The bootstrap prints the contents (in octal) of registers R0, R4, the Stack Pointer, and R5 at the console terminal. It then prompts you with the commercial at sign (@).

In response to the @ character, type the two-character device code and the unit number of the device to be bootstrapped. Terminate your response by pressing the **[RETURN]** key. If the unit number is not entered, it is assumed to be zero. Table 35 contains the device codes.

Successful completion of these pushbutton bootstrap procedures produces header information on the console terminal, similar to the following example:

```
Performing limited hardware scan.
```

```
RSTS V9.7 (MTO) INIT V9.7-11
```

```
Installing RSTS on a new system disk? <Yes>
```

Begin the system installation process in Phase 2, Prepare System Disk.

2. Switch register boot procedures with the M9312 console emulator.

Move the CPU console ENABLE/HALT switch to its Halt position, then back to its ENABLE position.

Set the CPU switch register to 765020.

Press the start switch. The bootstrap prints the contents (in octal) of registers R0, R4, the Stack Pointer, and R5 at the console terminal. It then prompts you with the commercial at sign (@).

In response to the @ character, type the two-character device code (in uppercase) and the unit number of the device to be bootstrapped. Terminate your response by pressing the **[RETURN]** key. If the unit number is not entered, it is assumed to be zero. Table 35 contains the device codes.

NOTE

The @ sign returns at this point if the correct boot ROM was not installed, or if a nonexistent device code is entered. If the contents of the registers R0, R4, the Stack Pointer, and R5 appear before the @ sign, this indicates that at least one boot ROM socket is empty and can accommodate another boot ROM.

Successful completion of the switch register bootstrap procedure produces header information on the console terminal, similar to the example given for the pushbutton bootstrap. After the message appears, begin the system installation process in Phase 2, Prepare System Disk.

Determining the M9312 Bootstrap ROM Configuration

If you do not know the M9312 ROM configuration, it can be determined by using Tables 33 and 35 and performing the instructions that follow Table 33.

Table 33: ROM Locations

ROM Address	ROM Location
765774	Diagnostic ROM
773000	ROM 1
773200	ROM 2
773400	ROM 3
773600	ROM 4

Repeat the following steps for each of the ROM addresses shown in Table 33. After you have completed this process, you will know the M9312 bootstrap ROM configuration of your system. With this information, you can boot any device having a boot ROM in the M9312 Bootstrap Module.

Table 34 lists the M9312 bootstrap ROM configurations.

Table 34: M9312 Bootstrap ROM Configuration

ROM Location	Bootable Device	Device Mnemonic
Diagnostic ROM	_____	_____
ROM 1	_____	_____
ROM 2	_____	_____
ROM 3	_____	_____
ROM 4	_____	_____

If you do not know the M9312 ROM configuration, use Tables 33, 34, and 35 and follow these instructions:

1. Select a six-digit ROM address from Table 33.
2. Set the CPU switches to the selected number.
3. Press the LOAD ADRS switch to set the ROM address.
4. Press the EXAM switch. The contents of the ROM address just loaded will appear in the CPU data register.
5. Match the octal number represented in the CPU data register with the octal data number shown in Table 35.
6. Locate the device mnemonic in Table 35 and the device name associated with the matching number. The ROM you have just investigated can boot the device(s) you located in Table 35. Write the retrieved device information from Table 35 with the appropriate ROM location in Table 34. For example, if you selected a six-digit ROM address for ROM 1 from Table 33, place the device mnemonic and name you located in Table 35 with ROM 1 in Table 34. Documenting the ROM configuration in Table 34 will prevent performing the above procedure again.

Table 35: Device Name and Mnemonic

Device to Be Booted	Mnemonic	Unit	Octal Data
RL01	DL	0-3	042114
RK06/RK07	DM	0-7	042115
RX01	DX	0-1	042130
RX02	DY	0-1	042131
RP04/RP05/RP06	DB	0-7	
RM02/RM03/RM05/RM80 at CSR 176700	DB ¹		
RK05	DK	0-7	042113
TU16/TE16/TU45/TU77	MM	0-7	046515
TU10/TE10/TS03	MT	0-7	046524
TS11/TU80	MS	0-3	046523
TK50/TU81/TU81-PLUS (TMSCP devices) at CSR 174500	MU	0	046525
RA60/RA80/RA81/RA82 RC25/RX50/RCF25 (MSCP con- troller devices) at CSR 172150	DU	0-7	042125
Console Emulator CPU ROM	A0	N/A	040460
Diagnostic ROM	B0	N/A	041060
PDP-11/60/70			177776 ² xxx777 ³

¹—Type DB rather than DR if you are booting the RM02, RM03, or RM05 disk.

²—This is a continuation ROM of a multiple ROM boot.

³—Bad ROM or NO ROM present.

After you have determined the ROM configuration, perform the procedures in the previous section, Using the M9312 Console Emulator, if you find you have a console emulator; otherwise, perform the procedures in the following section, Bootstrapping With the M9312. It explains how to bootstrap with the M9312 module using a switch register controlled CPU.

Bootstrapping with the M9312

The following procedure describes how a device is bootstrapped when the M9312 bootstrap ROM configuration is known. Table 36 provides the data needed to bootstrap a device.

1. Locate the name of the device to be booted in Table 36.
2. Determine from the ROM configuration in Table 34 the location (ROM 1/2/3/4) of the device boot ROM.
3. Select the three-digit Switch Register Code (SWR) from Table 36 for the particular ROM location.
4. Move the CPU console Enable/Halt switch to its Halt position, then back to its Enable position.
5. Set the CPU switch register to 765744 (or 17765744 for PDP-11/70).
6. Press the CPU LOAD ADRS switch.
7. Set the Switch Register Code (SWR) selected from Table 36 in CPU switches 0-8, as shown in Table 37.

8. Set the unit number of the boot device in CPU switches 9-11 (see Table 37).
9. Press the CPU START switch.

Successful completion of this process boots the device. A message, similar to the following example, appears on the console terminal. At this point, you may begin the system installation process in Phase 2, Prepare System Disk.

Performing limited hardware scan.

RSTS V9.7 (MT0) INIT V9.7-11

Installing RSTS on a new system disk? <Yes>

Table 36: Switch Register Codes (SWR)

Device to Be Booted	Switch Register Code (SWR)			
	ROM 1	ROM 2	ROM 3	ROM 4
RL01/RL02	012	212	412	612
RK06/RK07	012	212	412	612
RX01	012	212	412	612
RX02	012	212	412	612
RP04/RP05/RP06/RM02/RM03 /RM05/RM80 at CSR 176700	056	256	456	656
RA80/RA81/RA82/RA60/RC25/RX50 (MSCP controller devices) at CSR 172150	012	212	412	612
TK50/TU81/TU81-PLUS (TMSCP devices) at CSR 174500	012	212	412	612
RK05	012	212	412	612
TU16/TE16/TU45/TU77	012	212	412	612
TU10/TE10/TS03	012	212	412	612

Table 37: Console Switch Register Settings

15-12	11-09	08-00
Octal Unit Number		Switch Register Code (SWR) from Table D-8

Load Program Bootstrap for the RL01/RL02 and RK06/RK07

To bootstrap an RL01, RL02, RK06, or RK07 device when the system does not have the M9312 Bootstrap Module, you must manually enter a bootstrap load routine using the CPU console. The following procedure describes the manual load process using the PDP-11/34. A similar procedure is followed using the CPU LOAD ADRS, DEP, and EXAM switches for the PDP-11/70 computer.

1. While holding down the CTRL button, press the HLT/SS button on the CPU.
2. Set address 1000 in the console register by using the numbered console buttons.
3. Press the LAD (load address) button.
4. Press the CLR button to clear the register.

5. Load the contents that appear in Table 38 into memory, using the numbered buttons and the DEP button. Press the CLR button after you have placed the contents in the CPU register and pressed the DEP button.

Table 38: Bootstrap Routines for the RL01/RL02 and the RK06/RK07

Address	RL01/RL02 Bootstrap Routine Contents	RK06/RK07 Bootstrap Routine Contents
1000	12700	12700
1002	174400	177440
1004	12760	12760
1006	13	0 ¹
1010	4	10
1012	12701	12701
1014	4 ²	2003 ³
1016	10110	10110
1020	105710	105710
1022	100376	100376
1024	12760	12760
1026	177601	177400
1030	4	2
1032	5721	62701
1034	10110	16
1036	105710	10110
1040	100376	105710
1042	12760	100376
1044	177400	5710
1046	6	100001
1050	5060	0
1052	4	5007
1054	62701	
1056	6	
1060	10110	
1062	105710	
1064	100376	
1066	5710	
1070	100001	
1072	0	
1074	5007	

¹—Select drive number 0-7 for the RK07

²—Load 4 for unit 0, 404 for unit 1, 1004 for unit 2, and 1404 for unit 3.

³—Load 3 for RK06:

After the contents are loaded, perform the following steps:

1. Place address 1000 in the console register again by using the numbered buttons.
2. Press the CPU LAD (load address) button to load the address.
3. While holding the CTRL button down, press the START button on the CPU to boot the device.
4. You can verify the accuracy of the load routine by using the CPU EXAM button. Place address 1000 in the register and press the LAD button. Press the EXAM button to reveal the contents of address 1000. It should be 12700 for both the RL01/RL02 and RK07 routines. Continue to press the EXAM button to check the contents of the remaining addresses in the load routine. Use the LAD and the DEP buttons to correct any erroneous contents.

Load Program Bootstrap for the TU10, TE10, or TS03

To bootstrap a TU10/TE10/TS03 magnetic tape when the system does not have a bootstrap that handles it, you must manually enter a load routine into memory using the CPU Console Switch Register and the DEP switch. You can only boot unit 0.

To load the routine, perform the following steps:

1. Move the CPU Console ENABLE/HALT Switch to its HALT position and back to its ENABLE position.
2. Set the CPU Switch Register to 010000.
3. Press the CPU LOAD ADRS switch.
4. Load the following contents into memory using the Switch Register and DEP switch.

Address	Contents
010000	012700
010002	172524
010004	005310
010006	012740
010010	060011
010012	105710
010014	100376
010016	005710
010020	100767
010022	012710
010024	060003
010026	105710
010030	100376
010032	005710
010034	100777
010036	010001
010040	005000
010042	005007

5. Set the Console Switch Register to 010000.
6. Press the CPU LOAD ADRS switch.
7. Press the CPU START switch.

If the system reads the tape but halts at address 010034, the magnetic tape generated a parity error. Try another drive and make it unit 0. If the system appears to take no action and halts, verify the accuracy of the routine by using the CPU Console EXAM switch. Use the Switch Register and the DEP switch to correct any erroneous contents. Rewind the tape to its load point before executing the routine again. If no recovery is successful, you should have a DIGITAL field service representative check the device. If the hardware is working properly, you should use a new magnetic tape reel.

Bootstrap Procedures for the 11/73, 11/83, or 11/84

The following procedure describes how to bootstrap the J-11.

1. To bootstrap the J-11, move the toggle switch on the front panel to the "Restart" position.
2. The bootstrap code will execute a processor and memory self-test.

```
Testing in progress - Please wait
Memory Size is 4088 K Bytes
9 Step memory test
  Step 1 2 3 4 5 6 7 8 9
```

```
Message 04      Entering dialog mode
```

3. At this point, type the command "BOOT" and press the `[RETURN]` key.

```
Commands are Help, Boot, List, Setup, Map and Test.
Type a command and then press the [RETURN] key:
```

4. The bootstrap code will then ask for the name of a device to boot. Enter the device name and unit number, such as "MU0." (It is not necessary to enter a colon as part of the name.)

```
Enter device name and unit number then press the [RETURN] key:
```

Note: If an error message is printed, either the bootstrap doesn't know how to boot that particular device or the device is defective. Call Field Service for assistance.

5. If the bootstrap does read the device, it will verify that it is a bootable volume and start the device.

```
Trying MU0
```

```
Starting system from MU0
```

Appendix E

Additional System Installation-Related Programs

This section contains programs you may need to use during your installation or update. It also contains programs related to patching RSTS/E code. The BUILD program performs system installation-related tasks. The DSKCVT program converts a disk to RDS1.2 format and converts passwords for security purposes. The ONLPAT program allows you to patch binary code.

Using the BUILD/PATCH Program

The BUILD program installs some layered products and application software. The /PATCH qualifier of the BUILD program automatically installs updates as you build new software. (If there are no update files for the software you build, then BUILD does not attempt the update procedure.)

BUILD is a privileged program that is installed with a protection code of <232>. To use the various BUILD functions, you need all privileges except:

- SYSMOD
- EXQTA
- USER1-8

The BUILD program requires that the patches and replacement modules be on disk. If your media is tape, you must first use the layered product installation procedures. See Part 3 for more information.

To run BUILD, type:

```
$ RUN UPDATE$:BUILD
```

BUILD then asks the following questions:

```
BUILD  V9.7-11 RSTS V9.7-11
Input device <SY:> ?
Output device <SY0:> ?
Control File is ?
Function (Build/Patch, Patch, Build) <Build/Patch> ?
Patch file input location <PATCH$:>
```

```
      .
      .
      .
.!!!! BUILD Complete ***
!!!! Processing ended on 13-Jun-89 at 11:13 AM ***
```

During most installations, BUILD asks additional questions specific to the individual layered product. See the installation guide for the individual product for guidelines on answering specific questions.

You can create a log file of the build procedure and also specify that the build is to run detached, in the format shown after the Input device? prompt in the BUILD dialogue:

logfile=dev:/det

For example:

Input device <SY:>: ? <file name>=MM0:/DET

Note that the Input device? prompt also accepts a /DOS or /ANSI qualifier.

Using the DSKCVT Program

The DSKCVT (Disk Convert) utility converts V8.0 and older disks to the new V9.0 RDS1.2 format and converts passwords. Specifically, DSKCVT performs the following functions:

- Convert RDS0.0 disks to RDS1.2 format
- Convert RDS1.1 disks to RDS1.2 format
- Convert accounts with "LOOKUP" passwords to "NOLOOKUP" at any time, on any RDS1.2 disk (optional)

To run DSKCVT, you must start with a disk that does not need rebuilding. (Use the MOUNT command if necessary to rebuild the disk first.) As a precaution, DIGITAL recommends that you back up any disk before conversion.

DSKCVT requires some work space if the pack being converted is RDS0.0 format. Therefore, you must make sure that there are 32 blocks times the number of different group numbers used on the pack, in order to allow conversion. (For example, if there are ten group numbers, then the pack should have 320 blocks of free space for conversion.)

DSKCVT accepts either logically mounted or logically dismounted packs. However, the pack should not be in use when you run DSKCVT. To verify that no one is using the pack, DSKCVT dismounts and remounts it at the start of processing.

The following is an example of the DSKCVT program:

```
$ run auxlib$:DSKCVT
DSKCVT V9.3-03  RSTS V9.7-11 SYSTEM:

Disk to convert? DMO:

** CURRENT DISK ATTRIBUTES **

    Disk:      DMO:
    Label:     V97
    Level:     1.1

Convert accounts to NOUSER <NO>?
Convert passwords to NOLOOKUP <YES>?
Display accounts <YES>?
Proceed (YES or NO)? YES

Converting disk DMO: to level 1.2 ...
Account [ 0,1 ] converted
Account [ 0,3 ] converted
Account [ 0,16 ] converted
Account [ 0,200 ] converted
Account [ 1,1 ] converted
Account [ 1,2 ] converted
Account [100,100] converted
Account [207,1 ] converted
```



```

Converting disk DM0: passwords to NOLOOKUP ...
Account [ 0,1 ] password is already NOLOOKUP
Account [ 0,3 ] is a NOUSER account
Account [ 0,16 ] is a NOUSER account
Account [ 0,200 ] is a NOUSER account
Account [ 1,1 ] password is invalid (contains ?'s)
Account [ 1,2 ] password is already NOLOOKUP
Account [100,100] password is already NOLOOKUP
Account [207,1 ] password is already NOLOOKUP

```

Disk _DM0: conversion completed on 13-Jun-89 at 10:39 AM

In the example, DM0: is the disk pack to convert to RDS1.2. When you type DM0: in response to the prompt, DSKCVT displays the pack ID DM0:SYSDSK. This lets you verify that you are converting the proper pack. If the pack was already converted, DSKCVT displays an error message and then repeats the Disk to convert: prompt. Otherwise, DSKCVT continues with the dialogue.

When you answer Y to the Proceed (Y or N)? prompt, DSKCVT begins the conversion. DSKCVT processes the accounts in ascending order. When the pack is converted, DSKCVT dismounts it and updates the pack label. The pack is now in RDS1.2 format. If the pack was mounted when DSKCVT started, it will be mounted once again with the pack ID as its logical name.

DSKCVT will not lose data even if the program aborts because of lack of work space, a system crash, or a disk hardware problem. If there is a problem during the conversion, you need only correct the problem and rerun the conversion. In such a case, it is not necessary to restore the pack from a backup pack.

If the conversion proceeded far enough that DSKCVT was able to convert the pack, it is then necessary only to mount it. Otherwise, DSKCVT restarts the conversion from the beginning, after deleting the work files that were left behind from the first attempt at conversion.

When you convert an RDS0.0 (pre-V8.0) disk, DSKCVT makes two passes. In the first pass, DSKCVT converts the RDS0.0 pack to RDS1.1. The second pass converts the RDS1.1 pack to RDS1.2.

In converting RDS1.1 disks to RDS1.2 format, DSKCVT adds several new attribute blocks to each account. Since some of the new attributes are only relevant on system disks, DSKCVT asks you whether the disk being converted is a system disk. DSKCVT adds the following new attribute blocks:

- Disk quota/usage block
- Privilege block, for system disks
- Non-disk quota block, for system disks

In creating the privilege attribute block, DSKCVT uses the following rules:

- For account [1,1], it assigns all privileges, except EXQTA
- For all other [1,*] accounts, it assigns all privileges, except SYSMOD and EXQTA
- For accounts not in the [1,*] group, it assigns no privileges.

This scheme assigns privileges that are compatible with previous versions of RSTS/E.

Using the ONLPAT Program to Patch RSTS/E Binary Code

You still have to use ONLPAT to make emergency corrections, as directed by the *RSTS/E Release Notes* and the *RSTS/E Software Dispatch* articles.

The ONLPAT.SAV program allows you to patch binary code. You can run ONLPAT in either the keyboard mode or the command file mode. In the keyboard mode, you enter patch information on your terminal. In the command file mode, the patch information is read from a command file. Not all patches can be installed with ONLPAT. See the Software Dispatch article for restrictions and further information.

Using ONLPAT in Keyboard and Command File Mode

ONLPAT gives you a choice. You can make patches to the software by entering the corrections manually at your keyboard or you can use a previously created command file to apply the patches for you. You make the choice at the beginning of the ONLPAT dialogue when the program asks for the name of the command file you want to use (if one exists). Your response determines how ONLPAT gets the patch information.

If you enter a command file name, ONLPAT uses the command to make the corrections. When you press the `[RETURN]` key, ONLPAT assumes the patch information comes from the keyboard. ONLPAT expects keyboard input when you enter a file name followed by an equal sign (=) symbol. This indicates you want ONLPAT to create a log file of the patch. The remainder of this section describes how to patch software using either of these methods.

When you enter patches at the keyboard, follow procedures similar to those you use for the PATCH option of INIT.SYS. Unlike the PATCH option, ONLPAT does not install a patch until you enter a circumflex-C (^C) at the end of the last line in the patch. Do not press CTRL/C unless you want to abort the patching operation. Because the program waits while you enter all the patch information, you can review the entire patch and make changes before installing the patch.

To install a published patch, you must first look in the *RSTS/E Maintenance Notebook* or the *RSTS/E Software Dispatch* for the article containing the patch you want to install. After reading the article thoroughly, you can create a command file or install the patch manually.

An ONLPAT example follows:

\$ RUN \$ONLPAT	(Invoke the ONLPAT program)
Command file name?	(Press return here for manual patching)
File to patch? RSTS.SIL	(Give the name of the program to patch)
File found in account [0,1]	[A confirmation from the system]
Module name? GAR	(Proceed exactly as in patch. Be sure
Base address? CIA	that you verify that the numbers in the
Offset address? 5522	Base, Offset, and Old columns match the
Base Offset Old New?	numbers in the patch. Note that if a
131322 005522 122700 ? 22700	printed patch includes ? characters,
131322 005524 000216 ? 46216	do not check for matching.)
131322 005526 001403 ? 1003	
131322 005530 010003 ? 10300	
131322 005532 020001 ? ^C	(Type Circumflex-C to exit)
Patch complete	[Confirmation by the system]
1 patch installed	[Additional confirmation]

Note that the instructions for installing off-line patches are slightly different; read the patch instructions for more information.

Table 39 lists and describes the types of responses ONLPAT accepts in the program dialogue.

Table 39: Responses to ONLPAT Questions

Response	Meaning
Number	Enter an octal number from 0 to 177777; leading zeros are optional. Or, enter a decimal number in the range 0. to 65535., making sure to include a trailing decimal point to distinguish it from an octal number. The octal or decimal number you enter becomes the new contents of the current location.
Symbol	Substitute a global symbol name for an octal number as the new contents of the current location. The symbol table for the module being patched is part of the SIL file. It contains that module's global symbol names and their values. A global symbol name must be a combination of alphanumeric characters up to 6 characters long and must be defined in the symbol table for the current module.
Expression	Use an expression as a substitute for an octal number. An expression consists of one or more numbers or global symbols, separated by arithmetic operators (+, -, and *). You can use parentheses to group portions of an expression.
RETURN or LINE FEED key	Advance to the next location without altering the contents of the current location.
circumflex	Return to the previous location without altering the contents of the current location.
CTRL/Z	Enter CTRL/Z to return to the previous question.
CTRL/C	Enter CTRL/C to abort all patching and return to the program prompt.

ONLPAT Dialogue Questions

COMMAND FILE NAME?

User Action: Enter a command file name to have ONLPAT install patches using commands in the command file. You can have ONLPAT make a record of the patches as well as install them if you include a log file name with the command file name in the command line:

Command file name? log file = command file name

If you do not include a file type for the command file, ONLPAT selects .CMD. The default file type for the log file is .LOG.

Press the **RETURN** or **LINE FEED** key if you do not have a command file to apply the patches. ONLPAT assumes you want to enter the patches manually from the keyboard. If you want a record of the patches that you apply manually from the keyboard, include only the log file name in the command line:

Command file name? log file =

You must place an equal sign after the log file name to make sure ONLPAT does not interpret the file you specify as being a command file. Again, ONLPAT uses .LOG as the file type if you do not specify one with the file name.

FILE TO PATCH?

User Action: Press the RETURN key if you are applying a patch to the installed monitor SIL. However, another response may be necessary. If so, enter the response suggested either by the *RSTS/E Maintenance Notebook* or the *RSTS/E Software Dispatch* article.

MODULE NAME?

User Action: Enter the module name included with the patch described either in the *RSTS/E Maintenance Notebook* or the *RSTS/E Software Dispatch* article.

BASE ADDRESS?

User Action: Type the base address included with the patch described either in the *RSTS/E Maintenance Notebook* or in the *RSTS/E Software Dispatch* article.

OFFSET ADDRESS?

User Action: Type the offset address included with the patch described either in the *RSTS/E Release Notes* article or the *RSTS/E Software Dispatch* article. The offset address is the first location to be patched relative to the specified base. The response suggested in the patch article will be a number, symbol, or expression as described in Table E-1.

Use the information described above and the following procedures to apply patches manually:

1. Gather the articles that contain the patches you need. You can find the articles either in the *RSTS/E Maintenance Notebook* or the *RSTS/E Software Dispatch*.
2. Run the ONLPAT program by typing RUN \$ONLPAT. The program begins by displaying the first of a set of dialogue questions:

Command file name?

At this point you:

- a. Press the RETURN key to enter the patch manually from your terminal.
- b. Type the name of a file, followed by an equal sign (=) symbol. This instructs ONLPAT to create a log file of the patch. The patch is also displayed on your terminal.
- c. You then answer the remaining ONLPAT dialogue questions, following the instructions in the *RSTS/E Maintenance Notebook* or the *RSTS/E Software Dispatch*. Remember that ONLPAT does not install the patch until you type ^C (not CTRL/C) to end the program. Typing ^C is entirely different than entering CTRL/C: ^C ends the patch successfully; CTRL/C stops execution of ONLPAT without making any patches.
- d. After installing the patch, ONLPAT displays a message informing you that the patch has been installed:

PATCH COMPLETE
1 PATCH INSTALLED

ONLPAT then returns to the command file question. You can then either exit the program or enter another patch.

To install a patch with a command file:

1. Create a command file. See the section, Building ONLPAT Command Files.
2. Run the ONLPAT program by typing RUN \$ONLPAT, and then pressing the RETURN key. The program displays a question asking for the name of the command file that contains the patches. Enter a command file in the following format:
`log file=command file`
If you want a record of the patch, type the name of a log file. The default file type for a log file is .LOG. ONLPAT does not create a log file by default.
3. Type the name of the file that contains the commands ONLPAT uses to install the patch. The default file type for a command file is .CMD. ONLPAT then executes the command file. If you did not include in the command file the name of the file you want to patch, ONLPAT pauses, letting you enter the file name.
4. When ONLPAT finishes processing, the program displays a summary of the patches installed and any patches skipped, and then returns to your keyboard monitor.

Patching a Running Monitor with ONLPAT

Usually you can patch the installed monitor Save Image Library (SIL). The monitor is modified on disk, and only after you shut down, and then restart the system, do the patches become effective. However, patches to monitor overlay code (OVR) are a special case. If you use patched code from OVR along with an unpatched monitor in memory, your system may crash or not work properly. This is because monitor overlays are read in from the monitor SIL (from disk) as they are needed, and changes to the monitor do not take place until the system is brought down and then restarted.

When ONLPAT detects that the file being patched is the installed monitor SIL, the program imposes certain restrictions:

- Installs the patch if the patch does not involve OVR. That is, ONLPAT applies the patch to the monitor image on disk. The patch takes affect only after you shut down the system and then restart it.
- If only one block of OVR is involved in the patch, ONLPAT installs the patch. Because the patch affects only one block, ONLPAT can make all monitor modifications with a single disk write.
- If the patch involves more than one OVR block, ONLPAT does not modify the monitor, and displays the following error message:

```
?Patch to module ovr too long for installed sil
```

- If the patch involves both OVR and some other module of the monitor, ONLPAT displays the following error message:

```
?Patch to installed sil spans ovr and other module(s)
```

The way to install a patch of this type is to copy your installed SIL, patch the copy, shut down the system, start the patched copy, and delete the old unpatched SIL.

Building ONLPAT Command Files

Create ONLPAT command files as follows:

1. Run ONLPAT from any logged-in terminal by typing `RUN $ONLPAT`. The program then displays the `COMMAND FILE NAME?` question.
2. Respond to the command file question in the following format:
Patchfile = KB:
First type the file name of the patch file you want to create and then KB: to indicate you are creating the patch file from the keyboard.
3. Press the RETURN key after you finish entering the command string. ONLPAT then asks:

FILE TO PATCH?

Type the name of the file you want to patch, press the RETURN key, and enter the text of the patch described in the *RSTS/E Maintenance Notebook* or the *RSTS/E Software Dispatch* article.

After creating the command file, you may want to modify it. If modifications are necessary, apply the following rules:

- End each individual command in the patch by pressing RETURN.
- When ONLPAT executes the command file, the program changes all lowercase characters to uppercase and reduces all tabs and spaces to a single space.
- Blanks are significant. Use them exactly as shown for individual command lines.
- You can include comment lines at the beginning of a patch. A comment line must begin with an exclamation mark (!).
- You must include a line that specifies the file you want to patch. The format of this line is:

FILE TO PATCH? filename.type

Type the name of the file that you want ONLPAT to patch. If you do not include a file name, ONLPAT prompts you for the file name during program execution. ONLPAT uses the file name to specify any subsequent patches in the command file that do not specify the file name.

- Subsequent command lines in a patch are identical to the formats used in the *RSTS/E Software Dispatch* or the *RSTS/E Maintenance Notebook*. The following command line is optional, but must appear with spacing exactly as shown in the *RSTS/E Software Dispatch* or the *RSTS/E Maintenance Notebook* articles:

BASE OFFSET OLD NEW?

Also, do not use any parenthetical comments.

- You must use the following notation:

^Z is a circumflex, then Z; or CTRL/Z
^C is a circumflex, then C; not CTRL/C
␣ is the LINE FEED key

Appendix F

Mixed Disk Drives on the Same Controller

RSTS/E V9.7 supports many types of mixed disk configurations. Usually, each type of disk requires a separate controller. Frequently, however, similar disks may share the same controller. The following sections describe the level of support for each possible disk combination. The RP04/RP05/RP06 drives all use the RH11 interface (RH70 for PDP-11/70s). You can mix up to eight of these drives on a given controller, as long as each drive in the combined set has a unique drive number. The RSTS/E monitor distinguishes which type of disk is on a given controller and uses it appropriately. The RP05 is functionally identical to the RP04.

Mixing RK06 and RK07 Drives on the Same Controller

The RK06 and RK07 drives use the RK611 and RK711 controllers. You can mix up to eight of these drives on a given controller, as long as each drive in the combined set has a unique drive number. The RSTS/E monitor distinguishes which type of disk is on a given controller and uses it appropriately. (Some older RK611 controllers need an ECO to have this capability.)

Mixing RL01 and RL02 Drives on the Same Controller

The RL01 and RL02 drives use the RL11 or RLV12 controllers. You can mix up to four of these drives on a given controller, as long as each drive in the combined set has a unique drive number. The RSTS/E monitor distinguishes which type of disk is on a given controller and uses it appropriately.

Mixing RM02/RM03/RM05/RM80 Drives on the Same Controller

The RM02, RM03, RM05, and RM80 disks are very similar to the RP04, RP05, and RP06 disks. They also use the RH controllers. The RM02 disk uses the RH70 (for PDP-11/70s) or the RH11 interface (for other PDP-11s). The RM03, RM05, and RM80 disks only use the RH70 interface and are supported only on PDP-11/70 systems.

On a PDP-11/70 system, RM02, RM03, RM05, and RM80 disks may share the same RH70 controller. You can mix up to eight of these drives on a given controller, as long as each drive in the combined set has a unique drive number. The RSTS/E monitor distinguishes which type of disk is on a given controller and uses it appropriately.

Mixing RM02/RM03/RM05/RM80 and RP04/RP05/RP06 Drives on Separate Controllers

To use both the RM and RP disks on a single system configuration, DIGITAL recommends using a separate RH controller for each kind of disk. The normal arrangement is to have the RH controller for the RP disks at the standard CSR address of 176700 and the RH controller for the RM disks at the nonstandard CSR address of 176300. However, with this arrangement, you cannot bootstrap the RM disks with any hardware bootstraps, although you can use the BOOT option of INIT.SYS.

If you would rather use the hardware bootstrap with the RM disks, you should reverse the CSR assignments so that the RP disk controller is at the nonstandard address (176300) and the RM disk controller is at the standard address (176700).

Note that if the hardware bootstrap requires you to type a device name at the console keyboard, typing either DB (the name used for RP disks) or DR (the name used for RM disks) will bootstrap a disk controlled through the standard CSR address, regardless of which type it actually is. However, most bootstraps require that you type DB, regardless of the actual type of drive.

Mixing RM02/RM03/RM05/RM80 and RP04/RP05/RP06 Drives on the Same Controller

It is possible to mix RM02/RM03/RM05/RM80 drives with RP04/RP05/RP06 drives on the same RH controller. Up to eight drives are allowed per RH, and each drive must have a unique drive number. The monitor knows which type of disk is on a given drive and uses it appropriately. Note that RM03, RM05, and RM80 disks are supported only on PDP-11/70s.

The unusual aspect of this arrangement is the device naming scheme. The lowest numbered drive on the RH determines whether all drives on this RH are known as DBn: or DRn:. For example, if the lowest numbered drive is an RP04, RP05, or RP06, then the device name DB is used for all drives. If the lowest numbered drive is an RM02, RM03, RM05, or RM80, then the device name DR is used for all drives. The RSTS/E monitor can determine the identity of the disks, although the naming scheme is not obvious.

Multiple RH Controllers for the Same Type of Disk

RSTS/E supports two similar RH controllers on the same system. These two RH controllers can both be controlling the same kind of disk, either RP or RM. Only one of these two RH controllers can be at the standard CSR address. The other controller must be at the nonstandard CSR address. Each RH can control up to eight drives, giving a possible combined total of 16 drives.

The naming scheme for the above arrangement is as follows: the drives interfaced at the standard CSR address are known by the device name that corresponds to the lowest numbered drive type (DB or DR). The drives interfaced at the nonstandard CSR addresses are known by the other name.

Random Mixing of RP and RM Disks on Multiple Controllers

RSTS/E supports two RH controllers with a combination of RP and RM disks on both RH controllers. If the respective lowest numbered drives on the two RH controllers are of different types, then the previous rule of "lowest numbered drive determines the device name" applies. If both lowest numbered drives are of the same type, then the deciding rule is: the RH at the standard CSR address gets the device name that corresponds to the lowest numbered drive type, and the RH at the nonstandard CSR address gets the other device name.

Booting Mixed RM02/RM03/RM05/RM80 and RP04/RP05/RP06 Disks

RSTS/E supports mixed RP and RM disk combinations as described in the previous section. However, you can hardware boot disks only at the primary controller address (176700). You can use the INIT.SYS BOOT option to boot all disks.

Avoiding Bootstrap Conflicts

Because of possible bootstrap conflicts, DIGITAL does not recommend configuring systems that contain both RP03 and secondary CSR RH11/70 disk drives.



Index

A

- Accept defaults?
 - explanation, 41
 - general configuration question, 41
 - possible responses, 42
- Accept defaults? (update)
 - explanation, 148
 - general configuration question, 148
 - possible responses, 148
- Accept Disk defaults?
 - disk interface configuration question, 43
 - explanation, 43
 - possible responses, 43
- Accept Peripheral defaults?
 - explanation, 47
 - peripheral interface configuration question, 47
 - possible responses, 47
- Accept Software defaults?
 - explanation, 53
 - possible responses, 53
 - software configuration question, 53
- Account base?
 - DSKINT question, 30, 213
 - explanation, 31, 213
 - possible responses, 31, 213
 - use with accounts [1,1] and [1,2], 31, 213
 - use with system disk, 31
- Account creation
 - using CREATE/ACCOUNT command, 82, 83
- Account [0,1]
 - directory listing, 297
- Account [1,2]
 - setting password on update, 156
- AC line frequency, 179
 - 50 Hz, 179
 - 60 Hz, 179
 - specifying, 231
- Address space
 - gap, 285
- A kit
 - contents, 16
 - type of RSTS/E distribution kit, 16
- Any memory allocation changes?
 - explanation, 264
 - possible responses, 264
 - START question, 264
- Auxiliary Library package
 - directory listing, 303
- Auxiliary run-time system
 - number of general small buffers, 202
 - use of general small buffers, 202

B

- BACKUP program
 - comparison with SAVRES, 251
 - number of general small buffers, 204
- BADB.SYS
 - adding blocks, 249
- Bad block file (BADB.SYS)
 - adding blocks, 249
 - definition, 1, 24, 207
- Bad blocks
 - during RESTORE, 253
- BADS, REFRESH suboption, 249
- Bads?
 - BADS question, 249
 - explanation, 249
 - possible responses, 249
- Base?
 - possible responses, 248
 - REFRESH FILE question, 248
- BASIC-PLUS
 - FIS feature, 72
 - FPP feature, 72
 - installing, 72
 - log functions feature, 73
 - math precision question, 73
 - matrices feature, 74
 - optional features, 73
 - print using feature, 73
 - string arithmetic feature, 74
 - trig functions feature, 73
- BASIC-PLUS package
 - directory listing, 302
- BASIC-PLUS RTS name?
 - explanation, 72
 - installation question, 72
 - possible responses, 72
- BASIC-PLUS run-time system
 - size constraints, 73
 - supplied by DIGITAL, 2
- Binary code
 - ONLPAT patching, 322
- Block number?
 - possible responses, 249
 - REFRESH BADS question, 249
- BM792-YB loader, 308
 - how to bootstrap with, 308
- BM873 restart/loader, 308
 - how to bootstrap with H324 pushbutton panel, 308
- BM873-YA restart/loader, 307
 - how to bootstrap with, 307

- BM873-YB restart/loader
 - how to bootstrap with, 308
- BOOT
 - BOOT error messages, 177
 - INIT.SYS program option, 177
- Boot device:
 - BOOT prompt, 177
 - possible responses, 177
- Bootstrap
 - definition, 18
 - instructions in example installation, 18
- Bootstrap record
 - definition, 18, 305
- Boot unit:
 - BOOT prompt, 177
 - possible responses, 177
- BUFFERS
 - memory allocation table suboption, 197
 - use with data space, 197
- BUILD
 - privileges required, 319
 - running, 319
- BUILD/PATCH program, 319

C

- Card decode?
 - explanation, 49
 - peripheral devices configuration question, 49
 - possible responses, 49
- CCL command definitions
 - number of FIP small buffers, 202
 - number of general small buffers, 202
 - use of FIP small buffers, 202
 - use of general small buffers, 202
- CD11 card reader?
 - explanation, 48
 - peripheral devices configuration question, 48
 - possible responses, 48
- Central processor unit console switches
 - bootstrapping a device, 306
- Cluster, definition, 26
- Cluster size?
 - DSKINT question, 30, 212
 - explanation, 30, 212
 - possible responses, 212
 - use with account [1,1], 30, 212
 - use with account [1,2], 30, 212
 - use with system disk, 30
- Cluster sizes
 - device cluster sizes and total device, 29, 211
 - device cluster sizes and total device sizes, 29, 211
 - for disk packs, 27, 209
- Command file
 - building for ONLPAT, 326
 - modifying, for patches, 326
- Command file mode
 - using ONLPAT in, 322
- Command format
 - for SHUTUP, 88, 133, 164
- Configuration questions
 - definition, 37
 - explanation of default responses, 37
- Configuration rules
 - recommendation, 285
- Configure a monitor
 - definition, 37
- Console emulator
 - activating hardware bootstrap loader, 305
 - to bootstrap a device, 306
- Console switch register
 - explanation, 232
 - settings, 315
 - using, 232
- Console terminal
 - definition, 17, 18
- Contents of messages
 - number of general small buffers, 203
 - use of extended buffers, 203
 - use of general small buffers, 203
- Controller
 - booting mixed RM and RP type disks, 329
 - disabling, 223
 - enabling, 225
 - resetting CSR address to standard, 229
 - resetting vector address to standard, 229
 - specifying nonstandard controller address, 226
 - specifying nonstandard vector address, 227
 - support of mixed RK06 and RK07 disks, 327
 - support of mixed RL01 and RL02 disks, 327
 - support of mixed RM02/RM03/RM05/RM80 disks, 327
 - support of mixed RM and RP type disks, 328
 - support of mixed RM and RP type disks on multiple, 329
 - support of mixed RP04/RP05/RP06 disks, 327
 - support of mixed type drives, 327
- Controller, RH
 - support of multiple for same type disks, 328
- Controller names
 - example list, 223
- Controller to disable?
 - explanation, 223, 224
 - HARDWR DISABLE question, 223, 224
 - possible responses, 223, 224
- Controller to enable?
 - explanation, 226
 - HARDWR ENABLE question, 226
 - possible responses, 226
- Controller with non-standard address?
 - explanation, 227
 - HARDWR CSR question, 227
 - possible responses, 227
- Controller with non-standard vector?
 - explanation, 229
 - HARDWR VECTOR question, 229
- Control status register (CSR) set
 - definition, 226
- Converting disk formats
 - with DSKCVT, 320
- COPY
 - error messages, 142
- Core memory
 - with interleaved parity memory, 183
- CPU switches
 - activating hardware bootstrap loader, 18, 138, 305
- CPU switch register
 - specifying, 233
- CR11/CM11 card reader?
 - explanation, 48
 - peripheral devices configuration question, 48
 - possible responses, 48

- CRASH.SYS file
 - creating during installation, 91
 - definition, 242
 - disabled by system, 91
 - location, 242
 - size, 242
 - status, 242
- Crash dump?
 - explanation, 91, 264
 - for RSTS/E monitor, 91, 264
- CREATE/ACCOUNT command
 - creating accounts, 82, 83
- Crystal oscillator
 - use with KW11-P programmable real-time clock, 180
- CSR
 - HARDWR suboption, 227
- CTRL/C
 - abort patching (ONLPAT), 323
 - to terminate a patch, 322
- CTRL/Z
 - in ONLPAT, 323

D

- Data caching
 - definition, 193
 - number of extended buffers, 193
 - use with extended buffers, 193
- Data space
 - with BUFFERS suboption, 197
- Date
 - how to change, 178
- DATE
 - INIT.SYS program option, 178
- Date last modified?
 - DSKINT question, 31, 213
 - explanation, 31, 213
 - possible responses, 31
 - use with system disk, 31
- DCL run-time system
 - supplied by DIGITAL, 2
- DDCMP line protocol
 - implemented by DMC11, 49
 - implemented by DMP11, 49
 - implemented by DMR11, 49
 - implemented by DMV11, 49
- DECnet/E software
 - use of extended buffers, 194
- DEFAULT
 - INIT.SYS program option, 179
 - questions, 179
- Default line frequency
 - 60 Hz, 232
- Default response
 - definition, 26
- Deletable?
 - explanation, 248
 - possible responses, 248
 - REFRESH FILE question, 248
- Detached job
 - affecting number of jobs, 51
 - definition, 51
 - run with BUILD/PATCH, 320
- Device designator, 19, 314
 - definition, 18
- Devices
 - with fixed addresses, 295
 - with fixed addresses and vectors, 295
 - with fixed vectors, 295
- Device Testing package
 - directory listing, 300
- Device vector assignments, 294
- DH11 multiplexer
 - address considerations, 286
 - connected to DM11-BB modem controller, 230
 - declaring DM11-BB modem associations, 230
 - rules for connecting, 230
- DH for DM0?
 - explanation, 231
 - HARDWR DM question, 231
 - possible responses, 231
- Dial-up terminal
 - affecting number of jobs, 51
- Directory listing
 - account [0,1], 297
 - Auxiliary Library package, 303
 - BASIC-PLUS package, 302
 - Device Testing package, 300
 - EDT package, 301
 - Error Reporting package, 300
 - File Restore package, 300
 - Help package, 298
 - OPSER-based Spooling package, 300
 - Print/Batch Services package, 300
 - RMS-11 package, 301
 - RSX Utilities package, 303
 - SORT/MERGE package, 303
 - SOURCE package, 303
 - SYSGEN components, 302
 - System Library package, 304
 - system program packages, 297
 - TECO package, 302
 - Unsupported Utility package, 301
- DISABLE
 - HARDWR suboption, 223
 - meaning, 233
 - switch register position, 233
- Disk
 - bootstrapping with BOOT, 177
 - calculating center, 244
 - converting to RDS1.2 format, 320
 - copying to one that contains bad blocks, 251
 - copying with IMAGE, 259
 - creating copy, 251
 - device designators, 19, 139
 - example of DSKCVT conversion, 320
 - for SAVE set, 251
 - IMAGE output as system, 259
 - initializing, 207
 - legal with IMAGE, 259
 - mixing different types on controller, 327
 - mount instructions, 17, 136
 - restoring, 253
- Disk?
 - DSKINT question, 24, 207
 - explanation, 24, 245
 - possible responses, 24, 207, 245
 - REFRESH question, 245
 - use with system disk, 24
- Disks on DB controller?
 - disk units configuration question, 45
 - explanation, 45

- Disks on DB controller? (cont'd.)
 - possible responses, 45
- Disks on DR controller?
 - disk units configuration question, 44
 - explanation, 44
 - possible responses, 45
- Disk units configuration questions
 - definition, 43
- Distribution disk
 - disk mount session, 17
- Distribution kit
 - collecting, 16
 - order numbers, 16
 - types, 16
 - use of RSTS/E Release Notes, 16
- DJ11 multiplexer
 - reserved address, 286
- DM
 - HARDWR suboption, 230, 231
- DM11-BB modem
 - declaring DH11 associations, 230
- DM11-BB modem controller
 - connected to DH11 multiplexer, 230
 - rules for connecting, 230
 - using, 230
- DMC11's/DMR11's?
 - explanation, 49
 - peripheral devices configuration question, 49
 - possible responses, 49
- DMC11 line interface
 - implementing DDCMP line protocol, 49
- DMP11 line interface
 - implementing DDCMP line protocol, 49
- DMR11 line interface
 - implementing DDCMP line protocol, 49
- DMV11's/DMP11's?
 - explanation, 49
 - peripheral devices configuration question, 49
 - possible responses, 49
- DMV11/DMP11 unit tributaries?
 - explanation, 49
 - peripheral devices configuration question, 49
 - possible responses, 49
- DMV11 line interface
 - implementing DDCMP line protocol, 49
- Double-precision
 - BASIC-PLUS scaled arithmetic feature, 73
- DSKCVT program
 - convert disk formats, 320
 - example, 320
 - running, 320
 - work space requirements, 320
- DSKINT
 - checking for bad blocks, 1, 24, 207
 - error messages, 34, 216
 - formatting disks, 1, 24, 207
 - INIT.SYS program option, 1, 24, 207
 - initializing disks, 1, 24, 207
 - writing minimum RSTS/E file structure, 1, 24, 207
- Dynamic Pseudo-Keyboards
 - number of general small buffers, 204

E

- ECC MOS memory, 183
- EDT editor
 - to edit contents of START.COM, 85

- EDT package
 - directory listing, 301
- EMT logging
 - definition, 54
 - number of general small buffers, 204
 - use of general small buffers, 204
- EMT logging?
 - explanation, 54
 - possible responses, 54
 - software tuning configuration question, 54
- ENABLE
 - HARDWR suboption, 225
 - switch register position, 233
- Enter new extended buffer address size?
 - XBUF question, 189
- Erase disk?
 - DSKINT question, 32, 214
 - explanation, 32, 214
 - possible responses, 33, 215
- ERR.SYS file
 - creation, 244
 - definition, 244
 - location, 244
 - size, 244
 - status, 244
- ERRCPY
 - definition, 51
- Error messages
 - INIT.SYS, 267
- Error Reporting package
 - directory listing, 300
- Errors
 - checking in software updates, 96
- Example installation
 - characteristics, 9
 - dialogue summary, 99 to 106
 - explanation, 9
 - memory allocation table, 90
 - parity memory configuration, 183
 - parity register usage, 183
 - sample SHUTUP output, 88
 - type of installation kit, 17
- Extended buffer
 - definition, 190
 - number for data caching, 193
 - number for line printers, 193
 - storage of contents of messages, 203
 - use of indirect command file I/O, 194
 - use with data caching, 193
 - use with file I/O window turns, 194
 - use with line printers, 193
 - use with loaded indexes, 194
 - use with system logicals, 194
 - use with terminal logging, 194
- Extended buffer address range is?
 - explanation, 189
 - possible responses, 189
- Extended buffer pool
 - definition, 190, 199
 - for example installation, 191
 - guidelines for allocating memory, 192
 - items stored in, 192
 - reserving memory, 188
 - storage of line printer characters, 204
 - worksheet, 196

F

File

- bad cluster while transferring contiguous, 253
- changing characteristics, 247

FILE

- REFRESH suboption, 248

File I/O Window Turns

- use of extended buffers, 194

File name?

- explanation, 248
- possible responses, 248
- REFRESH FILE question, 248

File Restore package

- directory listing, 300

File status table

- definition, 245
- example, 246
- explanation, 247
- listing, 245

File status table item

- current file size, 247
- file flags, 247
- file name, 247
- file status, 247
- minimum file size, 247
- required files, 247
- start logical block number, 247

FIP small buffer

- definition, 53, 199
- items stored in, 201, 202
- number for CCL command definitions, 202
- number for open files, 203
- storage of CCL command definitions, 202
- storage of open files information, 202
- use with update mode, 203

FIP small buffer pool

- definition, 199
- reserving memory, 197
- types, 199

FIS?

- BASIC-PLUS configuration question, 72
- explanation, 72

Floating address devices

- rules, 285

Floating addresses

- assigning, 286
- definition, 285

Floating address worksheet

- aid in assigning floating addresses, 286
- explanation, 286
- how to use, 287

Floating instruction set

- definition, 72

Floating point processor

- definition, 72

Floating vectors

- definition, 285
- explanation, 293

Format?

- considerations for specifying 0, 33, 214
- DSKINT question, 32, 214
- explanation, 32, 214
- possible responses, 32, 214
- use with system disk, 32, 214

FPP?

- BASIC-PLUS configuration question, 72

FPP? (cont'd.)

- explanation, 72
- possible responses, 72

G

Gap length

- determination, 286

General and FIP small buffer pools, 199

General small buffer

- critical to system performance, 201
- definition, 53, 199
- items stored in, 201, 202
- minimum number, 201, 204
- number for auxiliary run-time systems, 202
- number for BACKUP program, 204
- number for CCL command definitions, 202
- number for contents of messages, 203
- number for Dynamic Pseudo-Keyboards, 204
- number for dynamic regions, 202
- number for EMT logging messages, 204
- number for LAT connections, 204
- number for line printer characters, 204
- number for message receivers list, 203
- number for messages waiting to be received, 203
- number for open files, 203
- number for outstanding I/O requests, 204
- number for paper tape reader characters, 204
- number for resident libraries, 202
- number for sent messages, 203
- number for terminal information, 203
- number per job, 202
- storage of auxiliary run-time systems, 202
- storage of CCL command definitions, 202
- storage of contents of messages, 203
- storage of EMT logging messages, 204
- storage of line printer characters, 204
- storage of message receivers list, 203
- storage of messages waiting to be received, 203
- storage of open files information, 202
- storage of paper tape reader characters, 204
- storage of resident libraries, 202
- storage of sent messages, 203
- storage of terminal-related information, 203
- use with jobs, 202

General small buffer pool

- created from data space, 199
- created from Small buffers? question, 199
- definition, 199
- reserving memory, 197

H

H324 pushbutton panel option

- with BM873 restart/loader, 308

Hardware bootstrap addresses, 307

Hardware bootstrap loader

- BM792-YB loader, 308
- BM873-YA restart/loader, 307
- BM873-YB restart/loader, 308
- definition, 18
- M9301-YA bootstrap terminator, 309
- M9301-YB, 309
- M9301-YC bootstrap, 309
- M9301-YF bootstrap terminator, 310
- M9312 bootstrap terminator, 311
- M9312 console emulator, 311

Hardware bootstrap loader (cont'd.)

MR11-DB bulk storage loader, 308

Hardware configuration table

definition, 217

example, 218

explanation, 218

listing, 217

Hardware-related tasks

HARDWR suboptions, 217

HARDWR

declaring nonstandard address assignments, 285

declaring nonstandard vector assignments, 285

error messages, 233

explanation of messages, 225

hardware comments, 219

hardware configuration summary, 221

INIT.SYS program option, 217

list of messages, 225

HARDWR suboption? prompt

CSR question, 227

DISABLE question, 223

DM question, 231

ENABLE question, 225

explanation, 230, 232

HERTZ question, 232

possible responses, 223, 225, 227, 229, 230, 231, 232, 233

RESET question, 230

SWITCH question, 233

VECTOR question, 229

HARDWR suboptions

CSR, 227

DISABLE, 223

DM, 230, 231

ENABLE, 225

HERTZ, 231

list, 217

LIST, 217

RESET, 229, 230

SWITCH, 233

VECTOR, 229

Help package

directory listing, 298

HERTZ

HARDWR suboption, 231

H kit

contents, 16

type of RSTS/E distribution kit, 16

How many K-words of extra buffer space?

BUFFERS question, 197

explanation, 197

possible responses, 198

I

I&D versions of tasks?

explanation, 59

general configuration question, 59

possible responses, 59

I&D versions of tasks? (update)

explanation, 150

general configuration question, 150

possible responses, 150

IDENT

INIT.SYS program option, 235

IDENTIFY

dialogue, 257

IDENTIFY (cont'd.)

example, 257

extracting pack ID, 257

SAVRES function, 257

IMAGE

dialogue, 259

example, 259 to 262

output from, as system disk, 259

SAVRES function, 259

Indirect command file I/O

use of extended buffers, 194

INIT.SYS

error messages, 267

INIT.SYS program

determination of interrupt vectors, 285

performing hardware configuration check, 285

update questions, 140 to 141

use of memory, 192, 205

INIT.SYS program options

BOOT, 177

DATE, 178

DEFAULT, 179

DSKINT, 1, 24, 207

HARDWR, 217

IDENT, 235

PATCH, 236

REFRESH, 239, 248

START, 71, 90, 161, 166, 263

summary, 175

used in upgrade system installation, 109

Initialization code, See INIT.SYS program

INSTAL.COM command file

command format, 121

definition, 38

entry points, 122

in updates, 144

preliminary questions, 38

using, 38

using to build another monitor, 121

using to install full system, 121

using to install layered product updates, 121

using to install system programs, 121

INSTAL.LOG

installation log file, 38, 70

update log file, 160

update record, 144

Installation disk

bootstrapping, 18

bootstrapping for update, 138

disk mount session, 136

mounting, 18

mounting for update, 136, 138

Installation Kit

contents, 16

updating a V9.0 through V9.6 system, 127

using for system installation, 16

Installation questions

for layered product updates, 61

for system programs, 57

Installation tape

bootstrapping, 17, 18

bootstrapping for update, 136, 138

mounting, 17, 18

mounting for update, 136, 138

Instruction and Data space

creating general small buffer pool, 199

definition, 199

Interleaved parity memory
definition, 182
Interrupt frequency?
DEFAULT question, 180
explanation, 180
for RSTS/E monitor, 180
possible responses, 180

J

Job
calculating number, 51
calculation worksheet, 52
definition, 51
detached, 51
event-driven, 242
highly interactive, 241, 242
items used in calculating number of, 51
maximum number, 52, 53
total number in example installation, 51
use of general small buffers, 202

K

Keyboard mode
ONLPAT procedures, 324
using ONLPAT in, 322
KMC-11 microprocessor
controlling 2780/3780 IBM protocol emulator, 49
controlling 3271 IBM protocol emulator, 49
controlling DUP11 line interface, 50
KW11-L line time clock
definition, 179
KW11-P programmable real-time clock
crystal oscillator, 180
definition, 179

L

LAT connections
number of general small buffers, 204
LAT Usage
use of extended buffers, 194
Layered product
definition, 3, 61, 152
examples, 3
transferring updates, 61, 152, 159, 160
Layered product update questions, 152 to 153
Line printer
number of extended buffers, 193
types, 48
use of extended buffers, 193
Line printer characters
number of general small buffers, 204
use of extended buffer pool, 204
use of general small buffers, 204
LIST
HARDWR suboption, 217
memory allocation table suboption, 181
REFRESH suboption, 245
Loaded indexes
use of extended buffers, 194
LOCK
memory allocation table suboption, 184
Lock address is?
explanation, 184

Lock address is? (cont'd.)
LOCK question, 184
possible responses, 184

Log file
creating with BUILD/PATCH, 320
INSTAL.LOG, 38, 70, 144, 160
IPDATE.LOG, 161

Log functions?
BASIC-PLUS configuration question, 73
explanation, 73
possible responses, 73

M

M9301-YA and M9301-YB device codes, 309
M9301-YA bootstrap terminator
how to bootstrap with, 309
M9301-YB bootstrap terminator, 309
how to bootstrap with, 309
M9301-YC bootstrap, 309
how to bootstrap with, 309
M9301-YC device codes, 310
M9301-YF bootstrap terminator, 310
how to bootstrap with, 310
M9301-YF device codes, 310
M9312 bootstrap
how to bootstrap with ROM configuration, 314
M9312 bootstrap module
description, 311
use of ROM configuration, 311
M9312 bootstrap ROM configuration, 313
how to determine, 313
M9312 bootstrap terminator, 311
how to bootstrap with, 311
M9312 console emulator, 311
how to bootstrap with, 311
pushbutton boot procedure, 311
switch register boot procedure, 312
M9312 ROM arrangement, 311
M9312 ROM configuration
how to determine, 312
Magnetic tape
bootstrapping with BOOT, 177
device designators, 19, 139
for Save set, 251
mount instructions, 17, 136
Mandatory patch
definition, 96
Manual patch
disadvantages, 96
if you make a mistake, 96
when to apply, 96
Master File Directory (MFD), definition, 28
Math precision
with BASIC-PLUS, 73
Math precision?
BASIC-PLUS configuration question, 73
explanation, 73
possible responses, 73
Matrices?
BASIC-PLUS configuration question, 74
explanation, 74
possible responses, 74
MAT statements
with BASIC-PLUS, 74
Maximum jobs?
explanation, 53

Maximum jobs? (cont'd.)

- possible responses, 53
- software tuning configuration question, 53

Memory

- allocating to extended buffer pool, 192
- example of cache parity error, 186
- extended buffer pool, 190, 199
- four examples of memory failure, 185
- list of lock restrictions, 185
- locking, 184
- monitor, 190, 199
- nonvolatile, 233
- parity, 183
- unlocking, 186
- USER, 190, 199

Memory allocation table

- definition, 181
- explanation, 182
- for example installation, 90, 181
- for RSTS/E monitor, 90, 167, 179
- how to adjust, 179
- how to reset, 187
- listing, 181
- printed by BUFFERS, 197
- printed by DEFAULT, 179
- printed by LIST, 181
- use with START, 264

Memory allocation table suboptions

- BUFFERS, 197
- LIST, 181
- LOCK, 184
- PARITY, 183
- RESET, 188
- summary, 181
- UNLOCK, 186
- XBUF, 190

Memory suboption?

- DEFAULT question, 189
- explanation, 189
- use with XBUF, 189

Message send/receive code

- number of extended buffers, 193
- use of extended buffers, 193

Messages waiting to be received

- number of general small buffers, 203
- use of general small buffers, 203

MFD cluster size

- definition, 28
- size considerations, 28, 210

MFD cluster size?

- DSKINT question, 28, 210
- explanation, 28, 210
- possible responses, 210
- use with system disk, 28

Modulo 10

- using with DJ11 multiplexer, 286

Modulo 20

- using with DH11 multiplexer, 286

Monitor

- building, 66 to 67
- building an updated, 157
- building online, 121
- configuring, 37 to 54
- install SIL, 325
- overlay code patches, 325
- patches to overlay code, 325
- patching running, 325

Monitor (cont'd.)

- patching with ONLPAT, 325
- size restrictions, 158
- SYSGEN, 35
- upgrading, 109 to 118

Monitor memory

- definition, 190, 199

Monitor name?

- explanation, 263
- general configuration question, 41
- possible responses, 41, 263
- START question, 263

Monitor name? (update)

- general configuration question, 147
- possible responses, 147

MR11-DB bulk storage loader, 308

- how to bootstrap with, 308

MSCP disk drives

- possible responses, 46
- types, 46

MSCP support?

- disk units configuration question, 46
- explanation, 46

Multiple parity errors

- example, 186

N

New AC line hertz?

- explanation, 232
- HARDWR HERTZ question, 232
- possible responses, 232

New controller address?

- explanation, 227
- HARDWR CSR question, 227
- possible responses, 227

New files first?

- DSKINT question, 31, 213
- explanation, 31, 213
- possible responses, 31, 213
- use with system disk, 31

New monitor name?

- explanation, 41

New monitor name? (update)

- explanation, 147

New vector address?

- explanation, 229
- HARDWR VECTOR question, 229
- possible responses, 229

Nonparity memory, 183

Nonsystem disk

- definition, 21

Nonvolatile memory

- definition, 233

O

Online explanations, 9

Online system installation

- definition, 3
- example, 122 to 123
- privileges required, 121
- restriction, 121
- to build another monitor, 121
- to install full system, 121
- to install layered product updates, 121
- to install system programs, 121

ONLPAT

- command file log, 326
- creating command files, 326
- dialogue questions, 323
- in command file mode, 322
- in keyboard mode, 322
- keyboard mode procedures, 324
- patching a running monitor, 325
- responses to questions, 323
- running, 324
- up-arrow/C and CTRL/C, 324

Open files

- number of FIP small buffers, 203
- number of general small buffers, 203
- use of FIP small buffers, 202
- use of general small buffers, 202

OPSER-based Spooling package

- directory listing, 300

Optional software

- definition, 3, 152
- examples, 3
- job number considerations, 51

Optional software kit

- examples, 16
 - using for system installation, 16
- 3271 or 2780/3780 simultaneous links?
- explanation, 50
 - peripheral devices configuration, 50
 - possible responses, 50

Outstanding I/O requests

- number of general small buffers, 204

Overlapped seek?

- disk units configuration question, 44, 45
- explanation, 44, 45
- possible responses, 44, 45
- use with RK05 disk, 44
- use with RK06/RK07 disk, 44
- use with RL01/RL02 disk, 44
- use with RM02/RM03/RM05/RM80 disk, 45
- use with RP04/RP05/RP06 disk, 45

Overlapped seek driver

- definition, 44, 45

OVR.SYS file

- creation, 244
- definition, 244
- location, 244
- size, 244
- status, 244

P

Packages to install?

- explanation, 150
- possible responses, 150
- system program question, 150

Pack cluster size

- considerations, 26, 208
- definition, 26

Pack cluster size?

- DSKINT question, 26, 208
- explanation, 26, 208
- possible responses, 27, 209
- use with system disk, 26, 208

Pack ID

- definition, 25
- extracting with SAVRES, 257

Pack ID?

- DSKINT question, 25, 208
- explanation, 25
- possible responses, 26
- use with system disk, 25

Pack label information

- definition, 25
- printed by DSKINT option, 25, 208

Paper patch

- installed by manual patching, 96

Paper tape reader

- number of general small buffers, 204
- use of general small buffers, 204

PARITY

- memory allocation table suboption, 183

Parity error

- example, 185, 186

Parity memory

- definition, 182
- listing configuration, 183

Parity memory configuration

- explanation, 183
- for example installation, 183
- listing, 182

Parity register usage

- in example installation, 183

Parity type codes

- list, 183
- meaning, 183

Patch

- applied manually, 324
- installed to programs, 324
- modifying command file, 326
- published in *RSTS/E Software Dispatch*, 322
- terminate, 322
- to monitor overlay code, 325

PATCH

- INIT.SYS program option, 236

/PATCH qualifier

- BUILD command, 319

Patterns?

- DSKINT question, 32, 214
- explanation, 32, 214
- use with system disk, 32

Peripheral devices configuration questions

- definition, 47

Pre-extend directories?

- DSKINT question, 29, 211
- explanation, 29, 211
- possible responses, 30, 211
- use with system disk, 29

Preferred clock?

- DEFAULT question, 179
- explanation, 179
- for RSTS/E monitor, 179
- possible responses, 180

Print/Batch Services package

- directory listing, 300

Printers?

- explanation, 48
- peripheral devices configuration question, 48
- possible responses, 48

Print using?

- BASIC-PLUS configuration question, 73
- explanation, 73
- possible responses, 74

Proceed?

- DSKINT question, 33, 215
- explanation, 33, 215
- possible responses, 33, 215
- use with system disk, 33

Pseudo keyboard

- affecting number of jobs, 51

PUB, PRI, or SYS?

- DSKINT question, 30, 212
- explanation, 30, 212
- possible responses, 30, 212
- use with system disk, 30, 212

Pushbutton boot procedure

- with M9312 console emulator, 311

Q

Quota information

- use of extended buffers, 195

R

RC25 controller, 46

RDS1.2 format

- converting to, 320

Read-Only?

- DSKINT question, 31, 213
- explanation, 31, 213
- possible responses, 31, 213
- use with system disk, 31, 213

Really add logical block to BADB.SYS?

- possible responses, 249
- REFRESH BADS question, 249

Rebuild?

- explanation, 246
- possible responses, 246
- REFRESH question, 246
- use with system disk, 246

Rebuild disk

- definition, 246

REFRESH

- error messages, 239
- INIT.SYS program option, 239, 248

REFRESH suboption? prompt

- explanation, 246, 248, 249
- possible responses, 248, 249
- use with BADS, 249
- use with FILE, 248
- use with LIST, 246

REFRESH suboptions

- BADS, 249
- FILE, 248
- LIST, 245
- summary, 239

Reserved locations

- vector assignments, 228

RESET

- HARDWR suboption, 229
- memory allocation table suboption, 188

Resident library

- definition, 2
- number of general small buffers, 202
- use of general small buffers, 202

Resident overlay code

- use of extended buffers, 195

RESTORE

- bad blocks during, 253

RESTORE (cont'd.)

- example, 253 to 257
- output used for system disk, 257
- relocation of blocks, 253
- restoring a RSTS/E disk, 253
- save format, 251
- SAVRES function, 253

Restore cycle

- definition, 183

RETURN

- to accept default response, 26

RH70 BAE and CS3 addresses, 296

RH70 controller

- list of addresses, 296
- list of bus address extensions, 296
- list of control status 3 addresses, 296

RH controller

- definition, 44

RJ2780 Model 1 terminal, 50

RJ2780 software

- definition, 50
- installing, 66
- memory for extended buffer pool, 195
- mounting installation media, 66
- mounting installation media for update, 157
- updating, 157
- use of extended buffers, 195

RJ2780 support?

- explanation, 50
- peripheral devices configuration question, 50
- possible responses, 50

RK05's?

- disk units configuration question, 43
- explanation, 43
- possible responses, 43

RK05 disk system

- definition, 43

RK06/RK07's?

- disk units configuration question, 44
- explanation, 44
- possible responses, 44

RK06/RK07 disk system

- definition, 44

RK06 and RK07 disks

- mixing on same controller, 327

RK06 bootstrap procedure

- without M9312 bootstrap module, 315

RK07 bootstrap procedure

- without M9312 bootstrap module, 315

RL01/RL02's?

- disk units configuration question, 44
- explanation, 44
- possible responses, 44

RL01/RL02 disk system

- definition, 44

RL01 and RL02 disks

- mixing on same controller, 327

RL01 bootstrap procedure

- without M9312 bootstrap module, 315

RL02 bootstrap procedure

- without M9312 bootstrap module, 315

RM02/RM03/RM05/RM80 disks

- mixing on same controller, 327

RM and RP type disks

- booting mixed on same controller, 329
- mixing on multiple controllers, 329
- mixing on same controller, 328

- RIM and RP type disks (cont'd.)
 - mixing on separate controllers, 328
- RMS-11 package
 - directory listing, 301
- ROM configuration
 - determination, 311
 - how to bootstrap a device, 311
 - use with M9312 bootstrap module, 311
- ROM locations, 313
- RP04/RP05/RP06 disks
 - mixing on same controller, 327
- RQDX1 controller, 46
- RQDX2 controller, 46
- RQDX3 controller, 46
- RSTS/E file structure
 - definition, 1, 24, 207
 - Group File Directory (GFD), 1, 24, 207
 - Master File Directory (MFD), 1, 24, 207
 - User File Directory (UFD), 1, 24, 207
- RSTS/E monitor
 - building, 66 to 67
 - building online, 121
 - changing defaults, 179
 - configuring, 37 to 54
 - definition, 2
 - starting, 90, 166, 263
 - updating, 156 to 158
 - upgrading, 109 to 118
- RSTS/E Release Notes*
 - contents, 16
 - contents of V9.7 installation disks, 17
 - contents of V9.7 installation tapes, 17
 - using for system installation, 16
 - using for system update, 127
- RSTS/E Software Dispatch*
 - contents, 16
 - use during system installation, 16
 - use with mandatory patches, 96
- RSTS/E System Installation and Update Guide*
 - how to use, 5
- RSTS/E System Manager's Guide*
 - contents, 16
 - use during system installation, 16
- RSX run-time system
 - supplied by DIGITAL, 2
- RSX Utilities package
 - directory listing, 303
- RT11 run-time system
 - supplied by DIGITAL, 2
- Run-time system
 - definition, 2
 - examples, 2
- RX01/RX02's?
 - explanation, 48
 - peripheral devices configuration question, 48
 - possible responses, 48
- RX11 flexible diskette system
 - definition, 48
- RX211 flexible diskette system
 - definition, 48
- RXV11 flexible diskette system
 - definition, 48

S

- SATT.SYS base?
 - DSKINT question, 28, 210

- SATT.SYS base? (cont'd.)
 - explanation, 28, 210
 - possible responses, 28, 210
 - use with system disk, 28
- SATT.SYS file
 - definition, 28, 210
 - position, 28, 210
 - rebuilt by REFRESH, 246
- SAVE
 - format, 251, 253
- SAVE set, 253
 - extract label information from, 257
 - identify, 251
 - recreate disk from, 253
- SAVE set name
 - default name, 251
- SAVE volume
 - SAVRES, 251
- SAVRES
 - comparison with BACKUP, 251
 - definition of terms, 251
 - errors, 252
 - functions, 251
 - IDENTIFY dialogue, 257
 - IDENTIFY example, 257
 - IMAGE dialogue, 259
 - IMAGE example, 259 to 262
 - IMAGE function, 259
 - like disks, 251
 - nonselective backup, 251
 - RESTORE dialogue questions, 254
 - RESTORE example, 253 to 257
 - RESTORE function, 253
 - RESTORE output as system disk, 257
 - running on line, 252
 - save set, 251
 - SAVE set name, 251
 - save volume, 251
 - summary information, 252
 - types of messages, 252
 - using, 251
- Scaled arithmetic
 - with BASIC-PLUS, 73
- Sent messages
 - number of general small buffers, 203
 - use of general small buffers, 203
- SHOW BUFFERS
 - DCL command, 201
- SHUTUP program
 - command format, 88, 133, 164
 - explanation, 88, 133
 - list of questions, 133
 - possible responses to questions, 88, 133, 164
 - questions, 88, 164 to 165
 - running, 88, 133, 164
 - sample output, 88, 133, 164
 - shutting down current monitor, 133
 - shutting down SYSGEN monitor, 88, 163
 - to shut down SYSGEN monitor, 164
- SIL (Save Image Library)
 - patch installed, 325
 - restrictions to install, 325
- Size?
 - possible responses, 248
 - REFRESH FILE question, 248
- Small buffer
 - See FIP small buffer pool

- Small buffer (cont'd.)
 - See general small buffer pool definition, 53
- Small buffer pool
 - list of considerations, 197
 - worksheet, 206
- Small buffers?
 - creating general small buffer pool, 199
 - explanation, 53
 - possible responses, 54
 - software tuning configuration question, 53
- Small buffer table
 - printed during system installation, 199
- 2780/3780 software
 - use of extended buffers, 195
- Software tuning configuration questions
 - definition, 53
- SORT/MERGE package
 - directory listing, 303
 - installing, 75
- SOURCE package
 - directory listing, 303
- START
 - activating RSTS/E monitor, 90
 - changing memory allocation table, 264
 - crash dump file, 264
 - error messages, 90, 91, 167, 263, 264
 - INIT.SYS program option, 71, 90, 161, 166, 263
 - list of operations, 264
 - questions, 166 to 168
 - to activate RSTS/E monitor, 166, 263
 - to change crash dump, 91, 167
 - warning messages, 90, 167, 263
- START.COM command file
 - editing, 84
 - use in timesharing, 84
- Statistics
 - use of extended buffers, 195
- String arithmetic?
 - BASIC-PLUS configuration question, 74
 - explanation, 74
 - possible responses, 74
- Supersede existing monitor?
 - explanation, 41
- Supersede existing monitor? (update)
 - explanation, 147
- SWAP.SYS file
 - definition, 241
 - location, 241
 - size, 241
 - status, 241
- SWAP0.SYS file
 - creation, 242
 - definition, 242
 - location, 242
 - status, 242
- SWAP1.SYS file
 - creating, 242
 - creating during installation, 65
 - creating during update, 157
 - definition, 241
 - location, 242
 - status, 241
- SWAP3.SYS file
 - creation, 243
 - definition, 242
 - location, 242
- SWAP3.SYS file (cont'd.)
 - status, 242
 - use with event-driven jobs, 242
- Swap file
 - optional, 242
 - SWAP.SYS, 241
 - SWAP0.SYS, 242
 - SWAP1.SYS, 241
 - SWAP3.SYS, 242
- SWAP max?
 - explanation, 90, 263
 - for RSTS/E monitor, 90, 263
 - possible responses, 65, 156
- Swap times, 243
- SWITCH
 - HARDWR suboption, 233
- Switch register?
 - explanation, 233
 - HARDWR SWITCH question, 233
 - possible responses, 233
- Switch register boot procedure
 - with M9312 console emulator, 312
- Switch register codes, 315
- Switch register contents
 - logical positions, 233
- Switch register position
 - DISABLE, 233
 - ENABLE, 233
 - VOLATILE, 233
- SYSGEN components
 - directory listing, 302
- SYSGEN monitor
 - how to shut down, 88, 164
 - legal device unit numbers, 22
 - starting, 35
 - temporary RSTS/E monitor, 2
- SYSTAT program
 - /F switch, 201
 - to display number of small buffers, 201
- System code
 - patching, 236
- System disk
 - copying files for update, 140
 - definition, 21
 - initializing, 24
 - initializing with DSKINT, 1, 24
 - physically mounting, 22
- System files
 - creating, 240
 - creating additional, 64
 - creation summary, 241
 - creation worksheet, 245
 - definition, 64
 - list, 240
 - space considerations, 240
- System installation
 - concepts, 1
 - definition, 1
 - example, 99 to 106
 - flowchart, 13
 - online, 3
 - to build a new RSTS/E monitor, 3
 - to upgrade a RSTS/E monitor, 3
 - upgrading a pre-V9.1 RSTS/E system, 109
- System Library package
 - directory listing, 304
- System logicals

System logicals (cont'd.)
 use of extended buffers, 194
 System program
 definition, 56
 directory listing, 297
 examples, 3
 how to update, 149
 installing, 57
 list, 56
 logical names, 94, 149
 purposes, 3
 repositioning, 94
 transferring updates, 159 to 160
 System startup file
 editing, 81
 START.COM, 84
 System update
 flowchart, 129
 restriction, 170
 to build another monitor, 170

T

Table suboption?
 DEFAULT question, 179, 181, 183, 184, 186, 188, 197
 explanation, 179, 181, 183, 184, 186, 188, 197
 for RSTS/E monitor, 179
 possible responses, 181, 183, 184, 187, 188, 189, 197
 use with BUFFERS, 197
 use with LIST, 181
 use with LOCK, 184
 use with PARITY, 183
 use with RESET, 188
 use with UNLOCK, 186
 Tape
 device designators, 139
 mount instructions, 17, 136
 TE10 bootstrap procedure
 without hardware bootstrap loader, 317
 TECO package
 directory listing, 302
 Template monitor
 definition, 146
 using for update, 147
 Terminal logging
 use of extended buffers, 194
 Terminals
 affecting number of jobs, 51
 number of general small buffers, 203
 use of general small buffers, 203
 Terminal session
 explanation, 9
 TMSCP tape drives?
 explanation, 48
 peripheral devices configuration question, 48
 possible responses, 48
 Trig functions?
 BASIC-PLUS configuration question, 73
 explanation, 73
 possible responses, 73
 TS03 bootstrap procedure
 without hardware bootstrap loader, 317
 TS11/TK25/TSV05/TU80's?
 explanation, 48
 peripheral devices configuration question, 48

TS11/TK25/TSV05/TU80's? (cont'd.)
 possible responses, 48
 TS11 magnetic tape system
 definition, 48
 TU10/TE10/TS03's?
 explanation, 47
 peripheral devices configuration question, 47
 possible responses, 48
 TU10/TE10/TS03 magnetic tape system
 definition, 47
 TU10 bootstrap procedure
 without hardware bootstrap loader, 317
 TU16/TE16/TU45/TU77's?
 explanation, 47
 peripheral devices configuration question, 47
 possible responses, 47
 TU16/TE16/TU45/TU77 magnetic tape system
 definition, 47
 TU80 tape drive
 use in example installation, 18

U

UDA50 controller, 46
 Unit?
 DSKINT question, 24, 208
 explanation, 24, 246
 possible responses, 25, 246
 REFRESH question, 246
 use with system disk, 24
 UNLOCK
 memory allocation table suboption, 186
 Unlock address is?
 explanation, 187
 possible responses, 187
 UNLOCK question, 187
 Unsupported Utility package
 directory listing, 301
 Update
 how to perform, 127
 kit labels, 127
 performing a selective, 170
 preliminary questions, 144
 selective example, 171 to 172
 Update, selective
 full system, 170
 layered products, 170
 monitor, 170
 system programs, 170
 UPDATE.COM
 command format, 170
 entry points, 170, 171
 example using, 171
 explanation, 170
 using for selective updates, 170
 using for updates, 170
 UPDATE.LOG
 update record, 161
 Update mode
 FIP small buffer considerations, 203
 Updating software
 error checking, 96
 reference documents, 127
 Upgrade system installation
 flowchart, 110
 how to perform, 113
 INIT.SYS options used in, 109

Upgrade system installation (cont'd.)

- list of steps, 113
- steps for multiple removable disk systems, 116
- steps for no multiple removable disk systems, 113
- Use previous bad block info?
 - DSKINT question, 31, 213
 - explanation, 31, 213
 - possible responses, 32, 214
 - use with system disk, 31
- User account
 - creating, 81, 82, 83
- Use resident library version? (update)
 - explanation, 151
 - possible responses, 151
 - system program question, 151
- User file directory (UFD)
 - definition, 30
- USER memory
 - definition, 188, 190, 199
- Use template monitor?
 - explanation, 40
 - possible responses, 40
- Use template monitor? (update)
 - explanation, 147
 - Yes response, 147

V

- V9.7 Installation Kit
 - contents, 16
 - using for system installation, 16
- VECTOR
 - HARDWR suboption, 229
- Vector address
 - definition, 228
- Vector assignments
 - list of reserved locations, 228
- VOLATILE
 - switch register position, 233

W

- W kit
 - contents, 16
 - type of RSTS/E distribution kit, 16

X

- XBUF
 - See also extended buffer pool
 - creation by INIT.SYS, 188
 - memory allocation table suboption, 190

Reader's Comments

RSTS/E
System Installation and Update Guide
AA-2669J-TC

Please use this postage-paid form to comment on this manual. If you require a written reply to a software problem and are eligible to receive one under Software Performance Report (SPR) service, submit your comments on an SPR form.

Thank you for your assistance.

I rate this manual's:

	Excellent	Good	Fair	Poor
Accuracy (software works as manual says)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Completeness (enough information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clarity (easy to understand)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization (structure of subject matter)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Figures (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Examples (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Index (ability to find topic)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Page layout (easy to find information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

I would like to see more/less _____

What I like best about this manual is _____

What I like least about this manual is _____

I found the following errors in this manual:

Page	Description
------	-------------

_____	_____
-------	-------

_____	_____
-------	-------

_____	_____
-------	-------

_____	_____
-------	-------

_____	_____
-------	-------

Additional comments or suggestions to improve this manual:

I am using **Version** _____ of the software this manual describes.

Name/Title _____ Dept. _____

Company _____ Date _____

Mailing Address _____


_____ Phone _____

----- Do Not Tear - Fold Here and Tape -----

digital™



No Postage
Necessary
if Mailed
in the
United States

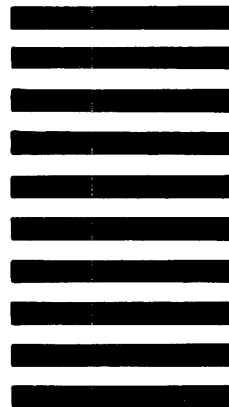

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 33 MAYNARD MASS.

POSTAGE WILL BE PAID BY ADDRESSEE

Digital Equipment Corporation
Corporate User Publications
Continental Boulevard
MK01-2/E12
Merrimack, New Hampshire 03054



----- Do Not Tear - Fold Here -----

Cut Along Dotted Line