

PDP-12

SYSTEM REFERENCE MANUAL

PDP-12 SYSTEM REFERENCE MANUAL

1st Printing (Preliminary) June 1970 2nd Printing (Revised) July 1970 3rd Printing (Revised) August 1971

Copyright © 1971 by Digital Equipment Corporation

The material in this manual is for reference only. Instruction times, operating speeds, and the like are provided solely as reference information, and are subject to change at any time without prior notice. The drawings, specifications, and descriptions herein are the property of Digital Equipment Corporation, and shall not be reproduced or copied in whole or in part as the basis for the manufacture or sale of items without written permission.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts:

DEC

PDP

FLIP CHIP

FOCAL

DIGITAL

COMPUTER LAB

CONTENTS

Chapter		Pa	ge
CHAPTER 1	GENERAL DESCRIPTION		
1.1	Description	1	- 1
1.1.1	System	_	-1
1.1.2	Central Processor	-	-3
1.1.3	Memory		-4
1.1.4	Operating Modes	-	-4
1.1.5	Input/Output Facilities and Display	_	-5
1.2	Symbols and Abbreviations		-6
CHAPTER 2	CONTROLS AND INDICATORS		
2.1	PDP-12 Console Controls and Indicators	2	-1
2.2	Data Terminal		-1
2.3	CRT Display, Type VR12	·	-1
2.4	LINCtape Transport, Type TU55	2	-1
2.5	Teletype, Model 33 ASR	2	- 1
CHAPTER 3	LINC MODE PROGRAMMING		
3.1	Organization of Memory	3	- 1
3.1.1	General		-1
3.1.2	Program Counter	3	-2
3.1.3	Instruction and Data Field Registers		-2
3.2	Memory Addressing Methods		-3
3.2.1	General	3	-3
3.2.2	Direct Addressing	3-	-3
3.2.3	Indirect Addressing: β -Class	3	-3
3.2.4	Addressing: a-Class	3:	-6
3.3	LINC Mode Instructions	3.	-6
3.3.1	Instruction Formats	3.	-6
3.3.2	Instruction Descriptions	3.	-7
3.3.3	Full-Word Instructions	3.	-7
3.3.4	Full-Word Logic	3-1	. 1
3.3.5	Full-Word Comparison	3-1	2
3.3.6	Half-Word Operations	3-1	3
3.3.7	a-Class Operations	3-1	4
3.3.8	Program Control	3-1	5
3.3.9	Shift and Rotate Operations	3-1	6
3.3.10	Skips	3-1	9

CONTENTS (cont)

Chapter		Page
3.3.11	Miscellaneous	3-21
3.3.12	Console Switches	3-22
3.3.13	Mode Control	3-22
3.3.14	Input/Output Bus	3-23
3.3.15	Memory Address Control	3-24
3.3.16	Special Functions	3-29
3.3.17	Instruction Trap	3-30
3.4	CRT Display, Type VR12	3-31
3.4.1	Point Displays	3-32
3.4.2	Character Displays	3-32
3.4.3	Half-Size Characters	3-33
3.4.4	Character Set	3-33
3.5	Data Terminal	3-35
3.5.1	Analog Inputs	3-35
3.5.2	Relays	3-36
3.6	LINCtape Type TC12	3-37
3.6.1	Organization of Data	3-37
3.6.2	Programming	3-41
3.6.3	Tape Motion	3-42
3.6.4	LINCtape Instructions	3-43
3.6.5	Extended Operations	3-45
3.6.6	Extended Address Format	3-46
3.6.7	Extended Units	3-47
3.6.8	Tape Interrupt Enable	3-47
3.6.9	No Pause Condition	3-48
3.6.10	Hold Unit Motion	3-48
3.6.11	MARK Condition	3-48
3.6.12	Maintenance Mode	3-49
3.6.13	Tape Trap	3-49
3.6.14	Tape Word Skip	3-49
CHAPTER 4 8 1	MODE PROGRAMMING	
4.1	Organization of Memory	4-1
4.1.1	Organization	4-1
4.1.2	Page 0	4-1
4.1.3	Extended Memory	4-2
4.2	Memory Addressing Methods	4-2
4.2.1	Direct Addressing	4-2
4.2.2	Indirect Addressing	4-3
4.2.3	Autoindexing	4-4
4.3	8 Mode Instructions	4-5
4.3.1	Memory Reference Instructions	4-5
4.3.2	Operate Class Instructions	4-6
4.4	Program Interrupt	4-12
4.4. 1	Operation	4-12
4.4.2	Using the Program Interrupt	4-13
4.5	Extended Arithmetic Element Type KE12	4-13
4.5.1	Operation	4-13
4.5.2	EAE Instructions	4-13
4.5.3	EAE Programming	4-16
4.6	Extended Memory	4-19

CONTENTS (cont)

Chapter		Page
4.6.1	Registers	4-19
4.6.2	Instructions	4-20
4.6.3	Programming	4-21
CHAPTER 5	INPUT/OUTPUT BUS DESCRIPTION	
5.1	Programmed Data Transfers and I/O Control	5-4
5.1.1	Timing and IOP Generator	5-6
5.1.2	Device Selector (DS)	5-7
5.1.3	Input/Output Skip (IOS)	5-8
5.1.4	Accumulator	5-9
5.1.5	Input Data Transfers	5-10
5.1.6	Output Data Transfers	5-11
5.1.7	Program Interrupt	5-11
5.2	Multi-Level Automatic Priority Interrupt	5-15
5.2.1	Interrupts	5-15
5.2.2	Push	5-15
5.2.3	Restore—"POP" (REST-IOT 6771)	5-16
5.2.4	Vectoring	5-16
5.2.5	Maintenance Logic	5-17
5.2.6	Programming	5-18
5.2.7	Programming Restrictions	5-19
5.2.8	Instruction List	5-19
5.2.9	DM12	5-20
5.3	Data Break Transfers	5-21
5.3.1	Single-Cycle Data Breaks	5-22
5.3.2	Input Data Transfers	5-22
5.3.3	Output Data Transfers	5-23
5.3.4	Memory Increment	5-27
5.3.5	Three-Cycle Data Breaks	5-29
5.4	Interface Design and Construction	5-30
5.4.1	PDP-12 Interface Modules	5-30
5.4.2 5.4.3	M Series Flip Chip Modules	5-34
5.4.4	Construction of Interfaces IOT Allocations	5-39
5.4.5	Interface Connections	5-43 5-44
CHAPTER 6	PERIPHERAL DEVICES	
	Introduction	6-1
6.1	Teletype	6-3
6.1.1	Model 33 ASR	6-3
6.1.2	Model 33 KSR	6-3
6.1.3	Model 35 KSR	6-4
6.1.4	Model 37 KSR	6-4
6.1.5	Teletype Controls	6-4
6.2	Real Time Clocks	6-18
6.2.1	Real Time Interface, Type KW12-A	6-18
6.2.2	KW12-B and KW12-C Fixed Interval Clocks	6-25
6.3	Disk Storage	6-27
6.3.1	Random Access Disk File, Types DF/DS32 and DF/DS32-D	6-27
6.3.2	Disk Memory System Type RF/RS08	6-30

CONTENTS (cont)

Chapter		Page
6.3.3	RK8 Disk Cartridge Memory System	6-38
6.3.4	Disk Software	6-44
6.4	Magnetic Tape	6-45
6.4.1	Automatic Magnetic Tape Control, Type TC58	6-45
6.4.2	Magnetic Tape Transports	6-54
6.4.3	LINCtape Option TC12-F	6-57
6.5	Line Printers	6-59
6.5.1	Line Printers and Control, Type LP12	6-59
6.5.2	Line Printers and Control, Type LP08	6-60
6.6	Card Readers	6-63
6.6.1	Card Reader and Control, Type CR12	6-63
6.6.2	Optional Mark Card Reader Type CM12	6-66
6.7	Incremental Plotters	6-68
6.7.1	Incremental Plotter and Control, Type XY12	6-68
6.8	Paper Tape	6-71
6.8.1	High-Speed Paper-Tape Punch and Reader, Type PC12	6-71
6.8.2	High-Speed Paper-Tape Punch, Type PP12	6-71
6.8.3	High-Speed Paper-Tape Reader, Type PR12	6-72
6.9	Data Buffers	6-73
6.9.1	Data Buffer Type DB12-P, N	6-73
6.10	Power Fail/Restart	6-74
6.10.1	Power Failure Option, Type KP12	6-74
6.11	Analog-To-Digital	6-76
6.11.1	General Purpose Multiplexed Analog-to-Digital Converter System, Type AF01-A	6-76
6.12	Digital-To-Analog	6-82
6.12.1	Digital-to-Analog Converter, Type AA01-A	6-82
CHAPTER 7	PROGRAM LIBRARY	
7.1	PDP-12 Programs	7-1
7.1.1	LAP 6 – DIAL Display Interactive Assembly Language (DEC-12-SE2D-D)	7-1
7.1.2	Peripheral Interchange Program (PIP)	7-3
7.1.3	QUANDA (DEC-12-FISA-D)	7-3
7.1.4	DATAM (DEC-L8-FDAA-D)	7-3
7.1.5	GRAPHA (DEC-L8-UGAA-D)	7-3
7.1.6	FRQANA (DEC-L8-FANA-D)	7-3
7.1.7	MAGSPY (DEC-12-UZSA-D)	7-3
7.1.8	COMPAR (DEC-12-025A-D)	7-3
7.1.9	SEARCH (DEC-L8-EUSA-D)	7-3
7.1.10	CONVERT (DEC-12-ESYB-D)	7-3
7.1.10	MARK 12 (DEC-12-YITB-D)	7-3 7-4
7.1.12	L8SIM (DEC-12-SI1B-D)	7- 4 7-4
7.1.13	FRED (DEC-12-FZFA-D)	7-4
7.1.14	PRTC 12-F (DEC-YIYA-D)	7-4
7.1.15	SIGAVG/SINPRE (DEC-12-UZ1A-D/DEC-12-UW4A-D)	7-4
7.1.16	CATACAL (DEC-12-UW1A-D)	7-4 7-4
7.1.17	NMRSIM (Nuclear Magnetic Resonance Simulation) (DEC-12-UW5A-D)	7 -4 7-4
7.1.17	ADTAPE/ADCON (DEC-12-UW2A-D)	7- 4 7-5
7.1.18	TISA (DEC-12-UW3A-D)	7-3 7-5
7.1.19	FOCAL 12	7-3 7-5
7.1.20	PDP-8 Programs	7-3 7-5
7.2.1	System Programs	7-3 7-5
1.4.1	Oyotom 1 10gramo	1-3

CONTENTS (Cont)

Chapter	•	Page
7.2.2	Elementary Function Routines	7-7
7.2.3	Utility Program	7-9
7.3	DECUS Program	7-10
7.4	Diagnostic Programs	7-27
APPENDIX A	A LINC MODE INSTRUCTIONS	
APPENDIX I	8 MODE INSTRUCTIONS	
APPENDIX (C I/O BUS INSTRUCTIONS	
APPENDIX I	8 MODE PERFORATED-TAPE LOADER	
APPENDIX E	E TAPE MAINTENANCE INSTRUCTIONS	
E.1	General	E-1
E.2	Tape Maintenance Instructions	E-1
E.2.1	IOT 6141	E-1
E.2.2	IOT 6152	E-2
E.2.3	IOT 6154	E-2
E.2.4	IOT 6154 Detailed Transfer Information	E-3
APPENDIX F	TABLE OF CODES	
F.1	Model 33/35 ASR/KSR Teletype Code	F-1
F.2	Model 33 ASR/KSR Teletype Code in Binary Form	F-2
F.3	LT-37 Transmit and Receive Code Table	F-3
F.4	Card Reader Codes	F-5
F.5	LP08 Line Printer Code	F-6
F.6	LP12 Automatic Line Printer Code	F-7
APPENDIX C	G CABLE CONNECTIONS TO PDP-12 FRONT PANEL	
APPENDIX H	I MATH DATA	
INDEX		

TABLES

Table No.	Title	Page
2-1	Central Processor Register Indicators	2-3
2-2	Central Processor Major State Indicators	2-3
2-3	Central Processor Miscellaneous Indicators	2-3
2-4	Tape Processor Major State Indicators	2-4
2-5	Tape Processor Miscellaneous Indicators	2-4
2-6	Function of Computer Consoel Keys	2-5
2-7	Toggle Switch Registers	2-7
2-8	Individual Console Toggle Switches	2-7
2-9	Analog Knobs and Power Switch Panel	2-9
2-10	Relay and Analog Input Panel	2-9
2-11	VR12 Display Scope Controls	2-11
2-12	TU55 Tape Transport Controls and Indicators	2-12
2-13	Teletype Model 33 ASR Controls	2-14
3-1	ASR-33 Character Set Display Pattern	3-34
4-1	Summary of Addressing Methods in 8 Mode	4-4
5-1	Stack Register	5-16
5-2	M Series Module Summary	5-35
5-3	Cable Connections to the PDP-12 I/O Bus	5-45
6-1	PT08 Specifications	6-10
6-2	PT08 Device Codes	6-11
6-3	DC02-E Specifications	6-14
6-4	DF32 Instructions Compared with RF/RS08 Instructions	6-35
6-5	Input Signal Scaling	6-77
6-6	System Conversion Characteristics	6-79
A -1	LINC Mode Instructions	A-1
B-1	8 Mode Memory Reference Instructions	B-1
B-2	8 Mode Group 1 Operate Microinstructions	B-3
B-3	8 Mode Group 2 Operate Microinstructions	B-3
B-4	8 Mode Extended Arithmetic Element Microinstructions	B-4
C-1	IOT Instructions	C-1
E-1	AC Bit Functions	E-1
E-2	AC Bit Functions	E-2
E-3	IOT 6154 Effect of Tape Maintenance Instructions	E-2
E-4	Tape Maintenance Instruction Register Equals 108	E-3
E-5	Tape Maintenance Instruction Register Equals 118	E-4
E-6	Tape Maintenance Instruction Register Equals 128	E-4
E -7	Tape Maintenance Instruction Register Equals 13 ₈	E-4
E-8	Tape Maintenance Instruction Register Equals 148	E-5
E-9	Tape Maintenance Instruction Register Equals 15 ₈	E-5
F-1	Model 33/35 ASR/KSR Teletype Code (ASCII) in Octal Form	F-1
F-2	Model 33 ASR/KSR Teletype Code (ASCII) in Binary Form	F-2

TABLES (cont)


Table No.	Title	Page
F-3	LT-37 Transmit and Receive Code Table	F-3
F-4	Card Reader Codes	F-5
F-5	LP08 Line Printer Code	F-6
F-6	LP12 Automatic Line Printer Code	F-7
G-1	Cable Connections for PDP-12 Front Panel	G-2

ILLUSTRATIONS

Figure No.	Title	Page
Frontispiece	PDP-12 Program Data Processor	
1-1	PDP-12 Functional Block Diagram	1-2
2-1	PDP-12 Operator Console	2-2
2-2	Analog Knobs and Power Switch Panel	2-8
2-3	Relay and Analog Input Panel	2-10
2-4	Type VR12 CRT Display	2-10
2-5	TU55 Tape Transport Control Panel	2-11
2-6	Teletype Model 33 ASR	2-13
3-1	Assignment of LINC Address within Memory	3-1
3-2	Direct Address Instruction Format	3-3
3-3	β -Class Instruction Format	3-4
3-4	eta-Class Format	3-6
3-5	a-Class and Non-Memory Reference Format	3-6
3-6	Rotate Left	3-17
3-7	Rotate Right	3-17
3-8	Scale Right	3-18
3-9	QAC Transfer Path	3-22
3-10	Data Path: IB, IF, DF, and AC	3-27
3-11	Data Path, RMF Instruction	3-28
3-12	Special Functions	3-29
3-13	CRT Grid	3-31
3-14	Display Pattern for DSC	3-33
3-15	Relay Terminals and Corresponding AC Bits	3-36
3-16	Standard LINCtape Format	3-38
3-17	LINCtape Processor Information Paths	3-40
3-18	LINCtape Instruction Format	3-41
3-19	Extended Operations Buffer Bit Assignments	3-45
4-1	Organization of Memory, 8 Mode	4-2
4-2	Memory Reference Instruction Format	4-3
4-3	Group I Operate Class Instruction Format	4-7
4-4	Rotation Scheme for RAR, RTR, RAL, RTL	4-8
4-5	Group II Operate Class Instruction Format	4-10
4-6	EAE Instruction Format	4-13
4-7	Shift Path for NMI, SHL	4-15
4-8	Shift Path for ASR	4-16
4-9	Shift Path for LSR	4-16
4-10	Data Path to SF and AC	4-20
5-1	Logic Symbols	5-3
5-2	IOT Instruction Decoding	5-4
5_3	Programmed Data Transfer Interface Block Diagram	5-5

ILLUSTRATIONS (cont)

Figure No.	Title	Page
5-4	Programmed Data Transfer Timing	5-6
5-5	Generation of IOT Command Pulses by Device Selectors	5-7
5-6	Typical Device Selector	5-8
5-7	Use of IOS to Test the Status of an External Device	5-9
5-8	Accumulator Input or Output	5-10
5-9	Loading Data into the Accumulator from an External Device	5-11
5-10	Loading a Six-Bit Word into an External Device from the AC	5-12
5-11	Program Interrupt Request Signal Origin	5-12
5-12	Multiple Inputs to IOS and PI Facilities	5-13
5-13	Illustration of Push and POP Operations	5-13
5-14	Vector Flow Diagram	5-17
5-15	DM12 Cable Diagram	5-20
5-16	Data Break Transfer Interface	5-21
5-17	Single-Cycle Data Break Input Transfer Timing	5-23
5-18	Device Interface Logic for Single-Cycle Data Break Input Transfer	5-24
5-19	Single-Cycle Data Break Output Transfer Timing	5-25
5-20	Device Interface Logic for Single-Cycle Data Break Output Transfer	5-26
5-21	Memory Increment Data Break Timing	5-27
5-22	Three-Cycle Data Break Timing	5-29
5-23	Typical M111/M906 Positive Input Circuit	5-31
5-24	Typical M516 Positive Bus Receiver Input Circuit	5-31
5-25	Typical M623/M906 Positive Output Circuit	5-32
5-26	M660 Terminated Bus Driver Output Circuit	5-32
5-27	M103 Device Selector Logic Circuit	5-33
5-28	M101 Bus Data Interface Logic Circuit	5-34
5-29	I/O Bus Configuration	5-40
5-30	I/O Cable Connections	5-41
6-1	Relationship Between Paper Tape and Accumulator	6-3
6-2	Punched Paper Tape Format for the Number 4	6-4
6-3	PT08 Equipment Configurations	6-11
6-4	PT08 Program Response Time	6-13
6-5	KW12-A Real Time Interface	6-18
6-6	KW12-A Organization	6-19
6-7	Simplified Input Synchronizer Logic Diagram	6-20
6-8	KW12-A Timing Diagram	6-21
6-9	Automatic Restart Program Events	6-75
6-10	Typical Power Failure Program Service Routine	6-75

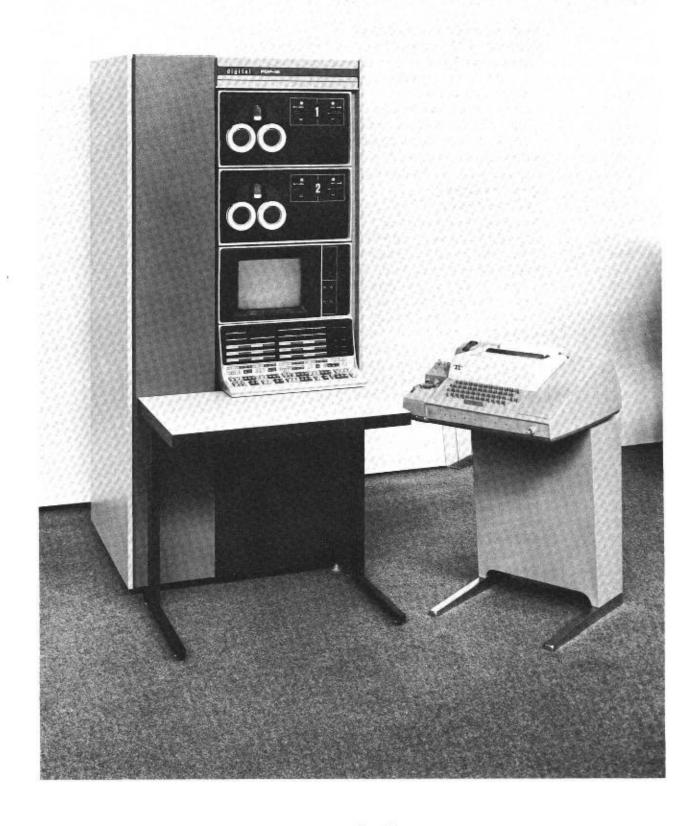

PDP-12 Programmed Data Processor

CHAPTER 1 GENERAL DESCRIPTION

1.1 DESCRIPTION

1.1.1 System

The PDP-12 (Programmed Data Processor-12) is a versatile digital computer which includes within its single central processor two distinct operating modes, each with its own complete instruction set. This versatility of the PDP-12 makes it, on the one hand, a laboratory-oriented machine with several built-in facilities for input/output, auxiliary storage, and control and sensing of external equipment; and on the other hand, a general-purpose computer with a flexible input/output capability to which numerous peripheral devices may be easily attached. The central processor logic is fully parallel, using a basic word length of 12 bits. The processor cycle time is 1.6 microseconds ±20%; most instructions require from 1 to 3 cycles for execution.

Like its predecessor, the LINC-8, the PDP-12 operates in one mode as a LINC (Laboratory Instrument Computer) and in the other mode as a PDP-8 computer — specifically, a PDP-8/I. Unlike the LINC-8, however, the PDP-12 has one central processor, and both operating modes have equal status. (In the LINC-8, the LINC mode was subordinate to the PDP-8 mode.) The computer may be stopped and started in either mode, and programs may switch from one to the other at will. Computations in one mode are immediately available to programs operating in the other mode because only one set of processing registers is involved.

The PDP-12 is offered in three configurations, A, B, and C, in order of decreasing capability. The two smaller systems, B and C, are expandable into the A configuration. The system discussed in this handbook is the PDP-12A. The capacity of basic core memory storage in the PDP-12 is 4096 (4K) 12-bit words which can be expanded to 32,768 (32K) 12-bit words.

Figure 1-1 shows a system block diagram with many of the options and peripherals available, such as:

LINCtape –	Two TU55 tape transports or one TU56 dual drive transport controlled by a buffered subprocessor
CRT Display –	6" x 9" screen, two intensification channels
Analog Inputs –	Eight external inputs, eight variable potentiometers
Relay Buffer –	Six relays for control of external equipment

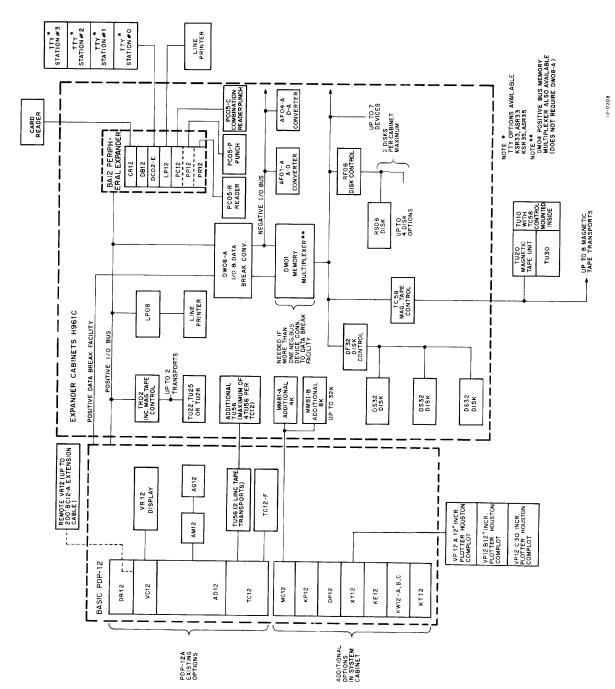


Figure 1-1. PDP-12 Functional Block Diagram

The PDP-12 is also equipped with a positive-logic, PDP-8/I-type, input/output (I/O) bus which can be used for interfacing all 8-family peripherals and options, as well as the standard Teletype® Model 33 ASR.

1.1.2 Central Processor

The central processor contains all the logic and registers required to carry out the functions of both operating modes of the PDP-12. The central processor can best be described in terms of its active registers:

Accumulator (AC) 12 Bits

This register contains data being operated upon. Its contents may be shifted or rotated right or left; incremented, cleared, or complemented; stored in memory or added to the contents of a memory register; and logically or arithmetically compared with the contents of any memory register. The AC holds the sum after an addition, and part of the product after a multiplication. The AC is also involved in the transfer of data to and from various other registers outside the central processor.

Link (L) 1 Bit

The Link is an extension of the AC. When a carry occurs out of AC_{00} during a 2's complement addition, the Link is complemented. It may be set or cleared independently of the AC under 8 mode control, and may or may not be included in shifting and rotating operations performed on the contents of the AC.

Program Counter (PC) 12 Bits

This register contains the address of the next instruction to be executed within the memory field selected by the Instruction Field Register (see below). In 8 mode, the PC acts as a 12-bit counter; in LINC mode, it acts as a 10-bit counter.

Instruction Register (IR) 12 Bits

This register contains the complete binary code of the instruction being executed.

Memory Address Register (MA) 12 Bits

This register contains the address for memory references. Whenever a core memory location is being accessed, either for reading or for writing, the MA contains the address of that location.

Memory Buffer (MB) 12 Bits

All information passing between memory and other registers in the PDP-12 must go through the Memory Buffer Register, whether the transfer involves the central processor, an external I/O device, or another memory register.

Mode Status Register 1 Bit

This register indicates the current operating mode (LINC or 8) of the central processor.

[®] Teletype is the registered trademark of the Teletype Corporation.

Instruction Field Register (IF) 5 Bits

This register selects the memory field containing the executable program. In the LINC mode, it is used to designate one of up to thirty-two 1024-word segments. In the 8 mode, the three high-order bits of the IF are used to designate one of up to eight 4096-word fields.

Data Field Register (DF) 5 Bits

This register selects the memory field containing data to be indirectly accessed by the memory reference instructions of a program. The fields are specified in each mode in the same way that the IF specifies the Instruction Field.

1.1.3 **Memory**

The principal unit of core memory is a module of 4096 (4K) 12-bit words. Additional modules of 4K words may be added, up to a total of eight, or 32,768 words. Within each module, the logical organization of memory depends on the operating mode. In the LINC mode, each module is divided into four 1024-word segments. At any given time, only two of these segments are active: the Instruction Field, which contains the executable program and the directly accessed data; and the Data Field, which contains only indirectly accessed data. Absolute addresses may be assigned and changed at will using the IF and DF described above.

In the 8 mode, the memory field (a 4K module) is divided into 32 pages of 128 words each. Within a single page, data may be accessed directly; between pages, indirect addressing must be used. If more than 4K of memory is provided, the IF and DF registers specify the active fields.

1.1.4 Operating Modes

The two operating modes, LINC and 8, are independent of each other, though they can be combined and intermixed within a program. The user can run programs from the already-existing libraries for the 8 family of computers, including the LINC-8. By using the I/O Handler (LINC-8 Simulator Trap Processor) program provided with the PDP-12 basic software, most programs written for the LINC-8 can be run without modification. (Some LINC-8 programs may require slight changes.) A complete software system designed for the PDP-12 allows the programmer to assemble coding for either or both modes in a single program.

LINC Mode — In this mode, the instruction set of the classic LINC computer is implemented. In addition, several new provisions are available:

Extended Tape Addressing — This allows the programmer to transfer information between LINCtape and any section of core, removing the restriction of data transfer to only specific segments of a given memory field. Other features include:

- a. Tape Interrupt, which connects the tape processor status to the Program Interrupt.
- b. No-pause, which permits the central processor to resume operation after initiating a tape transfer without waiting for completion.
 - c. Hold-motion, which allows a unit to remain in motion after it has been deselected.

I/O Bus Access — In LINC mode the user has immediate access to those devices activated by LINC instructions: analog inputs, Display, Relays, Sense Lines, and LINCtape. Devices connected to the I/O bus may be directly accessed from LINC mode programming by means of a special two-word instruction, in which the second word enables the bus and initiates the PDP-8 IOT timing chain. This second word is interpreted as a standard PDP-8 IOT instruction, but the program continues to operate in LINC mode.

Special Functions – The LINC programmer may, by setting certain flip-flops,

- a. Change the size of characters displayed on the CRT;
- b. Enable the program trap, which intercepts certain LINC instruction codes;
- c. Disable interrupts from the ASR-33;
- d. Speed the sampling of analog inputs;
- e. Clear the PDP-12 I/O status by generating an I/O PRESET pulse.

8 Mode – In this mode, the user has available the entire PDP-8/I instruction set.

Interaction Between Modes — The user may switch from one mode to the other at will. In the LINC mode, execution of the instruction PDP causes the processor to change immediately to 8 mode operation, and all subsequent instructions are interpreted as PDP-8/I instructions. To switch from 8 mode to LINC mode, the IOT instruction LINC is used.

1.1.5 Input/Output Facilities and Display

There are two main paths for the transmission of data from the central processor or memory to peripheral devices. One path, which is controlled by LINC mode programming, leads to the CRT display, LINCtape, A-D converter, and relays. The other path, which is the I/O bus, leads to the ASR-33 and to a large number of optional devices, such as plotters, high-speed paper tape, magnetic tape, A-D, and card readers, disk storage, and line printers.

Display — The Cathode Ray Tube has a 58.5-square-inch (6.5 x 9 inches) screen, on which individual points and whole characters may be displayed. The unit has two selectable channels, controlled by programming and by a switch on the display. Characters are plotted on a 4-point x 6-point matrix; a full character can be displayed with two instructions. Provision is made for displaying two sizes of characters.

Data Terminal – A Data Terminal provides a flexible means of receiving analog inputs and controlling the operation of external equipment not internally interfaced to the PDP-12.

Analog Inputs — Sixteen analog inputs feed a 10-bit A-D converter. A single LINC mode instruction samples any one of the 16 channels. Eight of the inputs are taken from phone jacks mounted on the Data Terminal Panel and fed through preamplifiers to the converter. The remaining eight are taken from continuously variable 10-turn potentiometers which are also mounted on the panel. A second set of 16 channels, with preamplifiers, may be added to the basic facility.

Relay Buffer — Six relays, mounted on the data terminal panel, can be switched individually or in combination, by means of a LINC mode instruction. The relays may be used to start and stop operations in external equipment. The states of the relays can be read into the AC.

Auxiliary Scope Connector — A connector mounted on the Data Terminal Panel is wired to accept an auxiliary CRT for displaying information. All display information (X, Y and Z) available to the internal display is also available at the remote connector.

Sense Lines - These 12 digital sense lines may be individually tested with a LINC mode instruction.

LINCtape — Two TU55 transports (or one TU56 dual drive transport) are controlled by a fully-buffered tape processor; once initiated by the LINC program, tape operations are carried out independently of the central processor. Tapes normally are written and read in standard LINCtape format, though nonstandard formats may be used. A special hardware option, TC12-F, permits the use of tapes with a different format, such as PDP-8 DECtape. In addition to the basic LINCtape commands, the PDP-12 also includes an Extended Operations facility, which

allows, among other features, the transmission of data between tape and any program-defined area of memory, and the addition of TU55 transports to a total of eight (or four dual drive TU56s).

Input/Output (I/O) Bus — This connecting facility provides the control and data transmission path between the central processor and any peripheral device attached to the bus. Some devices, such as paper tape readers and punches, line printers, and incremental plotters, transfer data via the accumulator (AC). Others, including magnetic tape and disk, use the three-cycle or single-cycle Data Break for direct memory access. The I/O bus uses positive logic and accepts peripherals used with the 8 family of computers. The processor is prewired to accept the following I/O bus options:

Extended Arithmetic Element (EAE), Type KE12

Programmable Real-time Clocks, Type KW12-A, B, or C

Incremental Plotter and Control, Type XY12

TTY/Dataphone®, Type DP12-A, B

With the inclusion of the BA12 Peripheral Expander and the DW08A I/O and Bus Converter, many other devices can be added to the PDP-12 I/O bus. The Peripheral Expander allows the addition of high-speed paper tape reader and punch, card reader, line printers, and optional communication interfaces. The Bus Converter provides for the addition of disk and IBM-compatible magnetic tape storage and A/D converters and associated multiplexers designed for the negative-logic PDP-8 I/O Bus.

Keyboard/Printer (Model 33 ASR) — An important means of direct communication between the user and the operating program is the Model 33 ASR Keyboard/Printer, standard on all configurations of the PDP-12. It is connected to the I/O bus, and can be accessed for input or output by programs in either operating mode. The Model 33 ASR is equipped with paper tape reader and punch; the reader and keyboard use the same input path and instructions, while the printer and punch use the same output path and instructions. The maximum transfer rate in either direction is 10 characters per second.

The Model 33 ASR operates in full-duplex mode, that is data may be transmitted in both directions simultaneously.

1.2 SYMBOLS AND ABBREVIATIONS

The following symbols and abbreviations are used throughout this handbook:

AC, MB, PC, MQ, MA, L, IF, DF, IR

Central Processor registers: Accumulator, Memory Buffer, Program Counter, Multiplier Quotient, Memory Address, Link, Instruction Field, Data Field, Instruction Register.

R

General representation of any register.

C(R)

The contents of register R.

C(R_j)

The content of bit j of register R.

C(R_{j-n})

[®] Dataphone is a registered trademark of A.T.&T.

 $C(R_1)$ The contents of the left half of register R. $C(R_r)$ The contents of the right half of register R. $\overline{C(R)}$ The one's complement of the contents of register R. Y The effective address of an operand. I The Indirect address bit of an instruction. In the LINC mode, I represents bit 7; in the 8 mode, bit 3. $C(R)\rightarrow C(S)$ The contents of register R replace those of register S. $N\rightarrow C(R)$ The quantity N replaces the contents of register R. Inclusive OR Exclusive OR AND Λ

CHAPTER 2 CONTROLS AND INDICATORS

This chapter describes the function of the controls and indicators of the PDP-12 computer console, Data Terminal, Type VR12 CRT Display, Type TU55 LINCtape Transport, and Teletype Model 33 ASR.

2.1 PDP-12 CONSOLE CONTROLS AND INDICATORS

Tables 2-1 through 2-8 describe the controls and indicators located on the console of the PDP-12. Figure 2-1 provides a front view of the console.

2.2 DATA TERMINAL

The Data Terminal is the area behind the door on the left front of the PDP-12. Normally, up to four separate panels are placed here. A storage rack to hold LINC tapes may be placed in any of the unused spaces of the Data Terminal area. The four standard panels are:

- 1. Power Switch Panel
- 2. Relay and Analog Input Panel
- 3. Analog Extension Panel
- 4. Clock Input Panel

The first two are described in Tables 2-9 and 2-10 and illustrated in Figures 2-2 and 2-3; the last two are described with the associated options (AG12 and KW12-A).

2.3 CRT DISPLAY, TYPE VR12

Table 2-11 lists the controls and indicators of the Type VR12 CRT Display. Figure 2-4 shows a front view of the CRT Display.

2.4 LINC TAPE TRANSPORT, TYPE TU55

Table 2-12 lists the functions of controls and indicators of the Type TU55 LINCtape transport. Figure 2-5 provides a front view of the transport.

2.5 TELETYPE, MODEL 33 ASR

Table 2-13 lists the functions of controls of the Teletype, Model 33 ASR. Figure 2-6 provides a front view of the teletype.

Figure 2-1. PDP-12 Operator console

Table 2-1. Central Processor Register Indicators

Table 2-2. Central Processor Major State Indicators

Indicator	Bits
INST FIELD	5
DATA FIELD	5
RELAYS	6
INSTRUCTION REGISTER	12
PROGRAM COUNTER	12
MEMORY ADDRESS	12
MULTIPLIER QUOTIENT	12
ACCUMULATOR	12
LINK	1
MEMORY BUFFER	12

Indicator	State
F	Instruction Fetch
D	Deferred Address
Е	Instruction Execution
E 2	Instruction Execution 2
INT	Program Interrupt
WC	Word Count
CA	Current Address
В	Break
ТВ	Tape Break

Table 2-3. Central Processor Miscellaneous Indicators

Indicators	Interpretation When Lit
SKIP	Skip Flip-Flop is set
FLO	Overflow Flip-Flop is set
8 MODE	Processor is in the PDP-8 Mode
LINC MODE	Processor is in the LINC Mode
RUN	Processor is running
AUTO	Auto Restart Flip-Flop is set
TRAP	Trap flip-flop is set
INT PAUSE	An internal pause is occurring
ION	Program Interrupt facility enabled
I/O PAUSE	An I/O Pause is occurring

Table 2-4. Tape Processor Major State Indicators

Indicator	State
I	Idle
S	Search
В	Block
С	Check Word
Т	Turn Around

Table 2-5. Tape Processor Miscellaneous Indicators

Indicator	Interpretation	Function
IP	In Progress	Indicates that a tape operation is In Progress.
XA	Extended Address Mode	Indicates that the processor is in the Extended Address mode.
NP	No Pause Mode	Indicates that the processor is in the No Pause mode.
MK	Mark Flip-Flop	Indicates that the Mark Flip-Flop is set.
TAPE INST	3-bit Tape Instruction Register	These three lights indicate the contents of the 3-bit Tape Instruction register.

Table 2-6. Function of Computer Console Keys

Key	Function
I/O PRESET	This switch causes the processor to halt when it is in Internal Pause state during a tape instruction, and sets processor mode to the state of the console MODE switch. The Inst Field register is set to 2 and the Data Field register is set to 3. I/O PRESET pulse and the I/O BUS INITIALIZE pulse clear all I/O device flags and operations. The AC and Link are cleared.
DO	This switch causes the processor to perform one instruction. In the LINC mode, the processor performs the instruction defined by the Left Switches (and the Right Switches, if it is a double word instruction). In the 8 mode, the processor performs the instruction defined by the Left Switches.
START 20	This switch causes the processor to start at location 20 of the currently selected Instruction Field.
START 400	This switch causes the processor to start at location 400 of the currently selected Instruction Field.
START LS	This switch causes the processor to start at the 15-bit address specified by the Left Switches and the Instruction Field Switches.
CONT	This switch causes the processor to resume operation.
EXAM	The contents of the Left Switches are transferred into the Memory Address register. The contents of the absolute core address designated by the Left Switches are displayed in the Memory Buffer register.
STEP EXAM	This switch increments the contents of the Memory Address register and displays the contents of this new address in the Memory Buffer register. This incrementing extends over 10 bits in LINC mode and 12 bits in 8 mode.
FILL	The contents of the Left Switches are transferred into the Memory Address register. The contents of the Right Switches are deposited into the memory location whose absolute address is designated by the Left Switches and the Instruction Field switches.
FILL STEP	Depressing this switch causes the contents of the Right Switches to be deposited into the memory location whose address is in the Memory Address register. Releasing this switch increments the contents of the Memory Address register. This incrementing extends over 10 bits in the LINC mode or 12 bits in the 8 mode. The Memory Buffer register then displays the contents of the location specified by the new contents of the Memory Address register.
MODE	This switch determines the mode (LINC or 8) to which the processor will be set when the I/O PRESET switch is activated. The MODE switch is effective only when the computer is not running.

Table 2-6. Function of Computer Console Keys (cont)

Key	Function
AUTO	This switch sets the AUTO RESTART flip-flop if it is held down at the same time one of the following keys is actuated: STEP EXAM, FILL STEP, DO, or CONT.
	The AUTO RESTART flip-flop causes the central processor to start automatically at the end of a variable time delay (determined by the console controls) after the central processor stops for any of the following reasons: a. SING STEP switch activated
•	b. FETCH STOP address match
	c. EXEC STOP address match
	d. The end of a STEP EXAM operation
	e. The end of a FILL STEP operation
	f. The end of a DO switch operation
	The Auto Restart Flip-Flop is cleared by any of the following conditions:
	a. STOP switch pressed while processor is running
	b. DO, FILL STEP, or STEP EXAM switch activated and the AUTO switch <u>not</u> pressed
	c. A processor HLT instruction executed (either mode)
	d. I/O PRESET pulse is generated
	To start a program in AUTO RESTART mode:
	a. Start the program with the SING STEP switch up.
	With the AUTO key depressed, depress CONT.

Table 2-7. Toggle Switch Registers

Register	Bits	Function
LEFT SWITCHES	12	These switches form a 12-bit word which can be read into the accumulator with the LINC mode instruction LSW (517). This word also specifies the address to be examined when the EXAM switch is used, the address into which data will be placed when the FILL switch is used, the stopping address for EXEC STOP and FETCH STOP functions, and the instruction to be performed when the DO switch is used.
RIGHT SWITCHES	12	The contents of these switches form a 12-bit word which can be read into the accumulator with the LINC mode instruction RSW (516) or the 8 mode instruction OSR (7404). This word also provides data to be stored in memory when the FILL or FILL STEP switches are used. When the DO switch is used, the Right Switches contain the second word of two-word instructions.
INST FIELD	3	These are a high-order extension of the Left Switches. They provide addressing information for systems equipped with 8K or more of memory for the EXAM, FILL, START LS, EXEC STOP, and FETCH STOP functions.
SENSE SWITCHES	6	These switches are individually interrogated by LINC mode skip instructions, thereby enabling console control of program branching.

Table 2-8. Individual Console Toggle Switches

Switch	Function
STOP	This switch causes the processor to stop at the end of an instruction. For the purposes of the STOP switch, Traps, Interrupt, Tape Break, and single-cycle Data Break are considered to be single-cycle instructions. During a three-cycle Data Break, the processor is stopped after the Break cycle.
SING STEP	This switch causes the RUN flip-flop to be cleared, thereby disabling the timing circuits at the end of one cycle of operation. Thereafter, repeated operation of the CONT switch steps the program one cycle at a time so that the operator can observe the contents of registers in each major state.
FETCH STOP	This switch causes the processor to stop when the address designated by the Left Switches matches the current address in the Memory Address register during the Fetch cycle. For systems with more than 4K of memory, the Inst Field switches designate the three most significant bits of the address.

Table 2-8. Individual Console Toggle Switches (cont)

Switch	Function
EXEC STOP	This switch causes the processor to stop when the address designated by the Left Switches matches the current address in the Memory Address register during any computer cycle except a Fetch cycle. For systems having more than 4K of memory, the Inst Field switches designate the three most significant bits of the address.

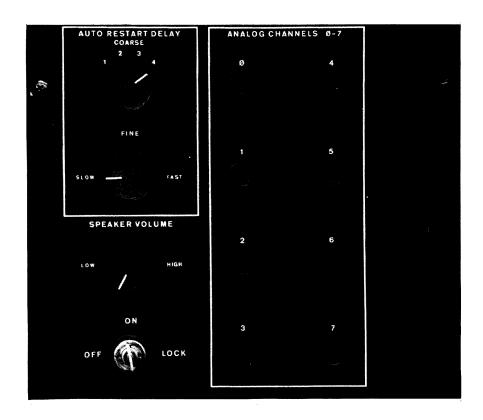


Figure 2-2. Analog Knobs and Power Switch Panel

Table 2-9. Analog Knobs and Power Switch Panel

Panel Controls	Function
OFF/ON/LOCK	This 3-position, key-locking switch is used to turn the PDP-12 on as well as inhibit console intervention during an operating program. When fully counterclockwise, the PDP-12 is off. When turned to the center position, the PDP-12 is turned on and the console activated. When the switch is fully clockwise, the PDP-12 is on, but console control functions are totally inhibited while the PDP-12 RUN light is on. Only the Left Switches, Right Switches, and Sense Switches remain operative.
SPEAKER VOLUME	The volume of the speaker is controlled by this knob. (The speaker, which is driven by AC bit 0, is added to the system when the AD12 is included in the system configuration.)
AUTO RESTART DELAY	These two knobs control the delay period of Auto Restart after a processor stop due to an EXEC STOP, FETCH STOP, or SING STEP operation. (See AUTO switch description in Table 2-6.)
COARSE and FINE	The COARSE delay selects overlapping ranges from 2.4 μ s to .38 sec. The FINE control gives variation within a range of 20:1 of the selected COARSE delay.
ANALOG CHANNELS 0-7 (knobs)	These 10-turn potentiometers are connected to analog input channels 0-7 of the AD12 Analog-to-Digital Converter. These knobs therefore provide eight continually-variable parameters within the range of $\pm 512_{10}$ for program usage.

Table 2-10. Relay and Analog Input Panel

Terminals	Function
ANALOG CHANNELS 10-17 (Input Jacks)	These are 3-conductor phone jacks providing \pm 1 Volt input connections for AD12 Analog-to-Digital converter channels 10_8 - 17_8 .
RELAY REGISTER Contacts	One set of form C contacts for each of the six system relays is available at the binding posts.
EXTENSION SCOPE	A 24-pin connector for an extension scope provides for remote operations, multiple displays, or photographing of display output. See Appendix G for pin connections and drive characteristics.

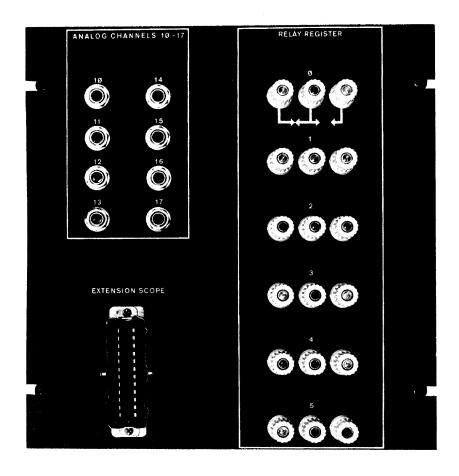


Figure 2-3. Relay and Analog Input Panel

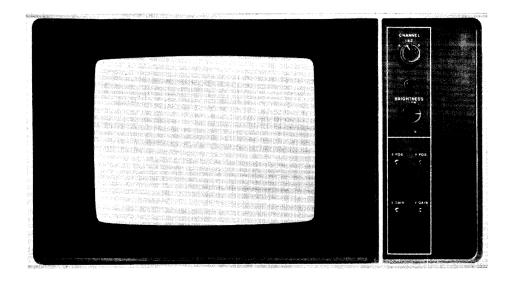


Figure 2-4. Type VR12 CRT Display

Table 2-11. VR12 Display Scope Controls

Control	Function
CHANNEL	Selects one or both channels for scope display.
BRIGHTNESS	Controls level of brightness.
X GAIN	Controls horizontal size of display.
X POS	Controls horizontal position of display.
Y GAIN	Controls vertical size of display.
Y POS	Controls vertical position of display.

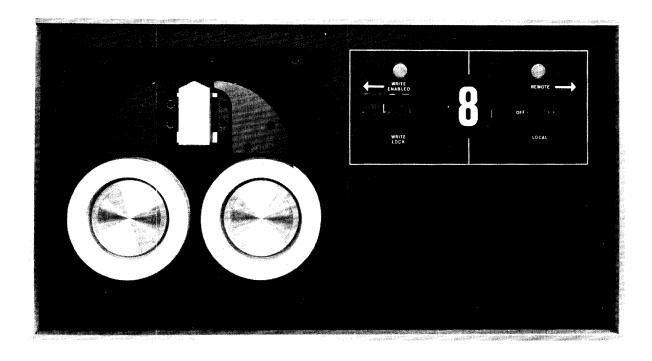


Figure 2-5. TU55 Tape Transport Control Panel

Table 2-12. TU55 Tape Transport Controls and Indicators

Control or Indicator	Function
Forward Tape-motion Switch (designated in Figure 2-5 by arrow pointing to the left)	Provides forward tape motion (i.e., from right to left) only if REMOTE/OFF/LOCAL switch is set to LOCAL.
WRITE ENABLED/WRITE LOCK switch	
WRITE ENABLED	Permits TC12 control system to write information on the TU55.
WRITE LOCK	Prevents writing. If TC12 control system is commanded to write on tape while the WRITE LOCK is set, the control signals a TAPE NOT OK.
WRITE ENABLED	Lights when WRITE ENABLE/WRITE LOCK switch is in the WRITE ENABLE position.
Unit Selector 0 1 2 3 4 5 6 7 OFF LINE	When this selector is dialed to one of the numerals and the REMOTE/OFF/LOCAL switch is set to REMOTE, the central processor may gain access to the unit. When the selector is dialed to OFF LINE, the transport cannot be selected by the tape control.
	NOTE Some earlier units were equipped with a unit selector position 8, which is the same as unit 0.
REMOTE/OFF/LOCAL Switch	
REMOTE	Permits tape processor to control the transport.
OFF	Removes power from reel motors and releases the brakes. This permits the operator to change the tape.

Table 2-12. TU55 Tape Transport Controls and Indicators (cont)

Control or Indicator	Function
LOCAL	Permits the forward and reverse tape-motion switches to provide tape motion in direction of the arrows. The transport cannot be selected.
REMOTE Indicator	Lights only when transport is selected by the tape processor.
Reverse Tape-motion Switch (designated in Figure 2-5 by arrow pointing to the right)	Provides for motion in the reverse direction (i.e., from left to right), but only when REMOTE/OFF/LOCAL switch is on LOCAL. If both reverse and forward tape-motion switches are pressed simultaneously, reverse motion takes place.

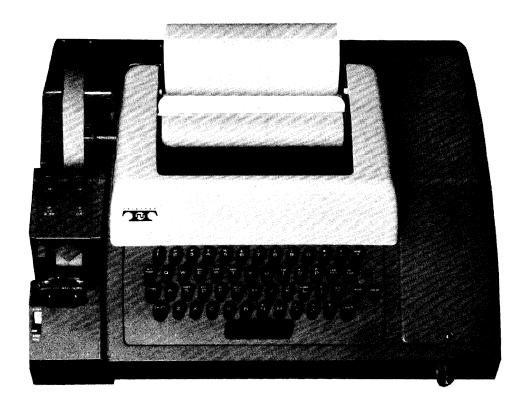


Figure 2-6. Teletype Model 33 ASR

Table 2-13. Teletype Model 33 ASR Controls

Control	Function
Punch Controls	
REL Pushbutton	Disengages the tape in the punch to allow removal or loading.
B SP Pushbutton	Backspaces the tape in the punch one space, allowing manual correction or rubout of the character just punched.
ON and OFF Pushbuttons	ON engages the punch for operation under local or program control. OFF removes the punch from control.
Reader Control	
START/STOP/FREE	In the FREE (lowest) position, the tape feed wheel is disengaged, and tape can be loaded or unloaded. In the STOP (center) position, the wheel is engaged but the reader cannot be operated. In the START (highest) position, the reader can be operated under local or program control.
LINE/OFF/LOCAL Switch	In the LINE position, the Teletype is energized and connected as an I/O device to the computer. In the OFF position, the Teletype is not energized. In the LOCAL position, the Teletype is energized for off-line operation, and signal connections to the processor are disconnected. Both LINE and LOCAL use of the Teletype require that the computer OFF/ON/LOCK switch is ON.

CHAPTER 3 LINC MODE PROGRAMMING

3.1 ORGANIZATION OF MEMORY

3.1.1 General

The LINC mode instruction set deals with two 1024_{10} -word Memory Fields. The INSTRUCTION FIELD is the 1024_{10} -word section of memory from which programs are executed, and in which data may be directly or indirectly accessed. The DATA FIELD is a second 1024_{10} -word section of memory to which the LINC instruction set allows only indirect reference for data manipulation and storage. The physical locations of the Data Field and Instruction Field within the maximum $32,768_{10}$ -word memory are specified by the contents of the 5-bit Data Field Register and the 5-bit Instruction Field Register. These are set and modified under program control or from the console; they need not be adjacent, or in any particular order, and can even be identical. With respect to a LINC program, addresses within a Field remain constant, regardless of the actual location of the Field. Addresses within the Instruction Field are 0000 through 1777_8 ; addresses within the Data Field are 2000_8 through 3777_8 . Thus, no matter where they are assigned, the two fields may be considered logically contiguous.

The PDP-8 instruction set (described in Chapter 4) divides memory into 4096_{10} -word Fields, which are specified by the most significant 3 bits of the Instruction Field and Data Field Registers. Therefore, the term Field designates a 1024_{10} -word segment of memory in LINC mode, and a 4096_{10} -word segment of memory in 8 mode. In Figure 3-1, the division of the first 4096_{10} words of memory is shown, assuming LINC mode, INST FIELD = 01, DATA FIELD = 03.

ABSOLUTE ADDRESS (OCTAL)
FIELD
LINC ADDRESS (OCTAL)

0000-1777	2000-3777	4000-5777	6000-7777
	INST		DATA
	0000-1777		2000-3777

12-0178

Figure 3-1. Assignment of LINC Addresses within Memory

3.1.2 Program Counter

The Program Counter acts as a 10-bit counter in the LINC mode, so that executable programs can be stored only in the Instruction Field. If the contents of PC_{2-11} are incremented beyond 1777, they return to 0000; the two high-order bits of the PC are unaffected. Thus, incrementing C(PC) = 3777 yields C(PC) = 2000. Likewise, 5777 is incremented to 4000, and 7777 to 6000. This 10-bit indexing is very common in LINC mode operations.

3.1.3 Instruction and Data Field Registers

These two 5-bit registers select the 1K segments to be used by the LINC program. The three high-order bits of each register are the three bits of the corresponding 8 mode Memory Field register. The contents of the IF and DF may be set, changed, or examined at any time by the use of LINC instructions.

3.1.3.1 Instruction Field Reserved Locations — This field contains the executable program. The following registers are set aside in this field for special uses:

Field Address	Use
0000	Holds return address after execution of JMP.
0001	Holds horizontal coordinate during execution of DSC.
0001-0017	As β -registers, used by indirect-reference instructions to hold the effective address of an operand.
0000-0017	As a-registers, used by SET, XSK, and DIS.
0020	Program start location when Start 20 key is pressed.
0400	Program start location when Start 400 key is pressed.

When the instruction field is assigned to the lowest segment of memory (that is, when C(IF) = 00), the following registers are also reserved:

Field Address	Use	
0000 0001	PDP-8 Interrupt locations (Paragraph 4.4)	
0040	Holds return address after a program interrupt during LINC mode operation.	
0041	Location to which control is transferred after a program interrupt during LINC mode operation.	
0140	Holds return address after an instruction trap.	
0141	Location to which control is transferred after an instruction trap.	

^{3.1.3.1} Data Field Reserved Locations — There are no specially-reserved registers in this field. Its contents cannot be accessed directly; data can be stored or retrieved only by indirect addressing.

3.2 MEMORY ADDRESSING METHODS

3.2.1 General

Almost every program, at some time during its execution, will need an item of data stored in memory. Such an operand can be obtained only by specifying the address of the register in which it is stored or to be stored. An instruction which requires a reference to memory can designate the desired location in two ways. It may include the address of the operand as part of the instruction itself and directly address the location of the operand. Or, the instruction may specify the address, not of the operand, but of a register containing the address of the operand, thus indirectly addressing the data storage register.

The need for indirect addressing is readily apparent; with eleven bits required to specify a Data Field address, not much is left of a 12-bit word to use for instruction codes. It is necessary to reduce the number of address bits available within a memory reference instruction, and to use a limited set of directly addressable locations as pointers containing the *effective address* of the desired data. The LINC instruction set provides for both types of addressing.

3.2.2 Direct Addressing

In LINC programming, direct access to memory registers is limited to the Instruction Field. A full address in this field requires ten bits (0000-1777), leaving only two bits for instruction codes. The three instructions, ADD, STC, and JMP, are described in detail in Paragraph 3.3. The format of a direct-address instruction is shown in Figure 3-2. Bits 0 and 1 are used for the operation code, bits 2-11 for the address.

 


Figure 3-2. Direct Address Instruction Format

3.2.3 Indirect Addressing: β-Class

For access to registers in the Data Field, an indirect address is required. The instruction specifies one of a small set of special registers which are used to hold the effective addresses of desired data. The format of these β -class instructions is shown in Figure 3-3. Bits 3-6 are available for operation codes; bits 8-11, together with bit 7, determine which of four addressing schemes is to be used.

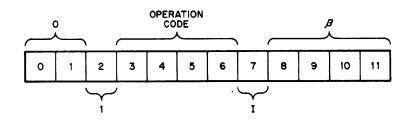


Figure 3-3. β -Class Instruction Format

3.2.3.1 β -Registers — In a β -class instruction, the contents of bits 8-11, when not zero, designate one of fifteen registers at locations 0001-0017 of the Instruction Field. The contents of the specified β -register are used to determine the effective address of the operand. When the contents of bits 8-11 are zero, the effective address is found in the register which immediately follows the referencing instruction.

Bit 7, the I-Bit, determines the manner in which the register designated by bits 8-11 is to be used in locating the operand. There are four addressing schemes, described in the following table.

Bit 7 (I)	Bits 8-11 (β)	Effective Address					
0	00	The contents of bits 1-11 of the register immediately following the instruction.					
1	00	The address of the register immediately following the instruction. The operand itself is in this register.					
0	01-17	The contents of bits 1-11 of the designated β -register.					
1	01-17	The contents, incremented by 1, of bits 1-11 of the designated β -register. Ten-bit indexing is used (see text).					

In the first scheme, the register which follows the referencing instruction contains the effective address. In the second scheme, the operand itself is in that register. When either of these two schemes is used (that is, when the contents of bits 8-11 are zero), the program counter automatically skips over the register immediately following the instruction, and the next instruction is fetched from the second register following.

The following examples illustrate the use of all four addressing schemes.

The instruction STA (Store Accumulator) causes the contents of the AC to be stored in memory. The operation code for STA is 1040. The register R is the one which immediately follows that containing the STA instruction.

(1) STA 0 Octal code: 1040
$$C(R)=2345$$
 I=0, $\beta=00$ Destination of $C(AC)$: Location 2345 (Location 345 in the Data Field)

(2) STA I 0	Octal code: 1060 I=1, β =00 Destination of C(AC):	Location R
(3) STA 12	Octal code: 1025 I=0, β =12	C(0012)=3456
	Destination of C(AC):	Location 3456 (Location 1456 in the Data Field)
(4) STA I 12	Octal code: 1072 I=1, β =12	C(0012)=3456
	Destination of C(AC):	Location 3457 (Location 1457 in the Data Field)
		(The contents of β -register 0012 are incremented by 1, and the result, 3457, is used as the effective address.)

In the next example, the use of these addressing schemes in a program sequence is demonstrated. The instruction ADA (Add to Accumulator) adds the operand to the contents of the AC, leaving the result in the AC. The program sequence starting at location 1000 adds the numbers N_1 , N_2 , N_3 , and N_4 , leaving the sum in the AC.

ADDRESS	OCTAL		CONTENTS	REMARKS
0007	1500		1500	/REPLACED BY 1501 AFTER INDEXING
			*1000	
1000	1100		ADA	/INDIRECT THROUGH 1001, ADD N1 to C(AC)
1001	1477		1477	/ADDRESS OF N1
1002	1120		ADA I	/DIRECT TO 1003; ADDS N2 TO C(AC)
1003	3211	N2,	3211	
1004	1107		ADA 7	/INDIRECT THROUGH 7 TO 1500, ADDS N3
1005	1127		ADA I 7	/INDIRECT THROUGH 7, INDEXED, ADDS N4
			*1477	
1477	1234	N1,	1234	
1500	1235	N3,	1235	
1501	4321	N4,	4321	

3.2.3.2 β -Register Indexing — When the β -indexing scheme is used (I = 1, $\beta \neq 00$), effective addresses may specify registers in either memory field, but the β -register cannot be incremented from one field to the other. Indexing is only over ten bits, as it is in the PC; the two high-order bits are unaffected. Thus, the contents of the β -register will be incremented from 1777 to 0000, from 3777 to 2000, from 5777 to 4000, and from 7777 to 6000. To change access from one field to the other, it is necessary to change the contents of bit 1 of the β -register.

Bit 0 of the β -register has no effect in most indirect references, but it does have a special use in half-word operations, in multiplication, and in character display.

3.2.4 Addressing: a-Class

Three LINC mode instructions – SET, XSK, and DIS – have specialized memory reference schemes. Although each of them accesses memory in a unique way, all make use of one of the registers in locations 0000 through 0017. These are called a-registers, to differentiate between these instructions and those of the β -class.

SET and XSK are described in Section 3.3. DIS is described in Section 3.4.

3.3 LINC MODE INSTRUCTIONS

(Complete list is provided in Appendix A.)

3.3.1 Instruction Formats

There are three basic LINC mode instruction formats.

- 3.3.1.1 Direct Address (See Figure 3-2) This class consists of the three instructions ADD, STC, and JMP.
- 3.3.1.2 Indirect Address, β -class (See Figure 3-4) This class consists of 15 β -class instructions, with operation codes between 1000 and 1740.

 


Figure 3-4. β -Class Format

3.3.1.3 a-class and Others (See Figure 3-5) — There are 16 basic instructions in this group, and they have operation codes between 0000 and 0777. Each of these instructions has up to 32 variants, depending on the contents of bits 7-11.

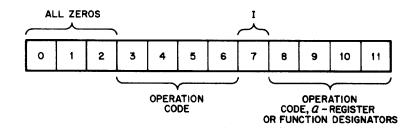


Figure 3-5. a-Class and Non-Memory Reference Format

3.3.2 Instruction Descriptions

The descriptions are organized according to function and class, as follows:

Full-word Data Transfers STC, LDA, STA

Full-word Arithmetic ADD, ADA, ADM, LAM, MUL

Full-word Logic BCL, BSE, BCO
Full-word Comparison SAE, SRO
Half-word Operations LDH, STH, SHD
a-class Operations SET, XSK

Program Control JMP

Shift and Rotate ROL, ROR, SCR

Skips APO, AZE, LZE, QLZ, FLO, SNS,

SXL, KST, SKP, STD, TWC

Miscellaneous HLT, CLR, COM, NOP, QAC

Console Switches LSW, RSW
Mode Control Switch PDP
I/O Bus Enable IOB

Memory Address Control LIF, LDF, IOB/IOTs
Program Interrupt IOB/IOTs, DJR
Special Functions ESF, SFA

Instructions related to the Display, Data Terminal, and LINCtape are described in Sections 3.4, 3.5, and 3.6.

In general, the description of each instruction is presented in the following manner:

Mnemonic

Operation Performed

Form
Octal code
Execution time
Operation

The second line shows the general form of the instruction when used in a program. The octal code is that of the instruction itself, plus the octal value of any other elements which may be present, such as the I-bit or β -register bits. (The I-bit, for example, being represented by bit 7, has an octal value of 20 when it is present.)

3.3.3 Full-Word Instructions

3.3.3.1 Full-Word Data Transfers — These three instructions move complete 12-bit words between the Accumulator and Memory.

STC Store and Clear (Direct Address)

Form:

STC Y

Octal code: Execution time:

4000+ Y 3.2 μs

Operation:

Store the contents of the AC in register Y, then clear the AC. This is a direct address

instruction; Y must be in the Instruction Field.

LDA Load Accumulator (β-Class)

Form:

LDA Ι β

Octal code:

 $1000 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

Operation:

Place the contents of register Y, where Y is the address specified by I and $C(\beta)$, in the AC. The

previous contents of the AC are lost; the contents of Y are unchanged.

STA Store Accumulator (β-Class)

Form:

STA I β

Octal code:

 $1040 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

Operation:

Store the contents of the AC in memory register Y, where Y is the address specified by I and

 $C(\beta)$. The previous contents of Y are lost; the contents of the AC are not changed.

3.3.3.2 Full-Word Arithmetic — The instructions ADD, ADA, and ADM use one's complement arithmetic. If, as a result of an addition, a 1 is carried out of bit 0 of the sum, 1 is added to the sum. This *end-around carry* is the defining property of a one's complement addition. If there is no carry, the sum is left as is.

Example 1:

no carry; sum is left as is.

Example 2:

end-around carry; 1 added to sum.

In either case, the Link is not affected.

The instruction LAM uses two's complement arithmetic. If a carry from bit 0 of the sum occurs, the Link is set to 1; the sum is left unaffected.

3.3.3.2.1 **Overflow** — In any LINC mode addition, a number is considered to be positive if its high-order bit (bit 0) is 0, and negative if this *sign* bit is 1. Whenever two addends of like sign produce a sum of opposite sign, overflow is said to occur. When this happens, the FLOW flip-flop is set to 1. If no overflow occurs, the FLOW flip-flop is set to 0. Overflow cannot, by definition, occur when the addends have unlike signs. Note that overflow and carry are not the same thing.

3.3.3.2.2 **Instructions**

ADD Add to Accumulator (Direct Address)

Form:

ADD Y

Octal code:

2000 + Y

Execution time:

 $3.2 \mu s$

Operation:

The contents of register Y are added to the contents of the AC, using one's complement

addition; the sum is left in the AC. The previous C(AC) are lost; the Link and C(Y) are not

changed.

ADA Add to Accumulator (\(\beta\)-Class)

Form:

ADA Ιβ

Octal code:

 $1100 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

Operation:

The contents of register Y, as specified by I and $C(\beta)$, are added to the contents of the AC, using one's complement addition; the sum is left in the AC. The previous C(AC) are lost; the

Link and C(Y) are not changed.

ADM Add to Memory (β-Class)

Form:

ADM Ι β

Octal code:

 $1140 + 20I + \beta$ 4.8 \(\mu s\); 3.2 \(\mu s\). when I = 1 and \(\beta = 00\)

Execution time: Operation:

The contents of register Y, as specified by I and $C(\beta)$, are added to the contents of the AC,

using one's complement addition; the sum is left in both the AC and Y. The previous contents

of both registers are lost; the Link is not changed.

LAM Link Add to Memory (β-Class)

Form:

LAM I β

Octal code:

 $1200 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

NOTE

This description presents the logical sequence of events; in practice, the operations are carried out simultaneously.

Operation:

The contents of the Link are added to the contents of the AC, using two's complement addition; the sum is left in the AC. If there is a carry out of bit 0, the Link is set to 1; if not, the Link is cleared. Next, the contents of register Y, as specified by I and $C(\beta)$, are added to the new contents of the AC, again using two's complement addition; the sum is left in both the AC and Y. If there is a carry from bit 0 this time, the Link is set to 1; if not, the Link is unchanged.

Example:

$$C(AC) = 3743$$

$$C(Y) = 6517$$

$$C(L) = 1$$

no carry; Link is cleared.

carry; Link is set to 1.

Results:

$$C(AC)$$
 = 2463
 $C(Y)$ = 2463
 $C(L)$ = 1

MUL Multiply (β-Class)

Form:

MUL Ι β

Octal code:

 $1240 + 20I + \beta$

Execution time:

9.6 μ s; 8 μ s. when I = 1 and β = 00

Operation:

The contents of the AC (multiplicand) are multiplied by the contents of register Y (multiplier). The product is left in the AC and the MQ. The sign of the product appears in the

Link and ACo.

The multiplier and multiplicand are treated as 12-bit one's-complement numbers. If bit 0 of an operand is set to 1, the operand is negative. The sign of the product is always correct; that is, operands of like sign give a positive product, and operands of unlike sign give a negative product. Overflow cannot occur; the FLOW flip-flop is not affected by multiplication.

Either integer or fractional operands may be specified, as follows: if bit 0 of the designated β -register contains a 0, the operands are treated as integers; the binary points of both multiplier and multiplicand are considered to be to the right of bit 11. If $C(\beta_0) = 1$, the operands are taken as fractions; the binary points are considered to be between bit 0 (sign) and bit 1. Note that when I = 1 and $\beta = 00$, there is no effective address. In this case, integer multiplication is performed.

When integer multiplication is performed, the low-order 11 bits of the product appear in AC_{1-1} and the absolute value of the low order 11 bits of the product appears in AC_{0} and the Link. The high-order bits of the product are lost.

When fractional multiplication is performed, the high-order 11 bits of the product appear in AC_{1-1} and the absolute value of the low-order bits appears in bits MQ_{0-1} . The sign appears in AC_0 and the Link. The contents of the MQ can be accessed by using the QAC instruction (see Paragraph 3.3.11).

Examples: (all octal form)

(1) Integers

(2) Fractions

(a.) 0432 C(AC)
$$\frac{x0006}{x00006}$$
 C(Y) 00003234 product C(AC)=0000 C(MQ)=6470 (b.) 2764 C(AC) $\frac{x0153}{00476374}$ product C(AC)=0117 C(MQ)=4770 (c.) 2764 C(AC) $\frac{x7624}{77301403}$ C(Y) $\frac{x7624}{(-00476374)}$ C(AC)=7660 C(MQ)=4770

3.3.4 Full-Word Logic

In each of these Boolean functions, the operation is performed between corresponding bits of the AC and the operand, independent of the other bits in either word.

BCL Bit Clear (β-Class)

Form:

BCL I β

Octal code:

 $1540 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

Operation:

For each bit of the operand that is a 1, the corresponding bit of the AC is cleared to 0. For each operand bit that is a 0, the corresponding AC bit is unchanged. The operand is not changed. The following truth table gives the relationship between the corresponding bits, with the results of the comparison.

The Boolean statement of this relation is AC $\Lambda \overline{Y}$.

Example

C(AC)=2307 C(Y) =1616 Result:=2101 010011000111 001110001110 010001000001

BSE Bit Set (β-Class)

Form:

BSE I β

Octal code:

 $1600 + 20I + \beta$

 
Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

Operation:

For each bit of the operand that is a 1, the corresponding bit of the AC is set to 1. For each operand bit that is 0, the corresponding AC bit is not changed. The operand is not affected.

The truth table for this relation, which is the familiar inclusive OR, is as follows:



The Boolean statement of this relation is AC V Y.

Example

C(AC)=2307 0100110001111 C(Y) = 1616 001110001110 Result:=3717 011111001111

BCO Bit Complement (β-Class)

Form:

ΒΟΟ Ι β

Octal code:

 $1640 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s. when I = 1 and β = 00

Operation:

For each bit of the operand that is a 1, the corresponding bit of the AC is complemented. For each operand bit that is 0, the corresponding AC bit is unchanged. The operand is not changed.

The truth table for this relation, which is the exclusive OR, is as follows:

The Boolean statement of this relation is AC +Y.

Example

C(AC)=2307 C(Y) =1616 010011000111 001110001110 011101001001

3.3.5 Full-Word Comparison

In both of these operations, the next succeeding memory location in the program sequence is skipped if the stated condition is met. When $\beta \neq 00$, this presents no unusual circumstance. When $\beta = 00$, however, the memory location immediately following the skip instruction contains either the operand itself or its address. When such is the case, this location is automatically skipped, and the one beyond that is considered to be the next location in the program sequence. If a skip occurs under these conditions, the program will proceed from the third location following the skip instruction.

SAE Skip If Accumulator Equal To Operand (β-Class)

Form:

SAE Ι β

Octal code:

 $1440 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s, when I = 1 and β = 00

Operation:

If the contents of the Accumulator are equal to the contents of Y (where Y is specified by I

and β), the next instruction in the program sequence is skipped. Otherwise, the program

continues without skipping. The contents of the AC and of Y are not changed.

SRO Skip and Rotate (β-Class)

Form: SRO I β Octal code: 1500 + 20I + β

Execution time: 4.8 μ s; 3.2 μ s, when I = 1 and β = 00

Operation: 4.8 μ s, 3.2 μ s, when I = I and $\rho = 00$ Operation: If bit 11 of the operand is 0, the contents of Y (that is, the operand) are rotated right one

place and the next sequential instruction is skipped. Otherwise, the program proceeds without

skipping.

Example:

ADDRESS	OCTAL		CONTENTS *20	REMARKS
0020	1520	Ρ,	SRO I 0	/THE OPERAND IS IN REG 21
0021	3725	P1,	3725	/OPERAND BIT 11=1, SO NO SKIP
0022	0016	P2,	NOP	/PROGRAM CONTINUES FROM HERE
0023	0016	P3,	NOP	

After the test is performed, the contents of P1 are rotated right one place; the result, which is retained in P1, is 5752. If the instruction in register P were then to be executed again, the skip would occur, because the new contents of bit 11 of P1 equal 0. The program would then proceed from register P3, skipping the instruction in P2.

3.3.6 Half-Word Operations

3.3.6.1 Half-Word Addressing — The three instructions, LDH, STH, and SHD, operate on either half of a memory register, independent of the other half. The addressing scheme is basically that of other β -class instructions, with the following difference: whenever bit 0 of the register containing the effective address holds a 0, the left half of the addressed operand is used; when bit 0 contains a 1, the right half is used. In either case, the data is transferred or compared between the designated half of the operand and the right half of the AC.

The following examples demonstrate the effects of half-word addressing. The instruction LDH transfers the designated half of the operand into the right half of the AC; the left half of the AC is cleared.

- a. LDH 0 I = 0, β = 00. C(R) = 0370. (R is the register following LDH). The effective address is 0370. Because C(R₀) = 0, the contents of the left half of register 0370 are placed in the right half of the AC, and the left half of the AC is cleared.
- b. LDH 12 I = 0, $\beta = 12$, C(0012) = 4370. Bit 0 of β -register 12 contains a 1; therefore, the contents of the right half of register 0370 are placed in the right half of the AC, and the left half of the AC is cleared.
- c. LDH I 0 I = 1, β = 00. C(R) = 6527. This is a direct reference, so that there is no explicit effective address. In this case, the left half of the operand in register R is taken. In the example, the quantity 65 is placed in the right half of the AC, and the left half of the AC is cleared.

d. LDH I 12
$$I = 1, \beta = 12$$
. $C(0012) = 0370$.

The effective address (that is, C(0012)) must be incremented before it is used. Instead of 1, however, 4000 is added to the contents of the β -register (remember that the half-word indicator is in bit 0). Given the conditions specified above, the contents of β -register 12 are first augmented from 0370 to 4370, and the right half of the operand in register 0370 is taken. If a second LDH I 12 is then executed, the β -register is again incremented by 4000. The sum, which leaves $C(\beta_0)=0$, results in a carry out of the high-order bit. The carry causes 1 to be added to the sum, resulting in a final effective address of 0371. The new operand is then taken from the left half of the new register. The indexing sequence is thus: left half, right half, left half of the next succeeding register, etc.

Because the basic indexing scheme is operative only over bits 2-11 of the β -register, half-word addressing proceeds from the right half of register 1777 to the left half of register 0000, and from the right half of register 3777 to the left half of register 2000. $C(\beta)$ are thus incremented from 1777 to 5777 to 0000, and from 3777 to 7777 to 2000.

NOTE

Another way of looking at the half-word indicator may help clarify this method of addressing. If the indicator is considered to be just to the right of bit 11, rather than in bit 0, it becomes apparent that half-word indexing is just like full-word indexing, with 1 added to the low-order bit (that is, the half-word indicator) each time. You can, if you like, imagine a binary point between the half-word indicator and bit 11 of the β -register, so that successive addresses might be read as 0370, 0370 1/2, 0371, 0371 1/2, 0372, etc. (Or, in octal, 0370.0, 0370.4, 0371.0, 0371.4, 0372.0, etc.)

LDH Load Half

Form:

LDH I β

Octal code:

 $1300 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s when I = 1 and β = 00

Operation:

The contents of the designated half of register Y (where Y is specified by I and $C(\beta)$) are placed in the right half of the Accumulator. The left half of the AC is cleared. The previous

C(AC) are lost. The contents of Y are not changed.

STH Store Half

Form:

STH I β

Octal code:

 $1340 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s when I = 1 and β = 00

Operation:

The contents of the right half of the Accumulator are stored in the designated half of register

Y. The contents of the AC and of the other half of Y are not disturbed.

SHDSkip If Half Differs

Form:

SHD I β

Octal code:

 $1400 + 20I + \beta$

Execution time:

4.8 μ s; 3.2 μ s when I = 1 and β = 00

Operation:

If the contents of the designated half of register Y are not equal to the contents of the right half of the AC, the next instruction in the program sequence is skipped; otherwise, the program proceeds without skipping. The contents of Y and of the AC are not changed. As in the other β -class skips (SAE, SRO), the register immediately following the SHD is

automatically passed over when $\beta = 00$.

3.3.7 a-Class Operations

Each of these instructions uses the registers 0000-0017 in a unique way. A third a-class instruction, DIS, is described in Paragraph 3.4, CRT Display.

SET Set a-Register

Form:

SET I a

Octal code:

0040 + 20I + a

Execution time:

 $6.4 \,\mu s$; $4.8 \,\mu s$ when I = 1

Operation:

The contents of the a-register specified by bits 8-11 of the SET instruction are replaced by the

operand, whose location is determined by the state of the I-bit, as follows:

If I = 1, the operand is in the register immediately following that containing the SET instruction.

If I = 0, the effective address of the operand is in the register immediately following that containing the SET instruction.

SET always requires two successive locations; the program always continues from the second register following, as in this example:

Address	Contents	Action		
p p + 1	SET I 15 2537	/THE OPERAND IS IN REGISTER p+1 /OPERAND 2537 IS STORED IN REGISTER 15		
p + 2		/PROGRAM CONTINUES FROM THIS REGISTER		

The previous contents of the a-register are lost. The AC is not disturbed, and the contents of the register containing the operand are not changed.

XSK Index and Skip

Form:

XSK I a

Octal code:

0200 + 20I + a

Execution time:

 $3.2 \mu s$

Operation:

If I = 1, the contents of the designated a-register are incremented by 1, using 10-bit two's complement addition as in β -class indexing. If I = 0, a is left undisturbed. Then if the contents of bits 2-11 of the a-register are equal to 1777, the next instruction in the program sequence is skipped. Otherwise, the skip does not occur.

When C(a) are incremented, the two high-order bits are not affected. Thus, 1777 is incremented to 0000, 3777 to 2000, etc.

3.3.8 Program Control

JMP Jump

Form:

JMP Y

Octal code:

6000 + Y

Execution time:

3.2 μ s when Y \neq 0000; 1.6 μ s when Y = 0000

Operation:

The quantity Y is placed in PC₂₋₁₁, and the next instruction is taken from register Y. The

program proceeds from that point.

If $Y \neq 0000$, the 10-bit address of the register immediately following the JMP instruction (i.e., the contents of the Program Counter) is stored in location 0000 of the Instruction Field as a JMP instruction. This permits the JMP to be used not only as an unconditional transfer of program control, but also as a subroutine calling instruction. If Y = 0000, the jump is executed, but nothing is stored in register 0000. JMP 0 is used to return from a subroutine, as shown in the example.

Example

ADDRESS	OCTAL		CONTENTS	REMARKS
			*0000	
0000	0000	0000,	0000	/WILL CONTAIN 6573 AFTER JMP 175 IS /EXECUTED
0001	0000			
			*0175	
0175	0016		NOP	START OF LINEAR SUBROUTINE WHICH
0176	0000			/CONTAINS NO JMP INSTRUCTIONS
0177	0000			
			*0242	
0242	6000		JMP 0	/RETURN FROM SUBROUTINE
0243	0000			
0244	0000			
			*0572	
0572	6175		JMP 175	JUMP TO SUBROUTINE AT REGISTER 0175
0573	0017		NOP	/SUBROUTINE RETURNS TO THIS LOCATION
0574	0000		•	
0575	0000		•	

When JMP 175 is executed, $C(PC_{2-11}) = 0573$. This, combined with 6000 (the octal code for JMP), is placed in register 0000. When the subroutine has finished, JMP 0 transfers program control to register 0000, where JMP 573 is executed, returning control to the calling program. (At the same time, JMP 1 is stored in register 0000, but that is incidental to the actions of interest here.)

When a new Instruction Field has been selected (see paragraph 3.3.14. Memory Address Control), the first JMP Y $(Y \neq 0000)$ following the field selection performs the actual switching of the field; the target register of the JMP is in the new field, and the return jump is stored in register 0000 of the new Instruction Field. JMP 0 has no effect on the field registers.

3.3.9 Shift and Rotate Operations

These instructions rotate the contents of the Accumulator left or right, or shift them right (scaling), propagating the sign bit. A single instruction can cause a shift of up to 17_8 bit positions, or 1-1/2 times the length of the AC. On shifts or rotations right, the MQ is treated as a 12-bit extension of the AC, so that bits shifted out of AC_{11} enter MQ_0 , as shown in Figures 3-7 and 3-8. In all these operations, the Link is included when I = 1 and excluded when I = 0. Execution times depend on the number of positions shifted.

ROL Rotate Left

Form: ROL I N

Octal code: $0240 + 20I + N, 0 \le N \le 17_8$

Execution time: $1.6 - 6.4 \mu s$

Operation: The contents of the AC are rotated left N places. If I = 1, the Link is included. The rotation

scheme is shown in Figure 3-6. The contents of the MQ are not affected.

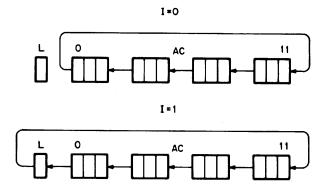


Figure 3.6. Rotate Left

ROR Rotate Right

Form:

ROR I N

Octal code:

 $0300 + 20I + N, 0 \le N \le 17_8$

Execution time:

 $1.6 - 6.4 \mu s$

Operation:

The contents of the AC are shifted right N places. Bits shifted out of AC_{11} enter MQ_0 , and are shifted down the MQ. Bits shifted out of MQ_{11} are lost. If I = 1, the Link is included in the

rotation. The scheme is shown in Figure 3-7.

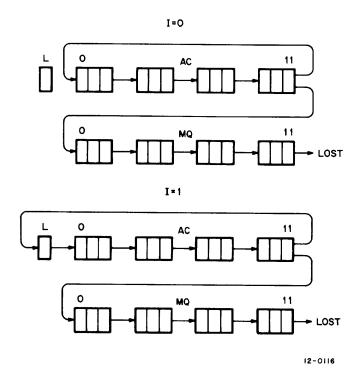


Figure 3-7. Rotate Right

SCR Scale Right

Form:

SCR I N

Octal code:

0340 + 20I + N, $0 \le N \le 17_8$

Execution time:

 $1.6 - 6.4 \,\mu s$

Operation:

The contents of the AC are shifted right N places. The sign bit (contents of AC_0) is not changed, and is placed in the N bits to the right of AC_0 . Bits shifted out of AC_{11} enter MQ_0 , and are shifted down the MQ. Bits shifted out of MQ_{11} are lost. If I=1, bits shifted out of AC_{11} also enter the Link, so that, at the completion of the operation, $C(L) = C(MQ_0)$. If I = 0, the Link is up of factor of The shifting scheme is shown in Figure 2.8

the Link is unaffected. The shifting scheme is shown in Figure 3-8.

Example:

C(AC) = 4371

C(MQ) = 0000

Instruction:

SCR I 6

Because I = 1, the Link will receive the contents of AC_{11} at each shift. The result of the operation:

C(AC) = 7743

The sign bit, which was 1, is loaded in

the vacated bits (AC₁₋₆)

C(MQ) = 7100

Bits shifted out of the AC entered the

MQ at the high-order end.

C(L) = I

The last bit shifted out of AC_{11} was a

1. Check: $C(L) = C(MQ_0)$.

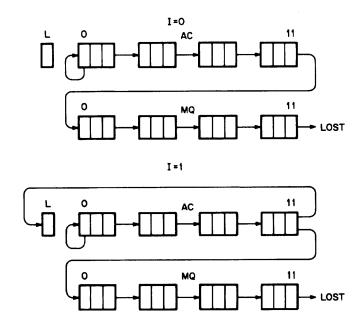


Figure 3-8. Scale Right

3.3.10 Skips

These instructions test the states of various registers, flip-flops, and external inputs. In every case, the next succeeding instruction in the program sequence is skipped if

(1) I = 0 and the condition is met

or

(2) I = 1 and the condition is not met

Otherwise, the program proceeds without skipping.

The skip instructions (with the exception of the unconditional skip instruction, SKP) have an associated "skip condition", such as a register being cleared or one of the external digital inputs ("external levels") being asserted. If the skip condition is met (e.g., the register is cleared or the external level is asserted) at the time the instruction is executed, a skip occurs. This means that the next instruction is taken from the second location following the skip instruction, rather than from the usual location. Normally, the skip instruction is followed by a single-word instruction that is skipped or executed according to whether or not the tested condition was met. No distinction is made between single- and double-word instructions; if the skip instruction were followed by a double-word instruction, control would be transferred to the second word of the instruction if a skip occurs. Generally skip instructions should not be followed by double-word instructions. In the skip instructions discussed here, (but not in the "addressable" skips: SHD, SAE, and SRO), the i bit inverts the sense of the skip. That is, if the i bit is zero, the instruction skips only if the skip condition is met. If the i bit is a one, the skip occurs only if the condition is not met.

APO Accumulator Positive

Form: APO I

Octal code: 0451 + 20I

Execution time: $1.6 \mu s$

Condition: The sign bit (contents of AC_0) is 0, that is, C(AC) is a positive number.

AZE Accumulator Zero

Form: AZE I

Octal code: 0450 + 20I

Execution time: $1.6 \mu s$

Condition: The contents of the AC equal 0000 (+0) or 7777 (-0).

LZE Link Zero

Form: LZE I Octal code: 0452 + 20I

Execution time: $1.6 \mu s$

Condition: The contents of the Link equal 0.

QLZ MQ Low-Order Bit Zero

Form: QLZ I Octal code: 0455 + 20I

Execution time: 1.6μ s

Condition: The contents of MQ_{11} equal 0. (This is identical to the LINC-8 instruction, ZZZ.)

FLO Overflow

Form: Octal code:

FLO I 0454 + 20I

Execution time:

 $1.6 \,\mu s$

Condition:

The FLOW flip-flop is set to 1. When overflow occurs as the result of an addition (ADD, ADA, ADM, or LAM), the FLOW flip-flop is set to 1. If overflow does not occur as a result of the

above instructions, the FLOW flip-flop is cleared.

SKP Skip Unconditionally

Form:

SKP I

Octal code:

0456 + 20I

Execution time:

1.6 μs

Condition:

The next instruction is skipped unconditionally. (In LINC-8 and early PDP-12 assembly

programs SKP was defined as 466.)

The following skips test for various external input conditions.

IBZ LINCtape Inter-Block Zone

Form:

IBZ I

Octal code:

0453 + 20I

Execution time:

1.6 us

Condition:

If the selected LINCtape unit is in one of the inter-block zones and the tape is moving, the

next instruction is skipped. This instruction will sense an IBZ only if the tape is in motion (i.e.,

only after a tape instruction with "I = 1").

SNS Sense Switch

Form:

SNS I N

Octal code:

0440 + 20I + N, $0 \le N \le 5$

Execution time:

 $1.6 \,\mu s$

Condition:

Sense Switch N on the Operator's Console is set to 1. If I=1, the skip will occur when the

selected switch is set to 0.

SXL Skip On External Level

Form:

SXL I N

Octal code:

0400 + 20I + N, $0 \le N \le 17_8$

Execution time:

 $1.6 \,\mu s$

Condition:

An external input level is +3v. If I = 1, the skip will occur when the external level is at ground (0V). In the basic PDP-12, only three of these levels have been defined; the others are available for the user's options. When nothing is connected to the External Level Lines, they are preloaded to +3V. These external levels are digital inputs to the I/O bus, and should not be

confused with the analog inputs to the A-D Converter.

NOTE

The connection for the External Level lines is made via the I/O Bus cables (see Chapter 5).

The three defined levels and their mnemonics are:

SXL I 15 (KST) Key Struck (See below)
SXL I 16 (STD) Tape Instruction Done (See Paragraph 3.6.9)
SXL I 17 (TWC) Tape Word Complete (See Paragraph 3.6.14)

KST Key Struck

Form: KST I Octal code: 0415 + 20I

Execution time: $1.6 \mu s$

Condition: A key has been struck on the ASR-33 keyboard, the character code has been assembled in the

Teletype buffer, and the Keyboard flag is raised. (The flag is cleared when the character is read

into the AC.)

3.3.11 Miscellaneous

These instructions perform various tasks. All are self-contained and require no memory references.

HLT Halt

Octal code: 0000

Execution time: $1.6 \mu s$ to fetch and decode

Operation: The computer stops. The contents of the AC, MQ, Link, and other active registers and

flip-flops are not affected. The Program Counter contains the address of the register immediately following the HLT. If the operator presses CONTINUE, the program resumes

from the point indicated by the C(PC).

CLR Clear

Octal code: 0011 Execution time: 1.6 μ s

Operation: The AC, MQ, and Link are cleared to zero. No other registers or flip-flops are affected.

COM Complement AC

Octal code: 0017 Execution time: 1.6μ

Execution time: $1.6 \mu s$ Operation: The contents of the AC are complemented. Bits containing 0s are changed to contain 1s, and

vice versa. No other registers are affected.

NOP No Operation

Octal code: 0016 Execution time: 1.6 µs

Operation: None. Nothing happens. NOP provides a 1.6-µs delay, and is often used to hold a place in the

program for instructions which might be changed or added during the course of execution.

QAC Place MQ in AC

Octal code: 0005 Execution time: $1.6 \mu s$

Operation: The contents of MQ_{0-10} are placed in AC_{1-11} . AC_0 is cleared. This instruction provides access

to the low-order bits of a fractional product. Figure 3-9 shows the transfer path.

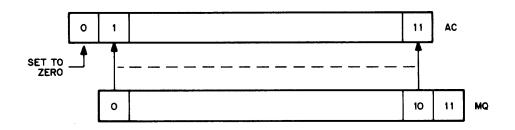


Figure 3-9. QAC Transfer Path

To obtain all 12 bits of the MQ, the following program sequence may be used:

OCTAL CODE	INSTRUCTION	REMARKS		
	* 0020			
0005	QAC	/C(MQ0-10) PLACED IN AC1-11		
0241	ROL I	/ROTATE C(AC) LEFT 1 PLACE, WITHOUT LINK.		
0475	QLZ I	/SKIP IF C(MQ11) = 1		
6026	JMP .+3	/C(MQ11) = 0. JUMP TO THIRD REGISTER BEYOND.		
1620	BSE I	C(MQ11) = 1. SET AC11 EQUAL TO 1.		
0001	0001	/OPERAND TO SET AC11		

(QAC is identical to the LINC-8 instruction, ZTA.)

3.3.12 Console Switches

These instructions provide access to the states of the switches in the Left and Right Switch Registers on the Operator's Console. The I-bit has no effect in these instructions.

LSW Left Switches

Octal code:

0517

Execution time:

1.6 µs

Operation:

The contents of the Left Switches Register on the Console are placed in the AC. The previous

C(AC) are lost.

RSW Right Switches

Octal code:

0516

Execution time:

 $1.6 \mu s$

Operation:

The contents of the Right Switches Register are placed in the AC. The previous C(AC) are lost.

3.3.13 Mode Control

PDP Switch To The 8 Mode

Octal code:

0002

Execution time:

1.6 µs

Operation:

Beginning with the next succeeding instruction, the central processor will operate in the 8

mode; all subsequent instructions are interpreted as PDP-8 operations. A similar instruction,

LINC (6141), in the PDP-8 mode instruction set, causes a switch to LINC mode.

3.3.14 Input/Output Bus

In addition to the input and output devices controlled directly by LINC instructions (see Paragraphs 3.4, 3.5, and 3.6), the LINC mode program also has direct access to any device connected to the PDP-12 I/O Bus. By using the special two-word enabling instruction, IOB, any 8 mode IOT instructions can be included within a LINC program sequence.

IOB I/O Bus Enable

Form:

IOB (first word) IOT (second word)

Octal code:

0500 (first word)

Execution time:

5.9 μs

Operation:

The IOT timing chain is activated by the second word of this instruction. Bits 3-11 of this

second word are interpreted as a PDP-8 IOT command; bits 0-2 have no effect.

Example 1:

The following sequence may be used to read and store a character from the high-speed tape reader:

IOB	/ENABLE I/O BUS
RRB	/READ TAPE READER BUFFER
STA 14	/STORE IN REGISTER SPECIFIED BY C(0014)
• • • •	

Example 2:

The following sequence waits for the high-speed reader flag and then reads the character buffer

OCTAL CODE	INSTRUCTION	REMARKS		
	* 0020			
0500 6011 6020 0500 6016	IOB RSF JMP -2 IOB RRB	/ENABLE I/O BUS /SKIP IF HIGH-SPEED READER FLAG IS SET /NOT SET. GO BACK TWO SPACES /FLAG IS SET. ENABLE THE BUS, AND /READ THE CHARACTER		

Note that, in the skip loop, the program must jump back two locations, because the IOB must be executed each time.

Several IOB/IOT pairs are used in LINC Memory Address Control and Program Interrupt operations.

3.3.15 Memory Address Control

The two memory Fields used by a LINC program are program-selectable. The assignments are made by setting the two 5-bit Memory Field Registers, which can address any of 32 1024-word memory segments. Considered with respect to the physical configuration of memory, the three high-order bits of each Field Register determine which 4096-word memory bank is to be used, while the two low-order bits specify one of the four segments within that bank. The two LINC memory Fields need not be adjacent, or in any particular order. Normally, however, they would not be assigned to the same segment.

In addition to the Instruction Field (IF) and Data Field (DF) Registers described in Chapter 1, the PDP-12 Memory Control contains two other registers of interest to the LINC mode programmer.

3.3.15.1 Instruction Field Buffer (IB) 5 Bits — This register holds the number specifying a new Instruction Field. Once loaded, its contents are transferred to the IF at the occurrence of the next JMP Y instruction.

3.3.15.2 Save Field Register (SF) 10 Bits — Whenever the Instruction Field is changed, either by programmed action or by a program interrupt or trap, the contents of the IF and DF are placed in the Save Field Register. From the SF, the Contents of the IF and DF can be restored, so that execution of an interrupted program, for example may be resumed. The contents of the SF may be read into the AC. (See also the Program Interrupt discussion in Paragraph 3.3.15.4.) For historical reasons the SF is also called Interrupt Buffer in some places.

3.3.15.3 **Memory Control Programming** – The Instruction Field and Data Field registers can be loaded directly, using LINC mode instructions.

LIF Load LINC Instruction Field Buffer

Form:

LIF N

Octal code:

 $0600 + N, 0 \le N \le 37_8$

Execution time:

 $1.6 \,\mu s$

Operation:

The five-bit quantity N is placed in the Instruction Field Buffer (IB). The present contents of the IF and DF are transferred to the Save Field Register (SF). When the next JMP Y instruction (Y \neq 0000) is executed, N is transferred from the IB to the Instruction Field Register. The return JMP is stored in location 0000 of the new Instruction Field, and program control is transferred to register Y of the new Instruction Field.

The automatic saving of the IF and DF in the Save Field Register is especially useful when subroutines are called across memory fields; that is, when a called subroutine is located in a memory field other than the current one. The subroutine may pick up the field information needed in obtaining arguments and generating subroutine returns by interrogating the Save Field Register.

The execution of the LIF instruction will internally inhibit the execution of a Program Interrupt even if ION has been given. This Interrupt Inhibit lasts from the LIF instruction until the first LINC mode JMP instruction is fetched and executed in the newly selected Instruction Field. This allows the Save Field Register to be used for cross field subroutine linkage in programming which uses the Program Interrupt.

Because LINK Instruction Trap (see Paragraph 3.3.17) also uses the Save Field Register for program linkage, an instruction which will be trapped must not be given between an LIF and the next JMP Y (Y \neq 0000) if the cross field reference will ultimately need the Save Field Register linkage information.

Example:

The program is operating in Field 2. Control is to be transferred to location 1000 of Field 5.

Address	Action	Contents
 р	LIF 5	/5 IS PLACED IN THE IB /C(IF) AND C(DF) ARE PLACED IN THE SF
p + k	JMP 1000	/C(IB) ARE TRANSFERRED TO THE /IF. JMP P+K+1 IS STORED IN REGISTER /0000 OF FIELD 5, AND THE PROGRAM /PROCEEDS FROM REGISTER 1000 OF FIELD 5

JMP 0 has no effect on the Memory Field registers. If it is used to return to a calling program in a different field, the change of field is effected by the JMP instruction stored in register 0000 of the subroutine's field.

(LIF replaces the LINC-8 instruction, LMB)

LDF Load LINC Data Field Register

Form:

LDF N

Octal code:

 $0640 + N, 0 \le N \le 37_8$

Execution time:

 $1.6 \,\mu s$

Operation:

The 5-bit quantity N is placed in the Data Field Register. All subsequent indirect references to

the Data Field are made to the newly selected field. The previous C(DF) are lost. The contents

of the other Memory Control registers are not affected.

(LDF is identical to the LINC-8 instruction, UMB)

The contents of the Memory Field Registers can be examined by using the following IOB/IOT pairs.

IOB

RIF Read Instruction Field

Octal code:

0500

6224

Execution time:

5.9 μs

Operation:

The contents of the Instruction Field Register are ORed into bits AC₆₋₁₀. The remaining AC

bits are unaffected, and the contents of the IF are unchanged.

NOTE

When executed in LINC mode, the three IOT instructions, RIF, RDF, and RIB, are the only cases where an IOT has a slightly different function than when executed in 8 mode. For these instructions, all five bits of the IF and/or DF are read into the AC when in LINC mode, while only the most significant three bits of each are used in 8 mode.

IOB

RDF Read Data Field

Octal code:

0500

6214

Execution time:

 $5.9 \mu s$

Operation:

The contents of the Data Field Register are ORed into bits AC₆₋₁₀. The remaining AC bits are unaffected, and the contents of the DF are not changed.

3.3.15.4 Program Interrupt in LINC Mode — To facilitate the handling of data being transmitted to and from several peripheral devices, the PDP-12 includes a Program Interrupt Facility. When an external device is ready for servicing, a signal (flag) associated with that device is set. With Interrupt enabled, the following sequence of events will occur when a flag is set:

- 1. The instruction being executed at the time of the interrupt request is completed.
- 2. The contents of the Program Counter are stored in register 0040 of memory field 0 (regardless of the current Instruction Field assignment).
 - 3. The contents of the Memory Field registers are placed in the Interrupt Buffer (Save Field Register).
 - 4. Program execution proceeds from register 0041 of Memory Field 0.

The normal procedure from this point calls for the interrupt service routine beginning in location 0041 to determine which device flag caused the interrupt request, perform the appropriate tasks, restore the Memory Field registers, re-enable the interrupt, and jump back to the interrupted program at the point where the Program Interrupt occurred.

Whenever a change of LINC Instruction Field occurs, the Program Interrupt is inhibited (between Steps 1 and 2 above) until the first JMP is executed in the new field. This allows the programmer to obtain and save the contents of the SF after the Field change, before a waiting interrupt request destroys the contents of the SF.

The interrupt control instructions and related memory field instructions are all IOB/IOT pairs.

IOB

ION Interrupt On

Octal code:

0500

6001

Execution time:

 $5.9 \mu s$

Operation:

The Interrupt Facility is enabled immediately after the next succeeding instruction (following

the ION) is executed. From that point on, any interrupt request will cause the sequence of events described above. If a device flag is already raised when the Interrupt is enabled, the waiting request is serviced immediately. The one-instruction delay before enabling the interrupt ensures that the interrupt service routine can return to an interrupted program before

a new request is honored without losing its place.

IOB

IOF Interrupt Off

0500 Octal code:

> 6002 $5.9 \mu s$

Execution time:

Operation:

The Interrupt is disabled. The facility is disabled immediately; subsequent requests will not

cause an interrupt until the facility is enabled again.

The next two instructions are related to the Save Field Register, wherein the original contents of the IF and DF are stored whenever the contents of the IF are being changed, by an LIF instruction, or as the result of an Interrupt request or a Program Trap.

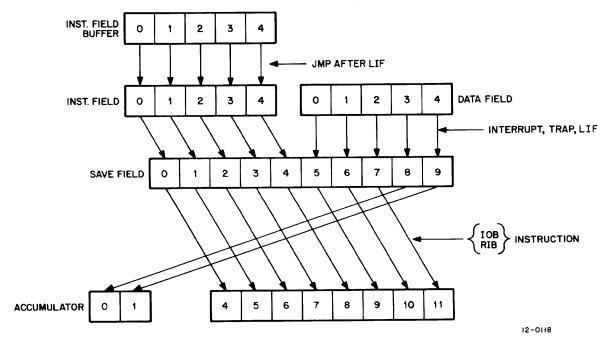


Figure 3-10. Data Path: IB, IF, DF, and AC

IOB

RIB Read Interrupt Buffer

Octal code:

0500

6234

Execution time:

5.9 μs

Operation:

The contents of the Interrupt Buffer (Save Field Register) are ORed into bits AC_{0-1} and

AC₄₋₁₁, as shown in Figure 3-10. AC₂₋₃ and the contents of the SF are unchanged.

RIB is most commonly used immediately after a change of instruction field or a program trap, to save the record of the origin fields while the Program Interrupt is inhibited. (If inhibit were not provided, a waiting interrupt request could destroy the contents of the Save Field Register. The first JMP instruction executed after a trap or change of Instruction Field reenables the Interrupt.)

IOB

RMF Restore Memory Fields

Octal code:

0500

6244

Execution time:

5.9 μs, including IOB

Operation:

The contents of SF_{5-9} are placed in the Data Field Register, and the contents of SF_{0-4} are placed in the Instruction Field Buffer. At the next occurrence of a JMP Y instruction (Y \neq 0000), the contents of the IB are transferred to the IF, effecting a return to the proper field

after servicing an interrupt request. The data transfer path is shown in Figure 3-11.

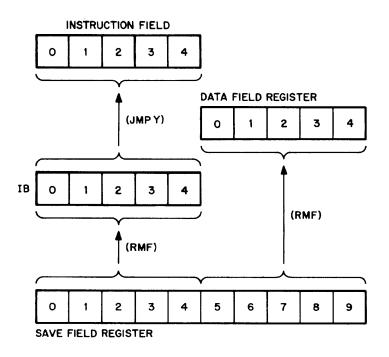


Figure 3-11. Data Path, RMF Instruction

DJR Disable JMP Return

Octal code:

0006

Execution time:

1.6 μs

Operation:

DJR sets a flip-flop, preventing contents of location 0000 from being changed when the next and only the next LINC mode JMP is given. The DJR instruction is used when returning from Program Interrupt or Trap service routines. The DJR should be given prior to the ION instructions. This is useful because an interrupt can occur within a LINC mode subroutine that uses Location 0000 of its IF to retain the subroutine return; hence, it must not be destroyed.

Example:

A program operating in Field 7 is interrupted while the instruction in register 0531 is being executed.

- (1) C(PC) are stored in location 0040 of Field 0.
- (2) C(DF) and C(IF) are placed in the SF, as shown in Figure 3-10.
- (3) Program execution resumes in location 0041 of Field 0; in other words, 00 is placed in the IF, and 0041 in PC_{2-11} .
 - (4) The interrupt is disabled.

The interrupt service routine must do three things. First, it sets up a return jump enabling the program to get back to the point of the break. Next, it identifies the cause of the request and services the condition. Finally, it restores the conditions prevailing at the time the interrupt occurred and returns to the main program. The following sequence shows how these tasks may be accomplished.

ADDRESS	OCTAL		CONTENTS	REMARKS
0040	0532		*0040 0532	/CONTENTS OF PC AT TIME OF INTERRUPT
0041	4000		STC ACSAV	/SAVE C(AC), THEN CLEAR AC
0042	2040		ADD 0040	/SAVED ADDRESS (0532) TO AC
0043	1620		BSE I	/MAKE JMP INSTRUCTION: C(AC) /V C(0044)
0044	6000		6000	OCTAL CODE OF JMP INST.
0045	4071		STC RTN	/STORE JMP 532 AT END OF SERVICE /ROUTINE
0046	0000			/MAIN PART OF SERVICE ROUTINE, IF /NECESSARY
0047	0000			/OTHER ACTIVE REGISTERS (MQ,L,ETC)
0050	0000			/SHOULD BE SAVED ALSO
0051	0000			TOTAL OCED DE SITUED TIESO
0052	0016		NOP	
0053	0016		NOP	/THE REST OF THE ROUTINE
0054	0016		NOP	THE REST OF THE ROOTINE
0055	0016		NOP	
0056	0000		.,	
0057	0000			
0060	0500		IOB	/EXIT SEQUENCE, ENABLE IOT TIMING /CHAIN
0061	6244		RMF	/AND RESTORE MEMORY FIELDS, /(07 TO IB)
0062	4076		STC TEMP	/CLEAR AC WITHOUT DISTURBING MQ AND L
0063	2000		ADD ACSAV	/RESTORE ORIGINAL C(AC)
0064	0006		DJR	/SET PROCESSOR SO THAT NEXT JMP INST
0065	0000			/WILL NOT STORE IN LOCATION ZERO OF
0066	0000			/MEMORY BANK TO WHICH JMP AT "RTN" /WILL GO
0067	0500		IOB	,
0070	6001		ION	/RE-ENABLE INTERRUPT
0071	6532	RTN.	JMP 0532	/JMP TO ORIGINAL FIELD
0072	0000	,		, The state of the
0073	0000			
0074	0000			
0075	0000			
0076	0000	TEMP,	0000	
		RMF=6244 ION=6000		

3.3.16 Special Functions

A set of six Special Functions allows the LINC programmer to establish any of five operating states, or generate an I/O PRESET pulse. The special functions are determined by AC_{2-7} , as shown in Figure 3-12.

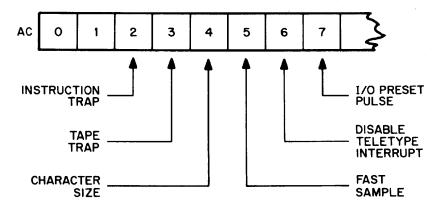


Figure 3-12. Special Functions

These functions have the following characteristics:

1. Instruction Trap Enable - Causes an immediate program interrupt to register 0141 when an undefined LINC instruction code is encountered.

The instruction trap is described in detail in Paragraph 3.3.17.

- 2. Tape Trap When this function and Instruction Trap Enable are both set, a program interrupt to register 0141 will occur whenever a LINCtape instruction or one of the other trapped codes is encountered. The LINCtape instruction is not executed. Tape Trap is described in detail in Paragraph 3.6.13.
- 3. Character Size This function determines the size of a character displayed on the CRT by the DSC instruction. It is described in detail in Paragraph 3.4.1.
- 4. Fast Sample This function reverses the order of events of the SAM instruction; i.e., read the converter buffer and initiate a new conversion, then continue without pausing (see Paragraph 3.5.1).
- 5. Disable Teletype Interrupt Interrupt requests from the ASR-33 Keyboard or Printer are inhibited. No program interrupt will occur when either TTY flag is set even if the Interrupt Facility is enabled (see Chapter 6).
- 6. Generate I/O Preset If this bit is set when the enabling instruction (ESF) is executed, an I/O PRESET pulse is generated clearing all device flags, disabling the Interrupt, clearing the Tape Extended Operations Buffer, and generating the TAPE PRESET pulse. Other Special Functions are cleared, or in the case of CHARACTER SIZE, set to full size. The active registers of the Central Processor are not affected, and the system continues to operate with RUN on. Any or all of these functions may be enabled at the same time, except that they are effectively nullified if I/O PRESET is given. All the Special Functions except I/O PRESET are controlled by flip-flops set from the designated AC bits; the states of these flip-flops may be examined at any time.

ESF Enable Special Functions

Octal code: Execution time: 0004 $1.6 \mu s$

Operation:

The contents of AC₂₋₆ are placed in their respective flip-flops, as shown in Figure 3-12. For each AC bit set to 1, the corresponding function is enabled. For each AC bit set to 0, the corresponding function is disabled. If AC₇ is set to 1, the I/O PRESET pulse is generated. All Special Function bits are cleared (except ESF 04, Full Size Character, which is set to a 1) by I/O PRESET, either from the console or program control.

SFA Place Special Function Flip-Flops in AC

Octal code:

0024 Execution time: $1.6 \mu s$

Operation:

The contents of the Special Function flip-flops are placed in their respectively designated AC

bits, as shown in Figure 3-12. AC_{0-1} and 7-11 are cleared.

Instruction Trap

Several sets of operation codes in the LINC repertoire are undefined. The LINC programmer can make use of these codes without having to hard-wire them, by means of subroutines and the Instruction Trap. When the Trap is enabled (ESF with C(AC₂) = 1), any undefined LINC codes will cause a program trap. When the undefined code is encountered, program control is transferred to register 0141 of Memory Field 0, regardless of the current setting of the IF. The contents of the Program Counter are placed in register 140, and the contents of the IF and DF are placed in the Save Field Register. The subroutine beginning at 0141 can examine the trapped code (using the information stored in 0140 and the SF) to determine what program-defined operations are to be performed. (Also, see Paragraphs 3.3.15.3 and 3.3.15.4 for interaction with Program Interrupt.

These are the undefined LINC codes which cause a program trap:

Operate class 501-515, 521-535 Execute class

740-747 Undefined 540-577 Undefined 1700-1737 The LINC codes 1700-1737 are considered as β -class instructions. Therefore, when either a 1700 or 1720 instruction is encountered, the address contained in location 140 is the address of the trapped instruction incremented twice (trapped instruction address +2). All other undefined codes will cause location 140 to contain the address of the trapped instruction incremented once (trapped instruction + 1).

Probably the most common use of the Instruction Trap is in the execution of programs written for the LINC-8. A LINC-8 Trap Simulator is provided in the basic PDP-12 software package. Close study of this program will be most helpful for the programmer wishing to use the Trap facility. The Trap facility is further useful for developing device-independent software.

- 3.3.17.1 **Tape Trap** When both the Tape Trap and Instruction Trap functions are enabled, the LINCtape instructions (codes 700-737) are trapped also. This is useful if the programmer wishes to substitute another external storage device, such as a Disk, for the LINCtape.
- 3.3.17.2 Program Interrupt and Instruction Trap If the interrupt is enabled when an Instruction Trap occurs, the interrupt is inhibited until the execution of the first JMP after the trap. This permits the trap program to store the contents of the Save Field Register immediately after the trap, so that the record of where the trap took place is not destroyed by an interrupt request, which also causes the contents of the IF and DF to be placed in the SF (also see Paragraphs 3.3.15.3 and 3.3.15.4).

3.4 CRT DISPLAY, TYPE VR12

The 6.5 inch x 9 inch rectangular screen of the PDP-12 CRT Display Type VR12 has a total display area of 58.5 square inches. Grid dimensions are 512×512 points. The horizontal distance between points is 0.0176 inches; the vertical distance is 0.0127 inches. The (0,0) grid point is at the midpoint of the left side of the screen, as shown in the schematic representation in Figure 3-13. Grid co-ordinates are given in octal.

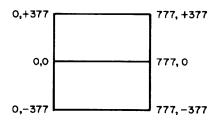


Figure 3-13. CRT Grid

The display system is fully buffered. Coordinates are held in two 9-bit buffers; during the execution of DSC, the pattern word is retained in a 12-bit Pattern Intensification Register. Either of two multiplexed intensification channels can be specified. A switch on the VR12 front panel allows either or both channels to be displayed.

Below the channel selector is a variable knob which allows the user to change the intensity of the displayed points. A level control located within the VR12 presets the maximum brightness level, preventing spot burns.

A 24-contact connector on the Data Terminal Panel allows the user to connect an auxiliary scope (VR-12A CRT Display, Tektronix 561, or similar unit) for remote display of the same information sent to the main screen. The channel selectors can be independently set so that each scope displays one of the channels, thus allowing independent simultaneous displays on two scopes.

A complete set of connection points for the VC12/VR12 display system is shown in Appendix G.

The output drive capability of the D-A converters is 0v to -5.85v capable of driving a load resistance of 1 k Ω connected to ground. This allows up to 200 feet of cable for a remote VR-12. The absolute values of the D-A outputs are not held closer than ±0.3v but are stable to within 3.0%. The D-A converters are loaded by jam transfer. The D-A used to drive the scope is also available as a single-ended output to drive external devices. The Ov D-A point is equivalent to the lower left hand corner of the display screen.

The LINC display instructions allow the programmer to display single grid points or a small array of points. In either case, the full buffering allows the program to proceed after the display operation has been initiated. If a subsequent display instruction is encountered before the previous display operation has been completed, the program will pause until the display control is free, then execute the new instruction.

3.4.1 Point Displays

DIS Display (a-Class)

Form:

DIS I a

Octal code:

0140 + a, $0 \ge a \ge 17_8$

Execution time:

3.2 μ s; 23 μ s for completion of display

A single point on the screen is intensified. The vertical coordinate is specified by AC_{3-11} ; the horizontal coordinate by bits 3-11 of the designated a-register. If bit 0 of the a-register is set to 0, the point will be displayed on Channel 0; if $C(a_0) = 1$, the point will be displayed on

Channel 1.

If I = 0, the contents of a are taken as is. If I = 1, C(a) are first incremented by 1, using 10-bit, two's complement addition. Bits 0 and 1 are not affected.

3.4.2 Character Displays

DSC Display Character (β-Class)

Form:

DSC I β

Octal code:

 $1740 + 20I + \beta$, $\beta \le 2 \le 17_8$

Execution time:

4.8 μ s when I = 1, β = 00; 6.4 μ s when I = 0 or $\beta \neq$ 00 Control completion time 20-56 μ s.

Operation:

A vertical 2 x 6 array of points is displayed according to a pattern word stored in register Y (Y is defined as with other β -class instructions). For each bit of the pattern that is a 1, the corresponding point is intensified; for each bit that is a 0, the corresponding point is left dark. In Figure 3-14, the circles represent the points of array; the small numbers refer to the corresponding bit positions of the pattern word. The small arrows show the order in which the pattern bits are examined and displayed. As with DIS, the vertical coordinate is held in the Accumulator. The horizontal coordinate is held in register 0001; for this reason, register 0001 cannot be used as a β -register with DSC. The character may be displayed in either of two sizes: full size, in which the spacing between points in both directions is four grid positions, and half-size, in which the spacing is two positions. The following description assumes full-size characters.

When a DSC instruction is executed, the following events occur:

- (1) The intensification pattern is transferred from Y to the display control Intensification Buffer.
- (2) The contents of AC_{3-6} are placed in the display control Y-buffer; AC_{7-11} are set to 30_8 .

The contents of register 0001, the X-coordinate, are incremented by 10₈, and transferred to the display control X-buffer.

The foregoing operations take 4.8 or 6.4 μ s to do their work, after which the central processor is free to resume program execution. The remaining operations are performed by the display control.

(3) The pattern word is examined in the order shown in Figure 3-14. The time required to scan and display the points varies according to the number of points to be intensified. Reaching the first point requires $20 \mu s$, then $1 \mu s$ for each point to be left dark and $3 \mu s$ for each point to be displayed. This action continues until all points are intensified.

Because of the manner in which the Y-coordinate is used, full-size character arrays may start only at coordinates which are multiples of 40_8 ; e.g., 000, 040, 100, -100. Since the array itself is only 30_8 points high, this gives the programmer an automatic vertical spacing of 10_8 points between the bottom of one line and the top of the one immediately below it.

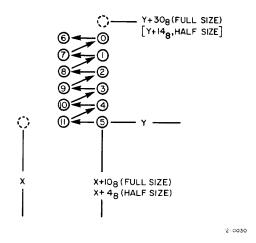


Figure 3-14. Display Pattern for DSC

3.4.3 Half-Size Characters

If the programmer clears the CHARACTER SIZE bit of the Special Function Register [ESF with $C(AC_4) = 0$], all increments are by two grid positions, rather than four. AC_{3-7} provides the initial Y coordinate; after the two coordinates have been transferred to the display control's buffers, the contents of AC_{8-11} will be 14_8 , and the X coordinate in register 0001 will be incremented by 4 instead of by 10_8 . Vertical spacing is likewise halved; arrays may start at intervals of 20_8 points, with 4 points between lines. I/O PRESET sets this bit of the Special Function Register to a 1 (full-size characters).

3.4.4 Character Set

Any character that can be represented on a 4×6 grid (24 points) can be displayed by using two DSC instructions, with two consecutive storage words providing the complete 24-bit character pattern. Table 3-1 lists the display patterns for the ASR-33 character set. Nondisplayed characters have patterns of all zeros. The table entries, each consisting of two words, are arranged in order of ASCII codes.

Table 3-1. ASR-33 Character Set Display Pattern

External ASCII	Internal Code	Character	Pattern Words	External ASCII	Internal Code	Character	Pattern Words
245	45	%	3114	274	74	<	0412
243		, ,	0643				2100
246	46	&	5166	275	75	=	1212
2.0			0526				1212
211	47	TAB	0000	276	76	>	0021
			0000			ļ	1204
250	50	(3600	277	77	?	4020
			0041				2055
251	51)	4100	301	01	Α	4477
			0036				7744
252	52	*	2050	302	02	В	5177
			0050			_	2651
253	53	+	0404	303	03	С	4136
			0437				2241
254	54	,	0500	304	04	D	4177
			0006		05	_	3641 4577
255	55	_	0404	305	05	E	4577 4145
			0404	000	06	F	4477
256	56		0001	306	06	Г	4044
057	57	,	0000	307	07	G	4136
257	57	/	0601 4030	307	"		2645
260	60	0	4136	310	10	н	1077
260	00	J	3641	3.0			7710
261	61	1	2101	311	11		7741
201	"	'	0177	"			0041
262	62	2	4523	312	12	J	4142
202		_	2151				4076
263	63	3	4122	313	13	Κ	1077
200			2651	1			4324
264	64	4	2414	314	14	L	0177
			0477				0301
265	65	5	5172	315	15	M	3077
			0651				7730
266	66	6	1506	316	16	N	3077
		1	4225				7706
267	67	7	4443	317	17	0	4177
			6050			_	7741
270	70	8	5126	320	20	Р	4477
			2651	004	0.4		3044
271	71	9	5122	321	21	a	4276 0376
			3651	222	00	R	4477
272	72	:	2200	322	22	, n	3146
070	70		0000	222	22	s	5121
273	73	;	4601	323	23	"	4651
			0000		1		7051
					1		<u> </u>

Table 3-1. ASR-33 Character Set Display Pattern (cont)

External ASCII	Internal Code	Character	Pattern Words	External ASCII	Internal Code	Character	Pattern Words
324	24	Т	4040	335	35]	0000
			4077				7741
325	25	U	0177	336	36	↑	0000
			7701				0000
326	26	V	0176	212	37	LINE	0000
			7402			FEED	0000
327	27	w	0677				
			7701	240	40	SPACE	0000
330	30	X	1463				0000
			6314	241	41	1	7500
331	31	Y	0770				0000
			7007	242	42	"	7000
332	32	Z	4543				0070
			6151	215	43	RETURN	0000
333	33	[4177				0000
			0000	244	44	\$	4731
334	34	\	0204				4275
			1020				

3.5 DATA TERMINAL

The Data Terminal provides analog inputs and relay-controlled outputs for use by LINC mode programs. The facility includes the following:

Analog Inputs Relays Auxiliary Scope Connector Six relays for external equipment control 24-pin connector for an auxiliary CRT

3.5.1 Analog Inputs

The AD12 Analog-Digital Converter and Multiplexer consists of 16 input channels, a Sample and Hold, a multiplexer, and a 10-bit A-D converter. Eight of the channels are for external inputs via phone jacks. These feed through preamplifiers to the multiplexer. The acceptable voltage range of these inputs is $\pm 1v$ with a sensitivity of approximately 2 mv/count.

The other eight channels are controlled by continuously variable knobs mounted on the Data Terminal. The knobs give ten turns stop-to-stop however, 7 turns provide the full 10-bit range to the converter (1-1/2 to 2 turns from each extreme) each extreme is beyond the A-D range of -777_8 to $+777_8$). The knobs can be used to control speeds (as in the continuous display of data from tape), set threshold levels or other test parameters, etc.

A single LINC mode instruction selects the input channel, initiates the conversion, and transfers the contents of the buffer into the AC.

SAM Sample

Form:

SAM N

Octal code:

0100 + N, $0 \le N \le 17_8$ (Basic system); $0 \le N \le 37_8$ (extended system)

Execution time:

18.2 \(\mu\)s (Normal mode); 1.6 \(\mu\)s (Fast sample mode)


Operation:

Input channel N is selected. In normal mode, the voltage level present at the input is sampled and converted to a 10-bit number (including sign), which is assembled in the converter buffer. When the conversion is complete, the contents of the buffer are transferred into AC_{3-1} . The sign is placed in AC_{3-2} .

When the FAST SAMPLE Special Function is selected [ESF with $C(AC_5) = 1$], the order of events is reversed. The current contents of the converter buffer are transferred to the AC. Then the specified channel is selected and a new conversion is initiated. The results of this new conversion can be read by a subsequent SAM instruction, unless the KW12-A Real Time Interface is selected to mode 4, 5, 6, or 7; in this case only, the KW12-A may initiate the A-D conversion. If a conversion is still in progress when the next SAM is encountered, the processor waits until the conversion is complete before executing the new SAM.

3.5.2 **Relays**

Six DPDT relays mounted on the Data Terminal can be switched by LINC mode instructions, allowing the user to control the operation of various pieces of external equipment that are not interfaced directly with the PDP-12. The states of the relays can be examined at any time. One set of form C contacts for each of the relays is available at the binding posts on the Analog Input Panel as indicated in Figure 3-15. A second set of contacts is brought out to split lugs on the relay printed circuit board.

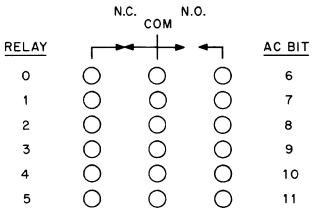

12-0209

Figure 3-15. Relay Terminals and Corresponding AC Bits

ATR AC to Relays

Octal code:

0014

Execution time:

1.6 μs

Operation:

The contents of AC₆₋₁₁ are transferred to the Relay Buffer; the state of each relay is

determined as follows:

If the corresponding AC bit is 0, the relay is switched off. If the corresponding AC bit is 1, the relay is switched on.

RTA Relays to AC

Octal code:

0015

Execution time:

1.6 µs

Operation:

The contents of the Relay Buffer are transferred into AC₆₋₁₁. If the relay is off, the

corresponding bit will be 0; if it is on, the bit will be 1. Bits AC₀₋₅ are not changed.

3.6 LINCTAPE TYPE TC12

The basic LINCtape system consists of either two DECtape Transports Type TU55 or one DECtape Transport Type TU56 controlled by a fully buffered subprocessor. A single ten-channel tape head serves for both reading and writing. Information is redundantly recorded; one line of tape contains five bits, each recorded in two non-adjacent channels, as shown in Figure 3-16. Three bits are actual data; the other two provide control information for the tape processor. The Timing track determines the position of each recorded line. Four lines are required to accommodate a full 12-bit word; the corresponding Mark Track code identifies the nature of the data word. The recording technique and tape layout are described in detail in the PDP-12 Maintenance Manual.

3.6.1 Organization of Data

On a standard-format LINCtape, information is recorded in blocks of 256 12-bit words each, with identifying data at each end of the block. One reel of Standard format LINCtape has a capacity of 512 blocks, for a total of 131,072₁₀ words of data. (In other formats, this capacity may be extended to 225,000₁₀ words.)

The organization of a tape is schematically presented in Figure 3-16. At each end of the tape is a long End Zone which allows the transport to reverse direction or come to rest without pulling the tape off the reel. Between the end zones and the terminal blocks, and between blocks, are Interblock Zones which can be sensed by the LINC instruction IBZ. An interblock zone is 5 words long.

Figure 3-16B represents a typical block of 256 data words preceded and followed by control and identifying information. The serial bit sequence on the Mark Track, is decoded so that the control can determine whether the adjacent data bits form true data, checksum words, guard words, etc. The symbols BM, CM, GM, etc. (defined below), refer to these Mark Track bit patterns.

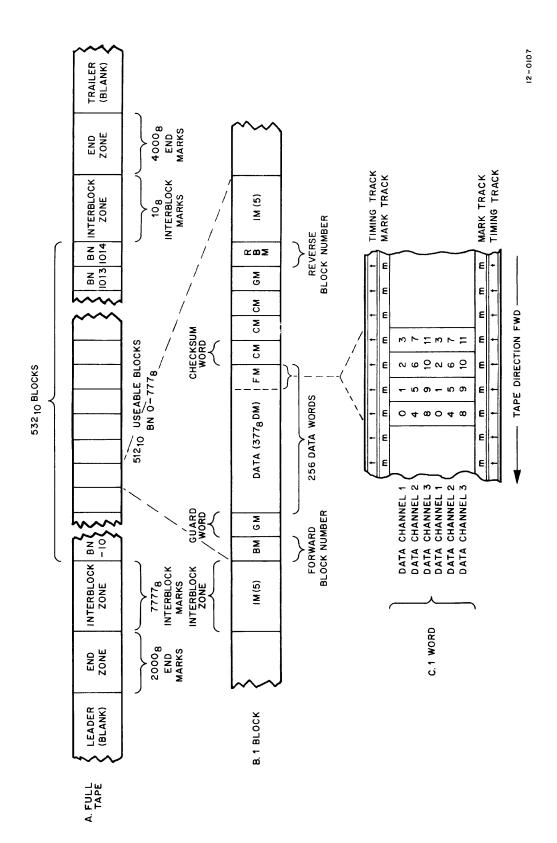


Figure 3-16. Standard LINCtape Format

A block consists of 256 data words preceded and followed by control and identifying information, as shown in the second drawing in Figure 3-16.

Block Number (BM)	This identifies the block. On a standard LINCtape, block numbers are sequential, from 0000 through 0777 ₈ .
Guard Word (GM)	This protects the Block Number from transients when the read/write current is turned on and off, and allows time for the tape processor to switch from Search to Read or Write modes.
Data Words (DM,FM)	This is the information recorded on tape from core memory. The final Data Word is specially identified, to signal the end of the block. When writing a tape, this signal conditions the tape processor to write the checksum in the next word position.
Checksum (CM)	This is the two's complement of the 12-bit sum of all the data words in the block plus the constant 7777_8 . The result of adding the data sum to the checksum should be 0000; this provides a check (hence the name) on the accuracy of the transfer.
Check Words (CM)	These are dummy words whose Mark Track code is the same as that for the Checksum. They are provided to insure that the Write current will be turned off before the Reverse Block Number is encountered. The Guard and Check words are not of general interest to the programmer except as they affect timing.
Reverse Block Number (RBM)	This is the Block Number that identifies the block when tape is being searched in the reverse direction.

Subprocessor

The LINCtape processor controls all information transfers between memory and tape. It is fully buffered; once an operation has been initiated by a LINC mode instruction, it is carried to completion by the tape processor. The central processor may either wait until the tape transfer is complete, or proceed immediately after the tape instruction has been initiated, testing at some later time for completion of the operation.

Transfers are effected in either Standard or Extended modes. In Standard mode, transfers are made to and from fixed memory locations. Extended Operations provide for a flexible addressing facility, program interrupt, and additional tape units.

As can be seen in Figure 3-17, the tape subprocessor contains seven registers which provide the transmission path for data and for control information.

Data Path

Read/Write Buffer (RWB), 12-Bits — When reading, the four lines of a data word are assembled in this register, in the bit positions shown in the third drawing of Figure 3-16. When writing, the contents of the RWB are disassembled and written on four consecutive lines of tape. Essentially, the RWB is a three-section shift register, with the three bits of a tape line entering (or leaving) the register at four-bit intervals, as indicated by the arrows in Figure 3-17.

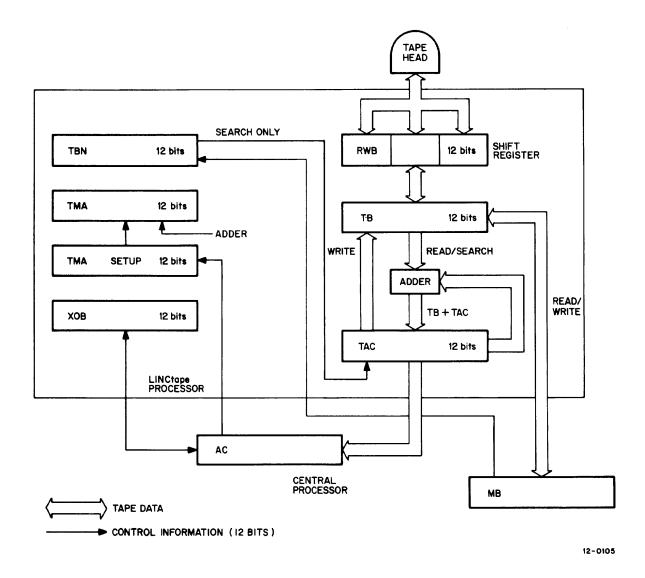


Figure 3-17. LINCtape Processor Information Paths

Tape Buffer (TB), 12 Bits — When reading, the assembled word is transferred from the RWB to the TB, and from there sent to the MB in the central processor. When writing, the direction is reversed; information from the MB enters the TB, and from there is placed in the RWB for disassembly onto the tape.

Tape Accumulator (TAC), 12 Bits — As each data word is read or written, the data sum is accumulated in the TAC. When reading, this sum is added to the Checksum read from tape, to determine whether the transfer was completed accurately. When writing, the data sum is complemented when the final data word signal is received, and the resulting Checksum is written in the word position following the final data word. The contents of the TAC can be brought into the central processor AC, using the Linc mode TAC instruction. In searching operations, the TAC also holds the sum of the desired block number and the last block number read from tape.

Control Registers

In Standard mode operations, these registers are automatically set up; in Extended Operations, the program must set the XOB and TMA Setup Register.

Tape Block Number (TBN), 12 Bits — This contains the number of the block to be accessed in a data transfer. As the tape is searched, the Block Number read from tape is compared with that in the TBN; when the numbers match, the tape is positioned so that the transfer can begin. During group operations, the TBN contains the number of the first block to be accessed.

Tape Memory Address (TMA), 12 Bits — This contains the address of the memory location to or from which the data is being transferred. In extended address mode, TMA is loaded from the TMA Setup Register at the beginning of a tape instruction; in Standard mode, the MBLK and TBLK information in the second tape instruction word are used to determine the initial contents of TMA. The TMA is incremented by 1 for each data word transferred.

TMA Setup Register, 12 Bits — In Extended Address mode, the register retains the first memory address of the data to be transferred. If the transfer is not successful, the contents of TMA Setup are placed in the TMA, and the operation is repeated. The TMA Setup Register is loaded from the AC, using the TMA instruction.

Extended Operations Buffer (XOB) 12 Bits — The contents of this register determine which of the various extended tape operations are in effect. These include extended memory addressing, tape interrupt, the no-pause condition, hold motion, and extended units.

3.6.2 Programming

The tape transfer operations are the same for both Standard and Extended Operation modes. Data may be read or written in single blocks or groups of contiguous blocks (in the extended address mode, only single blocks are transferred), with or without error-checking. Step-by-step searches can be performed, and block numbers can be identified without reading or writing data.

All LINCtape instructions require two words. The first word specifies the operation to be performed, one of two tape units, and the motion of tape at the end of the operation. The second word gives the tape block number and in Standard mode also gives the memory block number. The structure of the two words is shown in Figure 3-18.

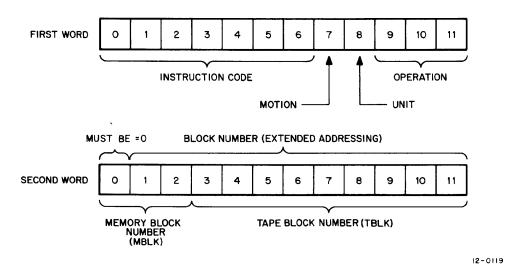


Figure 3-18. LINCtape Instruction Format

First Word

The general instruction code for the LINCtape class is 0700. The particular operation to be performed is specified by bits 9-11 of the first word. In the basic system, one of the two TU55 units is selected by bit 8. If this bit is 0, the unit dialed to 0 is selected; if this bit is a 1, unit 1 is chosen. Bit 7 (the I-bit) is used to determine the state of the unit's motion when the operation is completed. See Paragraph 3.6.3 below.

Second Word

In Standard Addressing, bits 3-11 of the second word specify the number of the tape block to be accessed. Bits 0-2 specify one of four blocks of a LINC Memory Field to or from which data is to be transferred. These memory blocks are assigned to specific addresses in each field. There are four blocks in each LINC field, each being 256 words (1 tape block) long. The blocks are assigned as follows:

Memory Block Number (MBLK)	LINC Memory Field	LINC Field Addresses	
0	Instruction Field	0000-0377	
1	Instruction Field	0400-0777	
2	Instruction Field	1000-1377	
3	Instruction Field	1400-1777	
4	Data Field	2000-2377	
5	Data Field	2400-2777	
6	Data Field	3000-3377	
7	Data Field	3400-3777	

In Standard Mode addressing, the contents of a tape block and a memory block correspond exactly. All single-block transfers are effected between the tape block and the memory block specified by the second word of the tape instruction. In group transfers, where several contiguous blocks are transferred, the second word is interpreted in a slightly different way. (See description of RCG and WCG instructions in Paragraph 3.6.4.) The two non-transfer instructions, MTB and CHK, use the second word in still different ways.

3.6.3 Tape Motion

Tape is read or written in the forward direction. It may be searched in either the forward or backward direction. Bit 7 of the first word of a LINCtape instruction determines the motion of the tape when a LINCtape operation has been completed.

If bit 7 (the I-bit) is set to a 1, the tape is left moving in the direction in which it was going at the completion of the operation. Except for searches backward, this will usually be the forward direction.

If bit 7 is set to a 0, the tape processor enters the Turnaround State at the completion of the operation, which is the end of the Checkword State. When a block mark is encountered, the tape stops, leaving the Turnaround State and entering the Idle State. If a subsequent tape instruction occurs while the tape processor is in the Turnaround State, searching begins with the tape moving forward.

If the tape has stopped, a subsequent tape instruction will begin with tape motion in the backward direction. It will search backwards until a block number has been encountered. This first block number is used to determine the required direction to complete the instruction.

NOTE

The foregoing discussion applies only to tape motion at the completion of an instruction. It should not be confused with the NO PAUSE Extended Operation, which affects central processor action after a tape operation has begun.

3.6.4 LINCtape Instructions

In the subsequent instruction descriptions, the following terms are used:

Data sum

two's complement sum of all 256 data words in a block

Checksum

two's complement of (Data sum + 7777_8)

Transfer check

Data sum + Checksum + 7777₈

If the transfer is successful, the transfer check = 7777₈

If not, the transfer check $\neq 7777_8$

MBLK, TBLK

As shown in Figure 3-18

NOTE

It is assumed that Extended Address and NO PAUSE are not used in the following discussion.

RDE Read Tape

Form:

RDE I U

Octal code:

0702 + 20I + 10U

Execution time:

 $3.2 \mu s$

Operation:

Block TBLK is read from tape into memory block MBLK. The transfer check is left in the

TAC and AC. The contents of the tape are unchanged.

RDC Read and Check

Form:

RDC I U

Octal code:

0700 + 20I + 10U

Execution time:

 $3.2 \,\mu s$

Operation:

Block TBLK is read from tape into memory block MBLK. If the block is transferred correctly,

the transfer check is left in the TAC and AC; otherwise, the operation is repeated. The

information on tape is unchanged.

RCG Read and Check Group

Form:

RCG I U

Octal code:

0701 + 20I + 10U

Execution time:

3.2 us

Operation:

Block TBLK is read from tape into the memory block designated by the three low-order bits

of TBLK; e.g., tape block 773 is read into memory block 3, tape block 027 into memory block 7. The next consecutive tape blocks are read into successive memory blocks. Tape block 000 follows tape block 777, and memory block 0 follows memory block 7. MBLK is the number of

additional consecutive blocks to be transferred.

Example: Transfer blocks 202-205 from unit 1 to memory, leaving the unit in motion at the end.

Instruction	Octal	
RCG I 1	0731	/READ AND CHECK GROUP INST
3202	3202	/MBLK = 3, THE NUMBER OF ADDITIONAL BLOCKS
		/TBLK = 202.

Data is transferred from tape block 202 into memory block 2, then from 203 to memory block 3, 204 to memory block 4, and 205 to memory block 5.

Each block transfer is checked. If the transfer is successful, the transfer check (7777) is left in the TAC; otherwise, that block is repeated. If the entire group is transferred successfully, 7777 is left in the TAC and AC at the end of the operation.

WRI Write Tape

Form:

WRI I U

Octal code:

0706 + 20I + 10U

Execution time:

 $3.2 \mu s$

Operation:

The contents of memory block MBLK are copied into block TBLK; the transfer check is left in

the TAC. The contents of memory are unchanged.

WRC Write and Check

Form:

WRC I U

Octal code:

0704 + 20I + 10U

Execution time:

 $3.2 \,\mu s$

Operation:

The contents of memory block MBLK are copied into block TBLK. If the transfer is successful, the transfer check (7777) is left in the TAC and PAC; otherwise, the operation is

repeated.

WCG Write and Check Group

Form:

WCG I U

Octal code:

0705 + 20I + 10U

Execution time:

 $3.2 \,\mu s$

Operation:

MBLK is the number of additional consecutive memory blocks whose contents are written on tape. The low-order digit of TBLK specifies the first memory block to be accessed. The contents of this block are copied into block TBLK of tape. The contents of the next MBLK memory blocks are copied into the next successive tape blocks. Memory block 0 follows memory block 7, and tape block 000 follows block 777. The scheme is identical with that for RCG. If the transfer is successful, the transfer check (7777) is left in the TAC and AC;

otherwise, the operation is repeated.

The following two instructions do not transfer data.

MTB Move Toward Block

Form:

MTB I U

Octal code:

0703 + 20I + 10U

Execution time:

3.2 us

Operation:

Subtract the first tape block number encountered (or reverse block number, if the tape is moving backwards) from TBLK, leaving the difference in the TAC and AC. If I = 0, the tape stops. If I = 1, the tape is left moving forward if the difference is positive or 0, and backward if negative. If motion = 0 when this instruction is given, it starts moving backward; otherwise it continues in the direction in which it had been going. The MBLK bits of the second word are

ignored.

CHK Check one Tape Block

Form:

CHK I U

Octal code:

0707 + 20I + 10U

Execution time:

 $3.2 \mu s$

Operation:

Find block BN, form its transfer check and leave it in the TAC and AC. The information on

tape and the contents of memory are unchanged.

The contents of the Tape Accumulator can be examined by using the following instructions.

TAC Tape Accumulator to AC

Octal code:

0003

Execution time:

1.6 µs

Operation:

The contents of the Tape Accumulator are placed in the central processor AC. The previous C(AC) are lost; C(TAC) are unchanged. This instruction is used to verify transfer Checksums for NO PAUSE tape operations. Because this instruction uses the tape ADDER data path, it

must not be given while a tape operation is in progress.

3.6.5 Extended Operations

LINCtape Extended Operations give the programmer a more flexible addressing scheme for information transfers, additional control functions, and a tape processor maintenance facility. These operations are controlled by the contents of the Extended Operations Buffer, defined as shown in Figure 3-19. The XOB can be loaded from the AC and vice versa. The function of these bits is described in Paragraphs 3.3.6 through 3.6.12.

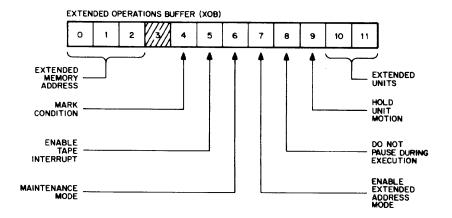


Figure 3-19. Extended Operations Buffer Bit Assignments

AXO AC to XOB

Octal code:

0001

Execution time:

1.6 µs

Operation:

The contents of the AC are placed in the Extended Operations Buffer. The previous C(XOB) are lost; C(AC) are unchanged. Changing these states while a tape operation is in progress may

cause incorrect execution.

XOA XOB to AC

Octal code:

0021

Execution time:

 $1.6 \,\mu s$

Operation:

The contents of the Extended Operations Buffer are placed in the AC. The previous C(AC) are

lost; C(XOB) are unchanged.

This instruction must not be given when the tape is in progress because the data path includes

the tape ADDER.

3.6.6 Extended Address Format

This facility releases the programmer from the limitation of block-to-block transfers, as described previously. Instead, a block transfer may begin in any register of any memory field, regardless of the settings of the Memory Field Registers. The first memory address affected in the data transfer is placed in the TMA Setup Register by the program, using the instruction TMA. When the Extended Address Mode is enabled (by setting bit 7 of the XOB to 1), all subsequent tape transfers are executed as follows. At the occurrence of a tape transfer instruction, the contents of the TMA Setup Register are placed in the TMA. The second word of the instruction is taken as an 11-bit block number, and placed in the TBN. The transfer is effected between tape and the designated area of the 4096-word memory bank specified by bits 0-2 of the XOB. The transfer is thus independent of the LINC Memory Field assignments.

As in all extended memory operations, whether with tape or not, the transfer will not cross 4096₁₀ memory field bank boundaries; address 7777 is followed by address 0000.

NOTE

The group transfer instructions RCG and WCG cannot be used in extended address mode.

TMA Load TMA Setup Register

Octal code:

0023

Execution time:

1.6 µs

Operation:

The contents of the AC are placed in the Tape Memory Address Setup Register. The previous contents of TMA Setup are lost; C(AC) are unchanged. This instruction must not be given

when the tape is in progress because the data path includes the tape ADDER.

Example:

Read the contents of block 365 of unit 0 into memory, beginning at absolute location 10540_8 (0540₈ in the second 4096_{10} -word bank of memory).

Instruction	Octal Code	Action
LDA I	1020	/LOAD AC WITH STARTING ADDRESS
0540	0540	STARTING ADDRESS OF TARGET AREA
TMA	0023	PLACE STARTING ADDRESS IN TMA SETUP
LDA I	1020	/LOAD AC WITH EXTENDED OPERATIONS BITS
1020	1020	/BANK 1; ENTER EXTENDED ADDRESS MODE
AXO	0001	/LOAD XOB FROM AC
,,,,		,
RDC	0700	/READ AND CHECK FROM UNIT 0
0365	0365	/BLOCK 365
		12200K 000

The data will be read into registers 0540_8 - 1137_8 of the second 4096_{10} -word bank of memory.

3.6.7 Extended Units

The two Extended Units bits (XOB_{10-11}) may be thought of as an extension of the unit bit of a LINCtape instruction (bit 8). Taken together, the three bits can select one of up to eight transports which may be attached to the TC12 tape control. The logical unit numbers are assigned by rotating the dials on the transports; they correspond to the unit select bits as follows:

	nded Unit XOB)	Instruction Unit Bit	Transport
10	11	8	Selected
0	0	0	0
0	0	1	1
0	1	0	2
0	1	1	3
1	0	0	4
1	0	1	5
1	1	0	6
1	1	1	7

3.6.8 Tape Interrupt Enable

When this bit (XOB_5) is set, a program interrupt will occur whenever INTERRUPT is enabled and the TAPE DONE flag is set (i.e., the tape operation is completed). As with other LINC interrupts, control is transferred to register 0041 of memory field 0; the contents of the PC are stored in register 0040. (If the central processor is in the 8 mode, the interrupt uses registers 0001 and 0000.) TAPE DONE is set by the completion of a tape instruction and cleared by the execution of a new tape instruction or the tape maintenance instruction LMR (IOT 6151) with AC₄(1). (See Paragraph 3.6.9 and Appendix E.)

3.6.9 No Pause Condition

Normally, the central processor waits until a tape operation is finished before proceeding. Such delays may be eliminated by setting the NO PAUSE condition bit (XOB₈). When this condition is enabled, the processor continues with the program as soon as the LINCtape instruction has been interpreted and the operation initiated. Subsequently, the program can monitor the Tape Done flag to determine when the operation has finished. The Tape Done flag is set when a tape operation has been completed and is cleared at the beginning of the next tape instruction. The flag can also be sensed and cleared by the following instructions. When in the no pause condition, a second tape instruction should not be used until the previous tape instruction has been completed.

IOB

LMR Load Maintenance Register

Octal code:

0500

6151

Execution time:

 $5.9 \,\mu s$ (LINC mode)

Operation:

The maintenance IOT (see Appendix E) is used to test and clear the TAPE DONE flag.

 $(AC_{0.5} = 1)$ Skip if Tape Done Flag is set. $(AC_{0.4} = 1)$ Clear Tape Done Flag

Do not have other AC bits on a 1, as this instruction has many additional functions.

STD Skip if Tape Done

Form:

STD I

Octal code:

0416 + 20I

Execution time:

1.6 µs

Operation:

If I = 0, skip the next instruction if no tape operation is in progress; otherwise, execute the next instruction. If I = 1, skip if an operation is still in progress. This instruction is identical to

SXL I 16.

Used in conjunction with the tape flag and tape interrupt, the NO PAUSE condition can save considerable amounts of time in central processor programming. When NO PAUSE is set, the Transfer Check is not placed in the accumulator at the end of tape instruction. The instruction

TAC (see Paragraph 3.6.4) should be used to recover the Transfer Check.

3.6.10 Hold Unit Motion

Normally, a tape transport stops as soon as another unit has been selected. When XOB₉ is set, however, the transport will continue in the direction it has been moving when the unit is deselected. This is a useful feature for certain operations involving several units, and must be used with caution. Note that it is not the same as the motion bit of a LINCtape instruction, which determines the motion state of a unit at the completion of an instruction only.

NOTE

With the Hold Unit Motion and No Pause bits both set, it is impossible to do two back-to-back tape instructions and enable both units 0 and 1 for simultaneous motion.

3.6.11 MARK Condition

This bit (XOB_4) is used in conjunction with the MARK switch on the operator's console to allow the MARK 12 program (see Chapter 7 on Program Library) to record Timing and Mark tracks on a new tape. The interaction between the switch and the XOB is designed to minimize the possibility of accidentally destroying a tape by enabling the MARK flip-flop. The flip-flop can be set only when the MARK switch is held down while an AXO instruction is being executed with AC_4 set to 1.

3.6.12 Maintenance Mode

When XOB₆ is set, all timing signals and data are prevented from entering the tape control registers from the reader-writers. Instead, signals generated by IOT instructions are used as input to the tape control, in order to simulate the functions of the tape head and the tape processor. The Maintenance Mode is designed for diagnostic purposes and is not intended for general use. See Appendix E for a list of Maintenance Mode tape control instructions.

3.6.13 **Tape Trap**

Whenever the TAPE TRAP and INSTRUCTION TRAP Special Functions are enabled (ESF with AC_{2-3} set), LINCtape instructions are not executed. When one is encountered, a program trap to register 0140 of memory field 0 occurs. The Tape Trap is intended primarily for use with LINC-8 programs and the I/O Handler (LINC-8 Trap Simulator) to ensure compatibility. Also, device-independent software can make use of Tape Trap to substitute other mass storage devices, such as disks for LINCtape.

3.6.14 Tape Word Skip

TWC Skip on Tape Word Complete

Form:

TWC I

Octal code:

0417 + 20I

Execution time:

1.6 µs

Operation:

This instruction is used when formatting a tape using the MARK 12 Program.

CHAPTER 4 8 MODE PROGRAMMING

8-mode programming of the PDP-12 is covered in this chapter, which is divided into six sections: Organization of Memory, Memory Addressing Methods, PDP-8 Instructions, Program Interrupt, Extended Arithmetic Element, and Extended Memory.

4.1 ORGANIZATION OF MEMORY

4.1.1 Organization

In the 8 mode, the basic 4096-word memory is divided into 32 pages of 128 words each for addressing purposes Within one of these pages, operands may be addressed directly by memory reference instructions. Access to operands across page boundaries (except for Page 0) requires indirect addressing.

Executable programs may be stored in any page of memory, and program sequences may extend across several pages. The program counter is indexed over all 12 bits in the 8 mode, so that a straight-line program sequence will pass from the last word of a page to the first word of the next. A programmed jump across page boundaries, however, requires an indirect reference. The organization of one memory field in 8 mode is shown in Figure 4-1.

4.1.2 Page 0

The first page of memory (addresses 000-177) contains several registers reserved for special use, which the programmer must take into account. These are:

Address	Use
0000	During a program interrupt, holds C(PC).
0001	Contains the first instruction to be executed after a
	program interrupt.
0010-0017	Automatic index registers (see Paragraph 4.2.2).

AGE	(OCTAL) ADDRESSES
	0	00000177
	1	0200-0377
	2	0400-0577
	3	0600-0777
	4	10001177
	5	1200-1377
	6	1400-1577
	7	1600 1777
	10	2000-2177
	11	2200—2377
	12	2400—2577
	13	2600—2777
	14	3000-3177
	15	3200 — 3377
	16	34003577
	17	3600-3777
	20	40004177
	21	4200—4377
	22	44004577
	23	4600—4777
	24	5000-5177
	25	52005377
	26	54005577
	27	5600—5777
	30	6000—6177
	31	6200 — 6377
	32	64006577
	33	6600 — 6777
	34	7000 7177
	35	7200—7377
	36	7400—7577
	37	7600—7777

12-0121

Figure 4-1. Organization of Memory, 8 Mode

4.1.3 Extended Memory

Additional 4K memory fields are organized in the same manner as the basic field. The Memory Field registers determine the assignment of fields (see Paragraph 4.6).

4.2 MEMORY ADDRESSING METHODS

4.2.1 Direct Addressing

In the 8 mode, all memory reference instructions have the same structure, which is shown in Figure 4-2.

Note that only seven bits (5-11) are available for use as an address. This is just sufficient to give access to 128 registers, or exactly one page. The state of bit 4 of the instruction determines which of two possible pages the 7-bit page address references. If this bit is 1, the page address is on the current page; that is, the one in which the instruction itself is stored. If bit 4 is 0, the page address is on Page 0. Thus, a memory reference instruction has direct access to a total of 256 registers of memory; the 128 locations of Page 0, and those of the current page.

Examples:

To store the contents of the AC in register 150 of the current page:

DCA 350

Octal code: 3350. The page address is 150; bit 4 (Page bit) set to 1 gives a total octal value of 350 for the address.

To store the contents of the AC in register 150 of Page 0:

DCA 150

Octal code: 3150. With the page bit set to 0, the complete octal address is 150.

As one can see from these examples, it is useful to think of page addresses running from 000-177 on Page 0, and from 200-377 on the current page.

4.2.2 Indirect Addressing

To gain access to registers outside of Page 0 or the current page, indirect addressing must be used. If bit 3 of a memory reference instruction is set to 1 (see Figure 4-2), the contents of the register designated by bits 5-11 are taken as the "effective" address of the operand. This is a full 12-bit number which gives the absolute address of any register in the 4K memory field.

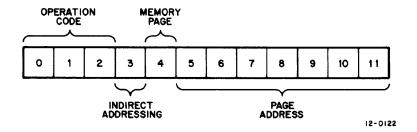


Figure 4-2. Memory Reference Instruction Format

In the following examples, as in normal 8 mode programming, the letter I is used as a mnemonic to represent the presence of a 1 in bit 3.

Examples:

a. To store the contents of the AC in register 100 of page 10 (absolute address 2100), using an effective address stored on the current page:

Absolute Address	Contents	Action
0410	DCA I 300	/OCTAL CODE: 3700. THE
		/EFFECTIVE ADDRESS IS
0500	2100	/CONTAINED IN REGISTER 500,
		/(PAGE ADDRESS 300)

b. To store the C(AC) in register 2100, using an effective address stored in Page 0:

Absolute Address	Contents	Action
0050	2100	/EFFECTIVE ADDRESS, STORED
		/ON PAGE 0
0410	DCA I 50	$/OCTAL\ CODE:\ 3450.\ (BIT\ 4=0)$

Table 4-1. Summary of Addressing Methods in 8 Mode

Bit 3	Bit 4	Effective Address
0	0	The operand is in Page 0 at the address specified by bits 5 through 11.
0	1	The operand is in the current page at the address specified by bits 5 through 11.
1	0	The absolute address of the operand is taken from the contents of the location in Page 0 designated by bits 5 through 11.
1	1	The absolute address of the operand is taken from the contents of the location in the current page designated by bits 5 through 11.

4.2.3 Autoindexing

The eight registers in locations 10-17 of Page 0 have a special function when indirectly addressed. The contents of such a register are first incremented by 1; the result is taken as the effective address of the operand. This autoindexing feature allows the programmer to address a series of contiguous locations without extra address modification, as shown in the following example.

Example:

To obtain the sum of 100 numbers stored in registers 1000-1077.

Address		
Labei	Instruction	Operation
GO,	CLA	/CLEAR THE AC
	TAD LIST	/PUT 777 IN AC (ADDRESS-1 OF THE TABLE OF NUMBERS)
	DCA 10	/DEPOSIT IN AUTOINDEX REGISTER 10. (CLEARS AC)
	TAD COUNT	/PUT -100 IN AC (COUNT OF ADDENDS IN TABLE)
	DCA INDEX	DEPOSIT IN REGISTER FOR COUNTING
LOOP,	TAD I 10	/C(10) INCREMENTED BY 1, THEN USED AS
		/EFFECTIVE ADDRESS TO GET ADDEND FROM TABLE
	ISZ INDEX	/INCREMENT COUNT. IF RESULT IS 0000, SKIP
		/THE NEXT INSTRUCTION.
	JMP LOOP	/IF NOT FINISHED, GO BACK TO GET NEXT ADDEND
END,	HLT	/WHEN FINISHED, STOP; AC CONTAINS THE SUM
LIST,	777	ADDRESS-1 OF TABLE OF ADDENDS
COUNT,	-100	/COUNT OF TABLES ENTRIES
INDEX,	0000	/HOLDS COUNT DURING EXECUTION OF PROGRAM

When register 10 is first accessed, its contents are incremented from 777 to 1000, then used as the effective address to obtain the first addend. The next time around the loop, C(10) is again incremented by 1, to 1001, for the next operand. At the end of the sequence, C(10) = 1077.

4.3 8 MODE INSTRUCTIONS (See Appendix B)

4.3.1 Memory Reference Instructions

There are six memory reference instructions: DCA, TAD, AND, ISZ, JMP, and JMS. All may use either direct or indirect addressing. When indirect addressing is specified, 1.6 microseconds is added to the execution time.

DCA Deposit and Clear Accumulator

Form: Octal code: DCA Y 3000 + Y

Execution time:

 $3.2 \mu s$

Operation:

The contents of the AC are deposited in register Y; the AC is then cleared to 0000. The

previous C(Y) are lost.

TADTwo's Complement Add to Accumulator

Form:

TAD V

Octal code:

1000 + Y

Execution time:

 $3.2 \mu s$

Operation:

The contents of Y are added to the contents of the AC, using two's complement addition. If

there is a carry out of bit 0, the Link is complemented; otherwise, the Link is unchanged. The

previous contents of the AC are lost; the contents of Y are not changed.

AND Logical AND to Accumulator

Form: Octal code:

AND Y 0000 + Y

Execution time:

 $3.2 \mu s$

Operation:

The contents of the AC and the contents of Y are combined according to the Boolean AND relation, with the result left in the AC. The operation is performed on corresponding bits of each operand, independent of the other bits in the two operands. The truth table for the AND

relation is shown below:

		C(AC _j)		
		0	1	
C(V.)	0	0	0	
$C(Y_j)$	1	0	1	

When corresponding bits of AC and Y are both 1, the result is 1. Otherwise, the result is 0. The previous C(AC) are lost; the C(Y) are unchanged.

ISZ Increment And Skip If Zero

Form:

ISZ Y

Octal code:

2000 + Y

Execution time:

 $3.2 \mu s$

Operation:

The contents of Y are incremented by 1. If the result is 0000, the next instruction in sequence

is skipped; otherwise, the next instruction is executed. The contents of the AC are not

affected.

JMP Jump

Form:

JMP Y

Octal code:

5000 + Y

Execution time:

 $1.6 \,\mu s$

Operation:

The address Y is placed in the PC, and the next instruction is taken from register Y; the

program continues from that point. The contents of the AC are not affected.

JMS Jump to Subroutine

Form:

JMS Y

Octal code: Execution time: 4000 + Y $3.2 \mu s$

Operation:

The contents of the PC are stored in Y. The address Y + 1 is placed in the PC, and the program

continues from Y + 1. The contents of the AC are not affected. To return from the subroutine to the point at which the JMS was given (i.e., to the register immediately following the JMS), the instruction JMP I Y is executed. The contents of Y are taken as the effective address; since Y contains the PC stored at the time of the JMS, control returns to the calling program.

4.3.2 Operate Class Instructions

This class is divided into two groups, I and II. Group I instructions include miscellaneous operations on the Accumulator and Link. Group II instructions include skips, program halt, and access to the console switches.

Operate class instructions are microprogrammable; they may be combined to provide several operations within a single instruction. However, combinations can be made only within a group; operations from different groups cannot be combined. To ease this restriction, the operation CLA (Clear the AC) is available in both groups. All Operate Class instructions require 1.6 microseconds for execution.

4.3.2.1 Operate Class: Group I — The microprogram structure of Group I instructions is shown in Figure 4-3. Any combination of these functions can be made, but the programmer must be aware of the order in which the operations are performed when the instruction is executed. This order is as follows:

- 1. CLA, CLL
- 2. CMA, CML
- 3. IAC
- 4. RAR, RAL, RTR, RTL

Certain combinations of Group I operations are common enough to be assigned separate mnemonics. These are described in Paragraph 4.3.2.2.

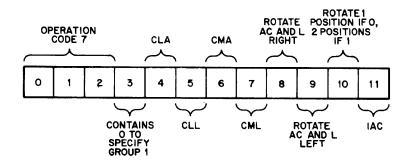


Figure 4-3. Group I Operate Class Instruction Format

NOP No Operation

Octal code:

7000

Operation:

None. This instruction may be used to provide short delays (1.6 microseconds per instruction),

or to hold a place for instructions to be inserted by the programmer.

CLA Clear Accumulator

Octal code:

7200

Operation:

The contents of the AC are cleared to 0000.

CLL Clear Link

Octal code:

7100

Operation:

The content of the Link is cleared to 0.

CMA Complement Accumulator

Octal code:

7040

Operation:

The one's complement of the contents of the AC replaces the original contents of the AC.

Each bit that is 0 becomes 1, and vice versa.

CML Complement Link

Octal code:

7020

Operation:

The content of the Link is complemented.

IAC Increment Accumulator

Octal code:

7001

Operation:

The contents of the AC are incremented by 1, using two's complement arithmetic. A carry out

of bit 0 complements the Link.

RAR Rotate Accumulator Right

Octal code:

7010

Operation:

The contents of the AC and Link, taken as a 13-bit register, are rotated right one position. A

bit rotated out of AC₁₁ enters the Link the bit rotated out of the Link enters AC₀. (See

Figure 4-4.)

RTR Rotate Two Places Right

Octal code:

7012

Operation:

The contents of the AC and Link, taken as a 13-bit register, are rotated two positions to the

right. (See Figure 4-4.) This is the equivalent of two RAR instructions.

RAL Rotate Accumulator Left

Octal code:

7004

Operation:

The contents of the AC and Link, taken as a 13-bit register, are rotated one place to the left. A

bit leaving AC₀ enters the Link; a bit leaving the Link enters AC₁₁. (See Figure 4-4.)

RTL Rotate Two Places Left

Octal code:

7006

Operation:

The contents of the AC and Link, taken as a 13-bit register, are rotated two positions left. (See

Figure 4-4.) This is equivalent to two RAL instructions.

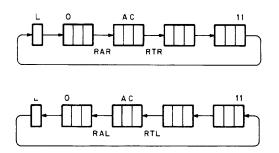


Figure 4-4. Rotation Scheme for RAR, RTR, RAL, RTL

4.3.2.2 Combined Operations: Group I — The following combined operations have been given separate mnemonics for programming convenience.

STA Set Accumulator (CLA + CMA)

Octal code:

7240

Operation:

Clear, then complement the AC. Resulting C(AC) = 7777.

STL Set Link (CLL + CML)

Octal code:

7120

Operation:

Clear, then complement the Link. Resulting C(L) = 1.

CIA Complement and Increment Accumulator (CMA + IAC)

Octal code:

7041

Operation:

Complement the AC, then increment the result by 1. This gives the two's complement of the

original C(AC). The two's complement of a number is defined as the one's complement plus 1.

GLK Get Link (CLA + RAL)

Octal code:

7204

Operation:

Clear the AC, then rotate one place left, thus putting the contents of the Link into AC₁₁. This

instruction is useful in multiple precision arithmetic.


Other Useful Combinations — The programmer can place a number of selected constants in the AC by combining Group I operations as shown:

Octal Code		Comb	ination		Resulting C(AC)
7201	CLA	IAC			0001
7326	CLA	STL	RTL		0002
7325	CLA	STL	IAC	RAL	0003
7307	CLA	CLL	IAC	RTL	0004
7327	CLA	STL	IAC	RTL	0006
7344	STA	CLL	RAL		7776 (-2)
7346	STA	CLL	RTL		7775 (-3)
7330	CLA	STL	RAR		4000
7332	CLA	STL	RTR		2000
7333	CLA	STL	IAC	RTR	6000

4.3.2.3 Operate Class: Group II — The microprogram structure of Group II operations is shown in Figure 4-5. Any of these operations may be combined, but the programmer must be aware of the sequence of events. In addition, the sense of the skip instruction determines the manner in which combined skips are interpreted. If bit 8 is a 0, the logical OR of the tested conditions will cause a skip; if this bit is a 1, the logical AND of the conditions will cause the skip. In the first case, this means that the skip will occur if any one of the conditions tested is true; in the second case, the skip will occur only if all the conditions tested are true. The various combinations are described in Paragraph 4.3.2.4.

The sequence of events in a Group II instruction is as follows:

- 1. Skips
- 2. CLA
- 3. OSR
- 4. HLT occurs after all other specified operations have been performed.

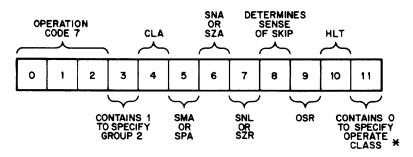

^{*} THIS BIT DISTINGUISHES GROUP II OPERATE CLASS INSTRUCTIONS FROM THE OPTIONAL EAE INSTRUCTION SET, IN WHICH THIS BIT IS SET TO 1.

Figure 45. Group II Operate Class Instruction Format

CLA Clear AC

Octal code:

7600

Operation:

Clear the AC

SKP Skip Unconditionally

Octal code:

7410

Operation:

The next instruction in the program sequence is unconditionally skipped.

SNL Skip On Non-Zero Link

Octal code:

7420

Skip condition:

The contents of the Link equal 1.

SZL Skip On Zero Link

Octal code:

7430

Skip condition:

The contents of the Link equal 0.

SZA Skip On Zero Accumulator

Octal code:

7440

Skip condition:

The contents of the AC equal 0000.

SNA Skip On Non-Zero Accumulator

Octal code:

7450

Skip condition:

The contents of the AC are not equal to 0000.

SMA Skip On Minus Accumulator

Octal code:

7500

Skip condition:

The contents of AC_0 equal 1. By convention, a negative number is one in which the most significant digit is 1. Thus, all numbers between 4000 and 7777, inclusive, are negative. The

4-10

two's complement of such a number is its positive counterpart. In this sense, 7777 is equivalent to -1; 4000 is equivalent to -4000. The two's complement sum of a number and its two's complement is always zero.

SPA Skip On Plus Accumulator

Octal code:

7510

Skip condition:

The contents of AC_0 equal 0. By the convention described above, a number is positive if its

most significant digit is 0.

OSR OR Switch Register With Accumulator

Octal code:

7404

Operation:

The contents of the console switch register (Right Switches) are combined with the contents

of the AC by the logical Inclusive OR relation; the result is left in the AC.

If either bit of a corresponding pair is set to 1, the result is 1. The result is 0 only if both AC and SR bits are 0. This instruction is normally used with CLA to obtain the actual status of the

Switches (see below).

HLT Halt

Octal code:

7402

Operation:

The processor stops. The PC contains the address of the register following the HLT instruction.

The contents of the other processor registers are not affected.

LAS Load Accumulator From Switches (CLA + OSR)

Octal code:

7604

Operation:

Clear the AC, then OR the contents of the Right Switches with C(AC). This places the status of the switches in the AC. If the switch is set to 1, the corresponding AC bit is set to 1.

4.3.2.4 Combined Skips In Group II - The possible skip combinations are listed, with the conditions for a skip to occur.

Co	mbinatio	on	Octal Code	A skip will occur if	
SZA	SNL		7460	C(AC)=0000, or $C(L)=1$, or both	
SZA	SMA		7540	$C(AC)=0000$, or $C(AC_0)=1$, or both	
SMA	SNL		7520	$C(AC_0)=1$, or $C(L)=1$, or both	
SZA	SMA	SNL	7560	$C(AC)=0000$, or $C(AC_0)=1$, or $C(L)=1$, or	
				any, or all of these.	
				A skip will occur if and only if	
SNA	SZL		7470	$C(AC)\neq 0$ and $C(L)=0$	
SNA	SPA		7550	$C(AC)\neq 0$ and $C(AC_0)=0$	
SPA	SZL		7530	$C(AC_0)=0$ and $C(L)=0$	
SNA	SPA	SZL	7570	$C(AC)\neq0000$ and $C(AC_0)=0$ and $C(L)=0$	

If CLA is combined with any skip, the AC is cleared after the conditions have been tested.

4.3.2.5 Input/Output Transfer Class — These instructions, all of which have the basic operation code of 6000, are used to service peripheral devices, enable and disable the program interrupt, operate the memory extension control, change from 8 to LINC programming mode, and provide maintenance operations for the LINCtape subprocessor. Most of these instructions are described in Chapter 6 with their associated devices. The program interrupt and memory extension control are discussed with their respective instructions in Paragraphs 4.4 and 4.6 of this chapter.

Mode Control - To change operating mode from 8 to LINC, the following IOT instruction is used.

LINC Switch to LINC Mode

Octal code:

6141

Execution time:

4.25 μs

Operation:

Starting with the next succeeding instruction, the central processor will operate in LINC mode.

4.4 PROGRAM INTERRUPT

4.4.1 Operation

To facilitate the handling of data transfers and the checking of peripheral device status, provision is made for interrupting a program when a given condition exists. In general, an interrupt occurs when a peripheral device flag is raised (i.e., when the device is available for service, when an operation has been completed, or when a specific condition, such as an alarm, occurs within the device).

The Program Interrupt (PI) is enabled or disabled by the program. When it is disabled, a device flag must be sensed by means of a skip; the program is not interrupted. When the interrupt is enabled, any device flag that is connected to the interrupt system will cause the following sequence of events to occur when that flag is raised:

- 1. The instruction in progress at the time of the PI request is completed.
- 2. The contents of the program counter are stored in register 0000, and 0001 is placed in the PC.
- 3. Processing continues, beginning with the instruction in register 0001.
- 4. The PI facility is disabled.

The two IOT instructions which control the PI facility are described below.

ION Interrupt On

Octal code:

6001

Execution time:

 $4.25 \mu s$

Operation:

The PI facility is enabled immediately after the instruction following the ION has been executed. If a PI request is waiting at the time of the ION, the interrupt will occur after the next instruction has been completed. The enabling is delayed in this manner so that a PI service routine can return to the interrupted program before a subsequent PI request destroys

the contents of register 0000.

IOF Interrupt Off

Octal code:

6002

Execution time:

 $4.25 \mu s$

Operation:

The PI facility is disabled. Subsequent requests will not cause a PI, although any flag causing a

request may be sensed in the usual manner with an IOT skip.

4.4.2 Using the Program Interrupt

Normally, when a PI occurs, the instruction in register 0001 is a JMP to a PI service routine, which examines the expected flags to determine which device or condition caused the request. The appropriate routine is then called to service the device. During this time, the PI facility is disabled. When the device service routine is completed, control normally returns to the PI handling routine for restoring the PI facility and exiting to the main program. The last two instructions of such a routine would be:

ION JMP I 0 /ENABLE PI FACILITY
/RETURN TO MAIN PROGRAM AT THE ADDRESS
/STORED IN REGISTER 0000

The PI is not enabled until the JMP I 0 has been executed, so that the return to the main program is completed before a waiting request can cause another PI.

NOTE

Refer to Paragraph 3.3.15 for the discussion of additional aspects of Program Interrupt during LINC mode programming.

4.5 EXTENDED ARITHMETIC ELEMENT TYPE KE12

4.5.1 Operation

The Extended Arithmetic Element (EAE), Type KE12, adds a complete automatic multiplication and division facility to the PDP-12. Programming is provided by a class of 8 mode instructions. The AC and MQ are used to accommodate full 24-bit products and dividends, and the remainder and quotient after a division. Shifting, normalizing, and register setup instructions are included. All operands are treated as unsigned integers; the programmer must establish his own sign conventions. The normalizing instruction facilitates the writing of floating-point subroutines.

4.5.2 EAE Instructions

The EAE instruction set has a basic operation code of 7401; some functions are microprogrammable, as in Operate Class instructions. The microprogram structure of the EAE class is shown in Figure 4-6.

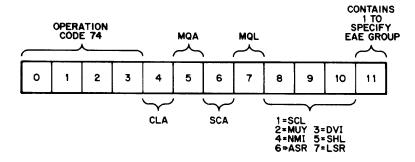


Figure 4-6. EAE Instruction Format

As with other microprogrammed instructions, EAE operations are performed in a given order. Operations can be combined in a single instruction, except that operations occurring at the same time cannot be combined with meaningful results.

The order of events is as follows:

- 1. CLA
- 2. MQA, MQL, SCA
- 3. SCL, MUY, DVI, NMI, SHL, ASR, LSR

CLA Clear AC

Octal code: Execution time: 7601 1.6 μs

Operation:

Clear the AC. The MQ and Link are unaffected.

CAM Clear AC and MQ

Octal code: Execution time: 7621 1.6 μs

Operation:

The AC and the MQ is cleared.

MQA Place MQ in AC

Octal code:

7501

Execution time:

1.6 µs

Operation:

The contents of the MQ are ORed into the AC. The C(MQ) are unchanged.

NOTE

All twelve bits are transferred; this is *not* identical to the LINC mode QAC instruction (Paragraph 3.3.11).

MQL Load MQ from AC

Octal code:

7421 1.6 µs

Execution time: Operation:

The MQ is cleared. The contents of the AC are placed in the MQ. The previous C(MQ) are lost.

The AC is cleared at the end of the instruction.

SCA Step Counter to AC

Octal code:

7441 1.6 μs

Execution time: Operation:

The contents of the step counter are ORed inclusively with the contents of AC_{7-11} ; the result

is left in the AC. To obtain the actual step count, SCA is combined with CLA (combined operation code: 7641).

All other EAE instructions, except NMI, require two words: the first contains the operation to be performed, the second contains the operand. In the following descriptions, the notation p + 1 designates the register containing the operand.

SCL Load Step Counter

Octal code: Execution time: 7403 3.2 μs

Operation:

The complement of the contents of bits 7-11 of p + 1 is placed in the SC.

MUYMultiply

Octal code:

7405

Execution time:

9.0 us

Operation:

The number in the MQ is multiplied by the number in register p + 1. At the conclusion of this instruction the Link contains a 0. The most significant 12 bits of the product are in the AC and the least significant 12 bits are in the MQ.

DVI Divide

Octal code:

7407

Execution time:

 $4.0 \,\mu s$ to $10.0 \,\mu s$

Operation:

The 24-bit dividend is held in the AC (most significant part) and MQ (least significant part); the divisor is in register p + 1. At the conclusion of the division, the quotient is in the MQ, and the remainder in the AC. If the division was carried out, the Link is left clear. If either dividend or divisor is zero, the operation ends after one step and the Link is set to 1, to

indicate that a divide overflow occurred.

NMI Normalize

Octal code:

7411

Execution time:

 $1.6 \,\mu s + 0.40 \,\mu s/step$

Operation:

The AC and MQ are treated as a single 24-bit register. The combined contents of the AC and MQ are shifted left until C(AC₀) differs from C(AC₁) or until 6000 0000 is contained in the combined AC and MQ. Bits shifted out of AC₀ enter the Link; bits shifted out of the Link are lost. Zeros enter MQ₁₁ and are shifted up the registers. At the end of the operation, the SC contains the number of shifts performed, which is the exponent of the normalized floating point fraction. The shift path is shown in Figure 4-7.

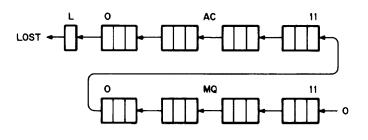


Figure 4-7. Shift Path for NMI, SHL

SHL Shift Left

Octal code:

7413

Execution time:

 $3.2 \mu s + 0.40 \mu s/step$

Operation:

The combined contents of the Link, AC and MQ are shifted left N + 1 places, where N is the number contained in bits 7-11 of register p + 1. Bits shifted out of the Link are lost; zeros are shifted into MQ_{11} and up the registers. The shift path is identical to that for NMI, as shown in

Figure 4-7.

ASR Arithmetic Shift Right

Octal code:

7415

Execution time:

 $3.2 \mu s + 0.40 \mu s/step$

Operation:

The combined contents of the AC and MQ are shifted right N+1 places, where N is the number contained in bits 7-11 of register p+1. The sign bit (AC_0) is reproduced in all vacated bit positions, and is also placed in the Link. Bits shifted out of MQ_{11} are lost, as is the previous C(L). The shift path is shown in Figure 4-8.

AC 11 11 LOST

Figure 4-8. Shift Path for ASR

LSR Logical Shift Right

Octal code:

7417

Execution time:

 $3.2 \mu s + 0.40 \mu s/step$

Operation:

The combined contents of the AC and MQ are shifted right N+1 places, where N is the number contained in bits 7-11 of register p+1. Bits shifted out of the MQ_{11} are lost; zeros are

shifted into the Link and down the register. The shift path is shown in Figure 4-9.

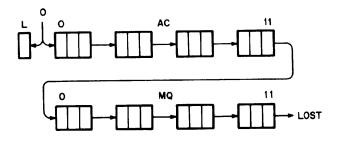


Figure 4-9. Shift Path for LSR

4.5.3 EAE Programming

$\textbf{4.5.3.1} \quad \textbf{Multiplication} - \textbf{Multiplication} \ is \ performed \ as \ follows:$

- 1. Load the AC with the multiplier using the TAD instruction.
- 2. Transfer the contents of the AC into the MQ using the MQL command.

3. Give the MUY command.

Note that steps 2 and 3 can be combined into one instruction.

The contents of the MQ are then multiplied by the contents of the next successive core memory location (p + 1). At the conclusion of the multiplication the most significant 12 bits of the product are held in the AC and the least significant bits are held in the MQ. This operation takes 9.0 microseconds; at the end of this time, the next instruction is executed.

The following program examples demonstrate the operation of the EAE during multiplication:

a. Multiplication of 12-bit Unsigned Numbers

Enter with a 12-bit multiplicand in AC and a 12-bit multiplier in core memory. Exit with high order half of product in a core memory location labelled HIGH, and with low order half of product in the AC. Program time is approximately 13 microseconds.

	MQL MUY	/LOAD MQ WITH MULTIPLICAND, INITIATE /MULTIPLICATION
MLTPLR,	0000	/MULTIPLIER
	DCA HIGH	/STORE HIGH ORDER PRODUCT
	MOA	/LOAD AC WITH LOW ORDER PRODUCT

b. Multiplication of 12-Bit Signed Numbers, 24-Bit Signed Product

Enter with a 12-bit multiplicand in AC and a 12-bit multiplier in core memory. Exit with signed 24-bit product in core memory locations designated HIGH and LOW.

MLTPLR,	CLL SPA CMA CML IAC MQL TAD MLTPLR SPA CMA CML IAC DCA MLTPLR RAL DCA SIGN MUY 0000 DAC HIGH TAD SIGN RAR	/MULTIPLICAND POSITIVE? /NO. FORM TWO'S COMPLEMENT /LOAD MULTIPLICAND INTO MQ /MULTIPLIER POSITIVE? /NO. FORM TWO'S COMPLEMENT /SAVE LINK AS SIGN INDICATOR /MULTIPLY /MULTIPLIER /LOAD LINK WITH SIGN INDICATOR
	MQA SNL JMP LAST	/IS PRODUCT NEGATIVE?
	CLL CMA IAC	/NO, MULT DONE, EXIT /YES
	DCA LOW	/COMPLEMENT RESULT
	TAD HIGH	COMI LEMENT RESULT
	CMA	
	SZL	/LINK USED TO COUPLE CARRY /FROM BIT 12 TO BIT 11
		OF DOUBLE-LENGTH PRODUCT
	IAC	
	DCA HIGH	
	SKP	
LAST,	DCA LOW	

4.5.3.2 **Division** – Division is performed as follows:

- 1. Load the least significant 12 bits of the dividend into the AC using the TAD instruction, then transfer the contents of the AC into the MQ using the MQL command.
 - 2. Load the most significant 12 bits of the dividend into the AC.
 - 3. Give the DVI command.

The 24-bit dividend contained in the AC and MQ is divided by the 12-bit divisor contained in the next successive core memory location (p + 1). This operation takes a maximum of 10.0 microseconds; when complete, a 12-bit quotient is held in the MQ, the 12-bit remainder is in the AC, and the Link holds a 0 if divide overflow did not occur. To prevent divide overflow, the divisor in the core memory must be greater than the 12 bits of the dividend held in the AC. When divide overflow occurs, the Link is set and the division is concluded after only one cycle. Therefore, the instruction following the divisor in core memory should be an SZL microinstruction to test for overflow. The instruction following the SZL may be a jump to a subroutine that services the overflow. This subroutine may cause the program to type out an error indication, rescale the divisor or the dividend, or perform other mathematical corrections, then repeat the divide routine.

The following program examples demonstrate the use of the EAE in division.

a. Division of 24-Bit Unsigned Numbers

Enter with the low order 12 bits of the dividend in the AC and the high order 12 bits of the dividend in memory location labeled HIGH 12. The divisor is in memory location labeled DIVISOR upon entry. Exit with the quotient in the AC and the remainder in location labeled REMAIN.

/CLEAR LINK FOR OVERFLOW CHECK. CLL /LOAD MQ WITH LOW ORDER DIVIDEND MOL /LOAD AC WITH HIGH ORDER DIVIDEND TAD HIGH 12 DVI /INITIATE DIVIDE DIVISOR, (12 BIT DIVISOR HERE) SZL **/OVERFLOW?** JMP EXIT /YES - EXIT DCA REMAIN /NO – STORE REMAINDER /AND LOAD AC WITH QUOTIENT MOA

b. Division of 24-Bit Signed Numbers

Enter with the low order 12 bits of the dividend in memory location labeled LOW 12 and the high order 12 bits of the dividend in memory location labeled HIGH 12. The 12 bit divisor is in location labeled DIVISOR. Exit with the unsigned remainder in location labeled REMAIN, and the signed quotient in the AC.

CLA CLI	/CLEAR AC AND LINK
TAD HIGH 12	/LOAD AC WITH HIGH ORDER DIVIDEND
SMA CLA	/DIVIDEND NEGATIVE?
JMP .+12	/NO – SKIP NEGATION
TAD LOW 12	/YES – LOAD AC WITH LOW ORDER DIVIDEND
CMA IAC	/NEGATE IT AND
DCA LOW 12	/STORE IT BACK
TAD HIGH 12	/LOAD AC WITH HIGH ORDER DIVIDEND

CMA /NEGATE IT SZL /WAS THERE A CARRY FROM LOW ORDER? IAC /YES - INCREMENT HIGH ORDER DCA HIGH 12 /AND STORE IT BACK CLL CML /SET LINK TO 1 FOR SIGN CHECK TAD DIVISOR /LOAD AC WITH DIVISOR SPA /IS IT POSITIVE? CMA CML IAC /NO – NEGATE IT DCA DIVISOR /AND STORE IT BACK SNL /CHECK LINK FOR SIGN OF RESULT **CMA** /POSITIVE - STORE -1 IN SIGN CLL /NEGATIVE — STORE 0 IN SIGN DCA SIGN TAD LOW 12 /GET LOW ORDER DIVIDEND MOL /STORE IT IN MQ TAD HIGH 12 /LOAD AC WITH HIGH ORDER DIVIDEND DVI /DIVIDE DIVISOR, (DIVISOR STORED HERE) SZL /OVERFLOW? JMP EXIT /YES - EXIT ON OVERFLOW DCA REMAIN /NO – STORE UNSIGNED REMAINDER MQA /LOAD AC WITH QUOTIENT ISZ SIGN /SHOULD QUOTIENT BE NEGATIVE? CMA IAC /YES - NEGATE IT

4.6 EXTENDED MEMORY

When additional 4096-word memory banks are attached to the PDP-12, the Memory Extension Control provides access to the additional storage, both for programs and data. The registers of the Control are already built into the PDP-12; they are described in Paragraph 3.3.15 in relation to LINC mode memory control. In the 8 mode, the functions of these registers are the same, but only a portion of each register is used. The Instruction Field (IF), Data Field (DF), and Instruction Field Buffer (IB) registers are each five bits long; the two low-order bits of the 5-bit total pertain only to LINC mode programming operations. In 8 mode the Save Field register (Interrupt Buffer) uses only six bits; the four low-order bits are unused.

4.6.1 Registers

- 4.6.1.1 Instruction Field Register (IF), 3 Bits These three bits serve as an extension of the PC for determining the 4096-word field from which executable instructions are to be taken. All direct memory references are made to registers in the Instruction Field. With one exception, all JMP and JMS instructions, whether direct or indirect, are to registers within the Instruction Field. The exception is the first JMP or JMS executed after a CIF instruction is given. This causes the field to change.
- 4.6.1.2 Data Field Register (DF), 3 Bits These three bits serve as an extension of the Memory Address register for determining which memory field contains the operands to be accessed by the memory reference instructions AND, TAD, DCA, and ISZ when indirect addressing is used. The Data Field and Instruction Field may be set to the same field.
- 4.6.1.3 Instruction Field Buffer (IB), 3 Bits This serves as an input buffer for the IF. Except for a direct transfer from the console switches, all transfers into the IF must pass through the IB. When a CIF or RMF instruction is executed, information going to the IF is first placed in the IB. At the next occurrence of a JMP or JMS, the contents of the IB are transferred to the Instruction Field register, and programming continues in the new field, starting in the target register of the jump.

4.6.1.4 Save Field Register (SF), 6 Bits — Also called the Interrupt Buffer. When a program interrupt occurs, the contents of the IF and DF are stored in the Save Field register, as shown in Figure 4-10. After the PI has been serviced, an RMF instruction will cause the contents of the SF to be restored to the DF and IB. The SF can be examined by using the RIB instruction.

4.6.1.5 Break Field Register (BF), 3 Bits — When an external device requires extended memory for the transfer of data using the Data Break Facility, the contents of the BF specify the memory field to be accessed.

4.6.2 Instructions

All Extended Memory IOT instructions require 4.3 microseconds for execution.

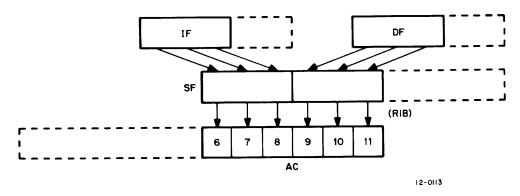


Figure 4-10. Data Path to SF and AC

CDF Change Data Field

Octal code:

 $62N1, 0 \le N \le 7$

Operation:

The quantity N is transferred to the Data Field register. All subsequent indirect memory

references by AND, TAD, ISZ, and DCA are to the new field.

CIF Change Instruction Field

Octal code:

61N2, $0 \le N \le 7$

Operation:

The quantity N is transferred to the Instruction Field Buffer. At the occurrence of the next JMP or JMS instruction, whether direct or indirect, the contents of the IB are transferred to the IF. The effective address of the jump is placed in the PC, and the program continues from

that address in the new Instruction Field.

In both CIF and CDF, the number N occupies bits 6-8 of the instruction code.

RDF Read Data Field

Octal code:

6214

Operation:

The contents of the Data Field register are ORed into AC_{6-8} . The other bits of the AC are unaffected.

RIF Read Instruction Field

Octal code:

6224

Operation:

The contents of the Instruction Field register are ORed into AC₆₋₈. The other bits of the AC

are unaffected.

RIB Read Interrupt Buffer

Octal code:

Operation:

The contents of the Save Field register (Interrupt Buffer) are transferred to the AC, as follows:

Bits 0-2 (IF) are ORed into AC₆₋₈; bits 3-5 (DF) are ORed into AC₉₋₁₁.

RMFRestore Memory Field

Octal code:

6244

Operation:

The contents of the Save Field register are placed in the Instruction Field Buffer and DF as follows: Bits 0-2 (original Instruction Field) are transferred to the IB; bits 3-5 (original Data Field) are restored to the Data Field register. This instruction is used to restore the Memory Field registers after a program interrupt has been serviced. Normally, the next instruction after the RMF would be JMP I 0; the address of the interrupted program, stored in register 0000 of field 0, is placed in the PC, and the contents of the IB are placed in the Instruction Field register; the program thus returns to the main program with the Memory Fields restored to

their original values.

4.6.3 **Programming**

All instructions, effective addresses, and directly-addressed operands are taken from the field specified by the contents of the Instruction Field Register. All indirectly-addressed operands are taken from (or are stored in) the field specified by the contents of the Data Field Register. The following chart shows the results of the four possible addressing combinations, when the IF and DF designate different memory fields.

Instruction Indirect	on Bits Page	Fie IF	lds DF	Effective Address
0	0	m	n	The operand is in Page 0 of Field m at the address specified by instruction bits 5-11.
0	1	m	n	The operand is in the current page of Field m.
1	0	m	n	The effective address of the operand is in Page 0 of Field m at the location specified by instruction bits 5-11. The operand is in Field n, in the location specified by the contents of the effective address.
1	1	m	n	The effective address is taken from the current page of Field m, at the location specified by instruction bits 5-11. The operand is in Field n, in the location specified by the contents of the effective address.

4.6.3.1 Autoindexing — When any memory field is used as an Instruction Field, registers 10-17 of that field have autoindexing properties, just as the corresponding locations in field 0 do. This is necessary so that a program can operate correctly regardless of the actual memory field assigned by the IF. When an autoindex register is indirectly addressed, the resulting effective address is used to obtain the operand from the Data Field specified by the DF.

Example:

C(IF) = 2. C(DF) = 4. C(AC) = 0. In field 4: C(4326) = 1107

In field 2: C(0012) = 4325

The instruction TAD I 12 is executed in field 2.

 $C(0012) + 1 \rightarrow C(0012)$. Resulting effective address is 4326. C(4326) in field 4 are added to the AC. C(AC) = 1107 when the instruction is completed.

4.6.3.2 Calling A Subroutine Across Fields — The problem is to let the subroutine know which field contains the calling program, so that it can return to the proper point when it's finished. This is most easily done by setting the DF to the same field as the IF, then setting the IF to the field containing the subroutine, and executing a JMS to read the subroutine. The subroutine uses the DF to indirectly obtain data from the calling field, then transfers the C(DF) back to the IF Buffer to return to the calling program. The following example shows a general procedure for doing this.

/CALLING PROGRAM IN FIELD 2, SUBROUTINE IN FIELD 4
/CURRENT DATA FIELD IS 1
/CALLING SEQUENCE SAVES CURRENT DF, PUTS IF IN DF, CALLS
/SUBROUTINE. ON RETURN, ORIGINAL DF IS RESTORED

. . . . CLA TAD KCDF /CDF INSTRUCTION TO AC **RDF** /C(DF) TO AC 6-8 FORMS CDF 10 (6211) DCA RESDF /STORE IN SEQUENCE TO RESTORE DF TAD KCDF /CDF TO AC RIF /C(IF) TO AC 6-8 FORMS CDF 20 (6221) DCA SETDF /STORE IN SEQUENCE TO SET DF SETDF. 0000 SETS DF TO CURRENT IF CIF 40 /SET IF BUFFER TO SUBROUTINE FIELD 4 JMS I SUBADR JUMP TO SUBROUTINE IN FIELD 4 RESDF, 0000 /RESTORES ORIGINAL DF (FIELD 1) SUBADR, **SUBRTN** /ABSOLUTE ADDRESS OF SUBROUTINE

KCDF, CDF /CONSTANT

SUBRTN, 0 /C(PC) FROM CALLING PROGRAM
TAD KCIF /CIF INSTRUCTION TO AC

/IN FIELD 4, THE SUBROUTINE HAS THE FOLLOWING GENERAL FORM

RDF /C(DF) TO AC 6-8 FORMS CIF 20 (6222)

DCA RESIF /STORE IN SEQUENCE TO RESTORE CALLING FIELD

....

/SETS IF BUFFER TO RESTORE CALLING FIELD

RESIF,

JMP I SUBRTN

JUMP BACK TO CALLING PROGRAM

KCIF,

/CONSTANT

The original contents of the IF, placed in the DF by the calling program, are used to form a CIF instruction which is placed in the subroutine program sequence just before the exit, to restore the original calling field.

4.6.3.3 Program Interrupt - If, when the PI facility is enabled, a PI request occurs, the contents of the IF and DF are saved in the Interrupt Buffer. The contents of the PC are stored in register 0000 of Field 0, and the next instruction is taken from register 0001 of Field 0. Regardless of the states of the Memory Field register, a PI always transfers control to Memory Field 0. When the interrupt has been serviced, the RMF instruction is used to restore the Memory Field registers to their original states. The last three instructions of a general interrupt service routine should be as follows:

RMF

ION

JMP I 0

/RESTORES DF, PUTS ORIGINAL IF IN IF BUFFER

/ENABLE INTERRUPT

/SETS IF FROM IF BUFFER, AND RETURNS TO

/MAIN PROGRAM.

CHAPTER 5 INPUT/OUTPUT BUS DESCRIPTION

Because the processing power of a computer depends largely upon the range and number of peripheral devices that can be connected to it, the PDP-12 has been designed to interface readily with a broad variety of external equipment. This chapter defines the interface characteristics of the computer thus allowing the user to design and implement any electrical interfaces required to connect I/O devices to the PDP-12.

The simple I/O technique of the PDP-12, the availability of DEC's FLIP CHIP logic circuit modules, and DEC's policy of giving assistance wherever possible allow inexpensive, straightforward device interfaces to be realized. hould questions arise relative to the computer interface characteristics, the design of interfaces using DEC modules, or installation planning, customers are invited to telephone any of the sales offices or the main plant in Maynard, Massachusetts. Digital Equipment Corporation makes no representation that the interconnection of its circuit modules in the manner described herein will not infringe on existing or future patent rights. Nor do the descriptions contained herein imply the granting of licenses to use, manufacture, or sell equipment constructed in accordance herewith.

The PDP-12 contains a central processor and core memory composed of Digital's M Series TTL circuit modules. These circuits have an operating temperature range exceeding the limits of 50° F to 110° F, so air-conditioning is not required. Standard 115V, 50/60-Hz power operates an internal solid-state power supply that produces all required voltages and currents. High-capacity, high-speed I/O capabilities of the PDP-12 allow it to operate a variety of peripheral devices in addition to the standard Teletype keyboard/printer, tape reader, and tape punch. DEC options, consisting of an interface and normal data processing equipment, are available for connecting into the computer system. These options include a random access disk file, card equipment, line printers, magnetic tape transports, magnetic drums, analog-to-digital converters. CRT displays, and digital plotters. The PDP-12 system can also accept other types of instruments or hardware devices that have appropriate interfaces. Up to 61 devices requiring three programmed command pulses, or up to 183 devices requiring one programmed command pulse can be connected to the computer. The interface of any device to the computer does not require any modification to the central processor, and thus can be achieved in the field.

Control of some kind is needed to determine when an information exchange is to take place between the PDP-12 and peripheral equipment, and to indicate the location(s) in the computer memory which will accept or yield the data. Either the computer program or the I/O device can exercise this control. Transfers controlled by the computer, hence under control of its stored program, are called programmed data transfers.

Transfers made under control of the external I/O devices through the data break facility are called data break ansfers.

Programmed Data Transfers

The majority of I/O transfers occur under program control. To transfer and store information under program control takes about six times as much computer time as under the data break facility. In terms of real time, the duration of a programmed transfer is rather small, due to the high speed of the computer, and is well beyond that required for laboratory or process control instrumentation.

To realize full benefit of the built-in control features of the PDP-12, programmed I/O transfers should be used in most cases. Controls for devices using programmed data transfers are usually simpler and less expensive than controls for devices using data break transfers. Using programmed data transfer facilities, simultaneous operation of devices is limited only by the relative speed of the computer with respect to the device speeds, and the search time required to determine the device requiring service. Analog-to-digital converters, digital-to-analog converters, digital plotters, line printers, message switching equipment, and relay control systems typify equipment using programmed data transfers.

Data Break Transfers

Devices which operate at very high rates of speed or which require very rapid response from the computer use the data break facilities. Use of these facilities permits an external I/O device to insert or extract words from the computer core memory, almost arbitrarily bypassing all program control logic. Because the computer program has no cognizance of such transfers, programmed checks of input data are made prior to use of information received in this manner. The data break is particularly well suited for devices that transfer large amounts of data in block form; e.g., random access disk file, high-speed magnetic tape systems, high-speed drum memories, or CRT display systems containing memory elements.

Program Interrupt

It is sometimes very useful for a program to be able to initiate operation of an I/O device and then continue with execution of programming which is not immediately related to the input-output operation, rather than wait for the device to become ready to transfer data. In this mode of operation, the device itself, through use of the PDP-12 Program Interrupt facility, initiates execution of the programming to transfer data to or from the computer. When the device requires service (i.e., when the device is ready to transfer data), it transmits an interrupt request signal to the computer. This signal causes the execution of the program currently underway to be interrupted, and program control to be transferred to a specific memory location. The contents of the program counter are stored in this location, and subroutine for servicing the I/O device beginning in the next core memory location is executed. After completion of the data transfer, the interrupted program is resumed by returning to the location specified by the contents of the program counter, which were saved when the interrupt occurred. The program interrupt hardware is designed so that interrupt requests from devices may be ignored if the program so desires.

Logic Symbols

The PDP-12 uses TTL logic internally. In order to discuss some of the internal logic pertaining to interfacing, it is necessary to understand the TTL symbology used in the PDP-12. The logic symbols are shown in Figure 5-1.

Signal Names

All signals not originating at a flip-flop output are true when the line is at the level indicated by the suffix H (high) or L (low). Thus, a line labeled IOP 1 H is high when the pulse is being generated, and at all other times is ground. Similarly, AC CLEAR L is at ground for assertion, and positive otherwise.

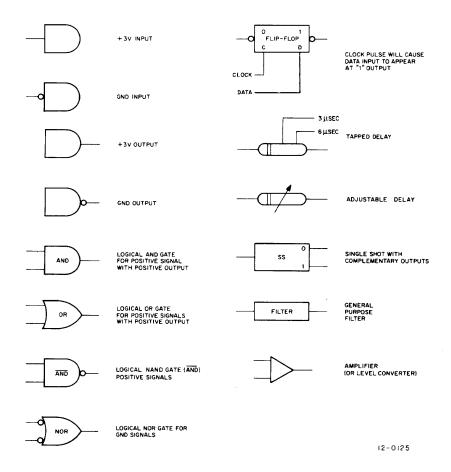


Figure 5-1. Logic Symbols

Signals originating at flip-flops are defined in terms of the flip-flop state. The following table illustrates the convention.

Signal Name	State of MB Flip-Flop	Signal Voltage
MB 03 (0) H	0	+3V
MB 03 (0) L	0	0V
MB 03 (1) L	1	0V
MB 03 (1) H	1	+3V

NOTE

The line MB 03(0)H is the same line as MB 03(1)L, and MB 03(1)H is the same line as MB 03(0)L.

5.1 PROGRAMMED DATA TRANSFERS AND I/O CONTROL

The majority of I/O transfers take place under control of the PDP-12 program, taking advantage of control elements built into the computer. Although programmed transfers take more computer and actual time than data break transfers, the timing discrepancy is insignificant, considering the high speed of the computer with respect to most peripheral devices. The maximum data transfer rate for programmed operations of 12-bit words is 148 kHz when status checking (end, transfer check, etc.) is not done. This speed is well beyond the normal rate required for typical laboratory or process control instrumentation.

The PDP-12 is a parallel-transfer machine that distributes and collects data in bytes of up to twelve bits. All programmed data transfers take place through the accumulator, the 12-bit arithmetic register of the computer. The computer program controls the loading of information into the accumulator (AC) for an output transfer, and for storing information in core memory from the AC for an input transfer. Output information in the AC is power amplified, and supplied to the interface connectors for bussed connection to many peripheral devices. Then the program-selected device can sample these signal lines to strobe AC information into a control or information register. Input data arrives at the AC as pulses received at the interface connectors from bussed outputs of many devices. Gating circuits of the program-selected device produce these pulses. Command pulses generated by the device are connected to the input/output skip facility (IOS) to sample the condition of I/O device flags.

The IOS allows branching of the program based upon the condition or availability of peripheral equipment, effectively making programmed decisions to continue the current program or jump to another part of the program, such as a subroutine to service an I/O device.

The bussed system of input/output data transfers imposes the following requirements on peripheral equipment:

a. Each device must be able to sample the select code, generated by the computer during an IOT instruction*, and, when selected, must be able to produce sequential IOT command pulses in accordance with the computer-generated IOP pulses. Circuits which perform these functions in the peripheral device are called Device Selectors (DS). Figure 5-2 shows the decoding of the IOT instruction.

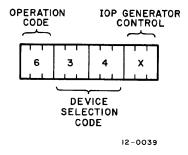


Figure 5-2. IOT Instruction Decoding

b. Each device receiving output data from the computer must contain gating circuits at the input of a receiving register capable of strobing the AC signal information into the register when triggered by a command pulse from the DS. Gating is also recommended at the input to the peripheral device in order to minimize loading on the BAC signal lines.

^{*}Appendix C provides a listing of IOT instructions.

- c. Each device sending input data to the computer must contain gating circuits at the output of the transmitting register capable of sampling the information in the computer output register and supplying a pulse to the computer input bus when triggered by a command pulse from the DS.
- d. Each device should contain a Busy/Done flag (flip-flop) and gating circuits that can pulse the computer I/O skip bus (IOS) upon command from the DS when the flag is set in the binary 1 state, to indicate that the device is ready to transfer another byte of information.

Figure 5-3 shows the information flow within the computer which effects a programmed data transfer with I/O equipment. All instructions stored in core memory as a program sequence are read into the memory buffer register (MB) and the instruction register (IR) for execution. The transfer of the operation code in the three most significant bits (bits 0, 1, and 2) of the instruction into the instruction register (IR) takes place and is decoded to produce appropriate control signals. The computer, upon recognition of the operation code as an IOT instruction, enters a 4.25-microsecond expanded computer cycle and enables the IOP generator to produce time-sequenced IOP pulses as determined by the three least significant bits of the instruction (bits 9, 10, and 11 in the MB). These IOP pulses and the buffered output of the select code from bits 3-8 of the instruction word in the MB are bussed to device selectors in all peripheral equipment.

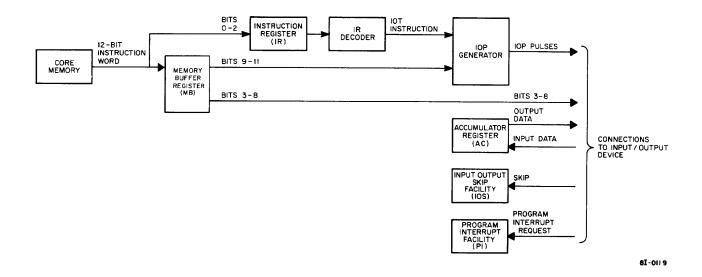


Figure 5-3. Programmed Data Transfer Interface Block Diagram

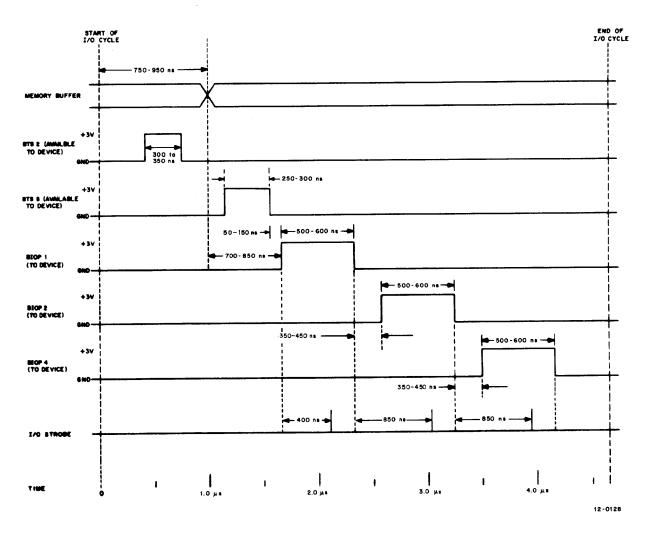


Figure 5-4. Programmed Data Transfer Timing

Figure 5-4 indicates the timing of programmed data transfers.

Devices which require immediate service from the computer program, or which require too much computer time to discontinue the main program until transfer needs are met, can use the program interrupt (PI) facility. In this mode of operation, the computer can initiate operation of I/O equipment and continue the main program until the device requests servicing. A signal input to the PI requesting a program interrupt causes storing of the conditions of the main program and initiates a subroutine to service the device. At the conclusion of this subroutine, the main program is reinstated until another interrupt request occurs.

5.1.1 Timing and IOP Generator

When the IR decoder detects an operation code of 6000_8 , it identifies an IOT instruction and the computer generates a slow cycle. The Slow Cycle signal is ANDed with TP4 to generate I/O Start and sets the I/O PAUSE flip-flop. The logic of the IOP generator consists of a re-entrant delay chain which generates three time states. These time states are gated with MB bits 11, 10, and 9 to generate IOP 1, IOP 2, and IOP 4, respectively. Note that an IOP is generated only if the corresponding MB bit is set although the I/O timing remains constant. At the end of each IOP, the state of the I/O interface is sampled by an I/O strobe pulse.

Following the end of IOP 4 time, the PAUSE flip-flop is reset and the normal timing chain is restarted.

Unlike PDP-8/I, the PDP-12 does not make a timing distinction between internal I/O functions and normal I/O, thus all I/O instructions cause the slow cycle.

Instruction Bit	IOP Pulse	IOT Pulse	Event Time	Used Primarily For, But Not Restricted To
11	IOP 1	IOT 1	1	Sampling Flags, Skipping.
10 '	IOP 2	IOT 2	2	Clearing Flags, Clearing AC.
9	IOP 4	IOT 4	3	Reading Buffers, Loading Buffers and Clearing Buffers.

5.1.2 Device Selector (DS)

Bits 3 through 8 of an IOT instruction serve as a device or subdevice select code. Bus drivers in the processor buffer the 1 and 0 output signals of MB₃₋₈ and distribute them to the interface connectors for bussed connection to all device selectors. Each DS is assigned a select code and is enabled only when the assigned code is present in the MB. When enabled, a DS regenerates IOP pulses as IOT command pulses and transmits these pulses to skip, input, or output gates within the device and/or to the processor to clear the AC.

Each group of three command pulses requires a separate DS channel, and each DS channel requires a different select code (or I/O device address). Therefore, one I/O device can use several DS channels. Note that the processor produces the pulses identified as IOP 1, IOP 2, and IOP 4 and supplies them to all device selectors. The device selector produces pulses IOT 1, IOT 2, and IOT 4, which initiate a transfer or effect some control. Figure 5-5 shows generation of command pulses by several DS channels.

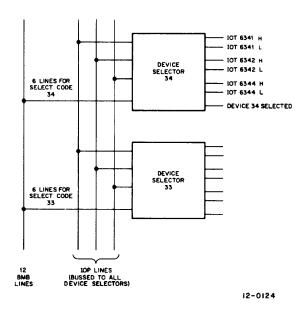


Figure 5-5. Generation of IOT Command Pulses by Device Selectors

The logical representation for a typical channel of the DS, using channel 34, is shown in Figure 5-6. An 8-input AND gate is wired to receive the appropriate signal outputs from the MB₃₋₈ for select code 34, which activates the channel. In the DS module, 6 input pins are connected to the complementary outputs of MB₃₋₈, and 2 are open to receive subdevice or control condition signals as needed. Either the 1 or the 0 signal from each MB bit is connected to the AND gate when establishing the select code. The positive output of the AND gate indicates when the IOT instruction selection selects the device, and can, therefore, enable circuit operations with the device. This output also enables three power NAND gates, each of which produces a ground output pulse if the corresponding IOT pulse occurs. The ground output from each gate is an IOT command pulse identified by the select code and the number of the initiating IOP pulse. Three inverters receive the negative IOT pulses to produce complementary IOT output pulses.

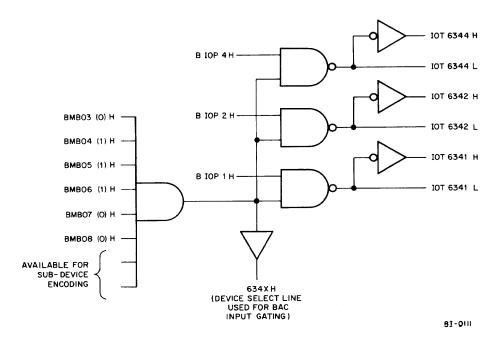


Figure 5-6. Typical Device Selector (Device 34)

An amplifier module can be connected in each channel of the DS to provide greater output drive.

5.1.3 Input/Output Skip (IOS)

Generation of an IOS pulse can be used to test the condition or status of a device flag, and to continue to or skip the next sequential instruction based upon the results of this test. This operation is performed by a 2-input AND gate in the device connected as shown in Figure 5-7. One input of the skip gate receives the status level (flag output signal), the second input receives an IOT pulse, and the output drives the computer skip (designated SKIP BUS L) to ground when the skip conditions are fulfilled. The state of the skip bus is sampled at the end of each IOT. If the bus has been driven to ground, the contents of the program counter are incremented by 1 to advance the program count without executing the instruction at the current program count. In this manner, an IOT instruction can check the status of an I/O device flag and skip the next instruction if the device requires servicing. Programmed testing in this manner allows the routine to jump out of sequence to a subroutine that services the device tested.

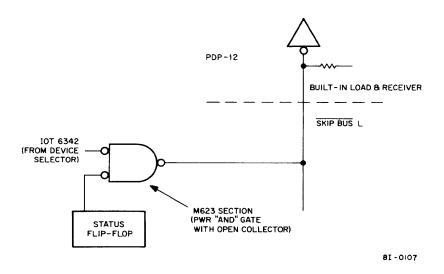


Figure 5-7. Use of IOS to Test the Status of an External Device

Assuming that a device is already operating, a possible program sequence to test its availability is:

100,	6342	/SKIP IF DEVICE 34 IS READY
101,	5100	/JUMP1
102.	5XXX	ENTER SERVICE ROUTINE FOR DEVICE 34

When the program reaches address 100, it executes an instruction skip with 6342. The skip occurs only if device 34 is ready when the IOT 6342 command is given. If device 34 is not ready, the flag signal disqualifies the skip gate, and the skip pulse does not occur. Therefore, the program continues to the next instruction, which is a jump back to the skip instruction. In this example, the program stays in this waiting loop until the device is ready to transfer data, at which time the skip gate in the device is enabled and the skip pulse is sent to the computer IOS facility. When the skip occurs, the instruction in location 102 transfers program control to a subroutine to service device 34. This subroutine can load the AC with data and transfer it to device 34, or can load the AC from a register in device 34 and store it in some known core memory location.

5.1.4 Accumulator

The binary 1 output signal of each flip-flop of the AC, buffered by a bus driver, is available at the interface connectors. These computer data output lines are bus-connected to all peripheral equipment receiving programmed data output information from the PDP-12. The I/O bus input on each flip-flop of the AC is connected to the interface connectors for bussing to all peripheral equipment supplying programmed data input to the PDP-12. An IOP that drives the input bus terminal to ground sets the corresponding AC flip-flop. Output and input connections to the accumulator appear in Figure 5-8.

The status of the link bit is not available to enter into transfers with peripheral equipment (unless it is rotated into the AC). A bus driver continuously buffers the output signal from each AC flip-flop. These buffered accumulator (BAC) signals are available at the interface connectors.

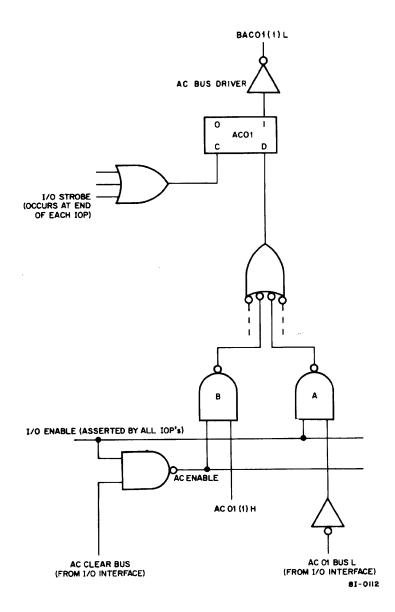


Figure 5-8. Accumulator Input or Output

5.1.5 Input Data Transfers

When a device is ready to transfer data into the PDP-12 accumulator, it sets a flag. The program senses the ready status of the flag and issues an IOT instruction to read the contents of the external device buffer register into the AC. If the AC CLEAR BUS L is not asserted, the resultant word in the AC is the inclusive OR of the previous word in the AC and the word transferred from the device buffer register. The AC CLEAR BUS L may also be used as an I/O AC clear by activating only this line from a separate IOT.

The illustration in Figure 5-9 shows that the accumulator has an input bus for each bit flip-flop. Setting a 1 into a particular bit of the accumulator necessitates grounding of the interface input bus by the standard interface gate. In the illustration, the 2-input AND gates set various bits of the accumulator. In this case an IOT pulse is AND combined with the flip-flop state of the external device to transfer into the accumulator. (The program need not include a clear AC command prior to loading in this manner.)

Following the transfer (possibly in the same instruction) the program can issue a command pulse to initiate further operation of the device and/or clear the device flag.

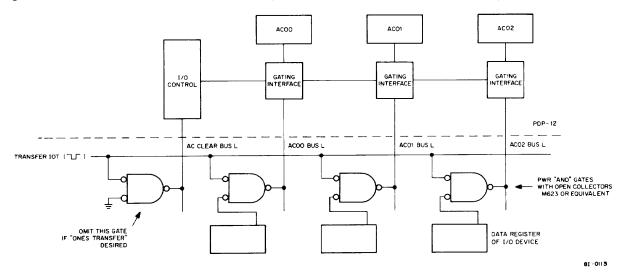


Figure 5-9. Loading Data into the Accumulator from an External Device

5.1.6 Output Data Transfers

The AC is loaded with a word (e.g., by a CLA TAD instruction sequence); then the IOT instruction is issued to transfer the word into the control or data register of the device by an IOT pulse (e.g., IOP 2), and operation of the device is initiated by another IOT pulse (e.g., IOP 4). The data word transferred in this manner can be a character to be operated upon, or can be a control word sampled by a status register to establish a control mode. The BAC lines should be gated by the select code at each device to prevent excessive loading. A special module, the M101, is provided for this purpose.

Since the BAC interface bus lines continually present the status of the AC flip-flops, the receiving device can strobe them to sense the value in the accumulator. In Figure 5-10, a strobe pulse samples six bits of the accumulator to transfer to an external 6-bit data register. Since this is a jam transfer, it is not necessary to clear the external data register. The gates driving the external data register are part of the external device and are not supplied by the computer. The data register can contain any number of flip-flops up to a maximum of twelve. If more than twelve flip-flops are involved, two or more transfers must take place. Obviously the strobe pulse shown in Figure 5-10 must occur when the data to be placed in the external data register is held in the accumulator. This pulse, therefore, must be under computer control to effect synchronization with the operation or program of the computer.

5.1.7. Program Interrupt (PI)

When a large amount of computing is required, the program should initiate operation of an I/O device, then continue the main program, rather than wait for the device to become ready to transfer data. The program interrupt facility, when enabled by the program, relieves the main program of the need for repeated flag checks by allowing the ready status of I/O device flags to automatically cause a program interrupt. When a program interrupt occurs, program control transfers to a subroutine that determines which device requested the interrupt, and initiates an appropriate service routine.

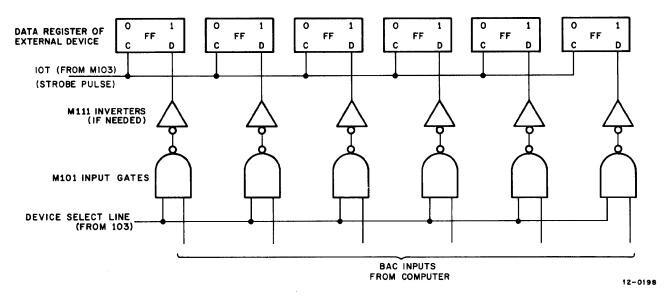


Figure 5-10. Loading a Six-Bit Word into an External Device from the Accumulator

In the example shown in Figure 5-11, a flag signal from a device status flip-flop operates a standard gate with no internal load. When the status flip-flop indicates the need for device service, the Program Interrupt Request bus is driven to ground and requests a program interrupt.

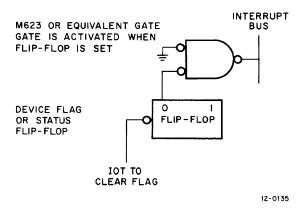


Figure 5-11. Program Interrupt Request Signal Origin

If only one device is connected to the PI facility, program control can be transferred directly to a routine that services the device when an interrupt occurs. This operation occurs as follows (example in 8 mode):

Tag	Address	Instruction	Remarks
	1000		/MAIN PROGRAM
	1001		/MAIN PROGRAM CONTINUES
	1002		/INTERRUPT REQUEST OCCURS
			/INTERRUPT OCCURS
	0000		/PROGRAM COUNT (PC = 1003) IS
			/STORED IN 0000
	0001	JMP SR	/ENTER SERVICE ROUTINE

SR,	2000		SERVICE SUBROUTINE FOR
			/INTERRUPTING DEVICE AND
			/SEQUENCE TO RESTORE AC, AND
	3001	•	/RESTORE LINK IF REQUIRED
	3002	RMF	/RESTORE MEMORY FIELDS
	3003	ION	/TURN ON INTERRUPT
	3004	JMP I 0000	/RETURN TO MAIN PROGRAM
	1003	•	/MAIN PROGRAM CONTINUES
	1004	•	

In most PDP-12 systems, numerous devices are connected to the PI facility, so the routine beginning in core memory address 0001 must determine which device requested an interrupt. The interrupt routine determines the device requiring service by checking the flags of all equipment connected to the PI and transfers program control to a service routine for the first device encountered that has its flag in the state required to request a program interrupt. In other words, when program interrupt requests can originate in numerous devices, each device flag connected to the PI must also be connected to the IOS.

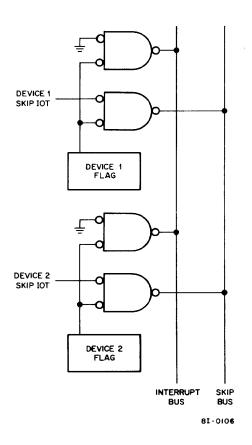


Figure 5-12. Multiple Inputs to IOS and PI Facilities

5.1.7.1 Multiple Use of IOS and PI — In common practice, more than one device is connected to the PI facility. In the basic PDP-12, the teletype flags are already connected. Therefore, since the computer receives a request that is the inclusive OR of requests from all devices connected to the PI, the IOS must identify the device making the request. When a program interrupt occurs, a routine is entered from address 0001 in 8 mode (0041 in Linc mode) to sequentially check the status of each flag connected to the PI and to transfer program control to an appropriate service routine for the device whose flag is requesting a program interrupt. Figure 5-12 shows IOS and PI connections for two typical devices.

The following program example illustrates how the program interrupt routine determines the device requesting service (example in 8 mode):

Tag	Address	Instruction	Remarks
	1000		/MAIN PROGRAM
	1001		/MAIN PROGRAM CONTINUES
	1002		/INTERRUPT REQUEST OCCURS
		INTERRUPT OCCURS	
	0000		/STORE PC (PC = 1003)
	0001	JMP FLG CK	/ENTER ROUTINE TO DETERMINE
			/WHICH DEVICE CAUSED INTERRUPT
FLG CK,		IOT 6341	/SKIP IF DEVICE 34 IS REQUESTING
•		SKP	/NO - TEST NEXT DEVICE
		JMP SR34	/ENTER SERVICE ROUTINE 34
		IOT 6441	/SKIP IF DEVICE 44 IS REQUESTING
		SKP	/NO - TEST NEXT DEVICE
		JMP SR44	/ENTER SERVICE ROUTINE 44
		IOT 6541	/SKIP IF DEVICE 54 IS REQUESTING
		SKP	/NO - TEST NEXT DEVICE
		JMP SR54	/ENTER SERVICE ROUTINE 54
		•	

Assume that the device that caused the interrupt is an input device (e.g., tape reader). The following example of a device service routine might apply:

Tag	Instruction	Remarks
SR,	DCA TEMP IOT XX DCA I 10 ISZ COUNT SKP JMP END	/SAVE AC /TRANSFER DATA FROM DEVICE BUFFER TO AC /STORE IN MEMORY LIST /CHECK FOR END /NOT END /END. JUMP TO ROUTINE TO HANDLE /END OF LIST CONDITION
	TAD TEMP RMF ION JMP I 0	/RESTORE LINK AND OTHER STATUS IF REQUIRED /RELOAD AC /RESTORE MEMORY FIELDS /TURN ON INTERRUPT /RETURN TO PROGRAM

If the device that caused the interrupt was essentially an output device (receiving data from computer), the IOT - then - DCA I 10 sequence might be replaced by a TAD I 10 - then - IOT sequence.

5.2 MULTI-LEVEL AUTOMATIC PRIORITY INTERRUPT

The KF12B Multi-Level Automatic Priority Interrupt is designed to reduce the central processor overhead during the servicing of program interrupts. It is prewired in the EP section of the PDP-12 in racks P and R and utilizes approximately 55 M series modules. There are three major services provided automatically by the KF12B.

- a. Automatic determination of device priority and vectoring of interrupt service routines.
- b. Automatic saving and restoring of all major registers and machine status which include the following: PC, AC, IF, DF, MQ, LINK, FLOW, UF, MODE and the current processor level.
- c. Automatic stacking of the saved parameters permitting multiple levels of interrupts.

Storing, or stacking, of parameters is called *Pushing* and restoring the CP to its original status prior to an interrupt is called *Popping*. The CP is in the break state for the duration of each operation. It takes five break cycles for each *Push* and five break cycles for a *Pop*. This does not affect the normal operation of the data break facility in the PDP-12. One data break device can be handled without the addition of a multiplexer. The KF12B has the lowest priority on the bus and break requests from another device are acknowledged during push and restore operations. The KF12B control has its own timing generator and is asynchronous with computer timing. A free running 5 mHz oscillator provides the various clocking pulses. An M155 decoder provides the enable levels to enable data on the bus.

5.2.1 Interrupts

Up to 15 levels of interrupts can be accommodated with each level having a two-word vector address. The interrupts can be accepted from a prewired option or from up to six external devices. A priority is assigned to each interrupt by a jumper module, M905 at location R16. Level 0 has the highest priority. Interrupts of a higher priority can occur after executing the first instruction in the interrupt service routine. When the KF12B is not enabled (API ON (0)), interrupts are processed through the interrupt cycle in the normal manner. The "TRAP" feature has not been modified by the KF12B, but caution should be exercised when using this feature.

5.2.2 Push

When the level of the device requesting an interrupt is greater than the current machine level a Push operation is performed. The Push and Break Req flip-flops are set and the processor enters the Break cycle. The active registers and status levels are stored (pushed) in five consecutive memory locations specified by the contents of the STACK register. (Refer to Table 5-1.) The starting location of the stack is specified by the program (IOT 6776) and is automatically incremented during the push operation. The stack increments and decrements across field boundaries. The CP is always in 8 MODE at the completion of an interrupt-push operation. If the CP is in LINC mode when a Push occurs it is returned to LINC mode at the completion of a Restore command.

Table 5-1. STACK Register

Location	Data Stored	
P	AC ₀₋₁₁	
P+1	PC ₀₋₁₁	
P + 2	MODE $_0$; FLOW $_1$; LINK $_2$; MACHINE LEVEL $_{8-11}$	
P + 3	MQ_{0-11}	
P + 4	UF 1; IF 2-6; DF 7-11	
P = Initial STACK address. NOTE: the subscript indicates the corresponding memory bits.		

5.2.3 Restore—"POP" (REST-IOT 6771)

Every interrupt subroutine should be terminated with a Restore command. This restores the major registers and machine status from the stack and resumes programming at the memory location specified by the program counter.

For every Push operation performed a Pop (restore) must be performed; however, the two operations do not have to occur in any particular sequence (see Figure 5-13). The Restore command should not be issued when the CP is in a non-interruptable state because an Interrupt Inhibit is set due to the LIF or CIF instruction, or SAVE PC is not set due to a DJR instruction.

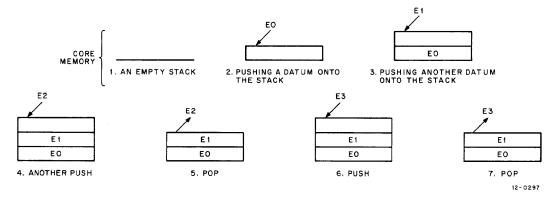


Figure 5-13. Illustration of Push and Pop Operations

5.2.4 Vectoring

Each of the 15 interrupt levels has an associated vector address to specify the appropriate interrupt service routine. The vector address is transferred to the PC during the Push operation, as shown in Figure 5-14. Vector bits 0, 1, and 2 specify the memory field and are set with AC bits 3, 4, and 5 by an IOT. Vector bits 3 through 9 specify the seven most significant bits of the MA (0-6) and are set with AC bits 0-6 by an IOT. The interrupt level specifies memory address bits 7 through 10 with level "0" setting these bits to zero. A vector address is always an even number address; therefore, each interrupt level is allotted two memory locations.

The following are the vector address assignments, which can reside in any memory field. Vector bits 3 through 9 (MA0-6) are set to 1s by the SVEC instruction:

Level	Address	Level	Address
0	7740	8	7760
0	7741	8	7761
1	7742	9	7762
1	7743	9	7763
2	7744	10	7764
2	7745	10	7765
3	7746	11	7766
3	7747	11	7767
4	7750	12	7770
4	7751	12	777 1
5	7752	13	7772
5	7753	13	7773
6	7754	14	7774
6	7755	14	7775
7	7756		
7	7757		

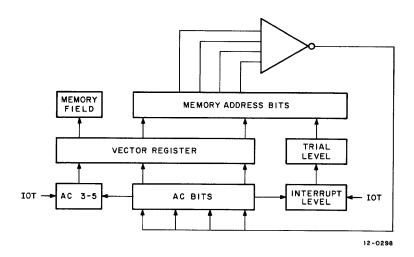


Figure 5-14. Vector Flow Diagram

5.2.5 Maintenance Logic

The maintenance logic included in the KF12B provides the capability of checking the major portion of the option for proper operation. Two IOT instructions simulate the 15 interrupt level inputs to check the priority logic and initiate the Push operation.

Instruction	Function
IOT 6051	AC0-11 to LEVELS 0-11 (1s transfer)
IOT 6052	AC 9, 10, 11 to LEVELS 12, 13, 14 (1s transfer)

The levels remain set for only one computer cycle. This feature allows enough time to initiate a Push function when the selected level has priority and API is enabled.

The KF12B features a new two-word instruction called push jump (PUSHJ, IOT 676X). This instruction permits jumping to subroutines across field boundaries in both Linc and PDP-8 Modes. The instruction causes the stacking of the active registers and machine status and automatically jumps to the memory location specified by the 15-bit address associated with the PUSHJ. The instruction code is (IOT) 676X and is similar to an IOT except that X defines the new memory field and the following location (P+1) specifies the 12-bit memory address of the subroutine.

The PC, which is saved on the stack during the execution of the PUSHJ, points to the location following the two-word instruction as shown in the following example:

Address	Instruction	Octal Code
15432	PUSHJ	6760
15433	1000	1000
15434*	CLA	7200

01000 - Programming is transferred to this memory location.

5.2.6 **Programming**

The following is a typical example of a program to service a Teletype interrupt, which is level 5.

START/CLA	
TAD FLDLEV	
SMLV	/set stack and vector fields
CLA	and machine level
TAD STACK	
SSTK	/set stack
CLA	
TAD VEC	
SVEC	/set vector
APION	/enable KF12
NOP	
JMP1	/wait for interrupt
* 6412/JMS TTYR	/go to teletype reader subroutine
* 6413/REST	/restore to status prior to push

^{*} Field and PC saved on stack. The program is resumed at this location following a Restore.

*VECTOR ADDRESSES

TTYR/XXXX /return address saved here

CLA

KRS /read keyboard buffer

DCA I SAVE /save word

KCC /clear reader flag

JMP I TTYR /return to restore

FLDLEV/0017

STACK/7000

VEC/6400

5.2.7 Programming Restrictions

The REST and PUSHJ commands should not be issued when the processor is in a non-interruptable state due to the following conditions:

- a. "Interrupt Inhibit" being set due to the execution of a CIF or LIF instruction;
- b. The DJR instruction is being executed or Save PC is not set due to the previous execution of a DJR instruction.

If the REST command is issued and the CP is not in an interruptable condition, the Restore operation will not be performed until the condition becomes satisfactory. If the PUSHJ command is issued and the CP is not in an interruptable condition, the second word of the instruction is treated as a new instruction, and when the condition becomes satisfactory, the PUSHJ operation will not be properly executed. The ESF Disable Teletype instruction is not effective when the KF12B is enabled (API ON (1)); the TTY and DP12 interrupts will always be acknowledged. When the KF12B is not enabled (API ON (0)), the ESF instruction functions in the normal manner. Location zero is not saved on the stack; therefore, caution should be exercised when using this location in conjunction with a LINC JMP instruction.

5.2.8 Instruction List

Instruction	Function	Octal	
ION	Enable software interrupt system		6001
IOF	Disable all interrupts		6002
APION	Enable API (KF12B) system Disable software interrupt The next instruction will be executed before an interrupt is processed.		6006
PUSH-J	PUSH JUMP to 15 bit address (XXXXX)	(P+1)	676X XXXX
REST	Restore machine to previous level		6771
SMLV*	Set current machine level to AC 8-11. If AC7=1, set stack field to AC0-2 and vector field to AC3-5.		6772

^{*}The KF12B must be deselected to execute these instructions (i.e., API ON (0)).

Instruction	Function	
RFLD	Read stack field into AC0-2, vector field into AC3-5, current level into AC8-11 (Read in complement form)	6773
RSTK	Read least significant 12 bits of current stack pointer address (Read in complement form)	6774
RVEC	Read vector bits $3-9$ into AC bits $0-6$, Trial levels into AC bits $7-10$ (Read in complement form)	6775
SSTK*	Set the least significant 12 stack bits to AC0-11	6776
SVEC*	Set bits 309 of the vector address (MA0-6) to AC 0-6	6777

Note: When the above instructions are given in LINC mode they should be preceded by an IOB instruction.


5.2.9 DM12

The DM12, which is prewired in the PDP-12, provides the capability of operating up to three data break devices in either three-cycle or single-cycle data break. Both three-cycle and single-cycle devices can be simultaneously controlled by the DM12. The KF12B is a prerequisite for the DM12 because the KF12B and DM12 use the same timing and control signals, which originate in the KF12B. The DM12 uses M series positive logic; all signals are clamped at OV and +3V.

Because both options use the control and timing of the KF12B, the theory of operation is similar. When an external device issues a break request, the corresponding Level flip-flop is set. The three level flip-flops and the API flip-flop are decoded to determine priority. Either PR0, PR1, or PR2 is generated and the appropriate Data Address and control signals are enabled on the bus. The EN BRK flip-flop corresponding to the device that has been decoded is set at TP1, allowing the B BREAK signal to go to the device that has control of the bus. The B BREAK signal is used to control the data on the bus for transfer between memory and the external devices.

Both options use the same IOTs; thus, when testing the DM12 the KF12B must be disabled using jumpers that allow only the DM12 priorities to be enabled.

The DM12 priorities are determined by cable location. Two cables from each device are used for the data address, data bits, and status signals. The cables from the device having the highest priority are inserted in locations P20 and P21 as illustrated in Figure 5-15.

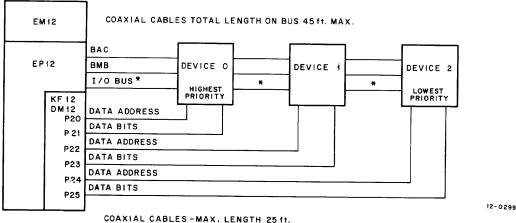

SOUNTE ONDEES WAX, EENGTH 2511.

Figure 5-15. DM12 Cable Diagram

^{*}The KF12B must be deselected to execute these instructions (i.e., API ON (0)).

^{*} If the priority interrupt system is used in the KF12B this cable is connected separately from each device.

(ref. BS-KF12-CAB).

5.3 DATA BREAK TRANSFERS

The Data Break facility allows an I/O device to transfer information directly with the PDP-12 core memory on a cycle-stealing basis. The Data Break is particularly well suited for devices which transfer large amounts of information in block form, and can be expanded to accommodate more than one device by using the DM01 or DM04 multiplexers. The DM01 will multiplex up to seven devices and is a negative bus option. The DM04 (positive bus) will multiplex three devices and up to three DM04s may be added for a total of nine devices.

Peripheral I/O equipment operating at high speeds can transfer information with the computer through the data break facility more efficiently than through programmed means. The combined maximum transfer rate of the data break facility is 6.5 million bits per second. Information flow to effect a Data Break transfer with an I/O device appears in Figure 5-16.

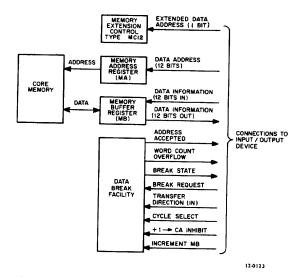


Figure 5-16. Data Break Transfer Interface Block Diagram

In contrast to programmed operations, the Data Break facilities permit an external device to control information transfers. Therefore, Data Break device interfaces require more control logic circuits, causing a higher cost than programmed-transfer interfaces.

Data Breaks are of two basic types: single-cycle and three-cycle. In a single-cycle Data Break, registers in the device (or device interface) specify the core memory address of each transfer and count the number of transfers to determine the end of data blocks. In the three-cycle Data Break, two computer core memory locations perform these functions, simplifying the device interface by omitting two hardware registers.

In general terms, to initiate a Data Break transfer of information, the interface control must do the following:

- a. Specify the affected address in core memory.
- b. Provide the data word by establishing the proper logic levels at the computer interface (assuming an input data transfer), or provide input gates and storage for the word (assuming an output data transfer).
- c. Provide a logical signal to indicate direction of data word transfer.
- d. Provide a logical signal to indicate single-cycle or three-cycle break operation.
- e. Request a Data Break by supplying a proper signal to the computer data break facility.

5.3.1 Single-Cycle Data Breaks

Single-cycle Data Breaks are used for input data transfers to the computer, output data transfers from the computer, and memory increment data breaks. Memory increment is a special Data Break in which the content of a memory address is read, incremented by 1, and rewritten at the same address. It is useful for counting iterations or external events without disturbing the computer program counter (PC) or accumulator (AC) registers.

5.3.2 Input Data Transfers

Figure 5-17 illustrates timing of an input transfer data break. The address to be affected in core is normally provided in the device interface in the form of a 12-bit flip-flop register (data break address register) which has been preset by the interface control by programmed transfer from the computer.

External registers and control flip-flops supplying information and control signals to the Data Break facility and other PDP-12 interface elements are shown in Figure 5-18. The data register (DR in Figure 5-18) holds the 12-bit data word to be written into the computer core memory location specified by the address contained in the address register (AR in Figure 5-17).

Appropriate output terminals of these registers are connected to the computer to supply ground potential to designate binary 1s. Since most devices that transfer data through the Data Break facility are designed to use either single-cycle or three-cycle breaks, but not both, the Cycle Select signal can usually be supplied from a stable source (such as a ground connection or a +3v clamped load resistor), rather than from a bistable device as shown in Figure 5-18.

Other portions of the device interface, not shown in Figure 5-18, establish the data word in the input buffer register, set the address into the address register, set the direction flip-flop to indicate an input data transfer, and control the break request flip-flop. These operations can be performed simultaneously or sequentially, but all transients should occur before the data break request is made.

When the Break Request is recognized, the computer completes the current instruction, generates an Address Accepted pulse (at TP1, the beginning of the break cycle) to acknowledge receipt of the request, then enters the Break state to effect the transfer. The Address Accepted pulse can be used on the device interface to clear the BREAK REQUEST flip-flop, increment the content of the address register, etc. If the Break Request signal is removed before TP2 time of the data break cycle, the computer performs the transfer and returns to programmed operation.

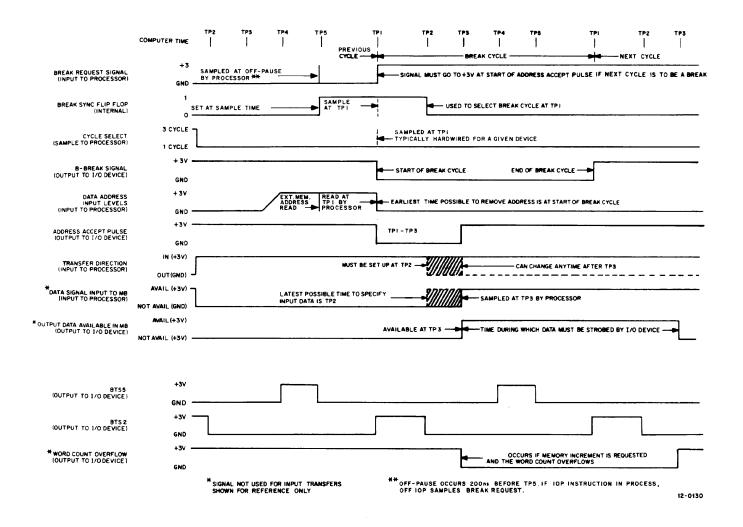


Figure 5-17. Single Cycle Data Break Input Transfer Timing Diagram

5.3.3 Output Data Transfers

Timing of operations occurring in a single-cycle output Data Break is shown in Figure 5-19. Basic logic circuits for the device interface used in this type of transfer are shown in Figure 5-20. Address and control signal generators are similar to those discussed previously for input data transfers, except that the Transfer Direction signal must be at ground potential to specify the output transfer of computer information. An output data register (OB in Figure 5-20) is usually required in the device interface to receive the computer information. The device must supply strobe pulses for all data transfers out of the computer (programmed or data break) since circuit configuration and timing characteristics differ in each device.

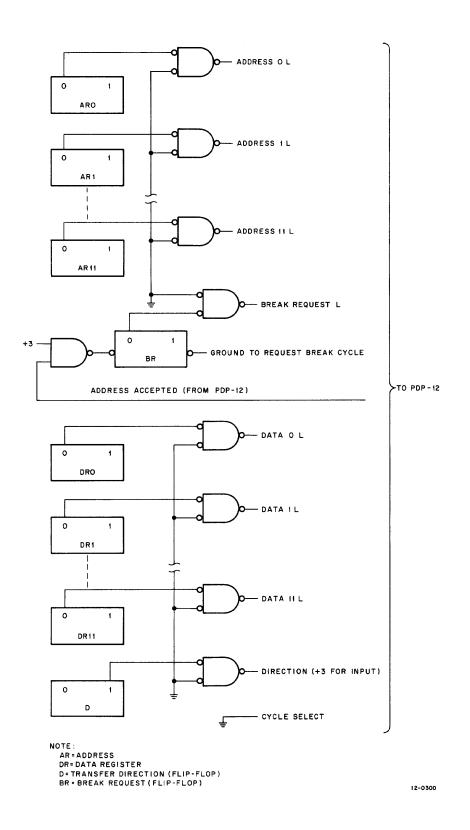


Figure 5-18. Device Interface Logic for Single-Cycle Data Break Input Transfer

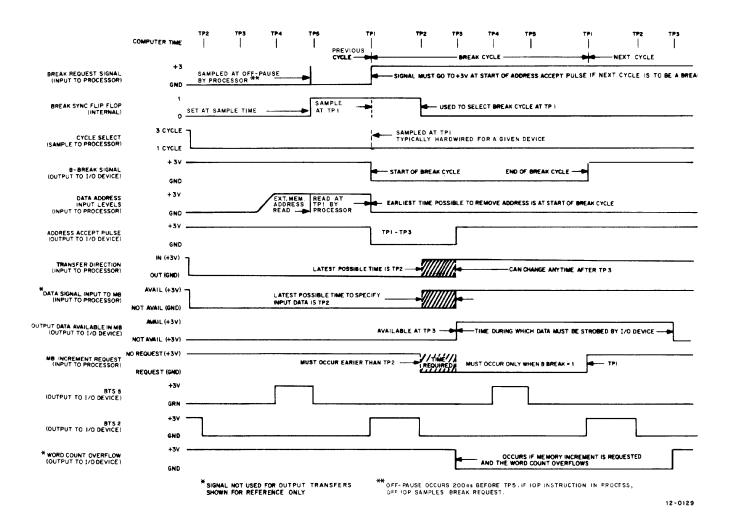


Figure 5-19. Single-Cycle Data Break Output Transfer Timing Diagram

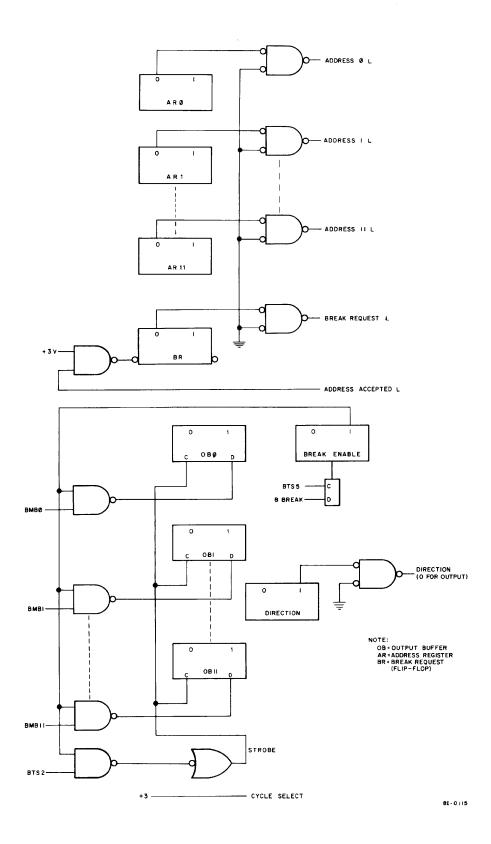


Figure 5-20. Device Interface Logic for Single-Cycle Data Break Output Transfer

When the Break Request is recognized the computer completes the current instruction and generates an Address Accepted pulse as it enters the Data Break cycle. At TP1 time, the address supplied to the PDP-12 is loaded into the MA, and the Break state is entered. Not more than 900 nsec after TP1 (at time TP3), the contents of the device-specified core memory address are read and available in the MB. (This word is automatically rewritten at the same address during the last half of the Break cycle, and is available for programmed operations when the Data Break is finished.) Data Bit signals are available as static levels of ground potential for binary 0s and +3v for binary 1s. The MB is changed at time TP3 of each computer cycle, so the data word is available in the MB for approximately 1.6 microseconds to be strobed by the device interface.

Generation of the strobe pulse by the device interface can be synchronized with computer timing through use of timing pulses BTS2 or BTS5, which are available at the computer interface. In addition to a timing pulse (delayed or used directly from the computer), generation of this strobe pulse should be gated by condition signals that occur only during the Break cycle of an output transfer. Figure 5-20 shows typical logic circuits to effect an output data transfer. In this example, BTS5 and B BREAK set the BREAK ENABLE flip-flop, which remains set for one computer cycle (unless successive cycles are requested). This enabling signal loads the buffered MB lines into the data inputs of a D type flip-flop. At BTS2 time, the data will be clocked into the Output Buffer flip-flops. Note that BTS2 can generate a strobe pulse only during a BREAK ENABLE cycle. Interface input gates are M101; output bus drivers are M623.

By careful design of the input and output gating, one register can serve as both the input and the output buffer register. Most DEC options using the Data Break facility have only one data buffer register with appropriate gating to allow it to serve as an output buffer when the Transfer Direction signal is at ground potential or an input buffer when the Transfer Direction signal is +3v.

5.3.4 Memory Increment

In this type of Data Break the contents of core memory at a device-specified address are read into the MB, are incremented by 1, and are rewritten at the same address within one 1.6-microsecond cycle. This feature is particularly useful in building a histogram of a series of measurements, such as in pulse-height analysis applications. For example, in a computer-controlled experiment that counts the number of times each value of a parameter is measured, a Data Break can be requested for each measurement, and the measured value can be used as the core memory address to be incremented (counted).

Signal interface for a memory increment Data Break is similar to an output transfer Data Break except that the device interface generates an Increment MB signal and does not generate a strobe pulse (no data transfer occurs between the PDP-12 and the I/O device). Timing of memory increment operations appear in Figure 5-21.

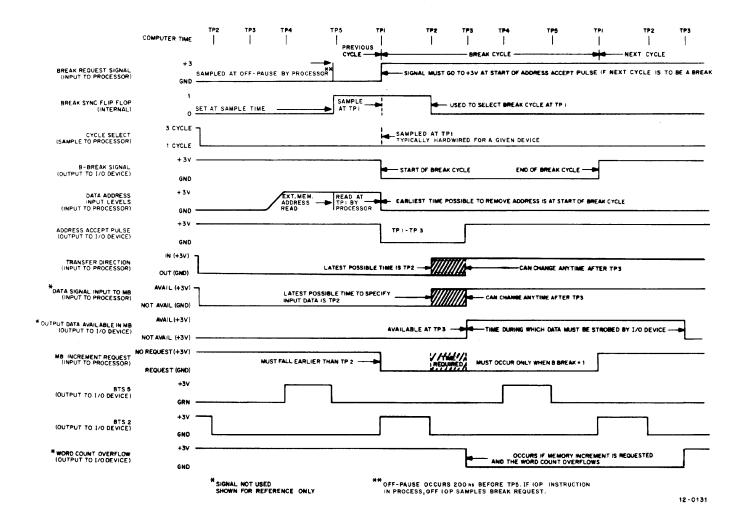


Figure 5-21. Memory Increment Data Break Timing Diagram

An interface for a device using memory increment Data Breaks must supply twelve Data Address signals, a Transfer Direction signal, a Cycle Select signal, and a Break Request signal to the computer Data Break facility as in an output transfer data break. In addition, a ground potential increment MB signal must be provided at least 250 nanoseconds before time TP3 of the Break cycle. The signal can be generated in the device interface by ANDing the B Break Computer Output signal, the output transfer condition of the Transfer Direction signal, and the Condition signal in the device that indicates that an increment operation should take place. When the computer receives this Increment MB signal, it forces the MB control element to generate a Carry Insert signal at time TS3 to increment the contents of the MB.

5.3.5 Three-Cycle Data Breaks

Timing of input or output three-cycle Data Breaks is shown in Figure 5-22. The three-cycle Data Break uses the block transfer control circuits of the computer. The block transfer control provides an economical method of controlling the flow of data at high speeds between PDP-12 core memory and fast peripheral devices, e.g., drum, disc, magnetic tape and line printers, allowing transfer rates in excess of 208 kHz.

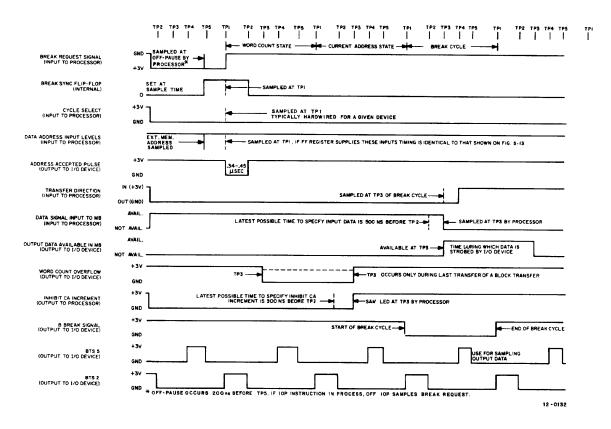


Figure 5-22. Three-Cycle Data Break Timing Diagram

The three-cycle Data Break facility provides separate current address and word count registers in core memory for the connected device, thus eliminating the necessity for flip-flop registers in the device control. When several devices are connected to this facility, each is assigned a different set of core locations for word count and current address, allowing interlaced operations of all devices as long as their combined rate does not exceed 208 kHz. The device specifies the location of these registers in core memory, and thus the software remains the same, regardless of what other equipment is connected to the machine. Since these registers are located in core memory, they may be loaded and unloaded directly without the use of IOT instructions. In a procedure where a device request to transfer data to or from core memory, the three-cycle Data Break facility performs the following sequence of operations:

a. An address is read from the device to indicate the location of the word count register. This address is always the same for a given device; thus it can be wired in and does not require a flip-flop register.

- b. The contents of the specified address are read from memory and 1 is added before rewriting. If the contents of this register become 0 as a result of the addition, a WC Overflow pulse will be transmitted to the device. To transfer a block of N words, this register is loaded with -N during programmed initialization of the device. After the block has been fully transferred this pulse is generated to signify completion of the operation.
- c. The next sequential location is read from memory as the current address register. Although the contents of this register are normally incremented before being rewritten, an increment CA inhibit (+ $1 \rightarrow$ CA Inhibit) signal from the device may inhibit incrementation. To transfer a block of data beginning at location A, this register is program initialized by loading with A-1.
- d. The contents of the previously read current address are transferred to the MA to serve as the address for the data transfer. This transfer may go in either direction in a manner identical to the single-cycle Data Break system. The three-cycle Data Break facility uses many of the gates and transfer paths of the single-cycle Data Break system, but does not preclude the use of standard Data Break devices. Any combination of three-cycle and single-cycle Data Break devices can be used in one system, as long as a multiplexer channel is available for each. Two additional control lines are provided with the three-cycle data break. These are:

Word Count Overflow – A level change from GND to $\pm 3V$, from TP3 of the cycle requesting the word count to TP3 of the next cycle is transmitted to the device when the word count becomes equal to zero.

Increment CA Inhibit — When ground potential, this device-supplied signal inhibits incrementation of the current address word.

In summary, the three-cycle Data Break is entered similarly to the single-cycle Data Break, with the exception of supplying a ground-level Cycle Select signal to allow entry of the WC (Word Count) state to increment the fixed core memory location containing the word count. The device requesting the break supplies this address as in the single-cycle Data Break, except that this address is fixed and can be supplied by wired ground and +3V signals, rather than from a register. Following the WC state, a Current Address (CA) state is entered, in which the core memory location following the WC address is read, incremented by one, restored to memory, and used as the transfer address (by MB \rightarrow MA). Then the normal Break (B) state is entered to effect the transfer.

5.4 INTERFACE DESIGN AND CONSTRUCTION

This section describes the PDP-12 interface techniques, available modules, interface conventions, and interface connections.

5.4.1 PDP-12 Interface Modules

PDP-12 interfacing is constructed of Digital FLIP-CHIP modules. The Digital Logic Handbook describes more than 150 of these modules, their component circuits, and the associated acessories; i.e., power supplies and mounting panels. The user should study this catalog carefully before beginning the design of a special interface.

The interface modules of the PDP-12 are the M111, M906, M516, M660, and M623 modules. Interface signals to the computer use either a combination of the M111 and M906 modules or the M516 module. Interface signals from the computer will originate from a combination of M623 and M906 modules for data signals, and M660 modules for timing signals.

5.4.1.1 M111/M906 Positive Input Circuit (See Figure 5-23) — The M111 Inverter module is used in conjunction with the M906 Cable Terminator module, which clamps the input to prevent excursions beyond +3 volts and ground. The M906 also provides the pullup resistors to +5 volts.

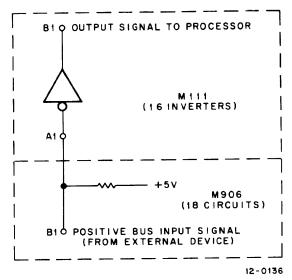


Figure 5-23. Typical M111/M906 Positive Input Circuit

5.4.1.2 M516 Positive Bus Receiver Input Circuit (See Figure 5-24) — Six four-input NAND gates with overshoot and undershoot clamp on one input of each gate. Pullup resistors connected to +5V are also provided.

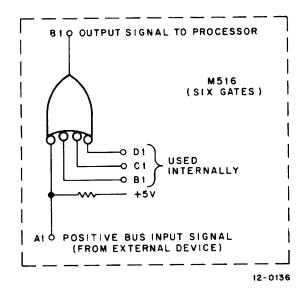


Figure 5-24. Typical M516 Positive Bus Receiver Input Circuit

5.4.1.3 M623/M906 Positive Output Circuit (See Figure 5-25) — The M623 Bus Driver module contains twelve circuits with negative NOR gates. Used in conjunction with the M906 Cable Terminator module, the output is clamped to prevent excursions beyond +3 volts and ground. Output can drive +5 milliamperes at the high level and sink 20 milliamperes at the low level.

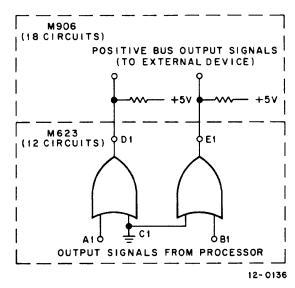


Figure 5-25. Typical M623/M906 Positive Output Circuit

5.4.1.4 M660 Bus Driver Output Circuit (See Figure 5-26) — Three circuits which provide low impedance 100-ohm terminated cable driving capability using M Series levels or pulses of duration greater than 100 nanoseconds. The output can drive 5 ma at the high level and sink 20 ma at the low level, in addition to termination current required by the G717 termination module. The M660 module is used in the PDP-12 for the following output signals:

IOP 1, IOP 2, IOP 4, TS 2, TS 5

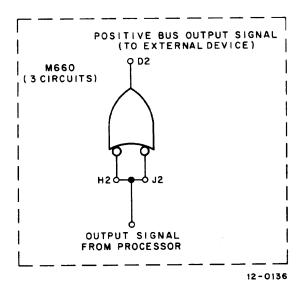


Figure 5-26. M660 Terminated Bus Driver Output Circuit

5.4.1.5 Module Selection for Interface Circuits of Peripheral Equipment — Two FLIP-CHIP modules are of particular interest in the design of equipment to interface with the PDP-12. Complete details on these and other FLIP CHIP modules can be found in the Digital Logic Handbook.

5.4.1.6 M103 Device Selector (See Figure 5-27) - The M103 selects an input/output device according to the code in the instruction word (being held in the memory buffer during the IOT cycle). M103 module includes diode protection clamps on input lines so that it may be used directly on the PDP-12 positive bus.

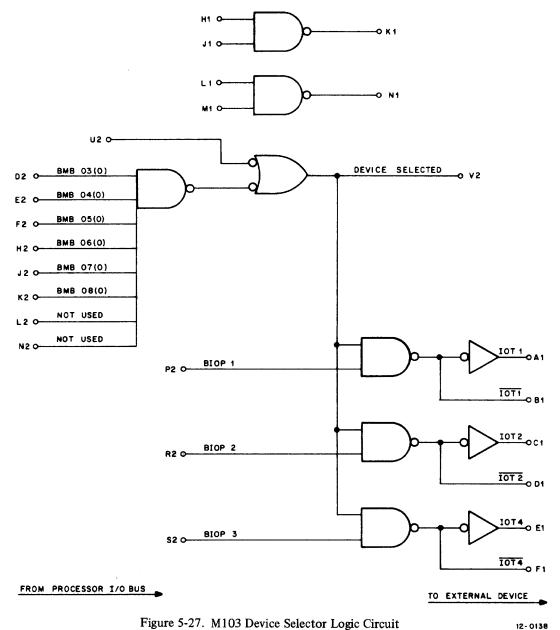


Figure 5-27. M103 Device Selector Logic Circuit

5.4.1.7 M101 Bus Data Interface (See Figure 5-28) - Fifteen two-input NAND gates with one input of each gate tied to a common line. For use in strobing data off of the PDP-12 I/O bus. The M101 module includes diode protection clamps on input lines so that it may be used directly on the PDP-12 positive bus.

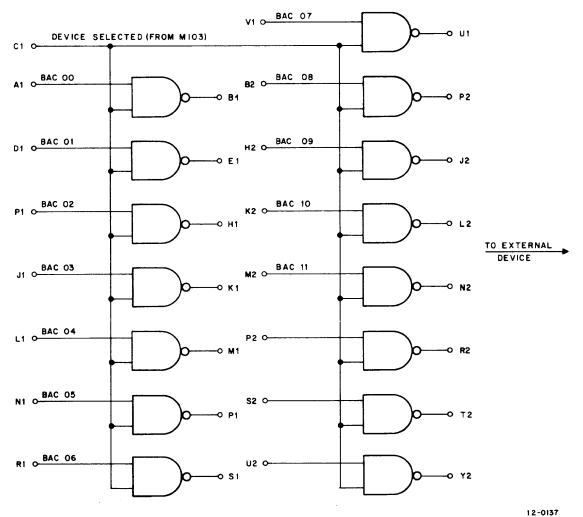


Figure 5-28. M101 Bus Data Interface Logic Circuit

5.4.2 M Series Flip Chip Modules

The following is a list of M Series modules available from Digital Equipment Corporation that can be used in designing special interfaces and special devices. The majority of these modules are described in the Digital Logic Handbook. For those that cannot be found in the Handbook, contact the nearest Digital representative.

Table 5-2. M Series Module Summary

Type	Function	Description
M002	15 Loads	Fifteen +3 volt sources each capable of driving ter unit loads. Can be used for tying off unused inputs
M040	Solenoid Driver	Output ratings of -70 volts and 0.6 amp allow these two drivers to be used with a variety of medium current loads.
M050	50 ma Indicator and Relay Driver	Output ratings of -20 volts and 50 ma. Allow any of the twelve circuits on this module to drive variety of incandescent lamps. These drivers car also be used as slow speed open collector PNP level shifters to -3 volt systems.
M101	Bus Data Interface	Fifteen two-input NAND gates with one input of each gate tied to a common line. For use it strobing data off of the PDP-8/I or PDP-12 I/O bus. Pin compatible with M111.
M103	Device Selector	Similar to W103, but for use with PDP-8/I and PDP-12 options. Output pulses are not regenerated but only buffered.
M111	Inverter	Sixteen inverter circuits with a fan-in of one unit load and fan-out of ten unit loads.
M112	NOR Gate	Ten positive NOR gates with a fan-in of one unit load and fan-out of ten unit loads.
M113	10 2-Input NAND Gates	Ten two-input positive NAND gates with a fan-i of one unit load and fan-out of ten unit loads.
M115	8 3-Input NAND Gates	Eight three-input positive NAND gates with fan-in of one unit load and a fan-out of ten unit loads.
M117	6 4-Input NAND Gates	Six four-input positive NAND gates with a fan-i of one unit load and a fan-out of ten unit loads.
M119	3 8-Input NAND Gates	Three eight-input positive NAND gates with fan-in of one unit load and a fan-out of ten un loads.
M121	AND/NOR Gates	Six gates which perform the positive logic functio AB + CD. Fan-in on each input is one unit load an gate fan-out is ten unit loads.

Table 5-2. M Series Module Summary (cont)

Туре	Function	Description
M141	NAND/OR Gates	Twelve two-input positive NAND gates which can be used in a wired OR manner. Gates are grouped in a 4-4-3-1 configuration, with a fan-in of one unit load and a fan-out which depends on the number of gates ORed together.
M160	Gate Module	Three general purpose multi-input gates which can be used for system input selection. Fan-in is one unit load and fan-out is ten unit loads.
M161	Binary to Octal/ Decimal Decoder	A binary-to-eight line or BCD-to-ten line decoder. Gating is provided so that up to six binary bits can be decoded using only M161s. Accepts a variety of BCD codes.
M162	Parity Circuit	Two circuits, each of which can be used to generate even or odd parity signals for four bits of binary input.
M169	Gating Module	Four circuits that can be used for input selection. Each circuit is of an AND/OR configuration with four two-input AND gates.
М202	Triple J.K. Flip-Flop	Three J-K flip-flops with multiple input AND gates on J and K. Versatile units for many control or counter purposes. All direct set and clear inputs are available at module pins.
M203	Set-Reset Flip-Flops	Eight single-input set/reset flip-flops for use as buffer storage. Each circuit has a fan-in of one unit load and a fan-out of ten unit loads.
M204	Counter-Buffer	Four J-K flip-flops which can be interconnected as a ripple or synchronous counter or used as general control elements.
M206	Six Flip-Flops	Six D-type flip-flops which can be used in shift registers counters, buffer registers, and general purpose control functions.
M207	Flip-Flops	Six single-input J-K type flip-flops for use in shift register, ripple counters, and general purpose control functions.
M208	Buffer Shift Register	An internally connected 8-bit buffer or shift register. Provisions are made for gated single-ended parallel load, bipolar parallel output, and serial input.

Table 5-2. M Series Module Summary (cont)

Туре	Function	Description
M211	Binary Up/Down Counter	A six-bit binary up/down ripple counter with control gates for direction changes via a single control line.
M212	6-Bit L-R Shift Register	An internally connected left/right shift register. Provisions are made for gated single-ended parallel load, bipolar parallel output, and serial input.
M213	BCD Up/Down Counter	One decade of 8421 up or down counting is possible with this module. Provisions are made for parallel loading, bipolar output, and carry features.
M230	Binary to BCD Shift Register Converter	One decade of a modified shift register which allows high speed conversion (100 nsec per binary bit) of binary data to 8421 BCD code. System use of this module requires additional modules.
М302	One Shot Delay	Two pulse or level triggered one-shot delays with output delay adjustable from 50 nsec to 7.5 msec. Fan-in is 2.5 unit loads and fan-out is 25 unit loads.
M310	Delay Line	Fixed tapped delay line with delay adjustable in 50-nsec increments from 50 nsec to 500 nsec. Two digital output amplifiers and one driver are included.
M360	Variable Delay	Continuously variable delay line with a range of 50 nsec to 500 nsec. Module includes delay line drivers and digital output amplifiers.
M401	Clock	A gateable RC clock with both positive and negative pulse outputs. The output frequency is adjustable from 10 MHz to below 100 Hz.
M405	Crystal Clock	Stable system clock frequencies from 5 kHz to 10 mHz are available with this module. Frequency drift at either the positive or negative pulse output is less than 0.01% of the specified frequency.
M4 10	Reed Clock	A stable low frequency reed control clock similar to the M452. Stability in the range 0°C to 70°C is better than 0.15%. For use with communications systems and available with only standard teletype and data set frequencies.
M452	Variable Clock	Provides square wave output of 880 Hz, 440 Hz, and 220 Hz necessary for clocking the M706 and M707 in a 110-baud teletype system.

Table 5-2. M Series Module Summary (cont)

Туре	Function	Description
M501	Schmitt Trigger	Provides regenerative characteristics necessary for switch filtering, pulse shaping, and contact closure sensing. This circuit can be AND/OR expanded.
M502	Negative Input Converter	Pulses as short as 35 nsec can be level shifted from -3 volt systems to standard M Series levels by the two circuits in this converter. This module can also drive low impedance terminated cables.
M506	Negative Input Converter	This converter will level shift pulses as short as 100 nsec from -3 volt systems to M Series levels. Each of the six circuits on this module provides a low impedance output for driving unterminated long lines.
M507	Bus Converter	Six inverting level shifters which accept -3 and GND, as inputs and have an open collecter NPN transistor at the output. Output rise is delayed by 100 nsec for pulse spreading.
M516	Positive Bus Receiver	Six four-input NOR gates with overshoot and undershoot clamps on one input of each gate. In addition, one input of each gate is tied to +3 volts with the lead brought out to a connector pin.
M602	Pulse Generator	The two pulse amplifiers in this module provide standard 50-nsec or 110-nsec pulses for M Series systems.
M617	6-4 Input NOR Buffers	Six four-input positive NOR gates with a fan-in of one unit load and a fan-out of 30 unit loads.
M627	Power Amplifier Module	Six four-input high speed positive NAND gates with a fan-in of 2.5 unit loads and a fan-out of 40 unit loads.
M650	Negative Output Converter	The three non-inverting level shifters on this module can be used to interface the positive levels or pulses (duration greater than 100 nsec) of K and M Series to -3 volt logic systems.
M652	Negative Output Converter	These two circuits provide high-speed non-inverting level shifting for pulses as short as 35 nsec or levels from M Series to -3 volt systems. The output can drive low impedance terminated cables.
M660	Positive Level Driver	Three circuits which provide low-impedance 100-ohm terminated cable driving capability, using M Series levels or pulses of duration greater than 100 nsec. Output drive capability is 50 ma at +3 volts or ground.

Table 5-2. M Series Module Summary (cont)

Туре	Function	Description
M661	Positive Level Driver	Three circuits which provide low-impedance unterminated cable driving. Characteristics are similar to M660 with the exception that +3 volts drive is 5 ma.
M730	8/I Bus Positive Output Interfacer	General Purpose positive bus output module for use in interfacing many positive level (0 to +20 volt) systems to the PDP-8/I or PDP-12. Module includes device selector, 12-bit parallel output buffer, and adjustable timing pulses.
M731	8/I Bus Negative Output Interfacer	Identical to M730, except outputs are level shifted for 0 to -20 volt systems to the PDP-8/I or PDP-12. Module includes device selector, 12-bit parallel input buffer, and adjustable timing pulses.
M733	8/I Bus Negative	Identical to M732, except inputs are level shifted from negative voltage systems.
M901	Flexprint® Cable Connector	Double-sided 36-pin Flexprint cable connector. All pins are available for signals or grounds. Pins A2, B2, U1, and V1 have $10~\Omega$ resistors in series.
M902	Resistor Terminator	Double-sided 36-pin terminator module with 100 Ω terminations on signal leads. Alternate grounds are provided as in the M903 and M904.
M903	Connector	Double-sided 36-pin Flexprint cable connector with alternate grounds for I/O bus cables.
M906	Cable Terminator	18 load resistors clamped to prevent excursions beyond +3 volts and ground. It may be used in conjunction with the M623 to provide cable driving ability.

5.4.3 Construction of Interfaces

This section provides the interface designer with information on design procedures, module layout, wiring, and cable selection. Additional help may be obtained from local DEC sales offices.

5.4.3.1 Physical — The PDP-12 was designed to provide the user maximum ease and flexibility in implementing special interfaces. External devices and interfaces are constructed and mounted outside of the basic machine, thereby eliminating the necessity for modifications to the basic processor. All signals to and from the computer are carried on coaxial or Flexprint cables.

®Flexprint is a registered trademark of Sanders Associates, Inc.

To implement several devices, the cables parallel-connect each peripheral in a serial type form (see Figure 5-29). Three dual cables are used for program interrupt cable connections in (or out). Two additional dual cables are used, for a total of five, when Data Break devices are implemented.

5.4.3.2 **Module Layout** – In general, module layout is based on the functional elements within a system and is primarily a matter of common sense.

Digital has, however, layout conventions for I/O cabling to extend devices. The interface designer may wish to use these conventions as a guide. The general rule is DO NOT DEAD END THE I/O BUS. This means that parallel connections should always be made at each device to handle possible future expansion.

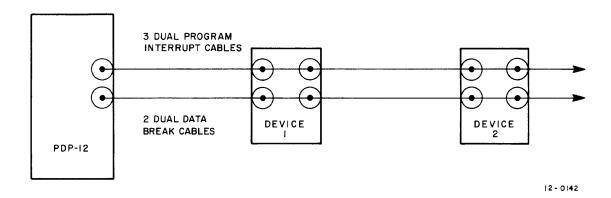


Figure 5-29.\ I/O Bus Configuration

Figure 5-30 shows the I/O cable connections in an option mounting panel. Module slot locations 1 through 3 (looking at the wiring pin side) are reserved for program transfer cable connections in (or out). Module slot locations 4 to 5 are reserved for data break cable connections in (or out). Slot 6 is used for Sense lines.

Module slot locations 1 through 6 in the bottom half of the option mounting panel are wired in parallel with the top module slot locations 1 through 6. To continue the I/O cabling to the next device, the bottom slots are used, and the I/O cable connections are exactly the same as mentioned above.

5.4.3.3 Cable Selection – Two types of cables are recommended for I/O interface connections.

The first is 9-conductor coaxial cable. This cable protects systems from radiated noise and cross talk between individual lines. Coax cable used and sold by Digital has the following nominal specs:

 $Z = 95 \pm 5 \Omega$

C = 13.75 pF/foot approx. (unterminated)

L = 124 nH/foot approx.

 $R = 0.095 \Omega/foot nominal$

Y = 79% of velocity of light, approx. (1.5 nsec/ft.)

The second type is a 19-conductor (9 signals and 10 grounds), #30 gauge flat copper Flexprint.

The total length of I/O cabling, from the PDP-12 to the last device, can be a maximum of 50 feet, and can be composed of 50 feet of coax or a combination of coax and Flexprint, in which case the Flexprint cannot exceed a total of 15 feet.

5.4.3.4 Connector Selection — Of the many connectors available in the module product line, several have particular application to I/O connectors. Price and ordering information is available on these and other connectors in the Digital Logic Handbook. Of particular interest are the M903 and M904 connectors described in the subsequent paragraphs.

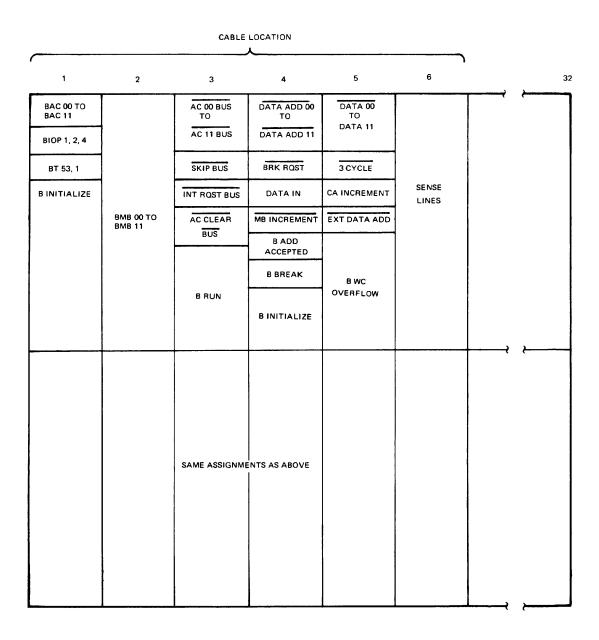


Figure 5-30. I/O Cable Connections

- a. M903 Connector Double sided 36-pin Flexprint cable connector with alternate grounds for I/O bus cables. (Two Flexprint cables are utilized with this connector module.)
- b. M904 Connector Double-sided 36-pin coaxial cable connector with alternate grounds for I/O bus cables. (Two coax cables are utilized with this connector module).
 - (1) Signals:

```
B1, D1, E1, H1, J1, L1, M1, P1, S1, D2, E2, H2, K2, M2, P2, S2, T2, V2
```

(2) Grounds:

```
A1, C1, F1, K1, N1, R1, T1, C2, F2, J2, L2, N2, R2, U2
```

Signal Terminating – The G717 module is used for terminating the following signals:

```
IOP 1, IOP 2, IOP 4, TS 2, TS 5.
```

This module contains five 100-ohm terminating resistors and should be located in the last device of the I/O cabling scheme.

Wiring Hints — These suggestions may help reduce mounting panel wiring time. They are not intended to replace any special wiring instructions given on individual module data sheets or in application notes. For fast, neat wiring, the following order is recommended:

- 1. All power wiring (Pins A2, B2, C2, T1) and any horizontally bussed signal wiring. Use Horizontal Bussing Strips, Type 933. (Pin-B2 is bussed with -15V for modules requiring -15V.)
- 2. Vertical grounding wires interconnect chassis ground with Pins C2 and T1 grounds. Run these wires from the uppermost mounting panel to the bottom panel. On the first and last blocks of the mounting panel, connect the grounds to the chassis.
- 3. All other ground wires. Always use the nearest ground pin, unless a special grounding pin has been provided in the module.
- 4. Wire all signal wires in convenient order. Point-to-point wiring produces the shortest wire lengths, goes in fastest, is easiest to trace and change, and generally results in better appearance and performance than cabled wiring. Point-to-point wiring is strongly urged.

The recommended wire size for use with H803 mounting blocks and H911 mounting panel is #30. Larger or smaller wire may be used depending on the number of connections to be made to each lug. Solid wire and a heat resistant insulation is recommended. The H803 mounting blocks are only available with wire wrap pins which necessitates the use of a wire wrap tool. (Digital can supply #30 gauge wire in 1000 foot rolls.)

Adequate grounding is essential. In addition to the connections between mounting panels mentioned above, there must be continuity of grounds between cabinets and between the logic assembly and any equipment with which the logic communicates.

When wire wrapping is done on a mounting panel containing modules, the wire wrap tool must be grounded, except when all modules are removed from the mounting panel. This procedure must be followed because, even with tools isolated from the ac power line, such as those operated by batteries or compressed air, static charges may build to sufficient amplitudes so that damage to semiconductors may result.

Cooling — The low power consumption of M Series modules results in a total of about 15 watts dissipation in a typical H911 mounting panel containing 64 modules. Convection cooling is sufficient for a few mounting panels, but forced air cooling should be used when a very large system is built.

5.4.4 IOT Allocations

ЮТ	Option
00	Interrupt
01	High Speed Reader Type PR12
02	High Speed Punch Type PP12
03	Teletype Keyboard/Reader
04	Teletype Teleprinter/Punch
05	Displays, Types VC8/I and KV8/I
06	Displays, Types VC8/I and KV8/I
07	Displays, Types VC8/I, and Light Pen Type 370
10	Power Fail Option KP12
11	Teletype System Type PT08
12	Teletype System Type PT08
13	Real Time Clock Type KW12
14	Mode Change (IOT 6141)
15	Tape Maintenance
16	
17	
20	Memory Extension Control Option Type MC12
21	Memory Extension Control Option Type MC12
22	Memory Extension Control Option Type MC12
23	Memory Extension Control Option Type MC12
24	Memory Extension Control Option Type MC12
25	Memory Extension Control Option Type MC12
26	Memory Extension Control Option Type MC12
27	Memory Extension Control Option Type MC12
30	User Interfaces
31	User Interfaces
32	User Interfaces
33	User Interfaces
34	User Interfaces
35	User Interfaces
36	User Interfaces
37	User Interfaces
40	Teletype System Type DP12
41	Teletype System Type DP12
42	Teletype System Type PT08
43	Teletype System Type PT08
44	Teletype System Type PT08
45	Teletype System Type PT08

46	Teletype System Type PT08
47	Teletype System Type PT08
50	Incremental Plotter Type XY12
51	Incremental Plotter Type XY12
52	Incremental Plotter Type XY12
53	General Purpose A/D Converters and Multiplexers, Types AF01A, AM02A,
	AM03A and AF04A Scanning Digital Voltmeter
54	General Purpose A/D Converters and Multiplexers, Types AF01A, AM02A,
	AM03A and AF04A Scanning Digital Voltmeter
55	D/A Converter Type AA01A
56	D/A Converter Type AA01A
57	D/A Converter Type AA01A, Sample and Hold Control Type AC01A and
	AF04A Scanning Digital Voltmeter
60	Random Access Disk File and Control Type DF32 and Synchronous Modem
	Interface Type DP01A
61	Random Access Disk File and Control Type DF32 and Synchronous Modem
	Interface Type DP01A
62	Random Access Disk File and Control Type DF32 and Synchronous Modem
	Interface Type DP01A
63	Card Reader Type CR12
64	Synchronous Modem Interface Type DP01A
65	Synchronous Modem Interface Type DP01A
66	Synchronous Modem Interface Type DP01A
67	Card Reader Type CR12 and Synchronous Modem Interface Type DP01A
70	Automatic Mag Tape Type TC58
71	Automatic Mag Tape Type TC58
72	Automatic Mag Tape Type TC58
73	Automatic Mag Tape Type TC58
74	Automatic Mag Tape Type TC58
75	
76	DECtape Control TC01
77	DECtape Control TC01

5.4.5 Interface Connections

All interface connections to the PDP-12 are made at assigned module receptacle connectors in the Processor Mounting Frame. Capital letters designate vertical rows of modules within a mounting frame. The letters progress alphabetically from right to left when viewed from the wiring side. Module receptacles are numbered from top to bottom within a row. Terminals are assigned capital letters from right to left, with the letters G, I, O, and Q omitted. Double-sided connectors or modules use the suffix number 1 to designate the top side of a module and the suffix number 2 to designate the bottom side.

The module receptacles and assigned use for interface signal connections are:

Receptacle	Use
N13	SENSE LINES
N14	AC, IOP, TIMING OUTPUTS
N15	MB OUTPUTS
N16	AC, SKIP, INT. REQUEST INPUTS
N17	DATA BREAK ADDRESS INPUTS
N18	DATA BREAK DATA INPUTS

Terminals A1, C1, F1, K1, N1, R1, T1, C2, F2, J2, L2, N2, R2, and U2 of these receptacles are grounded within the computer, and terminals B1, D1, E1, H1, J1, L1, M1, P1, S1, D2, E2, H2, K2, M2, P2, S2, T2, and V2 carry signals. Terminals A2 and B2 are not used. These terminals mate with either M903 or M904 Cable Connectors.

Interface connection to the PDP-12 can be established for all peripheral equipment by making series cable connections between devices. In this manner only one set of cables is connected to the computer and two sets are connected to each device; one receives the computer connection from the computer itself or the previous device, and one passes the connection to the next device. Where physical location of equipment does not make series bus connections feasible, or when cable length becomes excessive, additional interface connectors can be provided near the computer. All logic signals passing between the PDP-12 and input/output equipment are positive voltage levels, allowing direct TTL logic interface with appropriate diode clamp protection.

Positive level for a low logic state is 0 to 0.4 volts. Positive level for a high logic state is +3.6 volts.

The following table presents cable connections to the PDP-12 I/O Bus. A signal is true when its polarity matches the suffix character of its name (i.e., IOO BAC 00 (1) H will be high when AC 00 (1) and a program interrupt will be requested when the line EXT INT RQST BUS L is pulled low).

Table 5-3. Cable Connections to the PDP-12 I/O Bus

Signal	Connection	Signal	Connection
IOB XL 00 H	N13B1	IOB XL 11 H	N13D2
IOB XL 01 H	N13D1	IOB XL 12 H	N13E2
IOB XL 02 H	N13E1	IOB XL 13 H	N13H2
IOB XL 03 H	N13H1	NOT USED	N13K2
IOB XL 04 H	N13J1	NOT USED	N13M2
IOB XL 05 H	N13L1	NOT USED	N13P2
IOB XL 06 H	N13M1	NOT USED	N13S2
IOB XL 07 H	N13P1	NOT USED	N13T2
IOB XL 10 H	N13S1	NOT USED	N13V2
IOO BAC 00 (1) H	N14B1	IOO BAC 09 (1) H	N14D2
IOO BAC 01 (1) H	N14D1	IOO BAC 10 (1) H	N14E2
IOO BAC 02 (1) H	N14E1	IOO BAC 11 (1) H	N14H2
IOO BAC 03 (1) H	N14H1	IOO BIOP 1 H	N14K2
IOO BAC 04 (1) H	N14J1	IOO BIOP 2 H	N14M2
IOO BAC 05 (1) H	N14L1	IOO BIOP 4 H	N14P2
IOO BAC 06 (1) H	N14M1	IOO BTS 5 (1) H	N14S2
IOO BAC 07 (1) H	N14P1	IOO BTS 2 (1) H	N14T2
IOO BAC 08 (1) H	N14S1	IOO BA INITIALIZE H	N14V2
IOO BMB 00 (1) H	N15B1	IOO BMB 06 (0) H	N15D2
IOO BMB 01 (1) H	N15D1	IOO BMB 06 (1) H	N15E2
IOO BMB 02 (1) H	N15E1	IOO BMB 07 (0) H	N15H2
IOO BMB 03 (0) H	N15H1	IOO BMB 07 (1) H	N15K2
IOO BMB 03 (1) H	N15J1	IOO BMB 08 (0) H	N15M2
IOO BMB 04 (0) H	N15L1	IOO BMB 08 (1) H	N15P2
IOO BMB 04 (1) H	N15M1	IOO BMB 09 (1) H	N15S2
IOO BMB 05 (0) H	N15P1	IOO BMB 10 (1) H	N15T2
IOO BMB 05 (1) H	N15S1	IOO BMB 11 (1) H	N15V2

Table 5-3. Cable Connections to the PDP-12 I/O Bus (cont)

Signal	Connection	Signal	Connection
EXT IO BUS 00 L	N16B1	EXT IO BUS 09L	N16D2
EXT IO BUS 01 L	N16D1	EXT IO BUS 10 L	N16E2
EXT IO BUS 02 L	N16E1	EXT IO BUS 11 L	N16H2
EXT IO BUS 03 L	N16H1	EXT SKIP BUS L	N16K2
EXT IO BUS 04 L	N16J1	EXT INT RQST BUS L	N16M2
EXT IO BUS 05 L	N16L1	EXT AC CLEAR BUS L	N16P2
EXT IO BUS 06 L	N16M1	IOO B RUN (0) H	N16S2
EXT IO BUS 07 L	N16P1	NOT USED	N16T2
EXT IO BUS 08L	N16S1	NOT USED	N16V2
EXT DATA ADD 00 L	N17B1	EXT DATA ADD 09 L	N17D2
EXT DATA ADD 01 L	N17D1	EXT DATA ADD 10 L	N17E2
EXT DATA ADD 02 L	N17E1	EXT DATA ADD 11 L	N17H2
EXT DATA ADD 03 L	N17H1	EXT BREAK RQST L	N17K2
EXT DATA ADD 04 L	N17J1	EXT DATA IN H	N17M2
EXT DATA ADD 05 L	N17L1	IOO BREAK (0) H	N17P2
EXT DATA ADD 06 L	N17M1	IOO ADD	
		ACCEPTED (0) H	N17S2
EXT DATA ADD 07 L	N17P1	EXT INCREMENT MB L	N17T2
EXT DATA ADD 08 L	N17S1	IOO BB INITIALIZE H	N17V2
EXT DATA 00 L	N18B1	EXT DATA 09 L	N18D2
EXT DATA 01 L	N18D1	EXT DATA 10 L	N18E2
EXT DATA 02 L	N18E1	EXT DATA 11 L	N18H2
EXT DATA 03 L	N18H1	EXT 3 CYCLE L	N18K2
EXT DATA 04 L	N18J1	IOB CA INCREMENT H	N18M2
EXT DATA 05 L	N18L1	IOO WC OVERFLOW (0) H	N18P2
EXT DATA 06 L	N18M1	EXT EXTEND DATA ADD 02 L	N18S2
EXT DATA 07 L	N18P1	EXT EXTEND DATA ADD 01 L	N18T2
EXT DATA 08 L	N18S1	EXT EXTEND DATA ADD 00 L	N18V2

CHAPTER 6 PERIPHERAL DEVICES

INTRODUCTION

This chapter contains descriptions of all the standard prewired I/O bus options which are available with the PDP-12. It describes the peripheral logic expander, BA12, and options contained within the panel, as well as the most commonly used PDP-8 and PDP-12 family of I/O bus options. In general, most PDP-8 family of options can be operated without modification on the PDP-12 I/O bus. The reader, therefore, should refer to the DEC Small Computer Handbook (1970) for additional information.

Prewired options and options contained in the BA12 Peripheral Expander panel derive their power from the PDP-12 power supply. The Peripheral Expander contains the necessary buffering to provide the isolation and current driving requirements for I/O devices. The control logic for these options is contained in plug-in modules; therefore, when one of these options is added, wiring changes or additions are not needed. Separate power supplies are normally included with all the other options.

Option Type Number Option Groupings a. Prewired Teletype Model 33 ASR Additional Teletype or Dataphone DP12-A,B Real-Time Interface KW12-A Fixed Interval Clocks KW12-B,C TC12-F LINCtape to DECtape format converter Digital Plotter and Control XY12 Power Fail KP12 b. Peripheral Expander Type BA12 **4-Station TTY Control** DC02-D,E Line Printer LP12 High-speed Paper Tape Reader/Punch PC12, PP12, and PR12 Standard or Mark Sense Card Reader CR12, CM12 Data Buffers DB12-P, N

Option Groupings

Option Type Number

c. I/O Bus Stand Alone Peripherals	
32 Station TTY Control	DC02-F,G
1- and 2-Station TTY Control	PT08
Line Printer	LP08
Magnetic Tape Control	TC58
Magnetic Tape Transport	TU20
Disk Fixed Head, 32K	DF32, DS32
Disk Fixed Head, 256K	RF08, RS08
Disk Movable Head 800K	RK8, RK01
A-D Converter	AF01A
D-A Converter	AA01A

The above groupings represent the physical organization of the PDP-12; however, the options will be described in the following order:


Option Descriptions	Page Number
Teletype Controls (TTY)	6-3
Real-Time Interface and Clocks	6-18
Disks	6-27
Tapes	6-45
Line Printers	6-59
Card Readers	6-63
Plotters	6-68
High-Speed Paper Tape	6-71
Data Buffers	6-73
Power Fail/Restart	6-74
A-D Converter	6-76
D-A Converter	6-82

6.1 TELETYPE

6.1.1 Model 33 ASR

The Teletype Model 33 ASR is the standard Teletype device offered with the PDP-12. It may be used to type in or print out information at a rate of up to ten characters per second, or to read in or punch out perforated-paper tape at ten characters per second. Signals transferred between the Model 33 ASR and the control logic are standard, serial, 11-unit code, Teletype signals. The signals consist of marks and spaces which correspond to idle and bias current in the Teletype, and to zeros and ones in the teletype control and computer. The start mark and subsequent eight-character bits are one-unit-of-time duration, and are followed by the stop mark, which occupies two units. The 8-bit code used by the Model 33 ASR Teletype unit is the American Standard Code for Information Interchange (ASCII) modified. To convert the ASCII code to Teletype code, add 200 octal (ASCII + 200₈ = Teletype). Bits are numbered from right to left, from 1 through 8, with bit 1 having the least significance.

Figure 6-1 illustrates the relationship between paper tape information and the AC.

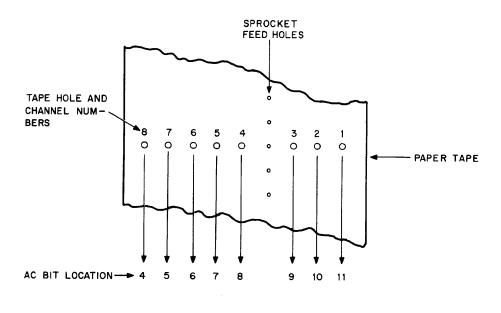

NOTE:

AC BITS 0-3 ARE NOT USED

12-0193

Figure 6-1. Relationship Between Paper Tape and Accumulator

The character (number) four (4) as it would be punched on paper tape is shown in Figure 6-2.

The Model 33 ASR set generates all assigned codes except 340 through 374 and 376. Generally codes 207, 212, 215, 240 through 337, and 377 are sufficient for Teletype operation. The Model 33 ASR detects all characters, but does not interpret all of the codes that it can generate as commands. The standard number of characters printed per line is 72. The sequence for proceeding to the next line is a carriage return followed by a line feed (as opposed to a line feed followed by a carriage return). Appendix F lists the character codes for the Teletype.

6.1.2 Model 33 KSR

This Teletype model is similar to the 33 ASR, except that it does not have either a paper tape reader or punch. The control logic, however, is the same as that used with the 33 ASR.

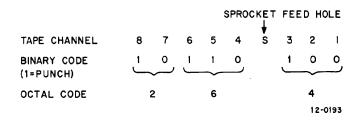


Figure 6-2. Punched Paper Tape Format for the Number 4

6.1.3 Model 35 KSR

This unit is functionally the same as the 33 KSR. It is designed for heavy duty use and extended reliability. The control logic, however, is the same as that used in the 33 ASR.

6.1.4 Model 37 KSR

This Teletype is offered as part of the LT37-AD, AE (50 Hz) option. It has an expanded character set (i.e., upper and lower case) and control functions, and operates at 15 characters per second, both transmitting and receiving. The LT37-AD option has a front panel switch which can effectively convert the unit to operate as a 33 ASR. Only upper case characters would then be received or transmitted. The LT37 option provides the following programmed operations:

- a. Horizontal tab set and clear
- b. Motor control; on and off
- c. Vertical tab; set and clear at full line increments
- d. Ribbon color shift
- e. Reverse linefeed; full and half line increments

The LT37 is useful for the preparation of formal reports, business forms and graphical plots.

Table F-3 in Appendix F provides the character and control codes for each mode of operation.

6.1.5 Teletype Controls

The basic programmed operation of the following devices is similar:

Console Teletype Prewired Dataphone Option, Type DP12-A, B Add-on Single and Dual TTY Control, Type PT08-B, C

They all transmit and receive asynchronous, full-duplex, bit-word information. These devices use control modules M706 (Receiver) and M707 (Transmitter), which are positive logic modules, or W706 (Receiver) and W707

(Transmitter), which are the negative equivalent logic control modules. These modules are fully described in the Digital Logic Handbook. The main differences in these options being controlled are:

- a. Source of data (e.g., Dataphone, keyboard/display terminal, Teletype, etc.)
- b. Speed of operation
 Slow speed devices such as Teletype are driven by the stabilized RC oscillator clock module (M452).
 Higher speed requires a high stability of the selected frequency; therefore, a crystal-controlled clock module (M405) is used. The frequency of operation must be specified for each separate device.
- c. Voltage level of inputs Typically, DEC equipment will interface directly with EIA RS-232-B industry standard devices or the standard 0, 20 mA Teletype current loop (sometimes referred to as 0, +3V logic level). As the console Teletype is typical of the three different controls discussed in this section, it will be described in detail. The differences which are noteworthy in the PT08 and DP12 will be further discussed.
- 6.1.5.1 PDP-12 Console Teletype Control The Teletype control uses the standard M706 receiver, M707 transmitter, and M452 clock modules for basic logic. It will drive any one of the previously discussed Teletype models (the KSR-37 requires a slight adjustment of the clock to operate at 15 characters per second).

Serial information read or written by the Teletype unit is assembled or disassembled by the Teletype control for parallel transfer to the accumulator (AC). The control also provides the program flags that cause a program interrupt or an instruction skip depending on the availability of the Teletype and the processor.

In all programmed operation, the Teletype unit and control are considered as a Teletype in (TTI) for input data from the keyboard or the perforated-tape reader, and as a Teletype out (TTO) for computer output information to be printed and/or punched on tape. Therefore, two device select codes are used. Select code 03 initiates operations associated with the keyboard/reader (TTI) and select code 04 performs operations associated with the teleprinter/punch (TTO). Parallel input and output functions are performed by corresponding IOT pulses produced by the two device selectors. Pulses produced by the IOP1 pulse trigger skip gates; pulses produced by the IOP2 pulse clear the control flags and/or the accumulator; and pulses produced by IOP4 initiate data transfers to and from the control.

6.1.5.2 **Keyboard Reader** — The keyboard and tape reader control contains an 8-bit shift register (TTI) which assembles and holds the code for the last character struck on the keyboard or read from the tape. Teletype characters from the keyboard/reader are received serially by register TTI. The code of a Teletype character is loaded into the TTI so that spaces correspond to binary zeros and holes (marks) correspond to binary ones. Upon program command, the contents of the TTI are transferred in parallel to the accumulator.

When a Teletype character starts to enter the TTI, the control de-energizes a relay in the Teletype unit to release the tape feed latch. When released, the latch mechanism stops tape motion only when a complete character has been sensed, and before sensing of the next character is started. A keyboard is set when an 8-bit computer character has been assembled in the TTI from a Teletype character. The program must sense the condition of this flag with a KSF instruction, and, if the flag is set, issue a KRB instruction which clears the AC, clears the keyboard flag, transfers the contents of the TTI into the AC, and enables advance of the tape feed mechanism. Program interrupt can be controlled by the LINC mode instruction ESF (0004) (refer to Paragraph 3.3.16). This instruction either enables or inhibits interrupts when either the TTI or TTO flag is set.

6.1.5.3 Instructions – Instructions for use in supplying data to the computer from the Teletype are as follows:

KSF Skip on Keyboard Flag

Octal code:

6031

Event time:

1

Execution time:

4.25 μs

Operation:

If the keyboard flag is set, the contents of the PC are incremented by one so that the next

sequential instruction is skipped.

Symbol:

If Keyboard Flag = 1, then $PC + 1 \rightarrow PC$

KCC Clear Keyboard Flag

Octal code:

6032

Event time:

2

Execution time:

4.25 μs

Operation:

The AC and the keyboard flag are cleared. If there is tape in the reader and the reader is on, the character over the read head is loaded into the TTI and the tape advanced one frame. If there is no tape or the reader is off (STOP or FREE) the character struck on the keyboard is assembled into the TTI. In either case, when the character is completely assembled in the TTI,

the hardware sets the keyboard flag.

Symbol:

 $0 \rightarrow AC$

 $0 \rightarrow$ Keyboard flag allowing the hardware to cause:

Keyboard/Tape Character → TTI

1 → Keyboard flag (approximately 100 ms after issuing the instruction)

KRS Read Keyboard Buffer Static

Octal code:

6034

 $4.25 \mu s$

Event time:

3

Execution time: Operation:

The contents of the TTI are transferred into AC₄₋₁₁. This is a static command in that neither

the AC nor the keyboard flag is cleared. KRS can be microprogrammed with KCC.

Symbol:

TTI V $AC_{4-1} \rightarrow AC_{4-1}$

0 → Keyboard Flag

NOTE

The KRS instruction has been redefined in a later version of the PDP-12 to permit clearing of the TTI flag without advancing the paper tape and assembling the next character.

KRB Read Keyboard Buffer Dynamic

Octal code:

6036

Event time:

2, 3

Execution Time:

 $4.25 \mu s$

Operation:

This instruction combines the functions of the KCC and KRS. The AC and keyboard flag are both cleared and the contents of the TTI are transferred into AC. ... Clearing the keyboard

both cleared and the contents of the TTI are transferred into AC_{4-1} . Clearing the keyboard flag allows the hardware to begin assembling the next input character into the TTI (as described for KCC). When the character is completely assembled in the TTI, the hardware

causes the flag to be set, indicating that TTI again has a character ready for transfer.

Symbol:

 $0 \rightarrow AC$

 $C(TTI) \ V \ C(AC_{4-1}) \rightarrow AC_{4-1}$

0 → Keyboard Flag allowing the hardware to cause:

Tape Reader to advance 1 character Keyboard/Tape Character → TTI

1 → Keyboard Flag when down (approximately

100 ms after issuing instruction)

KST Key Struck (LINC mode)

Form:

KST I

 $1.6 \,\mu s$

Octal code:

0415 + 20I

Condition:

Execution time:

A key has been struck on the ASR-33 keyboard, the character code has been assembled in the

Teletype buffer, and the Keyboard flag is raised. (The flag is cleared when the character is read

into the AC.)

The program example shown below will read 1 character from the keyboard.

*200

INPUT,

KCC

/CLEAR KEYBOARD FLAG

JMS LISN DCA STORE

HLT

LISN,

0

/SKIP ON KEYBOARD FLAG

KSF

JMP.-1

KRB

/READ KEYBOARD BUFFER

JMP I LISN

STORE,

0

\$

The main program begins with KCC. In general, the main program should begin by clearing the flags of all devices to be used later in the program. If the above program is started at location 200, it will proceed to the KSF, JMP.—1 loop, and stay in this loop endlessly until a key on the Teletype unit is pressed or a paper tape is loaded into the reader. When the ASCII code for the character is assembled in the keyboard/reader buffer register, the flag will be set to a 1 and the program will skip out of the loop. The contents of the buffer will be transferred into the accumulator, and the buffer and flag will be cleared.

6.1.5.4 **Teleprinter/Punch** — On program command, a character is transferred from the accumulator (AC) to the output shift register (TTO) for transmission to the teleprinter/punch unit. The teleprinter control generates the start space, shifts the eight character bits serially into the printer selector magnets of the teletype unit, and then generates two stop marks. Bit transfer rate from the TTO to the teleprinter/punch unit is at the normal Teletype rate of 110 baud. A character transfer requires 100 milliseconds for completion. The teleprinter flag is set when the last bit of the character code is sent to the teleprinter/punch, indicating that the TTO is ready to receive a new character from the AC. The flag activates either the program interrupt synchronization element or the instruction skip element. When using instruction skip, the program checks the flag by means of TSF instruction. If the flag is set, the program must issue a TLS instruction which clears the flag and sends a new character from the AC to the TTO. AC to TTO transfer time is short compared to the print/punch time, so the program must wait for the flag to set before issuing another TLS. Instructions for use in outputting data to the teleprinter/punch are as follows:

TSF Skip on Teleprinter Flag

Octal code:

6041

Event time:

1 4.25 μs

Execution time: Operation.

If the teleprinter flag is set, the contents of the PC are incremented by one so that the next

sequential instruction is skipped.

Symbol:

If Teleprinter Flag = 1, then $PC + 1 \rightarrow PC$

TCF Clear Teleprinter Flag

Octal code:

6042

Event time:

2

Execution time:

 $4.25 \mu s$ The teleprinter flag is cleared. Can be microprogrammed with TPC.

Operation: Symbol:

 $0 \rightarrow$ Teleprinter Flag

TPC Load Teleprinter and Print

Octal Code:

6044

Event time:

Operation:

3

Execution time:

4.25 μ s AC₄₋₁₁ are parallel transferred to the TTO, then the hardware starts shifting the character out

to the printer/punch unit. When the transfer is complete (approximately 100 ns), the TTO flag

is set.

Symbol:

 $C(AC_{4-11}) \rightarrow TTO$ causing:

C(TTO) → printed and (if punch is on) punched

TLS Load Teleprinter Sequence

Octal Code:

6046

Event time:

2, 3

Execution time: Operation:

 $4.25 \mu s$ This is an instruction that combines TCF and TPC. The teleprinter flag is cleared, then the

contents of AC₄₋₁₁ are parallel transferred to the TTO, where the hardware serially shifts the character-bits out to the printer/punch unit. When the printer/punch has finished outputting the character, the hardware sets the teleprinter flag. The whole operation, from the time TLS clears the flag and TPC starts character transfer until the time the hardware finishes with the

character and again sets the flag, requires 100 ms.

Symbol:

0 → Teleprinter flag

 $C(AC_{4-1,1}) \rightarrow TTO$ causing:

C(TTO) → Printed and (if punch on) punched

1 → Teleprinter flag when done (approximately 100 ns after issuing instruction)

Shown below are several programming examples illustrating the use of the TTO control.

TYPE,

0

TLS

/LOAD TTO FROM AC AND PRINT/PUNCH

TSF

/TEST FLAG SKIP IF = 1

JMP .-1

/JMP BACK & TEST FLAG AGAIN AND AGAIN

CLA

/CLEAR CHARACTER FROM AC

JMP I TYPE

/EXIT TO MAIN PROGRAM

.

By rearranging this subroutine, the 100 ms spent waiting for the character to be output and the flag to be set is used to continue the main program, making more efficient use of program time.

```
TYPE,

TSF

TEST FLAG TO SEE IF TELEPRINTER FREE, SKIP IF NOT

JMP .-1

WAIT TILL IT IS BY TESTING AGAIN AND AGAIN

TLS

OUTPUT CHARACTER

CLA CLL

CLEAR CHARACTER FROM AC

JMP I TYPE

EXIT TO CONTINUE PROGRAM

...
```

This subroutine tests the flag first, and waits only if a previous character is still being output. It clears the AC and exits immediately after sending the character to the TTO, and continues to run the user's program instead of waiting while the teleprinter (a much slower device) is off typing/punching the last character. The user must initialize the control by setting the teleprinter flag to a one. Otherwise, the subroutine will "hang-up" the first time through (in the TSF, JMP .-1 loop). The initialization can be accomplished by issuing a TLS or TPC instruction at the beginning of the mainline program.

Format Routines

Input and output routines are very often written in the form of subroutines, like the TYPE subroutine in the previous example. The example below is a carriage return/line feed subroutine that calls the TYPE subroutine to execute a carriage return and line feed on the printer, thus advancing to a new line for the printing of information.

Carriage Return/Line Feed Subroutine:

CRLF,	0	
	TAD K212	
	JMS TYPE	
	TAD K215	
	JMS TYPE	
	JMP I CRLF	
K212,	212	/ASCII FOR CARRIAGE RETURN
K215,	215	/ASCII CODE FOR A LINE FEED
TYPE,	0	
	TSF	
	JMP 1	
	TLS	
	CLA CLL	
	JMP I TYPE	

Subroutines similar to the one above could be written to tab space the carriage a given number of spaces, or to ring the bell of Teletype Model 33 ASR by using the respective codes for these nonprinting control characters.

- 6.1.5.5 **Single Teletype Control, Type DP12-A (prewired)** This internal option provides an interface which is programmed similar to the standard console Teletype. The device select codes are IOTs 40 and 41. Interrupts caused by either the transmitter or receiver flags can be disabled by the LINC mode instruction ESF (refer to Paragraph 3.3.16).
- 6.1.5.6 Dataphone Control, Type DP12-B This option is a modification of the DP12-A, which permits communication to most standard Dataphone sets. An extra crystal-controlled clock permits the user to specify a baud rate from 110 to 100K baud in order to provide the necessary frequency stability required at higher baud rates. In addition, the option is supplied with a 25-ft cable, Type BC01A-25, which will connect (via a 25-pin connector) to a Dataphone set. This cable has a card connector (M850), which converts the EIA standard RS-232-B signals to DEC logic levels of 0 and +3V

6.1.5.7 Single and Dual TTY Control Type PT08 — The PT08 is a serial-to-parallel, parallel-to-serial converter which provides full-duplex communication between an asynchronous channel and a PDP-12 computer. Two basic configurations are offered: PT08-B (one full-duplex channel) and PT08-C (two full-duplex channels). Systems may be expanded up to five duplex channels by stacking PT08 units.

The PT08-B and C are designed to supply transmit and receive keying current that is intended for use with 20 mA, dc-keyed devices. Digital Equipment Corporation's Model 33 or 35 teleprinter units have been modified to be compatible with the PT08. Devices equivalent to the modified teleprinter units are also compatible with the PT08.

The PT08-B and C are negative bus options (0, -3V) and, therefore, a DW08-A negative-to-positive I/O bus converter must be used when connecting the PT08 to the PDP-12.

The PT08-F option provides EIA standard RS-232-B level conversion as well as a 25-ft cable designed to connect to a Dataphone set. Another option, the PT08-X, can be installed in any channel for customer selection of character format and speed. With the PT08-F and PT08-X options combined, the bit rate can be increased to 100K baud for driving medium-to-high-speed asynchronous modems. This combination can be used for an economical intercomputer communication channel, or for interfacing to special equipment with unique asynchronous speeds and character formats.

Specifications

Performance specifications are summarized in Table 6-1.

Table 6-1. PT08 Specifications

	Specifications	
Speed	110 baud is standard; up to 100K (software limited) with PT08-X option.	
Character Format	Standard:	1-unit start; 8 character bits; 2-unit stop.
	PT08-X Option: 5 or 8 character bits, 1- or 1.5-unit stop element at user's request.	
Operating Mode	Full duplex.	
Interface		Supplies transmit and receive keying current that is intended for use with 20 mA, dc-keyed devices.
	PT08-F Options:	Provides interface that conforms to EIA RS-232-B devices.
Transmission Distance	1500-ft maximum (environment dependent) for local terminals.	
	EIA interface transmission distance is limited only by characteristics of modes associated communication facility. A 25-ft cable to the modem is supplied.	

Figure 6-3 illustrates the various PT08 equipment configurations for both the standard system expansion and interface provisions.

Programming

IOT instructions test for character-ready conditions and transfer assembled characters to and from the computer's accumulator. The same basic commands are used for all channels, with individual channels assigned different device selection codes. For PT08 channel 1, the devices codes are 40 and 41, etc. (See Table 6-2 for complete listings of PT08 device codes.) It will be noted that channel 1 IOTs are the same as assigned to the internal prewired option DP12-A or B. When channel 1 is implemented, the IOT for channel 1 must be revised to an unused device select code. This normally would be one of the device codes 30 through 37. The basic mnemonic plus the PT-number designator identifies the mnemonic for the specific channel.

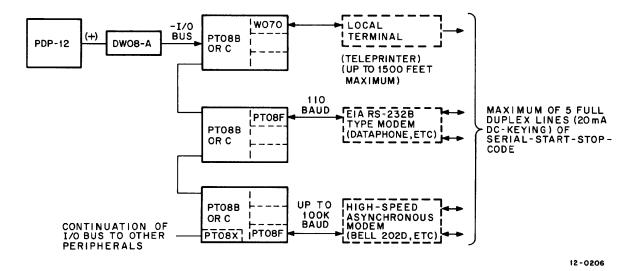


Figure 6-3. PT08 Equipment Configurations

Table 6-2. PT08 Device Codes

Basic	Channel Number				
Mnemonic	1	2	3	4	5
KSF	6421	6441	6461	6111	6301
	KSFPT2	KSFPT3	KSFPT4	KSFPT5	KSFPT1
KCC	6422	6442	6462	6112	6302
	KCCPT2	KCCPT3	KCCPT4	KCCPT5	KCCPT1
KRS	6424	6444	6464	6114	6304
	KRSPT2	KRSPT3	KRSPT4	KRSPT5	KRSPT1
KRB	6426	6446	6466	6116	6306
	KRBPT2	KRBPT3	KRBPT4	KRBPT5	KRBPT1
TSF	6431	6451	6471	6121	6311
	TSFPT2	TSFPT3	TSFPT4	TSFPT5	TSFPT1
TCF	6432	6452	6472	6122	6312
	TCFPT2	TCFPT3	TCFPT4	TCFPT5	TCFPT1
TPC	6434	6454	6474	6124	6314
	TPCPT2	TPCPT3	TPCPT4	TPCPT5	TPCPT1
TLS	6436	6456	6476	6126	6316
	TLSPT2	TLSPT3	TLSPT4	TLSPT5	TLSPT1

Instructions

The following instructions are used with the PT08:

KSF Skip on Receive Flag

Event time:

1

Indicators:

IOT, Fetch, Pause

Execution time:

 $4.25 \mu s$

Operation:

Causes the program to skip the next instruction if the receive flag is set, indicating that an

assembled character is ready.

Symbol:

If receive flag = 1, $PC + 1 \rightarrow PC$

KCC Clear Receive Flag and AC

Event time:

Indicators:

IOT, Fetch, Pause

Execution time:

 $4.25 \mu s$

Operation:

Clears the accumulator and the receive flag.

Symbol:

 $0 \rightarrow AC, 0 \rightarrow RF$

KRS Read Receive Buffer (Static)

Event time:

Indicators:

IOT, Fetch, Pause

Execution time:

Operation

Transfers an assembled character from the receive buffer to AC₄₋₁₁. Does not reset AC or

receive flag.

Symbol:

 $RB \rightarrow AC_{4-11}$

KRB Read Receive Buffer (Dynamic)

Event time:

2, 3

Indicators:

IOT, Fetch Pause

Execution time:

 $4.25 \mu s$

Operation:

Performs the functions of KCC and KRS together, so that the receive flag and AC are cleared

before data is transferred from the receive buffer to the AC.

Symbol:

 $0 \rightarrow AC, 0 \rightarrow RF$

 $RB \rightarrow AC_{4-11}$

TSF Skip on Transmit Flag

Event time:

1

Indicators:

IOT, Fetch, Pause

Execution time:

 $4.25 \,\mu s$

Operation:

Causes the program to skip the next instruction if the transmit flag is set, indicating that the

transmit flag = 1, PC + 1 \rightarrow PC

TCF Clear Transmit Flag

Event time:

Indicators:

IOT, Fetch, Pause

Execution time:

 $4.25 \mu s$

Operation: Symbol:

Resets the transmit flag. $0 \rightarrow TF$

TPC Load Transmit Character

Event time:

Indicators:

IOT, Fetch, Pause

Execution time:

Operation:

Loads the transmit buffer from AC₄₋₁₁ and initiates transmission of a character.

Symbol:

 $AC_{4-1} \rightarrow TB$

TLS Load Transmit Sequence

Event time:

2, 3

Indicators:

IOT, Fetch, Pause

Execution time:

 $4.25 \mu s$

Operation:

Performs the functions of TCF and TPC together.

Symbol:

 $0 \rightarrow TF$ $AC_{4-1 \ 1} \rightarrow TB$

Maximum Data Rates

In transmitting the PT08 provides a full character cycle for the program to deliver new data. In receiving, one bit time is required to read in necessary data. However, for maximum data transfer rates, the time at which data transfer can occur is limited to an aperture equal to the stop bit time plus half a bit time. This response time is measured from the beginning of a stop bit (the time at which the transmit or receive flag is reset), and the midpoint of the next character's start bit. If the program fails to respond within this time, a character is lost. Timing is illustrated in Figure 6-4.

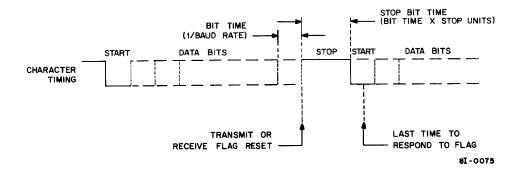


Figure 6-4. PT08 Program Response Time

For example, at 110 baud (9.09 ms bit time), response time is:

```
Stop bit time + half a data bit time
= 2 \times 9.09 + 9.09/2
= 22.725 \text{ ms}
```

Note that the number of bits per character need not be considered.

6.1.5.8 Multiple Teletype Control, Type DC02-E (see Table 6-3) — The DC02-E option, which is prewired in the BA12 Peripheral Expander, allows the user to add up to four serial-to-parallel, parallel-to-serial asynchronous data channels. It consists of a DC02-E multiple station control and from one to four DC02-D station interfaces (each full-duplex). A Type BC01A-25 cable is available that will connect to most Dataphones via a 25-pin connector and will convert EIA standard RS-232-B signals to DEC logic levels of 0 + 3 volts.

The control will handle teletypes at their normal baud rate of 110. In addition, higher speed devices may be operated by using crystal clocks. In this case the baud rate must be specified by the user. Up to two clocks may be used and may be connected by a jumper module in any combination to control the stations' transmitters and receivers.

Table 6-3. DC02-E Specifications

Characteristics	Specifications		
Speed	110 baud is standard; up to 100K baud crystal controlled.		
Character Format	Standard:	1-unit start; 8 character bits; 2-unit stop.	
	Option:	5 or 8 character bits 1- or 1.5-unit stop element at user's request.	
Operating Mode	Full duplex.	•	
Interface	Standard:	Supplies transmit and receiver keying current that is intended for use with 20 mA, dc-keyed devices.	
Transmission Distance	1500 ft maximum (environment dependent) EIA interface transmission distance is limited only by characteristics of modem and associated communication facility. A 25-ft cable to the modem is supplied. (BC01A-25).		

DC02-E Control Instructions

The following instructions are used with the DC02E control:

MTPF Multiple Teleprinter Flag

Octal code:

6113

Event time: Execution time:

1, 2 4.25 μs

Operation:

Transfer status of teleprinter flags to AC 0-3.

Symbol:

Teleprinter flags $\rightarrow AC_{0-3}$.

 $0 \to AC_{4-1}$.

MINT Multiple Interrupt

Octal code:

6115

Event time:

3

Execution time:

4.25 μs

Operation:

Interrupt on if AC₁₁ is set (interrupt request if any flags).

Symbol:

 $AC_{11} \rightarrow Interrupt Enable$

MTON Multiple Station Select

Octal code: Event time:

6117 1, 2, 3

Execution time:

 $4.25 \mu s$

Operation:

Transfer AC_{0-3} to selection register (select stations when bit is set).

Symbol:

 $AC_{0-3} \rightarrow SR$

MTKF Multiple Keyboard Flag

Octal code:

6123

Event time:

1, 2

Execution time:

 $4.25 \mu s$

Operation:

Transfer status of keyboard flags to AC₀₋₃.

Symbol:

 $KF \rightarrow AC_{0-3}$

 $0 \rightarrow AC_{4^{-1}1}$

MINS Multiple Interrupt and Skip

Octal code:

6125

Event time:

1, 4

Execution time:

4.25 μs

Operation:

Skip if the interrupt request is active (if interrupt is on and any flag is raised).

Symbol:

If interrupt request is active, $PC + 1 \rightarrow PC$

MTRS Read Station Select Status

Octal code:

6127

Event time:

1, 2, 3

Execution time:

 $4.25 \mu s$

Operation:

Transfer the status of the selection register to AC_{0-3} .

Symbol:

 $SR \rightarrow AC_{0-3}$

 $0 \rightarrow AC_{4-1}$

DC02-D Instructions

Decoder instructions for the DC02-D are in two basic groups: receiver and transmitter. The receiver instructions are 6111, 6112, 6114, and 6116; the transmitter instructions are 6121, 6122, 6124, and 6126. The "Station Select" flip-flop is gated with each device select code; therefore, these IOTs are effective only when a particular station is selected.

MKSF Skip On Keyboard Flag

Octal code:

6111

Event time:

Execution time:

 $4.25 \mu s$

Operation:

Skip if the selected keyboard flag is set.

Symbol:

If KF = 1, PC + 1 \rightarrow PC

*MKCC Clear Keyboard Flags

Octal code:

6112

Event time:

2

Execution time:

4.25 µs

Operation:

Clear the keyboard flag of the selected station; clear AC. If the paper tape reader is on, the

tape will advance 1 character and the receiver flag will be set approximately 100 ns after

issuing the instruction.

Symbol:

 $0 \rightarrow KF, 0 \rightarrow RF, 0 \rightarrow AC$

MKRS Read Keyboard Register Static

Octal code:

6114

Event time:

3

Execution time:

 $4.25 \,\mu s$

Operation:

Transfer the keyboard register contents to AC₄₋₁₁.

Symbol:

 AC_{0-11} V KR to AC_{0-11}

^{*} On some systems a logic revision has been added which inhibits tape advance and consequent setting of the receiver flag.

MKRB Load Keyboard Sequence

Octal code:

6116

Event time:

2,3

Execution time:

 $4.25 \mu s$

Operation:

Clear the keyboard and reader flags, clear AC; transfer the keyboard register contents to

 AC_{4-11} (MKCC and MKRS combined).

Symbol:

 $0 \rightarrow KF$ $0 \rightarrow RF$

 $0 \rightarrow AC$

 $KR \rightarrow AC_{4-11}$

MTSFSkip on Teleprinter Flag

Octal code:

6121

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

Skip if the selected teleprinter flag is set.

Symbol:

If TF = 1, PC + 1 \rightarrow PC

MTCF Clear Teleprinter Flag

Octal code:

6122

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

Clear the teleprinter flag of the selected keyboard station.

Symbol:

MTPC Multiple Load Teleprinter Register and Print

Octal code:

6124

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

Load AC₄₋₁₁ into the teleprinted register (begin print/punch).

Symbol:

 $AC_{4-1} \rightarrow TR$

MTLS Load Teleprinter Sequence

Octal code:

6126

Event time:

2, 3

Execution time:

 $4.25 \,\mu s$

Operation:

Clear the teleprinter flag and load AC₄₋₁₁ into the teleprinter register (MTCF and MTPC

combined).

Symbol:

 $0 \rightarrow TF$

 $AC_{4-1,1} \rightarrow TR$

Multiple Teletype Control, Type DC02-F

This control is similar to the DC02-E in operation and design. It consists of a double row of logic (10-1/2" x 19" nominal rack space) complete with power supplies. This unit will handle up to eight stations. The DC02-F is designed so that four controls may be connected together in such a way that 32 stations total may be operated. A jumper module is used to enable selected signals when the system is expanded.

As in the four-station control DC02-E, the high order bits of the AC are used to select a station. AC_{0-7} are used to select the stations within one control and AC_{8-1} are used to select any one of up to four DC02-F controls. Up to three separate clocks may be specified. In addition, two frequency divide registers are available with outputs at divide-by-8 and divide-by-128. The resultant timing pulses may be connected in any combination with jumper modules to provide timing for the transmitter and receiver modules of the stations.

The specifications for this control are the same as those of the DC02-E. The program instructions are likewise identical except for the following.

MTPFMultiple Teleprinter Flag

Octal code:

6113

Event time:

1, 2 $4.25 \mu s$

Execution time:

Transfer status of teleprinter flags AC₀₋₇. AC₈₋₁₁ selects one of four controls.

Operation: Symbol:

Teleprinter flags $\rightarrow AC_{0-7}$

 $0 \rightarrow AC_{8-1}$

Multiple Keyboard Flag

Octal code:

6123

Event time:

1, 2

Execution time:

4.25 µs

Operation:

Transfer status of keyboard flags to AC₀₋₇

Symbol:

 $KF \rightarrow AC_{0-7}$

 $0 \rightarrow AC_{8-1}$

MTON Multiple Teleprinter

Octal code:

6117

Event Time:

1, 2, 3

Execution time:

 $4.25 \mu s$

Operation:

Transfer AC₀₋₇ to selection register select stations when bits are set. AC₈₋₁₁ selects one of

four controls.

Symbol:

 $AC_{0-7} \rightarrow SR$

 $0 \rightarrow AC_{8-1.1}$

MINS Multiple Interrupt and SKP

Octal code:

6125

Execution time:

Operation:

Skip if the interrupt request is active (i.e., if interrupt is on and any flag is raised) AC₈₋₁₁

select one of four controls.

Symbol:

 $0 \rightarrow AC_{8-1,1}$

MTRS Multiple Teleprinter Read Status

Octal code:

6127

Event time:

1, 2, 3

Execution time:

Operation:

Transfer the status of the selection register to AC₀₋₇. AC₈₋₁₁ selects one of four controls.

Transfer status of interrupt enable flip-flop to AC_{11} . If $AC_{11} = 1$, the interrupt enable is set.

Symbol:

 $SR \rightarrow AC_{0-7}$

Interrupt Enable \rightarrow AC_{1 1} 0 \rightarrow AC_{8-1 0}

6.2 REAL TIME CLOCKS

6.2.1 Real Time Interface, Type KW12-A

The KW12-A (see Figures 6-5 and 6-6) is a prewired PDP-12 option with an input control panel, which mounts behind the vertical door on the left front of the PDP-12. The Real Time Interface can be used to synchronize the central processor to external events, count external events, measure intervals of time between events, or provide program interrupts at programmable intervals from 2.5 μ s to over 40 seconds. Some of the above mentioned operations can be done simultaneously.

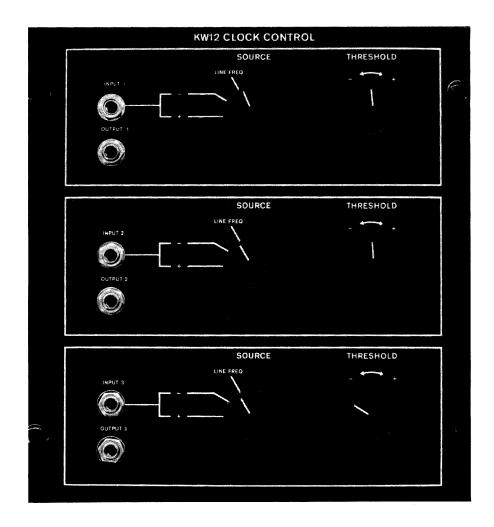


Figure 6-5. KW12-A Real Time Interface

Time Base

The programmable time base provides count pulses to the counter register at any of the following rates derived from a 400 kHz crystal clock:

400 kHz	1 kHz
100 kHz	100 Hz
10 kHz	

Input channel 1 may be used to enable an external source to drive the counter. This external source may be switch-selected to be either the power line waveform or an actual signal from a laboratory instrument. The programmable selection of the rate is accomplished with the three rate-bits of the clock control register.

Input Synchronizers

Three input channels are used to convert external events into a synchronized control and status signal for the clock. Each input channel consists of an input Schmitt trigger with pulse generator, five flip-flops, and associated control gating. The Schmitt trigger and pulse generator converts the preselected voltage threshold crossing by an external signal into a single event (pulse). This Schmitt trigger has level and slope selection controls available on the front panel. They provide selection of any threshold between ±6V and either positive or negative-going slope. The Schmitt trigger has a hysteresis of 0.3V.

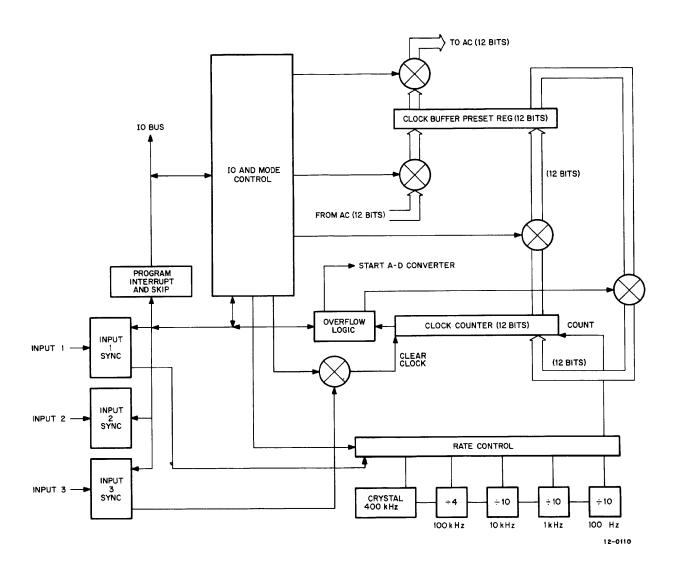


Figure 6-6. KW12-A Organization

The five Input Circuits flip-flops are: INPUT ENABLE, INPUT, PRE-EVENT, EVENT, and ENABLE EVENT INTERRUPT (see Figure 6-7). Figure 6-8 shows a basic timing of the Input Synchronizer.

Not shown in Figure 6-7 is the logic which clears the EVENT and PRE-EVENT flip-flops when the CLSA instruction is given. This logic ensures that events occurring during the execution of the present CLSA instruction are indicated when the next CLSA instruction is given.

Input Enable Flip-Flop - Gates on and off input signals to the clock. It is set and cleared under program control.

Input Flip-Flop — Set by an external signal from the Schmitt trigger input or under program control with the CLLR instruction. The INPUT flip-flop provides synchronization between external timing and internal clock timing.

Pre-Event Flip-Flop — Strobed into the EVENT flip-flop by the strobe 1 signal. This clears the INPUT flip-flop if EVENT is clear.

Event Flip-Flop — Loaded with the PRE-EVENT flip-flop on the next strobe 1 and set to a 1 by the second strobe 1 following the setting of the INPUT flip-flop. Subsequent to EVENT being loaded, PRE-EVENT is cleared.

Event Enable Interrupt Flip-Flop — Permits external events to cause program interrupts. It is set and cleared by the CLEN instruction.

The occurrence of strobe 2 with EVENT (0) and PRE-EVENT (1) is the actual single event used by other parts of the clock logic such as counting and transfers from counter to buffer register.

The status of the EVENT and PRE-EVENT flip-flops is loaded into the AC under program control. When this transfer occurs, the corresponding INPUT, PRE-EVENT, and EVENT flip-flops are cleared.

If a second input occurs before the EVENT flip-flop is cleared, then both the PRE-EVENT and EVENT flip-flops will remain set, indicating an error.

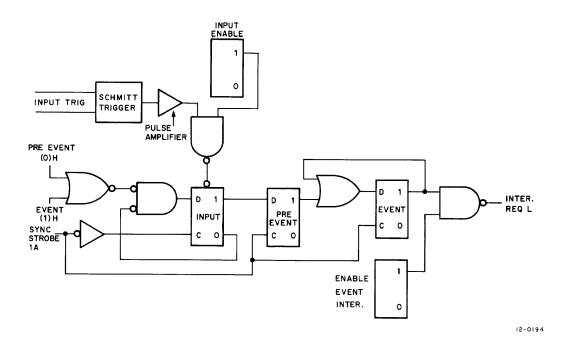


Figure 6-7. Simplified Input Synchronizer Logic Diagram

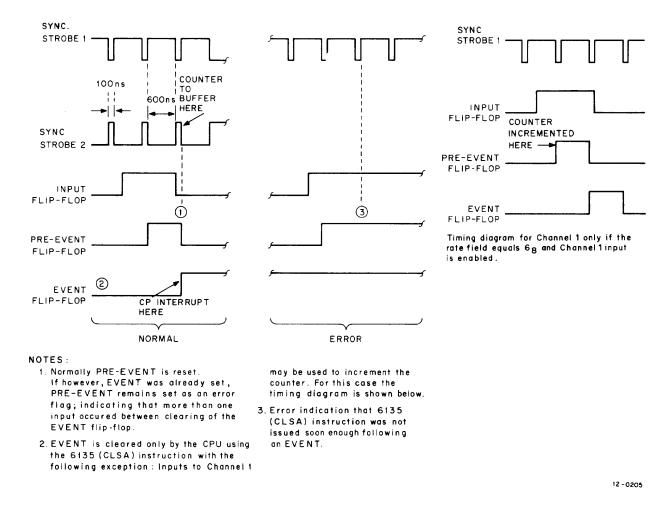


Figure 6-8. KW12-A Timing Diagram

Counter Register

The counter register is a 12-bit counter that is loaded from the buffer-preset register or can be transferred into the buffer-preset register.

The counter may be used to count events, measure intervals of time between events, or provide processor interrupts at program selected intervals from $2.5 \mu s$ to over 40 seconds.

OVERFLOW Flip-Flop – The OVERFLOW flip-flop is set by the most significant bit of the counter register going from 1 to 0.

Buffer-Preset Register — Used to buffer the current count in the clock register at the occurrence of an event when operating with Mode 1 (1). With Mode 1 (0) and Mode 2 (1), the buffer-preset register holds the number to be transferred into the counter when overflow occurs. The buffer-preset register can be loaded into the AC or the AC can be transferred into the buffer-preset register.

6.2.1.1 Use of Interface with A-D – With Mode 0 (1), the occurrence of overflow is used to start an A-D conversion if the A-D is in the Fast Sample Mode. With Clock Mode 0 (1), the A-D is triggered only by the clock. When a SAM instruction is given, the result of the last conversion is transferred to the AC, and a new analog channel is selected for the next conversion to be performed when the clock overflows. If the SAM instruction is given while a conversion triggered by the clock is in progress, the processor waits in timestate TS5 until the conversion is complete.

6.2.1.2 KW12-A Input Panel — The input panel for the clock is located behind the door on the left side of the front of the PDP-12. External signals (from up to three instrument/sources) are connected to the Input jacks on the front panel (see Figure 6-5) via standard 3-conductor telephone plugs. Each Input and Output jack is wired in parallel to permit convenient connection of the external input signals to the KW12-A and, if desired, the Analog-to-Digital Converter. The input is differential, ±5V range, input resistance greater than 10,000 ohms, and protected against inputs up to ±50V. A level control and a slope control are associated with each input. The level control selects the threshold voltage at which the trigger pulse is generated. The slope determines the polarity of the input signal causing a trigger pulse. The trigger pulse sets the associated input flip-flop of the clock if that input channel is enabled.

6.2.1.3 KW12-A Real Time Interface Instructions – The KW12-A is controlled by PDP-12 IOT instructions. These instructions can be used from either 8 or LINC mode. Execution time for the IOTs is 4.25 μ s when in 8 mode and 5.9 μ s when in LINC mode (using IOB).

CLSK Skip On Clock Interrupt

Octal code:

6131

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

Skip if clock interrupt condition exists. The interrupt conditions are as follows:

- a. Enable Event 1 Interrupt (1) and Event 1 (1).
- b. Enable Event 2 Interrupt (1) and Event 2 (1).
- c. Enable Event 3 Interrupt (1) and Event 3 (1).
- d. Enable Overflow Interrupt (1) and Overflow (1).

CLLR Load Clock Control Register

Octal code:

6132

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

The contents of the AC are transferred to the clock control register. Three bits are used to provide simulated data input to each of the three Event input channels. The AC is unchanged.

Bit	Function
00	Count Rate Register Bit 0
01	Count Rate Register Bit 1
02	Count Rate Register Bit 2
03	Mode Control Register Bit 0
04	Mode Control Register Bit 1
05	Mode Control Register Bit 2
06	Not used
07	Simulate Input to Channel 1
08	Not used
09	Simulate Input to Channel 2
10	Not used
11	Simulate Input to Channel 3

The rate of the counter register input count pulses is determined by the contents of the count rate register.

Count Rate	Frequency of
Register	Count Pulses
000	Stop
001	400 kHz
010	100 kHz
011	10 kHz
100	1 kHz
101	100 Hz
110	Rate of Input Channel 1
111	Stop

NOTE

When Channel 1 is used as the time base for the counter, the Event flag is automatically cleared and Channel 1 Interrupt Enable would normally be left off. Also the clock counter is advanced one count each time an IO PRESET is performed either manually or under program control.

The contents of the mode control register determine the method by which the clock system operates.

Program Example

The following program rings the teleprinter bell once for every 10 inputs (60 Hz) on external channel three. If the source knob is turned to line frequency the Teletype bell will ring once/per second on computers connected to 60 Hz power lines.

112 power in	PMODE	/PSEUDO TO LAP6 DIAL ASSEMBLER
PEGIN		7
BEGIN,	CLA	/CLEAR AC
	CLLR	/CLEAR ALL MODES
	CLEN	/CLEAR ENABLES
	TAD K74	/NO. OF COUNTS
	CIA	/FORM 25 COMP
	CLAB	/LOAD PRESET REG
	CLA	/CLEAR AC
	TAD K0100	/SET AC05=1
	CLLR	/GENERATE CLEAR COUNTER
	CLSA	/CLEAR STATUS AND POSSIBLE OVERFLOW
	CLA	/CLEAR AC
	TAD K0320	/LOAD AC
	CLEN	/LOAD BUFFER INTO COUNTER, ENABLE INTERRUPT ON OVERFLOW,
		AND ENABLE IN
PUT CHAN	1	
	CLA	/CLEAR AC
	TAD K6100	/LOAD AC
	CLLR	/START CLOCK BY ENABLING RATE
LOOP,	CLSK	/SKIP ON CLOCK FLAG
	JMP LOOP	/WAIT
	CLSA	CLEAR STATUS
	CLA	CLEAR AC
	TAD K207	/LOAD AC
	TLS	/RING TELEPRINTER BELL
	JMP LOOP	/RETURN TO WAIT LOOP
K74,	74	/CONSTANTS
K0100,	100	/ CONSTITUTE
K0320,	320	
K6100,	6100	
K0100, K207,	207	
13207,	201	

Mode Control Register

000 Free-run

Counter runs selected rate. Overflow occurs every 4096 counts. The overflow flag remains

set until cleared with CLSA instruction.

001 Preset Time

Counter runs at selected rate. When overflow occurs, the contents of the Clock Buffer-Preset register are transferred automatically to the Counter which continues. The Overflow flag remains set until cleared with a CLSA instruction. When Mode is changed

from X00 to X01, the clock counter is zeroed.

O10 Time Base (measures intervals between events)

Counter runs at selected rate. On the occurrence of an Input Event, the contents of the

counter are transferred automatically to the Buffer Preset register, and the counter

continues to count.

Time Base (measures intervals between events)

This is identical to Mode 10, except that the Clock Counter register is cleared after its contents have been transferred to the Buffer Preset register on Event 3. Events 1 and 2

remain only to cause transfer from the clock counter to the Buffer Preset register.

When Mode bit 0 is set to a 1, the occurrence of Overflow is used to trigger the A-D converter if A-D control also has the FAST-SAMPLE flip-flop set. This allows

analog-to-digital conversions to take place under the automatic timing control of the clock. In this mode, A-D conversions are triggered only by the clock counter overflow.

clock. In this mode, A-D conversions are triggered only by the clock counter overflow. The SAM instruction reads the result of the previous conversion and sets the channel number for the next conversion. For details of the Analog-to-Digital converter, see

Paragraph 6.11. The remaining two Mode Control bits are decoded exactly as above.

CLAB AC to Buffer Preset Register

Octal code: Event time: 6133 2

Execution time:

4.25 μs

Operation:

Transfer AC to Buffer Preset register. The previous contents of the Buffer Preset registers are

lost and the AC is unchanged.

CLEN Load Clock Enable Register

Octal code:

6134

Event time:

3

Execution time:

4.25 μs

Operation:

The contents of the AC are transferred to the Clock Enable register. The function of each bit is

given below:

Function
Not used
Not used
Not used
Not used
Inclusive OR Clock Buffer into counter if mode = X01 and overflow = 0
Enable Interrupt when overflow (1)
Enable Interrupt on Event 1
Enable Input Channel 1
Enable Interrupt on Event 2
Enable Input Channel 2
Enable Interrupt on Event 3
Enable Input Channel 3

CLSA Clock Status to AC

Octal code:

6135

Event time: Execution time:

1,3 $4.25 \mu s$

Operation:

This instruction interrogates the CLOCK INPUT and OVERFLOW STATUS flip-flops. The clock status information is inclusive ORed into the AC. Then the AC status bits which are set are cleared. This ensures that only one occurrence of an EVENT will be transferred to the program.

AC Bit	Status Condition
00	OVERFLOW Flip-Flop
01	Not used
02	Not used
03	Not used
04	Not used
05	Not used
06	Event 1
07	Pre-Event 1
08	Event 2
09	Pre-Event 2
10	Event 3
11	Pre-Event 3

CLBA Buffer Preset Register to AC

Octal code:

6136

Event time:

Operation:

2,3 $4.25 \mu s$

Execution time:

The AC is cleared and the contents of the Clock Buffer Preset register are transferred into the

AC.

CLCA Counter to AC

Octal code: Event time: 6137 1,2,3

Execution time:

4.25 μs

Operation:

The AC is cleared and the contents of the Clock Counter are transferred to the

BUFFER-PRESET register. Then the contents are transferred into the AC.

6.2.2 KW12-B and KW12-C Fixed-Interval Clocks

The KW12-B provides a means of interrupting the CP at intervals determined by a variable RC Oscillator. The KW12-C is similar to the KW12-B except that the RC oscillator is replaced by a crystal oscillator with a single fixed frequency. The KW12-B or KW12-C may be turned on or off under program control. However, variations in frequency require physically altering or changing the oscillator.

Instruction Set

The KW12-B and KW12-C are controlled by IOT instructions. These instructions can be used from either mode. Execution time for the Simple Clock IOTs is $4.25 \mu s$ when in 8 mode and $5.9 \mu s$ when in LINC mode (using IOB).

CSOF Skip on Clock Flag

Octal code:

6131 4.25 μs

Execution time: Operation:

Skip if clock flag is set.

CTOC Turn Off Clock

Octal code:

6132

Execution time:

4.25 μs

Operation:

Turn off the clock, clear the clock flag, and disable the clock interrupt.

CTON Turn On Clock

Octal code:

6134 4.25 μs

Execution time: Operation:

Turn the clock on and clear the flag.

CRUN Clock Running

Octal code:

6135

Execution time:

4.25 μs

Operation:

Turn on the clock, enable the clock interrupt, clear the clock flag, skip if the clock flag was set

when the instruction was issued.

Frequency Range

Frequency Range

KW12-B

The KW12-B uses the M401 variable clock in slot F18 for a time base. The frequency may be varied with a range by adjusting a potentiometer on the module. Five frequency ranges are available. The KW12-B is nominally set to the 1.75 kHz-to-17.5 kHz frequency range by jumpering F18N2 to F18T2. Other frequency ranges may be achieved by removing the jumper from F18T2 and attaching as shown below. The exact frequency may be checked by observing the signal on F18D2 with an oscilloscope.

Interconnections Required

	•
17.5 kHz to 50 kHz	F18N2 - F18S2
1.75 kHz to 17.5 kHz	F18N2 – F18T2 (nominal setting)
175 Hz to 1.75 kHz	F18N2 - F18P2

KW12-C

The KW12-C uses the M405 crystal clock in slot F18 for a time base. The frequencies are fixed by a series resonant crystal oscillator to obtain a frequency stability of .01 percent of the specified value between 0°C and +55°C. The frequencies available are in the range of 5 kHz to 50 kHz and must be specified in advance by the customer.

6.3 DISK STORAGE

6.3.1 Random Access Disk File, Types DF/DS32 and DF/DS32-D

The DF32 and DF32-D operate through the three-cycle data break facility to provide 32,768 13-bit words (12 bits plus 1 parity bit) of storage, and are economically expandable to 131,072 13-bit words using the respective expander disk, DS32 or DS32-D.

The DF32 and DF32-D comprise two basic assemblies: the storage unit containing the read/write circuits and the computer interface logic. The storage unit contains a nickel cobalt plated disk driven by a hysteresis synchronous motor. Data is recorded on a single disk surface by 16 read/write heads in fixed positions. The disk motor, read/write data heads, and photocell assembly (on DF32) are all mounted on a rack assembly that permits sliding the unit in and out of a DEC 19-inch Standard Cabinet.

The following table summarizes the DF32 and DF32-D:

	60Hz	50Hz	60Hz	50Hz
Data Transfer rate (microseconds per word)	66	80	32	39
Average Access Time (milliseconds)	16.67	20	Same	Same
Timing and Address Track "Start & Finish" Sensing	Photo-electri marker on perimeter		•	t and Finish decoding on
Type of Logic	Negative		DF32DP P DF32DN N	

Instructions

The DF32 and DF32-D disk systems share the following instruction set:

DCMA Clear Disk Memory Address Register

Octal code:

6601

Event time:

Execution time:

 $4.25 \mu s$

Operation:

Clears Memory Address Register, parity error, and completion flags. This instruction clears the

disk memory request flag and interrupt flags.

Symbol:

 $0 \rightarrow \text{completion flag}$

 $0 \rightarrow \text{error flag}$

DMAR Load Disk Memory Address Register and Read

Octal code:

6603

Event time:

1,2

Execution time:

4.25 μs

Operation:

The contents of the AC are loaded into the disk memory address register and the AC is cleared. Begins to read information from the disk into the specified core location. Clears parity error

and completion flags. Clears interrupt flags.

Symbol:

 $AC_{0^{-1}1} \rightarrow DMA_{0^{-1}1}$

 $0 \rightarrow \text{completion flag}$

 $0 \rightarrow \text{error flag}$

DMAW Load Disk Memory Address Register and Write

Octal code:

6605

Event time:

1,3

Execution time:

4.25 μs

Operation:

The contents of the AC are loaded into the disk memory address register and the AC is cleared. Begins to write information onto the disk from the specified core location. Clears parity error and completion flags. Clears interrupt flags. Data break must be allowed to occur within 66

microseconds after issuing this instruction.

Symbol:

 $AC_{0-1} \rightarrow DMA_{0-1}$ 0 \rightarrow completion flag

 $0 \rightarrow \text{error flag}$

DCEA Clear Disk Extended Address Register

Octal code:

6611

Event time:

1

Execution time: Operation:

4.25 μ s Clears the Disk Extended Address and Memory Address Extension register.

Symbol:

0 → Disk Extended Address Register

0 → Memory Address Extension Register

DSAC Skip on Address Confirmed Flag

Octal code:

6612

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

Skips next instruction if address confirmed Flag is set. Flag is set for 16 μ s (AC is cleared).

The disk Extended Address and Memory Address Extension registers are cleared and loaded

Symbol:

If address confirmed flag = 1, then

 $PC + 1 \rightarrow PC$

DEAL Load Disk Extended Address

Octal code:

6615

Event time:

1,3

Execution time:

 $4.25 \mu s$

Operation:

with the track address data in the AC.

Symbol:

 $AC_{6-8} \rightarrow Core Memory Extension$

AC₁₋₅ → Disk Address Extension 32K, 64K, 96K, 128K

AC_{0 9-11} used in DEAC instruction

(See NOTE on opposite page)

DEAC Read Disk Extended Address Register

Octal code:

6616

Event time:

2,3

Execution time:

4.25 μs

Operation:

Clear the AC then load the contents of the disk Extended Address register into the AC

allowing program evaluation. Skip next instruction if address confirmed flag is set.

Symbol:

Disk Address Extension 32K, 64K, 96K, 128K → AC₁₋₅

Core Memory Extension \rightarrow AC₆₋₈

Photo-cell sync mark \rightarrow AC₀ (Available 200 μ s)

Data Request Late flag → AC₉

Non-Existent or Write Lock switch on \rightarrow AC₁₀

Parity Errors \rightarrow AC_{1,1}

NOTE

For the DEAL and DEAC instructions, refer to the diagrams shown below.

BITS 1-5 (DEAL INST) ACCUMULATOR (LOW ORDER 12 BITS) 0-11 of DMAW or DMAR DISC ADDRESS (17 BIT)

FIELD BITS 6-8 (DEAL INST)

CELL 7751 (CURRENT ADDRESS) CURRENT ADDRESS (MEMORY) ADDRESS (15 BIT)

DFSE Skip on Zero Error Flag

Octal code:

6621

Event time:

1

 $4.25 \mu s$

Execution time: Operation:

Skips next instruction if parity error, data request late, and write lock switch flag are clear.

Indicates no errors.

Symbol:

If Parity Error flag = 1

and Data Request Late flag = 1,

and Write Lock Switch flag = 1, then $PC + 1 \rightarrow PC$

DFSC Skip on Data Completion Flag

Octal code:

6622

 $4.25 \,\mu s$

Event time:

2

Execution time:

Skips next instruction if the completion flag is set. Indicates data transfer is complete.

Operation: Symbol:

If Completion flag = 1, $PC + 1 \rightarrow PC$

DMAC Read Disk Memory Address Register

Octal code:

6626

Event time:

2,3

Execution time:

 $4.25 \mu s$

Operation:

Clears the AC then loads contents of the Disk Memory Address register into the AC allowing

program evaluation. During read, the final address is the last one transferred.

Symbol:

 $DMA_{0-1} \rightarrow AC_{0-1}$

The computer can handle 12 bits; therefore, the high order bits for Disk and Memory addresses are manipulated by the DEAL and DEAC instructions. Low order bits are manipulated in the accumulator (AC).

The Disk address is a 17-bit value. Bit 1 of the DEAL and DEAC instructions is the most significant bit. The Memory address is a 17-bit value. Bit 6 of the DEAL and DEAC instructions is the most significant bit.

Note that the Word Count 7750 is the two's complement of the number of words to be transferred and that the Disk address is the desired starting address. The Memory or Current address (7751) is the desired address-1.

NOTE

Write Lock Switch status is true only when the disk module contains write instructions. The nonexistent disk condition will appear following the completion of a data transfer during read, where the address acknowledged was the last address of a disk and the next word to be addressed falls within a nonexistent disk. The completion flag for the data transfer is set by the nonexistent disk condition 16 microseconds following the data transfer.

6.3.2 Disk Memory System Type RF/RS08

The RF08 control and RS08 disk combine as a fast, low-cost, random access bulk storage package for the PDP-12A. One RS08 and RF08 provide 262,144 13-bit words (12 bits plus parity) of storage. Up to four RS08 disks can be added to the RF08 control for a total of 1,048,576 words of storage.

Data transfer rate on 60 Hz power is 16.2 microseconds per word or 20 microseconds per word on 50 Hz. Data transfer is accomplished through the three-cycle data break system of the PDP-12A.

Average access time with a 60 Hz disk is 16.67 milliseconds, or 20 milliseconds at 50 Hz power. Worst case access time is 33 milliseconds on 60 Hz power, or 40 milliseconds on 50 Hz power.

The RS08 disk unit contains a nickel-cobalt plated disk driven by a hysteresis synchronous motor. Data is recorded on a single disk surface by 128 fixed read/write heads. The RF08 and RS08 are designed for mounting in a standard 19-inch DEC cabinet.

The input-output transfer instructions for the RF/RS08 Disk Memory system are identical with the input-output transfer instructions for the Type DF32 Random Access Disk file (Table 6-4).

Instructions

The RF/RS08 has the following DF32 Programming Compatibility:

DCMA Clear Disk Memory Address Register

Octal code:

6601

Event time:

1

Execution time:

4.25 us

Operation:

Clear the Disk Memory Address register, and all other disk and maintenance flags except

interrupt enable.

DMAR Load Disk Memory Address Register and Read

Octal code:

6603

Event time:

1,2

Execution time

 $4.25 \mu s$

Operation:

Load the low order 12 bits of the Disk Memory Address with information (initial address) in the accumulator. Then clear the AC. Begin to read information from the disk into the specified core location. Clear parity error and completion flags. Clear interrupt flags.

During Read, the final address status is the last address transferred + 1.

When reading the last address of the last available disk the nonexistent disk flag is raised in coincidence with the completion flag.

DMAW Disk Memory Address Register and Write

Octal code:

6605

Event time:

1,3

Execution time:


 $4.25 \mu s$

Operation:

Load the low order 12 bits of the Disk Memory Address register with information (initial address) in the accumulator (AC). Then clear the AC. Begin to write information onto the disk from the specified core location. Clear parity error and completion flags. Clear interrupt flags.

During Write, the final address status is the last address transferred.

Write Lock Switch status is true only when disk module contains a Write Command.

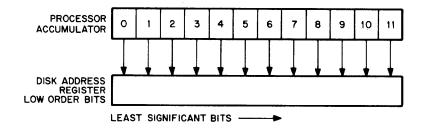

The DF32 maintenance instruction IOT 663X is not assigned to the RF08 system.

DCIM Clear Interrupt Enable and Core MA Extension Registers

Octal code:

6611

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

Clears the disk interrupt enable and core memory address extension registers.

DSAC Skip on Confirmed Flag

Octal code:

6612

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

Maintenance Instruction Skip next instruction if the Address Confirmed flag is a 1. (AC is

cleared.)

DIML Clear Interrupt Enable and MA Extension Register and Load

Octal code:

6615

Event time:

1,3


Execution time:

 $4.25 \mu s$

Operation:

Clears the interrupt enable, and memory address extension register. Then loads the interrupt enable and memory address extension registers with data held in the accumulator. Then clears

AC.

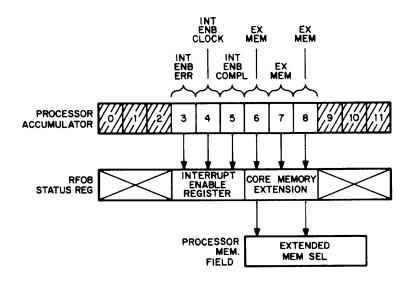

DIMA Clear AC and Load from Status

Octal code:

6616

Event time:

2,3

 
Execution time:

 $4.25 \mu s$

Operation:

Clears the accumulator. Then loads the contents of the status into the accumulator to allow

program evaluation



DFSE Skip on Zero Error Flag

Octal code:

6621

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

Skips the next instruction if there is a Parity Error, Data Request Late, Write Lock Status, or

Nonexistent Disk flag set.

DFSC Skip on Data Completion Flag

Octal code:

6622

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

Skips next instruction if the Completion flag is a 1 (data transfer is complete).

DISK Skip on Error or Completion Flag

Octal code:

6623

Event time:

1,2

Execution time:

4.25 µs

Operation:

Skips next instruction if either the Error or Completion flags or both are set.

DMAC Read Disk Memory Address Register

Octal code:

6626

Event time:

2,3

Execution time:

 $4.25 \mu s$

Operation:

Clears the accumulator. Then loads the contents of the Disk Memory address register into the

accumulator to allow program evaluation. This instruction must be issued when the

completion flag is set.

DCXA Clear Address Register

Octal code:

6641

Execution time:

4.25 μs

Operation:

Clears the high order 8-bit disk address register.

DXAL Clear Address Register and Load from AC

Octal code:

6643


Execution time:

 $4.25 \mu s$

Operation:

Clears the High Order 8 bits of the disk address register. Then loads the disk address register

from the data held in the accumulator. Then clears the AC.

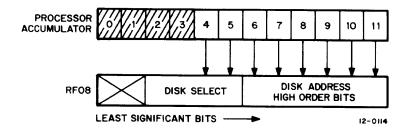

DXAC Clear AC and Load

Octal code:

6645


Execution time:

4.25 μs

Operation:

Clears the accumulator, then loads the contents of the High Order 8-bit disk address register

into the accumulator.

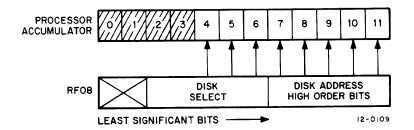

DMMT (Maintenance Instruction)

Octal code:

6646

Execution time:

 $4.25 \mu s$

Operation:

For maintenance purposes only, with the appropriate maintenance cable connections and the disk disconnected from the RS08 logic, the following standard signals may be generated by IOT's 646 and associated AC bits. AC is cleared. The maintenance register is initiated by issuing an IOT 601 command.


$AC_{11}(1)$	Track A Pulse
$AC_{10}(1)$	Track B Pulse
$AC_9(1)$	Track C Pulse
$AC_7(1)$	DATA PULSE (DATA HEAD #0)
$AC_6(1)$	+1 Photocell
$AC_0(1)$	+1 DBR

Setting DBR to a 1 causes Data Break Request in computer.

NOTE

TAP must be generated to strobe Track B signal into address comparison network.

 Disk Address Register - 20 bits



Programming Example

A programming example that writes a block of data onto the disk is shown below. For simplicity, the example assumes that all data and instructions are within the same page, but in actual practice this may not be true.

Table 6-4. DF32 Instructions Compared with RF/RS08 Instructions

DF32 Mnemonic	Octal Code	RF08 Mnemonic	RF08 to DF32 Comparison
DCMA	6601	same	Identical functions.
DMAR	6603	same	Identical functions.
DMAW	6605	same	Identical functions.
DCEA	6611	DCIM	Clears interrupt enable, does not clear EMA. On both units, clears memory address extension.
DSAC	6612	same	Identical functions.
DEAL	6615	DIML	Similar, except functions transmitted from the AC are different. EMA information not transmitted. See DXAL.
DEAC	6616	DIMA	Similar, except that functions transmitted to the AC are different. See DXAC.
DFSE	6621	same	Instruction is skip on error, rather than skip-no error. NXD added as an error.
DFSC	6622	same	Identical function.
(none)	6623	DISK	New instruction. Skips on error or data completion, or both. (DFSE and DFSC combined.) Skip enabled at IOP 2.
DMAC	6626	same	Identical functions.
(none)	6641	DCXA	Clears EMA.
(none)	6643	DXAL	Clear and load EMA with information in the accumulator.
(none)	6645	DXAC	Clear accumulator and load address in EMA into the accumulator.
(none)	6646	DMMT	Maintenance instruction. See description.

	/CALLING SEQUENCE	
SUB,	JMS WRT	JUMP TO WRITE SUBROUTINE
	0	/CONTAINS WORD COUNT
	0	/CONTAINS INITIAL CORE MEMORY ADDRESS
	0	CONTAINS TRACK AND UNIT NUMBER
	0	/CONTAINS TRACK ADDRESS
	XXX	CONTINUE WITH MAIN PROGRAM
	/WRITE SUBROUTINE	,
WRT,	0	/ENTER WRITE SUBROUTINE
	TAD I WRT	/FETCH WORD COUNT
	DCA WC	/DEPOSIT IN WORD COUNT REGISTER
	ISZ WRT	/INCREMENT POINTER
	TAD I WRT	/FETCH INITIAL CORE MEMORY ADDRESS
	DCA CA	/DEPOSIT INTO CURRENT ADDRESS REGISTER
	ISZ WRT	/INCREMENT POINTER
	TAD I WRT	
	DIML	
	ISZ WRT	
	TAD I WRT	/FETCH TRACK AND UNIT NUMBER
	DXAL	/DEPOSIT INTO REGISTER IN RF08 CONTROL
	ISZ WRT	/INCREMENT POINTER
	TAD I WRT	/FETCH TRACK ADDRESS
	DMAW	/TRACK ADDRESS TO DMA IN DISK;
		/START WRITE OPERATION
		/WRITE OPERATION
	DISK	/FOR ERROR OR COMPLETE
	JMP1	/NO, WAIT
	DFSE	/ANY ERRORS?
	JMP .+2	/NO, SKIP OVER ERROR EXIT
	JMP ERR	/YES, TO ERROR SUBROUTINE
	ISZ WRT	/INCREMENT POINTER TO EXIT ADDRESS
	JMP I WRT	/EXIT PROGRAM

NOTE

This coding assumes no live interrupts.

The calling subroutine must be set up so that the subsequent locations to SUB (SUB+1, SUB+2, etc) contain the parameters as shown in the comments column.

The JMS WRT instruction causes a subroutine jump location WRT with the contents of the PC-1 (which contains symbolic address SUB-1) deposited into location WRT. Since location WRT now contains SUB+1, the first instruction of the subroutine (TAD I WRT) loads the AC with the contents of SUB+1 or the word count. The word count is then deposited into the WC (Memory Address 7750) register. Similarly, the initial address is deposited into the CA (Memory Address 7751) register. The program then proceeds to set up the EMA and DMA registers and starts the write operation. After the DMAW instruction is issued, the data transfer operation begins and continues independently of the program; it operates under control of the data break facility to transfer data. When the transfer is complete, the DCF (Data Complete Flag) comes up and, when sensed by the DFSC control, passes to the DFSE instruction. DFSE then senses for errors; and if any are detected, control jumps to an error or diagnostic (not shown) routine. If no errors are found, control exits from the subroutine back to the main program to resume main processing.

It should be noted that, since the data transfer operates independently of the program, the subroutine could be exited following the DMAW instruction. An interrupt subroutine could handle the post data transfer processing, since the DCF and ERROR FLAGS generated an interrupt.

An identical program could handle data transfers for a read operation, except that the DMAW instruction is replaced by the DMAR instruction.

Specifications:

Storage Capacity

Each RS08 stores 262,144 13-bit words (12 plus one parity bit).

Disks

Four RS08s may be controlled by one RF08 for 1,048,576 words.

Data Transfer Path

Three-Cycle Break

Address Locations
7750 Word Count
7751 Memory Address

Data Transfer Rate

60 Hz Power

50 Hz Power

16.2 µs per word

 $20 \mu s$ per word

Minimum Access Time

258 µs

 $320 \mu s$

Average Access Time

16.9 ms

20.3 ms

Maximum Access Time

33.6 ms

40.3 ms

Program Interrupt

33 ms Clock Flag

Data Transmission Complete Flag

Error Flag

Write Lock Switches

Eight switches per disk capable of locking out any combination of eight 16,384

word blocks in address 0 to 131,071.

Data Tracks

128

Words Per Track

2048

Recording Method

NRZI

Density

1100 BPI Maximum

Timing Tracks

3 plus 3 spare

Operating Environment

Recommended temperature 65° to 90°F. Relative humidity 20% to 80%. No

condensation during storage or operating.

Vibration/Shock

Good isolation is provided. Vibrating, shaking, or rocking of the cabinet with large, low frequency displacements can cause data errors. For example, hand fork lift trucks operating on wooden floors cause excessive vertical displacements which could cause errors. The RS08 is not designed for aircraft or shipboard

mounting.

Heat Dissipation

RF08: 150 watts

RS08: 500 watts

AC Power Requirements

115 \pm 10 Vac, single phase, 50 \pm 2 or 60 \pm 2 Hz

RS08

Motor start 5.5 amps for 20 ± 3 sec. Motor run 4.0 amps continuous.

Line Frequency Stability

Maximum line frequency drift 0.1 Hz/sec. A constant frequency motor-generator set or static ac/ac inverter should be provided for installations with unstable

power sources.

Reliability

Six recoverable errors and one nonrecoverable error in 2 x 10⁹ bits transferred. A recoverable error is defined as an error that occurs only once in four successive reads. All other errors are nonrecoverable. On-off cycling of the RS08 is not recommended. The RS08 motor control operates independently of the computer power control, thus eliminating on-off cycling except for power failures.

Cabinet

A H950 cabinet is designed to accommodate one RF08, up to two RS08s, and power supplies. Two additional RS08s can be mounted in a second H950. Other equipment should not be mounted in disk cabinets.

6.3.3 RK8 Disk Cartridge Memory System

The RK08 Control and RK01 Disk Drive (RK8) are low cost, random access, removable disk storage devices. One RK08/RK01 provides 831,488 13-bit (12 bits plus parity) words of storage. Up to four RK01 disks can be operated by the RK08 Control for a total of 3,325,952 words of storage.

The removable cartridge utilized is an IBM 2315 disk pack or equivalent with a single aluminimum disk platter coated on both sides with magnetic oxide. Average access time is 154 milliseconds with the read/write head at random positions. Data transfer rate is 16.7 microseconds via the PDP-12 single-cycle data break facility. The RK8-P will operate off the positive I/O bus. An RK8-N is also available for connection to a negative I/O bus.

Instructions


DLDC Load Command Register

Octal code:

6732

Operation:

Loads the Command Register from the AC, clears the AC.

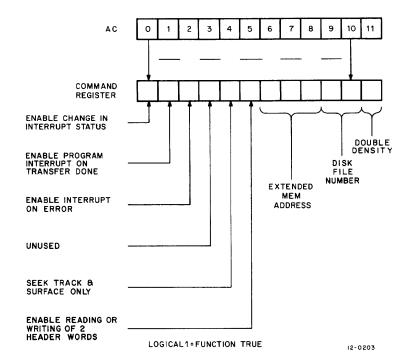

*DLDR Load Disk Address and Read

Octal code:

6733

Operation:

Loads track, surface, and sector address from AC, then clears AC and starts to read data from

disk if Command Register bit 4 = 0.

*DLDW Load Disk Address and Write

Octal code:

6735

Operation:

Loads track, surface, and sector address from AC, then clears AC. Starts to write on disk if

Command Register bit 4 = 0.

*DCHP Load Disk Address and Check Parity


Octal code:

6737

Operation:

Loads track, surface, and sector address from AC, then clears AC. Reads data and checks

parity if Command Register bit 4 = 0.

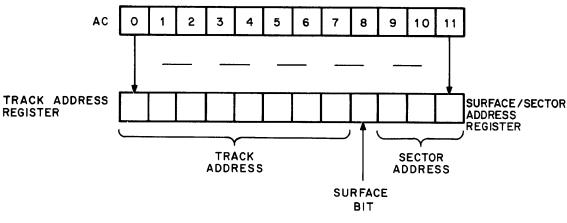

12-0199

^{*}If command register bit 4 = 1, instruction will be executed only to seek track and surface. These three instructions start all disk operations.

DRDA Read Disk Address

Octal code:

6734

Operation:

Clears AC and then reads Track Address Counter and surface/sector counter into AC.

DRDC Read Disk Command Register

Octal code:

6736

Operation:

Clears AC then reads Command Register into the AC.


DRDS Read Disk Status Register

Octal code:

6741

Operation:

Clears the AC and then reads the Status Register into the AC.

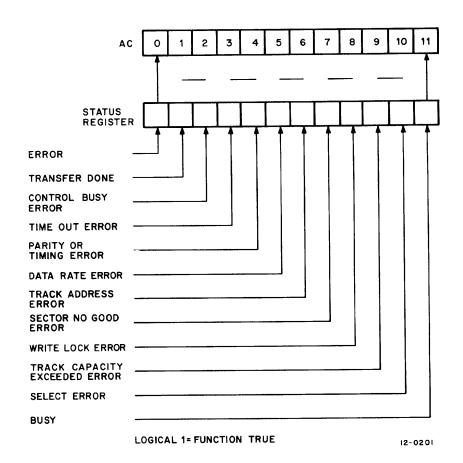

DCLS Clear Status Register

Octal code:

6742

Operation:

Clears the Status Register.

DMNT Load Maintenance Register


Octal Code:

6743

Operation:

Loads Maintenance register from AC and carries out the operation specified. Bits will remain

set until DMNT is issued with AC bits = 0.

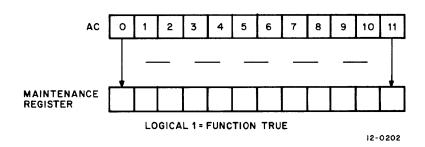

AC Bit	
0	Transfer contents of Track address Register to Track counter Register.
1	Transfer Data Register to Serial Register.
2	Transfer Serial Register to Data Register.
3	Clear AC and Read Data Register into AC.
4	Shift a "1" into the Serial Register.
5	Shift a "0" into the Serial Register.
6	Unformatted Disk
7	Sector Pulse.
8	Index Pulse.
9-11	Not used.

DLDA Load Disk Address (Maintenance Only)

Octal code:

6731

Operation:

Loads the disk address register with the content of AC.

DSKD Skip on Transfer Done Flag = 1

Octal code:

6745

Operation:

Skips next instruction if the Transfer Done Flag is a 1.

DSKE Skip on Error Flag = 1

Octal code:

6747

Operation:

Skip when Error flag is equal to 1.

DCLA Clear All

Octal code:

6751

Operation:

Clears selected Disk to Track 000. Then clears all control registers and flags except disk

selection. Transfer done set when disk positioned on Track 000.

DRWC Read Word Count Register

Octal Code:

6752

Operation:

Clears AC, then reads the contents of the Word Count register into the AC.

DLWC Load Word Count Register

Octal code:

6753

Operation:

Loads Word Count register from AC, then clears the AC.

DLCA Load Current Address Register

Octal code:

6755

Operation:

Load Current Address register from AC; then clears the AC.

DRCA Read Current Address Register

Octal code:

6757

Operation:

Clears the AC then reads the contents of the Current Address register into the AC.

Example of I/O Subroutine

DISKIO, 0

0 /SUBROUTINE ENTRY POINT
TAD CNT /FETCH # OF WORDS TO BE READ
DLWC /LOAD WORD COUNT REGISTER
TAD CUR /FETCH ADD OF MEMORY BUFFER
DLCA /LOAD CUR ADDR. REGISTER
TAD 0000 /PUT COMMAND IN ACCUMULATOR
DLDC /LOAD COMMAND REGISTER

TAD ADR /FETCH TRACK, SURFACE, & SECTOR
DLDR /LOAD DISK ADR AND READ DATA

/DLDW WOULD HAVE WRITTEN

DSKD /DONE WITH TRANSFER?

JMP .-1 /NO - GO BACK 1

DSKE /YES – IS THERE AN ERROR?

JMP I DISKIO /NO ERROR – RETURN

JMP ERR /GO TO ERROR SUBROUTINE

CNT 0 /# WORDS TO BE READ

CUR 0 /BEG. ADDR. OF MEMORY BUFFER

ADR 0 /DISK ADDRESS

Models *

RK8-P Positive Bus System; includes RK01 and RK08-P

RK8-N Negative Bus System; includes RK01 and RK08-N

RK01 Consists of disk drive, interface and removable cartridge (up to 4 per RK8 system)

RK08-P Positive Bus disk control

RK08-N Negative Bus disk control

^{*} See RK8 Manual for details.

Specifications

Disks

Four RK01s per RK08 for 3,325,952 words.

Storage Capacity

Each RK01 stores 831,488, 12-bit words.

Data Transfer Rate

 $16.7 \mu s$ per word

Transfer Path

Single-cycle Data Break

Minimum Access Time

2.35 ms

Average Access Time

154 ms

Maximum Access Time

477 ms

Settle Time

37 ms

Program Interrupt

Transfer Done Flag

Write lock

Two words at the beginning of each track contain status information that is automatically checked for write lock of sectors. Also total disk can be

write-locked.

Data Tracks

200 plus 3 spare

Words per Track

4096 (2048 on each of two sides)

Sectors

16 per track

Words per Sector

256

Min. Block Size

256 words

Max. Block Size

4096 words

Recording Method

Double Frequency-Time plus Data

Density

1026 bits/inch max.

Speed

1500 rpm

Environmental Requirements

Operating Temp

+65°F to 90°

Operating Humidity

20% to 80% excluding all conditions which would cause condensation.

Heat Dissipation

RK08 - 150 watts

RK01 per drive; 700 watts, 1 KW, surge

AC Power Requirements

115 ±10 VAC, 60 ±½ Hertz 230 ±20 VAC, 60 ±½ Hertz Mechanical Package

One standard DEC cabinet will accommodate the RK08 and one RK01. A second cabinet will house two RK01 units. A third cabinet will house a fourth RK01.

6.3.4 Disk Software

Mass Storage LAP6-DIAL-MS, commonly referred to as DIAL-MS or DISK-DIAL, is a modified version of LAP6-DIAL that may use a disk for the LAP6-DIAL System and/or user programs. The minimum hardware configuration required is 8K of core storage and two LINCtape transports. LAP6-DIAL-MS will support one of the following:

- a. One or two DF32 or FD32D Disks
- b. One to four RF08 Disks
- c. One RK8 Disk.

LAP6-DIAL-MS will use only one of the above; for example, the RK8 rather than a DF32, or a RK8 rather than a RF08, if more than one are installed in the system. It is not possible to operate a DF32 and a RF08 in the same system as the IOT instructions are similar.

A brief description of LAP6-DIAL-MS is provided in Paragraph 7.1.1.

6.4 MAGNETIC TAPE

6.4.1 Automatic Magnetic Tape Control, Type TC58

Functional Description

The Type TC58 will control the operation of a maximum of eight digital magnetic tape transports, Types TU20 and TU20A. The Type TC58 interfaces with the PDP-12 three-cycle data break facility, which it uses for data transfer directly between system core memory and magnetic tape. The tape transports offer industry compatibility (or IBM compatibility) in both 7- and 9-channel tape transports with the following characteristics:

Transport	Tape Speed (ips)	Densities (bpi)
TU20 (7-channel)	45	200/556/800
TU20A (9-channel)	45	800

Transfers are governed by the memory word count (WC) and current address (CA) registers associated with the assigned data channel (memory locations 32₈ and 33₈). Since the CA is incremented before each data transfer, its initial contents should be set to the desired initial address minus one. The WC is also incremented before each transfer and must be set to the two's complement of the desired number of data words to be transferred. In this way, the word transfer which causes the word count to overflow (WC becomes zero) is the last transfer to take place. The number of IOT instruction required for the TYPE TC58 is minimized by transferring all necessary control data (unit number, function, mode, direction, etc) from the PDP-12 accumulator (AC) to the control using IOT instructions. Similarly, all status information (status bits, error flags, etc) can be read into the AC from the control unit by IOT instructions.

During normal data reading, the control assembles 12-bit computer words from successive frames read from the information channels of the tape. During normal data writing, the control disassembles 12-bit words and distributes the bits so they are recorded on successive frames of the information channels.

Instructions

The instructions for the Magnetic Tape Control System are as follows:

MTSF Skip on Error Flag or Magnetic Tape Flag

Octal code:

6701

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

The status of the error flag (EF) and the magnetic tape flag (MTF) are sampled. If either or both are set, the contents of the PC are incremented by one, skipping the next instruction.

Symbol:

If MTF or EF = 1, PC + 1 \rightarrow PC

MTCR Skip on Tape Control Ready

Octal code:

6711

Event time:

.1

Execution time:

Operation:

If the tape control is ready to receive a command, the PC is incremented by one, skipping the

next instruction.

Symbol:

If Tape Control Ready, $PC + 1 \rightarrow PC$

MTTR Skip on Tape Transport Ready

Octal code:

6721

Event time:

1

Execution time:

ion time: $4.25 \mu s$

Operation:

The next sequential instruction is skipped if the tape transport is ready.

Symbol:

If tape unit ready, $PC + 1 \rightarrow PC$

MTAF Clear Registers, Error Flag and Magnetic Tape Flag

Octal code:

6712

Event time:

4.25 µs

Operation:

Clears the status and command registers, and the EF and MTF if tape control is ready. If tape

control is not ready, clears MTF and EF flags only.

Symbol:

If tape control is ready, $0 \rightarrow MTF$, $0 \rightarrow EF$,

 $0 \rightarrow \text{command register}$

If tape control not ready, $0 \rightarrow MTF$, $0 \rightarrow EF$

MTRC Inclusive OR Contents of Command Register

Octal code:

6724

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

Inclusively OR the contents of the command register into AC₀₋₁₁.

Symbol:

AC V command register \rightarrow AC₀₋₁₁

MTCM Inclusive OR Contents of Accumulator

Octal code:

6714

Event time:

3

Execution time:

4.25 μs

Operation:

Inclusively OR the contents of AC₀₋₅, 9-11 into the command register: JAM transfer bits 6, 7,

8 (command function).

Symbol:

 AC_{0-5} , AC_{9-1} V command register \rightarrow command register

 $AC_{6-8} \rightarrow command register bits 6-8$

MTLC Load Command Register

Octal code:

6716

Event time:

2,3 4.25 μs

Execution time:

Load the contents of AC₀₋₁₁ into the command register.

Operation: Symbol:

 $AC_{0-1} \rightarrow command register$

Inclusive OR Contents of Status Register

Octal code:

6704

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

Inclusively OR the contents of the status register into AC₀₋₁₁

Symbol:

Status Register V AC → AC₀₋₁₁

MTRS Read Status Register

Octal code:

6706

Event time:

2,3

Execution time:

4.25 µs

Operation:

Read the contents of the status register into $AC_{0-1,1}$

Symbol:

Status Register $\rightarrow AC_{0-1,1}$

MTGO Mag Tape GO

Octal code:

6722

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

Set GO bit to execute command in the command register if command is legal.

Symbol:

None

MCLA Clear the AC

Octal code:

6702

Event time:

2

Execution time:

 $4.25 \,\mu s$

Operation:

Clear the accumulator.

Symbol:

 $0 \rightarrow AC$

Although any number of tapes may be rewinding simultaneously, data transfer may take place to or from only one transport at any given time. In this context, data transfer includes these functions: read or write data, write EOF (end of file), read/compare, and space. When any of these functions is in process, the tape control is in the not ready condition. A transport is said to be not ready when tape is in motion, when transport power is off, or when it is off line.

Data transmission may take place in either parity mode, odd-binary or even-BCD. When reading a record in which the number of characters is not a multiple of the number of characters per word, the final characters come into memory left-justified.

Ten bits in the magnetic tape status register retain error and tape status information. Some error types are combinations, such as lateral and longitudinal parity errors (parity checks occur after both reading and writing of data), or have a combined meaning, such as illegal command, to allow for the maximum use of the available bits.

The magnetic tape status register reflects the state of the currently selected tape unit. Interrupts may occur only for the selected unit. Therefore, other units which may be rewinding, for example, will not interrupt when done.

A special feature of this control is the Write Extended Inter-Record Gap capability. This occurs on a write operation when Command Register bit 5 is set. The effect is to cause a 3-inch inter-record gap to be produced before the record is written. The bit is automatically cleared when the writing begins. This is very useful for creating a gap of blank tape over areas where tape performance is marginal.

Magnetic Tape Functions

For all functions listed below, upon completion of the data operation (after the end-of-record character passes the read head), the MTF (magnetic tape flag) is set, an interrupt occurs (if enabled), and errors are checked.

No Operation – A NO OP instruction defines no function in the command register. A MTGO instruction with NO OP will cause an illegal command error (set EF).

Space – There are two instructions for spacing records, SPACE FORWARD and SPACE REVERSE. The number of records to be spaced (two's complement) is loaded into the WC. CA does not need to be set. MTF (magnetic tape flag) is set, and an interrupt occurs at WC overflow, EOF (end of file), or EOT (end of tape), whichever occurs first. When issuing a space instruction, both the density and parity bits must be set to the density and parity in which the records were originally written.

Load Point or Beginning of Tape (BOT) detection during a backspace terminates the function with the BOT bit set. If a SPACE REVERSE instruction is given when a transport is set at BOT, the instruction is ignored, the illegal command error and BOT bits are set, and an interrupt occurs.

Read Data — Records may be read into memory in the forward mode only. Both CA and WC must be set; CA to the initial core address minus one, WC to the two's complement of the number of words to be read. Both density and parity bits must be set.

If WC is set to less than the actual record length, only the desired number of words are transferred into memory. If WC is greater than or equal to the actual record length, the entire record is read into memory. In either case, both parity checks are performed, the MTF is set, and an interrupt occurs when the end-of-record mark passes the read head. If either lateral or longitudinal parity errors or bad tape have been detected, or an incorrect record length error occurs (WC not equal to the number of words in the record), the appropriate status bits are set. An interrupt occurs only when the MTF is set.

To continue reading without stopping tape motion, MTAF (clear MTF) and MTGO instructions must be executed. If the MTGO command is not given before the shut down delay terminates, the transport will stop.

Write Data — Data may be written on magnetic tape in the FORWARD DIRECTION ONLY. For the WRITE DATA function, the CA and WC registers and density and parity bits must be set. WRITE DATA is controlled by the WC in such a way that, when the WC overflows, data transfer stops, and the EOR (end of record) character and IRG (inter-record gap) are written. The MTF is set after the EOR has passed the read head. To continue writing, a MTGO instruction must be issued before the shut-down delay terminates. If an error occurs, the EF will be set when the MTF is set.

Write EOF – The Write EOF instruction transfers a single character (17₈) record to magnetic tape and follows it with the EOR character; CA and WC are ignored for WRITE EOF. The density bits must be set, and the command register parity bit should be set to even (BCD) parity. If it is set to odd parity, the control will automatically change it to even.

When the EOF marker is written, the MTF is set and an interrupt occurs. The tape transport stops, and the EOF status bit is set, confirming the writing of EOF. If odd parity is required after a WRITE EOF, it must be specifically requested through the MTLC instruction.

Read/Compare — The READ/COMPARE function compares tape data with core memory data. It can be useful for searching and positioning a magnetic tape to a specific record, such as a label or leader, whose content is known in core memory, or to check a record just written. READ/COMPARE occurs in the forward direction only; CA and WC must be set. If there is a comparison failure, incrementing of the CA ceases, and the READ/COMPARE error bit is set in the status register. Tape motion continues to the end of the record; the MTF is then set, and an interrupt occurs. If there has been a READ/COMPARE error, examination of the CA reveals the word that failed to compare.

Rewind — The high speed REWIND instruction does not require setting of the CA or WC. Density and parity settings are also ignored. The REWIND instruction rewinds the tape to loadpoint (BOT) and stops. Another unit may be selected after the instruction is issued and the rewind is in process. MTF is set, and an interrupt occurs (if the unit is selected) when the unit is ready to accept a new instruction. The selected unit's status can be read to determine or verify that REWIND is in progress.

Continued Operation

- a. To continue operating the same mode, the MTGO instruction is given before tape motion stops. The order of instructions required for continued operation are as follows:
 - (1) MTLC, if the instruction is to be changed.
 - (2) MTAF, clears only MTF and EF flags, since tape control will be in a Not Ready state.
 - (3) MTGO, if MTLC requested an illegal condition; the EF will be set at this time.
- b. To change modes of operation, either in the same or opposite direction, the MTLC instruction is given to change the mode and a MTGO instruction is given to request the continued operation of the drive. If a change in direction is ordered, the transport will stop, pause, and automatically start up again.
- c. If the WRITE function is being performed, the only forward change in command that can be given is WRITE EOF.
 - d. If no MTGO instruction is given, the transport will shut down in the inter-record gap.

NOTE

Flags will not be set when the control or the transport becomes ready, except if the REWIND instruction is present in the command register and the selected drive reaches BOT and is ready for a new instruction.

e. If a WRITE (odd parity) instruction is changed to WRITE EOF, the parity is automatically changed to even.

NOTE

Even parity will remain in the command register unless changed by a new command instruction, MTLC, which clears and loads the entire command register.

Status or Error Conditions

Twelve bits in the magnetic tape status register indicate status or error conditions. They are set by the control and cleared by the program.

The magnetic tape status register bits are:

Bit	Function (When Set)
0	Error flag (EF)
1	Tape rewinding
2	Beginning of tape (BOT)
3	Illegal command
4	Parity error (Lateral or Longitudinal)
5	End of file (EOF)
6	End of tape (EOT)
7	Read/Compare error
8	Record length incorrect
	WC = 0 (long)
	$WC \neq 0$ (short)
9	Data request late
10	Bad tape
11	Magnetic tape flag (MTF) or job done

The register bits are equivalent in position to the AC bits (i.e., $SR_0 = AC_0$, etc).

MTF(SR11) — The MTF flag is set under the following conditions:

- a. Whenever the tape control has completed an operation (after the EOR mark passes the read head).
- b. When the selected transport becomes ready following a normal REWIND function. These functions will also set the EF if any errors are present.

EOF (SR5) — End-of-file (EOF) is sensed and may be encountered for those functions which come under the heading of READ STATUS FUNCTION; i.e., SPACE, READ DATA, or READ/COMPARE and WRITE EOF. When EOF is encountered, the tape control sets EOF = 1. MTF is also set; hence, an interrupt* occurs and the EOF status bit may be checked.

EOT (SR6) and BOT (SR2) — End-of-tape (EOT) detection occurs during any forward instruction when the EOT reflective strip is sensed. When EOT is sensed, the EOT bit is set, but the function continues to completion. At this time the MTF is set (and EF is set), and an interrupt occurs.

Beginning-of-tape (BOT) deflection status bit occurs only when the beginning-of-tape reflective strip is read on the transport that is selected.

When BOT detection occurs, and the unit is in reverse, the function terminates. If a tape unit is at load point when a REVERSE instruction is given, an illegal command error bit is set, causing an EF with BOT set. An interrupt then occurs.

^{*}All references to interrupts assume the tape flags have been enabled to the interrupt (command register bit 9 = 1) and the unit is selected.

Illegal Command Error (SR3) - The illegal command error bit is set under the following conditions:

- a. A command is issued to the tape control with the control not ready.
- b. A MTGO instruction is issued to a tape unit which is not ready when the tape control is ready.
- c. Any instruction which the tape control, although ready, cannot perform; e.g.:
 - (1) WRITE with WRITE LOCK condition
 - (2) 9-channel tape and incorrect density
 - (3) BOT and SPACE REVERSE

Parity (SR4) — Longitudinal and lateral parity checks will occur in both reading and writing. The parity bit is set for either lateral or longitudinal parity failure. A function is not interrupted, however, until MTF is set. Maintenance panel indicators are available to determine which type of parity error occurred.

Read Compare Error (SR7) – When READ/COMPARE function is underway, SR7 is set to 1 for a READ/COMPARE ERROR (see earlier section on READ/COMPARE for further details).


Bad Tape (SR10) – A BAD TAPE ERROR indicates detection of a bad spot on the tape. Bad tape is defined as three or more consecutively missing characters followed by data, within the period defined by the READ SHUTDOWN DELAY. The error bit is set by the tape control when this occurs. MTF and interrupt do not occur until the end of the record in which the error was detected.

Record Length Incorrect (SR8) — During a read or read/compare, this bit is set when the WC overflow differs from the number of words in the record. The EF flag is set.

Data Request Late (SR9) — This bit can be set whenever data transmission is in progress. When the DATA FLAG causes a break cycle, the data must be transmitted before a write pulse or a read pulse occurs. If it does not, this error occurs, and data transmission ceases. The EF flag and bit 9 of the status register are set when the MTF is set.

Error Flag (SRO) — The ERROR FLAG (EF) is set whenever an error status bit is present at the time that MTF is set. However, when an ILLEGAL COMMAND is given, the EF is set and the MTF is not set.

Command Register Contents

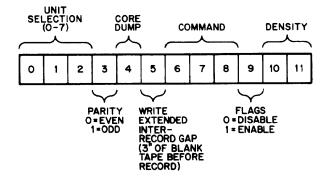

Unit Selection

		Bits	
Unit	0	1	2
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1
4	1	0	0
5	1	0	1
6	1	1	0
7	1	1	1

Density Selection

	Bits	
Density	10	11
200 bpi	0	0
556 bpi	0	1
800 bpi	1	0
800 bpi		
9 channel	1	1

Command Selection

	Bits		
Command	6	7	8
NO OP	0	0	0
Rewind	0	0	1
Read	0	1	0
Read/Compare	0	1	1
Write	1	0	0
Write EOF	1	0	1
Space Forward	1	1	1
Space Reverse	1	1	1

Magnetic Tape Function Summary

LEGEND CA = Current Address Register = 33₈

WC = Word Count Register = 32₈

F = Forward R = Reverse

DS = Density Setting

PR = Parity Setting

EN = Enable Interrupt

Function	Characteristics	Status of Error Types
NO-OP	CA: Ignored WC: Ignored DS: Ignored PR: Ignored EN: Ignored	Illegal BOT Tape Rewinding
SPACE FORWARD	CA: Ignored WC: 2's comp. of number of records to skip DS: Must be set PR: Must be set EN: Must be set	Illegal EOF Parity Bad Tape MTF, BOT, EOT
SPACE REVERSE	Same as SPACE FORWARD	Illegal EOF Parity Bad Tape BOT MTF
READ DATA	 CA: Core Address - 1 WC: 2's comp. of number of words to be transferred DS: Must be set PR: Must be set EN: Must be set 	Illegal EOF Parity Bad Tape MTF EOT Data Request Late Record Length Incorrect
WRITE DATA	Same as READ DATA	Illegal EOT Parity MTF Bad Tape Data Request Late
WRITE EOF	CA: Ignored WC: Ignored DS: Must be set PR: Must be set EN: Must be set	Same as WRITE DATA plus EOF
READ/COMPARE	Same as READ DATA	Illegal EOF Read/Compare Error Bad Tape MTF EOT Data Late Record Length Incorrect
REWIND	CA: Ignored WC: Ignored DS: Ignored PR: Ignored EN: Must be set	Illegal Tape Rewinding MTF BOT

6.4.2 Magnetic Tape Transports

The following paragraphs describe some of the Magnetic Tape Transports that are available for the PDP-12A. These machines are also compatible with the automatic Tape Control Type TC58.

6.4.2.1 Magnetic Tape Transport, Type TU20 (7-Channel) — The Type TU20 is a digital magnetic tape transport designed to be compatible with the Type TC58 Magnetic Tape Control. The transport operates at a speed of 45 inches per second, and has three selectable densities: 200, 556, and 800 bpi. The maximum rate is 36,000 six-bit characters per second. Standard seven-channel IBM-compatible tape format is used. The specifications for the unit are as follows:

Format: NRZI. Six data bits plus one parity bit. End and loadpoint sensing compatible with IBM 729 I-VI.

Tape: Width 0.5 in., length 2400 ft. (1.5 mil.). Reels are 10.5 in. in diameter, IBM-compatible, with file protect (WRITE LOCK) ring.

Head: Write-read gap 0.300 in., Dynamic and skew is less than 14 microseconds.

Tape Specifications: 45 ips speed. Start time is less than 5 milliseconds. Start distance is 0.080 in. (+0.035, -0.025 in.). Stop time is less than 1.5 milliseconds. Stop distance is 0.045 in. (±0.05 in.).

Density: 200, 556, and 800 bpi. Maximum transfer rate is 36 kHz.

Transport Mechanism: Pinch roller drive; vacuum column tension.

Controls: ON/OFF, ON LINE, OFF LINE, FORWARD, REVERSE, REWIND, LOAD, RESET.

Physical Specifications: Width 22-1/4 in., depth 27-1/6 in., height 69-1/8 in., weight 600 lbs.

Read (Read/Compare) Shutdown Delay: 3.6 milliseconds.

 
Write Shutdown Delay: Approximately 4.5 milliseconds.

9-Track Operation

9- and 7-track transports may be intermixed on the Type TC58 control. When a transport is selected, it automatically sets the control for proper operation with its number of tracks.


Control of 9-track operation is identical to 7-track, except as noted below:

Write: A word in memory is written on tape with the following format:



X- THESE BITS ARE IGNORED

 
Read - A word is read into memory from tape with the following format:



Read/Compare - A direct comparison of the characters on tape is made with those in memory. The parity bit is ignored, as are bits 0-3 in each memory word.

Core Dump Mode — This mode is used only with 9-track transports. It is entered by setting bit 4 of the command register.

 Core dump mode permits the dumping of complete memory words in the form of two six-bit characters. The format is:



This is accomplished by utilizing only 7 of the 9 tracks on the tape.

Tape written in CORE DUMP MODE must be READ (READ/COMPARE) in this same mode. These operations are the same as for a 7-track transport.

6.4.2.2 Magnetic Tape Transport, Type TU20A (9-Channel) — The Type TU20A is a digital magnetic tape transport designed to be compatible with the Type TC58 Magnetic Tape Control. The transport operates at a speed of 45 inches per second, and a density of 800 bpi. The maximum transfer rate is 36,000 eight-bit characters per second. Standard nine-channel IBM-compatible tape format is used. The specifications for the unit are as follows:

Format: NRZI. Eight data bits plus one parity bit. End and loadpoint sensing compatible with IBM.

Tape: Width 0.5 in., length 2400 ft. (1.5 mil.). Reels are 10.5 in. in diameter, IBM-compatible, with file protect (WRITE LOCK) ring.

Heads: Write-read gap of 0.150 in. Dynamic and static skew is less than 14 microseconds.

Tape Specifications: 45 ips speed. Rewind time is less than 5 milliseconds. Start distance is 0.080 in. (+0.035, -0.025 in.). Stop time is less than 1.5 milliseconds. Stop distance is 0.045 in. (±0.015 in.).

Density: 800 bpi. Maximum transfer rate is 36 kHz.

Transport Mechanism: Pinch roller drive; vacuum column tension.

Controls: ON/OFF, ON LINE, OFF LINE, FORWARD, REVERSE, REWIND, LOAD, RESET.

Physical Specifications: Width 22-1/4 in., depth 27-1/6 in., height 69-1/8 in. Weight 600 lbs.

Read (READ/COMPARE) Shutdown Delay: 3.6 milliseconds.

Write Shutdown Delay: Approximately 4.5 milliseconds.

6.4.2.3 Magnetic Tape Transport, Type TU20C

General Description

The TU20C connects to the PDP-12 via the TC58 Automatic Magnetic Tape Control. IOT instructions, issued by the PDP-12, control the operation of the tape transport; these instructions are decoded within the tape control unit to specify the type of tape transport operation. To write on tape, the tape control unit sends a motion-forward instruction and a write-enable instruction, and, for each character to be recorded, a record data pulse. For spacing and reading tape, the tape control unit sends the required motion instruction. Therefore, regardless of the operation, the tape is always being read and the data is always being transmitted to the tape control unit; this information is used for detecting end-of-record to terminate operation. The TU20C operates at 45 inches per second, and has the capability of recording in three densities, 200, 556, and 800 bpi; maximum transfer rate is, therefore, $800 \times 45 = 36,000$ six-bit characters per second. Standard seven-channel IBM-compatible tape format is used.

A nine-channel IBM-compatible version of the TU20C, designated TU20B, is also available; remaining characteristics of the TU20B are essentially the same as those for the TU20C.

Operation

Either version of the Tape Transport (TU20C, TU20B) may be operated in the local mode from the control panel or in the remote mode from the PDP-12. Local operation is selected by depressing the front panel OFF LINE control; this action causes the FORWARD, RESET, REVERSE, and REWIND switches to become operable. If either the FORWARD, REVERSE, or REWIND control is depressed, the tape moves in the specified direction until RESET is depressed, the beginning of the tape is detected for rewind, or the end of the tape is detected for FORWARD. Activating the front panel ON-LINE control places the Tape Transport in the remote mode, wherein it is controlled by the PDP-12; the Tape Transport must, however, be selected by the TC58 Tape Control.

Switches

The following switches are located on the control panel:

Switch	Function
POWER	Applies power to the tape transport.
ON LINE	Selects programmed (remote) operation by the computer.
OFF LINE	Selects local operation by the control panel.
FWD	In local operation, spaces the tape in the forward direction.
REV	In local operation, spaces the tape in the reverse direction.
REWIND `	In local operation, rewinds the tape at high speed.
RESET	In local operation, terminates the space forward, space reverse, or rewind operation.
LOAD	Loads the tape into the tape column.
Unit Select Switch	Selects the tape transport unit by number. This number is used in the program to select the tape transport.

Indicators

The following indicators are provided on the control panel:

Indicators	Meaning When Illuminated	
SELECT	The tape transport is selected by the tape control (or program).	
READY	The tape transport is ready (vacuum on, and settle-down delay complete), no motion.	
LOAD POINT	The tape is at load point.	
END POINT	The tape is at end point (end of tape).	
WRITE LOCK	The write lock-out ring is missing from the tape reel, which prevents the write function.	
WRITE STATUS	The program has enabled the write function in the tape transport.	
9	This transport is a 9-track type.	
7	This transport is a 7-track type.	
REWIND	The tape transport is in the rewind operation.	
LOAD	The vacuum is on and the tape is loaded into the vacuum columns.	
REV	Reverse operation is specified.	
RESET	No motion (forward, reverse, or rewind) is specified.	
FWD	Forward motion of the tape is specified.	
LOCAL	Local operation by the control panel.	
REMOTE	Remote operation by the computer.	
POWER	Power is applied to the tape transport.	

6.4.3 LINCtape Option TC12-F

The TC12-F option (prewired) in conjunction with the PRTC12-F program extends the TC12 LINCtape control to read and write DECtapes formatted on the PDP-8, PDP-9, PDP-10, and PDP-15 computers. It will operate on a standard PDP-12A system. Tape units 0 through 7 are selectable under program control. Description document DC-12-YIYA-D explains the differences between the LINCtape and DECtape formats and describes the PRTC12-F program.

Data is transferred between the tapes and the computer on the I/O bus. Two status flags enable the program to identify the information on tape. The BLOCK flag is set, indicating that a block mark was encountered on tape and the Block Number (BN) is in the tape accumulator. This number is then read into the PDP-12 AC and is processed to determine if the desired block has been found, or to initiate the necessary adjustments to access the desired block.

The WORD flag is set after four lines of data have been assembled and are ready to store in memory when reading from the tape. When writing data on tapes, the flag indicates that a 12-bit word has been written on tape and the control is ready to accept another word from the computer.

The system program PRTC12-F no. DC-12-YIYA-PB for this option is contained on the standard LAP6-DIAL system tape.

NOTE

This option does <u>not</u> permit the user to execute tape operations using DEC tape instruction subroutines.

Instructions

IOT 6152

Octal code:

6152

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

As shown below:

AC Bit	Function
5 (1) 5 (1) 6 (1) 7 (1) 9 (1) 10 (1)	Clear Block FF Set Backward Select unit 1 Set forward Set motion Select DECtape & AC ₁₁ write
SWD 0457 STB 0414 TAPE PRESET TAPE PRESET TAPE PRESET	Skip on word flag Skip on block flag 0 → DECtape write 0 → Motion Deselect DECtape

6.5 LINE PRINTERS

6.5.1 Line Printer and Control, Type LP12

The Line Printer and Control Type LP12 allows the PDP-12 computer to output data at up to 600 lines per minute (depending upon which printer is used). Either the Mohawk Data Sciences Model 4000 or 5000 series line printers can be used.

Model	Lines Per Minute	Columns Per Line
4000	up to 300	132
5000	up to 600	132

Total number of characters available: 64

A 6-bit line printer code is loaded into the LP12 buffer from $AC_{6-1\,1}$ with the instruction Load Printer Buffer (LLB). The Print (LPR) instruction causes the lineprinter to print the characters in the lineprinter buffer. After the buffer is filled the LPR instruction should be given to print the contents of the buffer. Two status flags indicate the line printer conditions. The Error Flag is set when a printer instruction is given if an error status exists, such as power off, paper supply low, or control circuits not reset. The Done Flag is set by a BUFF AVAILABLE pulse, generated by the line printer, after the following IOT instructions are given: Load Printer Buffer (LLB) 6654, Load Format Register and Print (LPR) 6664 and Clear Printer Buffer (LCB) 6662. The BUFF AVAILABLE pulse indicates that the line printer buffer is ready to receive another character or the lineprinter is ready to print a line. The Done Flag is cleared by the IOT instruction Clear Line Printer Flags (LCF) 6652 or the status of the Done Flag can be checked by the IOT instructions. Skip on Line Printer Done Flag (LSD) 6661.

A three-bit format register in the Printer is loaded from AC_{9-1} during a print command. This register selects one of eight channels of a perforated tape in the printer to control spacing of the paper.

The Print Flip-Flop is set when the print instruction is given and, when the Print Flip-Flop and the Done Flag are both set, a program interrupt request is generated, indicating that the printer has finished printing a line. The Print Flip-Flop can be cleared by an IOT instruction Clear Printer Buffer (LCB). AC₈ is loaded into the Space Flip-Flop during a print instruction. If the Space Flip-Flop is set, the paper is advanced according to the selected channel of the format tape in the line printer. If the Space Flip-Flop is clear, the paper advance is inhibited.

LSE Skip on Line Printer Error Flag

Octal code: 6651 Event time: 1

Execution time: $4.25 \mu s$

Operation: The status of the Printer Error Flag is sensed, and, if it is set, the contents of the PC are

incremented by one, skipping the next sequential instruction.

Symbol: If Printer Error Flag = 1, then $PC + 1 \rightarrow PC$

LCF Clear Line Printer Flags

Octal code: 6652Event time: 2Execution time: $4.25 \mu s$

Operation: The Line Printer Error and Done Flags are cleared.

Symbol: $0 \rightarrow \text{Line Printer Error Flag}$

0 → Done Flag

LLB Load Printer Buffer

Octal code:

6654

Event time:

4

Execution time:

 $4.25 \mu s$

Operation:

The contents of $AC_{6-1 \ 1}$ are loaded into the Printer Buffer.

Symbol:

 $AC_{6-1} \rightarrow Printer Buffer$

AC₈ → Space Flip Flop

 $0 \rightarrow AC$

Skip on Line Printer Done Flag

Octal code:

6661

Event time:

Execution time:

 $4.25 \mu s$

Operation:

The status of the Line Printer Done Flag is sensed, and, if it is set, the contents of the PC are

incremented by one, skipping the next sequential instruction.

Symbol:

If Line Printer Flag = 1, then $PC + 1 \rightarrow PC$

LCB Clear Printer Buffer

Octal code:

6662

Event time:

Execution time:

 $4.25 \mu s$

Operation:

The Printer Buffer is cleared.

Symbol:

0 → Printer Buffer

LPR Load Format Register and Print Character

Octal code:

6664

Event time:

4

Execution time:

 $4.25 \, \mu s$

Operation:

The contents of AC₉₋₁₁ are loaded into the line printer format register and the line contained

in the printer buffer is printed. Paper is advanced in accordance with the selected channel of

the format tape.

Symbol:

 $C(AC_{9-11}) \rightarrow Format Register$

AC₈ → Space Flip-Flop

Print Line $0 \rightarrow AC$

6.5.2 Line Printer and Control, Type LP08

The LP08 Line Printer interface allows control of the four models of Data Products Line Printers by the PDP-12 or positive bus PDP-8 family of computers through the use of IOT instructions. The printers are available in 80-column and 132-column printing widths with either a 64 or 96 visible character set. The device select code for the LP08 is 668.

The 80-column printer contains a 20-character (24-character in 132 column) buffer and prints 20 characters simultaneously when either the character buffer is full or a format control character (carriage return, paper feed, form feed) instruction is given. A paper feed or form feed command must be given to move the paper at the end of a line or overprinting will result. Characters and commands are given by loading the AC with the appropriate setting derived from the LP08 Character Code Chart (Appendix F-4) and issuing the IOT 6664 (LPC).

The three format commands in addition to initiating the print cycle are:

- a. Paper Feed Advances the paper one line. The perforation between pages is automatic.
- b. Carriage Return Returns the print position to the leftmost edge of the paper.
- c. Form Feed Advances the paper to a new page. Nonvisible characters are decoded as spaces if they are not control characters.

Instructions

LSF Skip on Demand Character Flag

Octal code:

6661

Operation:

If printer is ready for the next character, this flag accounts for timing required to store

character in buffer, print from buffer, and advance paper.

Symbol:

If Character Flag = 1, then $PC + 1 \rightarrow PC$

LCF Clear Character Flag

Octal code:

6662

Operation:

The line printer character flag is cleared.

Symbol:

0 → Character Flag.

LSR Skip on Not Ready

Octal code:

6663

Operation:

The next instruction is skipped if the error status flag is set. Such errors as out-of-paper, drum

gate open, paper jam, etc. will set error status flag.

Symbol:

If Error Flag = 1, then $PC + 1 \rightarrow PC$

LLC Load Buffer from AC

Octal code:

6664

Operation:

Load the character into the Print Buffer and print if buffer is full or character was a control

function. This instruction does not clear the AC.

Symbol:

AC → Print Buffer

LIN Set Program Interrupts Enable

Octal code:

6665

Operation:

Sets the device interrupt flip-flop to initiate program interrupt when the demand character flag

is set or an error condition exists.

Symbol:

1 → Int Enable

LPC Load Buffer from AC and Clear Flag

Octal code:

6666

Operation:

The print buffer is loaded from the AC and the character flag is cleared. Microprogram

combination of LCF and LLC.

Symbol:

 $AC \rightarrow Print Buffer, 0 \rightarrow Character Flag.$

LCP Clear Program Interrupt Enable

Octal code:

6667

Operation:

The program interrupt enable is cleared.

Symbol:

0 → Int Enable

Print rate

80 column model

64 character 356 Lines/minute, columns 1-80 460 Lines/minute, columns 1-60 650 Lines/minute, columns 1-40 1110 Lines/minute, columns 1-20 96 character 253 Lines/minute, columns 1-80 330 Lines/minute, columns 1-60 478 Lines/minute, columns 1-40 843 Lines/minute, columns 1-20 132 column model 64 character 245 Lines/minute, columns 1-132 290 Lines/minute, columns 1-110 356 Lines/minute, columns 1-88 460 Lines/minute, columns 1-66 650 Lines/minute, columns 1-44 1110 Lines/minute, columns 1-22 96 character 173 Lines/minute, columns 1-132 205 Lines/minute, columns 1-110 253 Lines/minute, columns 1-88 330 Lines/minute, columns 1-66 478 Lines/minute, columns 1-44 843 Lines/minute, columns 1-22 **Format** Top-of-form control, single line advance, and perforation step over. Paper Feed One pair of pin-feed tractors for 1/2 inch hole center, edge-punched paper. Adjustable for any paper width from 4 inches to 9-7/8 inches on the 80 column model; or a maximum width of 14-7/8 inches for the 132 column model.

13 inches per second

Paper slew speed

6.6 CARD READERS

6.6.1 Card Reader and Control, Type CR12

The Card Reader and Control Type CR12 reads 12-row, 80-column punched cards at a nominal rate of 200 cards per minute by a photoelectric process. Cards are read by column, beginning with column 1. One select instruction starts the card moving past the read station. Once a card is in motion, all 80 columns are read. Column information can be read in one of two program selectable modes, alphanumeric or binary. In the alphanumeric mode, the 12 information bits in one column are automatically decoded and transferred into the least significant half of the AC as a 6-bit Hollerith code. In the binary mode, the 12 bits of a column are transferred directly into the AC so that the top row (12) is transferred into AC₀₀ and the bottom row (9) is transferred into AC₁₁. A punched hole is interpreted as a binary 1, and the absence of a hole is interpreted as a binary 0.

Three program flags indicate card reader conditions. The data ready flag sets and a program interrupt is requested when a column of information is ready to be transferred into the AC. A read alphanumeric or read binary instruction must be issued within 1.4 milliseconds after the data ready flag is set to prevent data loss. The card done flag is set and a program interrupt is requested when the card leaves the read station. A new select instruction must be issued immediately after this flag is set to keep the reader operating at maximum speed. Sensing of this flag can eliminate the need for counting columns or, combined with column counting, can provide a check for data loss. The reader-not-ready flag can be sensed by a skip instruction to provide an indication of card reader power off, pick failure, a dark check indication, a stacker failure, hopper empty, stacker full, Sync failure, or light check indication. When the flag is set, the reader cannot be selected and select instructions are ignored. The reader-not-ready flag is not connected to the program interrupt facility, and cannot be cleared under program control. Manual operation is required to clear the reader-not-ready flag. Instructions for the CR12 are:

Skip on Data Ready

Octal code:

6631

Event time: Execution time: 1 $4.25 \mu s$

Operation:

The status of the data ready flag is sensed, and if it is set (indicating information for one card

column is ready to be read) the contents of the PC are incremented by one skipping the next

sequential instruction.

Symbol:

If Data Ready Flag = 1, then $PC + 1 \rightarrow PC$

RCRA Read Alphanumeric

Octal code:

6632

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

The 6-bit Hollerith code for the 12 bits of a card column is transferred into AC_{6-1} and the

data ready flag is cleared.

Symbol:

 AC_{6-11} V Hollerith $\rightarrow AC_{6-11}$

0 → Data Ready Flag

RCRBRead Binary

Octal code:

6634

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

The 12-bit binary code for a card column is transferred directly into the AC, and the data

ready flag is cleared. Information from the card column is transferred into the AC so that card

rows 12, 11, and 0 enter AC₀₋₂ and card rows 1 through 9 enter AC₃₋₁₁ respectively.

Symbol:

0 → Data Ready Flag

RCSD Skip on Card Done Flag

Octal code:

6671

Event time:

1

Execution time:

4.25 µs

Operation:

The status of the card done flag is sensed, and if it is set (indicating that the card has passed

the read station) the contents of the PC are incremented, skipping the next instruction.

Symbol:

If Card Done Flag = 1, then $PC + 1 \rightarrow PC$

RCSE Select Card Reader and Skip if Ready

Octal code:

6672

Event time:

2

Execution time:

4.25 μ s

Operation:

The status of the card reader flag is sensed and if the reader is ready, the PC is incremented skipping the next sequential instruction, a card is started toward the read station from the

input hopper, and the card done flag is cleared.

Symbol:

If Reader Ready Flag = 1, then $PC + 1 \rightarrow PC$

 $0 \rightarrow Card Done Flag$

RCRD Clear Card Done Flag

Octal code:

6674

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

The card done flag is cleared. This instruction allows a program to stop reading at any point in

the card deck.

Symbol:

 $0 \rightarrow Card Done Flag$

A logical instruction sequence to read cards is:

START,

RCSE

/START CARD MOTION AND SKIP IF READY

JUMP TO SUBROUTINE THAT TYPES OUT

/"CARD READER MANUAL INTERVENTION

/REQUIRED" OR HALTS

NEXT,

RCSF

/DATA READY?

JMP DONE

JMP NOT RDY

/NO. CHECK FOR END OF CARD

RCRA or RCRB /YES. READ ONE CHARACTER OR ONE /COLUMN AND CLEAR DATA READY FLAG

DCA I STR

/STORE DATA

DONE,

RCSD

/END OF CARD?

JMP NEXT

/NO, READ NEXT COLUMN

JMP OUT

/YES, JUMP TO SUBROUTINE THAT CHECKS /CARD COUNT OR REPEATS AT START FOR

NEXT CARD

The CR12 does not perform validity checking, although a programmed validity check can be made by reading each card column in both the alphanumeric and binary mode (within the 1.4 millisecond time limitation), then performing a comparison check.

The following discussion and controls and indicators deal with the General Design Industries (GDI) Model 100 card reader. Other card readers can be used and will have similar controls and indicators.

Before commencing a card reading program, load the input hopper with cards and press Motor Start and Read Start pushbuttons. The functions of the manual controls and indicators are as follows (as they appear from left to right):

Control or Indicator	Function
A – POWER switch	On/Off toggle switch. Applies power to all circuits except drive motor.
B – MOTOR START	Momentary action pushbutton, with separate indicator. Applies power to main drive motor. Motor start is also used as a reset to clear error indicators, and therefore will not operate if there is an unremedied condition such as:
	 Input hopper is empty. Output hopper is full. All photo cells are not illuminated. Internal power supply is not operational.
C – READ START	Momentary action pushbutton, with separate indicator. Causes ready line to go high, enabling card reading under control of the external read instructions. If read command is open or high, card reading begins immediately at full rated speed.
D – READ STOP	Momentary action pushbutton with indicator. Stops card reading if depressed without stopping drive motor. However, READ STOP light can indicate a stopped motor or a ready line low condition.
E – INDICATORS	Several detection circuits are incorporated in the card reader. Whenever any red indicator lights, the drive motor is stopped after completion of the current card cycle.
1. PICK FAIL Indicator	Lights when a card fails to enter the read station after two successive pick attempts.
2. DARK CHECK Indicator	After the card enters the read station, a check is made at the hypothetical Oth and 81st hole positions to be sure all photocells are dark. If not, the DARK CHECK indicator lights and data outputs are immediately inhibited.
3. STACKER FAIL Indicator	When three cards have passed the read station and none have been stacked, a STACK FAIL is indicated. Prevents more than three cards from being in the track at once.
4. HOPPER EMPTY Indicator	Indicates input hopper is empty.
5. STACKER FULL Indicator	When approximately 400 cards are in the stacker hopper, indicator light lights.

6. SYNC FAIL Indicator

SYNC FAIL is indicated if the sync signal is lost. Internal timing signals are derived from an oscillator which is synced to the track speed.

7. LIGHT CHECK INDICATOR

The photocells must always be illuminated except during the time a card is being read. The LIGHT CHECK detector is inhibited each time a card enters the read station until position (count of) 84 is reached. If a card fails to leave the read station by this time, a LIGHT CHECK is indicated.

6.6.2 Optical Mark Card Reader Type CM12

The GDI Model 100-MS is an optical-mark card reader that reads (12-row Hollerith) reflective data cards of various format designs at a rate of up to 200 cards per minute by a photoelectric process. Cards are read column by column, beginning with column 1. A single select instruction will cause the reader to feed and read a card. Once a card is in motion, all columns are read. Column information is read in one of two program-selectable modes, alphanumeric or binary. In the alphanumeric mode, the 12 information bits in one column are automatically decoded and transferred into the least significant half of the AC as a 6-bit Hollerith code. In binary mode, all 12 bits of a column are transferred directly into the AC so that the top row (12) is transferred into AC_{00} and the bottom row (9) is transferred into AC_{11} . A punched hole or a nonreflective spot (either nonreflective ink or No. 2 pencil) is interpreted as a binary 1, and the absence of a hole or reflective spot is interpreted as a binary 0.

Instructions

The instruction set associated with the optical mark reader is identical to that of the CR12 in Paragraph 6.6.1.

Characteristics

Size: The complete unit is 14 in. wide, 18 in. deep, and 18 in. high. The card deck is tilted back at a 45-degree angle.

Weight: Complete unit weighs 47 lbs.

Card Rate: 200 per minute.

Input Power: 115 VAC ±10 VAC, 60 ±5 Hz single phase, at 300 VA maximum.

Card Specification: The card reader is designed to read 7-3/8 in. x 3-1/4 in. optical mark cards conforming to the material and size requirements of EIA Standard RS-292 Media I. Format and printing requirements are specified in the DEC Mark Sense Card Specification.

Card Capacity: Both input hopper and output stacker hold 450 cards. Cards may be added or removed during reader operation.

Environment:

Operating:

32° to 120°F ambient

15% to 80% relative humidity

Storage:

30° to 150°F ambient

0% to 100% relative humidity

Controls and Indicators

Power Switch: An alternate action rocker-type switch used to apply AC power to the Card Reader.

Start Switch: A momentary pushbutton switch used to condition the unit to read cards. When it is depressed, the drive motor will start, and any error indicators will be reset if the error has been cleared. When it is released and the motor has reached operating speed, the reader may accept a "read command" and process cards.

Stop Switch: A momentary pushbutton switch used to stop the reader. When it is depressed, the motor will stop; if it is depressed during a time a card is in process, the card cycle will be completed before the motor stops.

Power: A green indicator to verify AC power on; mounted next to the POWER switch.

On Line: A green indicator to verify that the START switch has been depressed and the unit is ready to operate. Light will remain on until the STOP switch is depressed or an error condition is sensed; mounted next to START switch.

Cards: A red indicator to identify an input hopper empty or an output stacker full condition.

Feed Error: A red indicator to identify when a card has not been fed from the input hopper to the read station at the end of a feed cycle.

Stacker Error: A red indicator to identify when a card has not been properly delivered to the output stacker.

Motion Error: A red indicator to indicate a card jam in the read station.

L.D. Error: A red indicator to identify when a Light or Dark Check of the read station was not met.

6.7 INCREMENTAL PLOTTERS

6.7.1 Incremental Plotter and Control, Type XY12

Calcomp (California Computer Products) Models 563 and 565 available in three step-size models and four models of the Complot (Houston Instruments) digital plotters can be operated from a Digital Equipment Corporation Type XY12 Incremental Plotter Control. The characteristics of the recorders are summarized:

Name	Model	Paper Width (inches)	Speed (step/minute)	Step Size
Calcomp	563	30	12,000	.01-in. .005-in. .1-mm
	565	12	18,000	.01-in. .005-in. .1-mm
Complot	DP-1-1 DP-1-5 DP-1-M2 DP-1-M1	12 12 12 12	18,000 18,000 18,000 18,000	.01-in. .005-in. .25-mm .1-mm

The principles of operation are basically the same for each of the recorders. Bidirectional rotary step motors are employed for both the X and Y axes.

Recording is produced by movement of a pen relative to the surface of the graph paper, with each instruction causing an incremental step. X-axis deflection is produced by motion of the drum; Y-axis deflection, by motion of the pen carriage. Instructions are used to raise and lower the pen from the surface of the paper. Each incremental step can be in any one of eight directions through appropriate combinations of the X and Y axis instructions. All recording (discrete points, continuous curves, or symbols) is accomplished by the incremental stepping action of the paper drum and pen carriage. Front panel controls permit single-step or continuous-step manual operation of the drum and carriage, and manual control of the pen solenoid. The recorder and control are connected to the computer program interrupt and instruction skip facility.

Instructions for the recorder and control are:

PLSF Skip on Plotter Flag

Octal code:

6501

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

If the Plotter Flag is set, the contents of the PC are incremented by one so that the next

sequential instruction is skipped.

Symbol:

If Plotter Flag = 1, then $PC + 1 \rightarrow PC$

PLCF Clear Plotter Flag

Octal code:

6502

Event time:

2

Execution time:

4.25 μs

Operation:

Clear the AC and Plotter Flag

Symbol:

 $0 \rightarrow AC$

 $0 \rightarrow Plotter Flag$

PLPU Pen Up

Octal code:

6504

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

Raise the plotter pen from the paper surface.

Symbol:

None

PLPR Pen Right

Octal code:

6511

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

Move the plotter pen to the right in either the raised or lowered position.

Symbol:

None

PLDU Drum Up

Octal code:

6512

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

Move the plotter paper drum upward. This instruction can be combined with the PLPR and

PLPD commands.

Symbol:

None

PLDD Drum Down

Octal code:

6514

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

Move the plotter paper drum downward.

Symbol:

None

PLPL Pen Left

Octal code:

6521

Event time:

1

Execution time: Operation:

4.25 μ s Move the plotter pen to the left in either the raised or lowered position.

Symbol:

None

PLUD Drum Up

Octal code:

6522

Event time:

2

Execution time:

4.25 μs

Operation:

Move the plotter paper drum upward. This instruction is similar to the 6512 instruction except

that it can be combined with the PLPL or PLPD instructions.

Symbol:

None

PLPD Pen Down

Octal code:

6524

Event time:

3

Execution time:

 $4.25 \mu s$

Operation: Symbol:

Lower plotter pen to the surface of the paper. None

Program sequence assumes that the end location is known at the start of a routine since there is no means of specifying an absolute pen location in an incremental plotter. Pen location can be preset by the manual controls on the recorder. During the subroutine, the PDP-12 can track the location of the pen on the paper by counting the instructions that increment position of the pen and the drum.

6.8 PAPER TAPE

6.8.1 High-Speed Paper-Tape Punch and Reader, Type PC12

The High-Speed Paper-Tape Punch and Reader Type PC12 provides the user with a faster means of inputting or outputting information from paper tape to the PDP-12 than that provided by the standard Teletype tape reader/punch. The PC12 is functionally a PP12, High Speed Paper Tape Punch, and a PR12, High Speed Paper Tape Reader, configured mechanically in the same unit. The operating characteristics are discussed in the following paragraphs.

6.8.2 High-Speed Paper-Tape Punch, Type PP12

The High-Speed Paper-Tape Punch option Type PP12 consists of a PC05-P paper-tape punch that perforates 8-hole fanfold paper-tape at a rate of 50 characters per second. Information to be punched in tape is loaded in an 8-bit punch buffer (PB) from AC₄₋₁₁. The punch flag is set at the completion of the punching action, signaling that new information may be transferred into the punch buffer and punching may be initiated. The control circuitry for this device is located in the BA12 Peripheral Expander. The punch flag is as described for the Teletype unit. The punch instructions are:

PSF Skip on Punch Flag

Octal code:

6021

Event time:

1

Execution time:

 $4.25 \,\mu s$

Operation:

The punch flag is sensed, and, if it is set, the contents of the PC are incremented by one,

skipping the next sequential instruction.

Symbol:

If Punch Flag = 1, the PC + $1 \rightarrow PC$

PCF Clear Punch Flag

Octal code:

6022

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

The punch flag and the punch buffer are both cleared in preparation for receiving a new

character from the computer.

Symbol:

0 → Punch Flag, PB

PPC Load Punch Buffer and Punch Character

Octal code:

6024

Event time:

3

Execution time:

4.25 µs

Operation:

An 8-bit character is transferred from AC_{4-1,1} into the punch buffer, and then the character is

punched. This instruction does not clear the punch flag or the punch buffer.

Symbol:

 $AC_{4-1,1} \rightarrow PB \rightarrow PB$

PLS Load Punch Buffer Sequence

Octal code:

6026

Event time:

2,3

Execution time:

4.25 μs

Operation:

The punch flag and punch buffer are both cleared, the contents $AC_{4-1\,1}$ are transferred into

the punch buffer, the character in the PB is punched in tape, and the punch flag is set when

the operation is completed. Combines PCF and PPC.

Symbol:

 $0 \rightarrow Punch Flag, PB$

 $AC_{4-1} \rightarrow PB$

1 → Punch Flag when done

A program sequence loop to punch characters when the punch buffer is "free" can be written as follows:

FREE, PSF

/SKIP WHEN FREE

JMP FREE

PLS

/LOAD PB FROM AC AND PUNCH CHARACTER

JMP FREE

6.8.3 High-Speed Paper-Tape Reader, Type PR12

The High-Speed Paper-Tape Reader (PC05-R) option Type PR12 senses data in a 8-hole perforated-paper tape (unoiled) photoelectrically at 300 characters per second. The reader control requests reader movement, transfers data from the reader into the reader buffer (RB), and signals the computer when incoming data is present. Reader tape movement is started by clearing the Reader Flag. Data is assembled into the Reader Buffer from the perforated tape. The Reader Buffer is transferred into AC_{4-11} under program control. The Reader Flag is connected to the program interrupt and instruction skip facilities, and is cleared by IOT pulses. Control circuitry for this device is located in the BA12 Peripheral Expander. Computer instructions for the reader are:

RSF Skip on Reader Flag

Octal code:

6011

Event time:

Execution time:

1 4.25 μs

Operation:

The status of the Reader Flag is sensed, and, if it is set, the contents of the PC are incremented

by one, skipping the next sequential instruction.

Symbol:

If Reader Flag = 1, then $PC + 1 \rightarrow PC$

RRB Read Reader Buffer

Octal code:

6012

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

The contents of the reader buffer are transferred into AC₄₋₁₁ and the Reader Flag is cleared.

This instruction does not clear the AC.

Symbol:

 $RB V AC_{4-11} \rightarrow AC_{4-11}$

0 → Reader Flag

RFC Reader Fetch Character

Octal code:

6014

Event time:

Operation:

3

Execution time:

 $4.25 \mu s$ The Reader Flag and the reader buffer are both cleared. A character is loaded into the reader

buffer from tape, and the Reader Flag is set when this operation is completed.

Symbol:

0 → Reader Flag, RB

Tape Data → RB

1 → Reader Flag when done.

A program sequence loop to read characters from perforated tape can be written as follows:

LOOK,

RFC

/FETCH CHARACTER FROM TAPE

RSF

/SKIP WHEN RB FULL

JMP LOOK

CLA

RRB

/LOAD AC FROM RB

JMP LOOK

6.9 DATA BUFFERS

6.9.1 Data Buffer Type DB12-P, N

The DB12 option is an input/output transfer register, consisting of a 12-bit input bus driver and a 12-bit output buffer register. The basic logic for this option is contained on an M735 module, which is described in the Logic Handbook (1970). Three DB12 options are prewired in the BA12 Peripheral Expander. The device select gating and data lines provide the capability for transferring data into or out of the PDP-12 accumulator. The user selects a device code by inserting jumpers in the M921 Device Code Select Jumper module located in row A, slot 19, of the BA12 Peripheral Expander. Two I/O cables (Flexprint®) terminating in M903 connector modules are provided to connect the DB12 to the external I/O device. The output register is buffered to provide either positive (0, +3V) or negative (0, -3V) logic levels. The option designation is DB12-P (positive) or DB12-N (negative).

[®] Flexprint is a Registered Trademark of Sanders Associates Inc.

6.10 POWER FAIL/RESTART

6.10.1 Power Failure Option, Type KP12

General

The KP12 Power Failure Option protects an operating program upon failure or interruption of the computer's primary power source. In the event of a power abnormality, a program interrupt is initiated by the KP12 and enables continued operation of the central processor for 1 millisecond. During this interval, the interrupt routine identifies the power low condition as the initiator of the interrupt. The interrupt routine then stores the contents of active registers (AC, L, MQ, etc) and the program counter in known core memory locations. Upon restoration of power, the power low flag is cleared and a routine in the 8 mode beginning at address 0000₈ starts automatically, restoring the contents of the active registers and the program counter, and then continues the interrupted program.

Operation

A manual RESTART switch enables or disables the automatic restart operation upon restoration of primary power. When it is ON (down), the program counter is cleared and a signal which simulates the console START key (RCL START PC) is produced 200 milliseconds after power conditions become satisfactory. Operation is restarted (always in the 8 mode) by executing the instruction contained in address 0000_8 ; this instruction is a JMP to the starting address of a subroutine which restores the contents of the active registers and the program counter to the conditions that existed prior to the power low interrupt. The 200-millisecond delay assures that slow mechanical devices, such as Teletype equipment, have completed any previous operation before the program is resumed.

When the RESTART switch is OFF (up), the power low flag is cleared upon the return of normal power conditions, but the program must be manually restarted, possibly after resetting peripheral equipment.

Programming

SPL Skip on Power Low

Octal code: 6102 Event time: 2

Execution time: $4.25 \mu s$

Operation: The condition of the power low flag is sampled; if set (indicating a power failure has occurred),

the contents of the PC are incremented by one, skipping the next sequential instruction.

Symbol: If Power Low Flag = 1, then $PC + 1 \rightarrow PC$

Figures 6-9 and 6-10 illustrate the Automatic Restart Program Events and Typical Power Failure Program Service Routine, respectively.

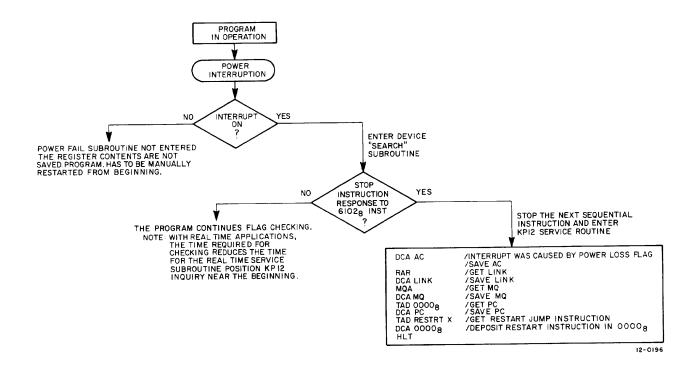


Figure 6-9. Automatic Restart Program Events

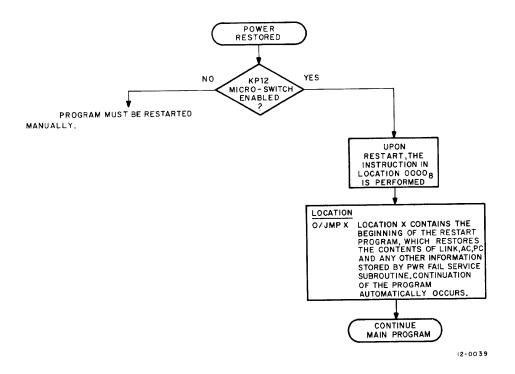


Figure 6-10. Typical Power Failure Program Service Routine

6.11 ANALOG-TO-DIGITAL

6.11.1 General Purpose Multiplexed Analog-to-Digital Converter System, Type AF01-A

The Type AF01-A General-Purpose Multiplexed Analog-to-Digital Converter combines a versatile, multipurpose converter with a multiplexer to provide a fast, automatic, multichannel scanning and conversion capability. It is intended for use in systems that sample and process analog data from sensors or other external signal sources at high rates of speed. The AF01-A is used when greater accuracy than that provided by the standard AD12 A-D converter is needed. The Type AF01-A option is used with the PDP-12 to multiplex up to 64 analog signals and to convert the signals to binary numbers. Analog data on each of 64 channels can be accepted and converted into 12-bit digital numbers 420 times per second.*

Switching point accuracy in this instance is 99.975 percent, with an additional quantization error of half the analog value of the least significant bit (LSB).

A/D Converter Specifications

The Type AF01-A has a successive approximation converter that measures a 0 to -10 volt analog input signal and provides a binary output indication of the amplitude of the input signal. The characteristics of the A/D converter are as follows:

Accuracy and Conversion Times: See Table 6-6 (includes all linearity and temperature errors)

Converter Recovery Time: Zero.

Input and Input Impedance: 0 to -10V at 10 megohms standard. Input scaling may be

specified using the amplifier or sample and hold options

(see Table 6-5).

Input Loading: $\pm 1 \,\mu\text{A}$ and 125 pf for 0 to -10V input signal.

Output: Binary number of 6 to 12 bits, with negative numbers

represented in two's complement notation. A 0V input gives a 4000₈; a -5V input a 0000₈ and a -10V (minus 1 LSB) input

gives 37778 number.

Provision is made for using the Type A400 Sample and Hold Amplifier (AH02 option) between the multiplexer output and A/D converter input to reduce the effective aperture to less than 150 ns. The Type A400 may also be used to scale the signal input to accept ±10V, or 0 to +10V. The Type A200 amplifier (AH03 option) may be substituted for the Type A400 to accomplish the same signal scaling without reducing the effective aperture. Both the AH02 and AH03 options may be used to obtain high input impedance and small aperture. (See Table 6-4.)

Multiplexer Specifications

The multiplexer can include from 1 to 16 Type A121 Switch Modules. Each module contains four single-pole, high-speed, insulated gate FET switches with appropriate gating. The Type A121 Switches are arranged as a 64-channel group of series-switching single-pole switches with a separate continuous ground wire for each signal input. The switched signal input wire and the continuous ground for each channel are run as twisted pairs to the input connectors mounted on the rear panel. The continuous grounds for all channels are terminated at the high quality ground of the AF01-A System. Specifications (measured at input connector) are as follows:

*Conversion rate = [(35 + 2)(10 - 6)(64)] - 1 = 420 cycles/sec.= [(9 + 2)(10 - 6)(64)] - 1 = 1420 cycles/sec. Input Operating Signal Voltages:

+10V to -10V

Current:

1 mA

On Resistance

500 ohm (max)

Voltage Offset

1 μV

"Off Leakage"

10 nA (max)

Capacitance

10 pf (max)

Speed

10% Input to within

2 μs

1 LSB of output

Operate Time

The time required to switch from one channel to another is $2 \mu s$ to within 1 LSB of the final voltage. This time is preset within the control and starts when a set or index command is received.

Table 6-5. Input Signal Scaling

Configuration	Gain	Input Signal	Input Impedance (ohms)	Input Output	Option Designation
Standard		0 -5 -10	10 meg. 10 meg. 10 meg.	4000 ₈ 0000 ₈ 3777 ₈	STD
Sample & Hold	-1 -1 -1	+5 0 -5	10K 10K 10K	3777 ₈ 0000 ₈ 4000 ₈	AHO2
Sample & Hold	-1/2 -1/2 -1/2	+10 0 -10	10K 10K 10K	3777 ₈ 0000 ₈ 4000 ₈	АНО2
Amplifier	+1 +1 +1	+5 0 -5	>100 meg. >100 meg. >100 meg.	4000 ₈ 0000 ₈ 3777 ₈	АНО3
Amplifier	+1/2 +1/2 +1/2	+10 0 -10	>100 meg. >100 meg. >100 meg.	4000 ₈ 0000 ₈ 3777 ₈	АНО3
Amplifier and Sample & Hold	-1 or -1/2	+5 +10 0 or 0 -5 -10	>100 meg. >100 meg. >100 meg.	3777 ₈ 0000 ₈ 4000 ₈	AHO3 & AHO2

NOTE

Unipolar signals (0 to +5, or 0 to +10v) may also be specified with either the AHO3 or AHO2 option.

System Operation

The Type AF01 System may be operated in either the random or sequential address modes. In the random address mode, the control routes the analog signal from any selected channel to the A/D converter input. In the sequential address mode, the multiplexer control advances its channel address by one each time an index instruction is received. After indexing through the maximum number of channels implemented, the address is returned to 0.

The multiplexer switch settling time is preset within the control to initiate the conversion process automatically after a channel has been selected in either the random or sequential address mode. A separate A/D Convert I/O Transfer instruction may also initiate one or more conversions on a currently selected channel.

A/D conversion times are increased by 2 microseconds when multiplexer channels are switched to allow for settling time of the analog signal at the multiplexer output. Conversion times are increased an additional 3 microseconds when AH03 is used. These items are added to the conversion times shown in Table 6-6 under selected channel conversion time, which is the only time required for each successive conversion on a selected channel.

When the Type AH02 Sample and Hold option is required, the multiplexer switch settling time and the sample and hold acquisition time are overlapped. The total conversion and switching time is increased by 10 microseconds. (See A400 specifications.)

A/D CONVERTER/MULTIPLEXER CONTROLS

Designation Function

WORD LENGTH: Rotary switch selects digital word length or conversion accuracy. Refer to

Table 6-6 for corresponding conversion times.

POWER ON/OFF: Applies 117 Vac power to internal power supplies.

CLR: Clears multiplexer channel-address registers; i.e., selects analog channel 0 for

conversion.

INDEX: Advances multiplexer channel-address register by one each time it is

depressed, enabling manual addressing of channels (up to 64) in sequential

mode. Returns address to zero when maximum value is reached.

ADC: Starts conversion of the analog voltage on the selected channel to a binary

number when depressed.

A/D CONVERTER: Indicates binary contents of A/D converter register.

MULTIPLEXER: Indicates binary contents of multiplexer channel-address register.

POWER: Indicates ON/OFF status.

Programming

Programmed control of the converter/multiplexer by the PDP-12 is accomplished with the IOT instructions listed below. PDP-12 selects the converter/multiplexer with two device selection codes, 53₈ and 54₈, depending upon whether conversion or multiplexing function is being selected. The converter/multiplexer interprets the device selection code to enable execution of the IOP command pulse generated by the IOT instruction.

Table 6-6. System Conversion Characteristics

		Selected Channel (A/D)	Random or Sequential (MPX & A/D)	AH03 MPX A/D	AH02 MPX A/D	AH02 AH03 MPX & A/D
Word Length (No. of Bits)	Max Switching Point Error*	Conversion Time (μs)**	Conversion Time (μs)**	Conversion Time (µs)**	Conversion Time (µs)**	Conversion Time (μs)**
6	±1.6%	9.0	11.0 (9.5)	14.0 (11.0)	19.0 (14.0)	21.0 (18.0)
7	±0.8%	10.5	12.5 (11.0)	15.5 (12.5)	20.5 (15.5)	22.5 (19.5)
8	±0.4%	12.0	14.0 (12.5)	17.0 (14.0)	22.0 (17.0)	24.0 (21.0)
9	±0.2%	13.5	15.5 (14.0)	18.5 (15.5)	23.5 (18.5)	25.5 (22.5)
10	±0.1%	18.0	20.0 (18.5)	23.0 (20.0)	28.0 (23.0)	30.0 (27.0)
11	±0.05%	25.0	27.0	30.0	35.0	37.0
12	±0.025%	35.0	37.0	40.0	45.0	47.0

^{*±1/2} LSB for quantizing error.

ADSF Skip on A-D Flag

Octal code:

6531

Event time:

1

Execution time:

4.25 μs

Operation:

The A-D converter flag is sensed, and if it is set (indicating that the conversion is complete) the

contents of the PC are incremented by one, skipping the next instruction.

Symbol:

If A-D Flag = 1, then $PC + 1 \rightarrow PC$

ADCV Convert Analog Voltage to Digital Value

Octal code:

6532

Event time:

2

Execution time: Operation:

This time is a function of the accuracy and word length switch setting as listed in Table 6-6. The A-D converter flag is cleared, the analog input voltage is converted to a digital value, and

then the A-D converter flag is set. The number of binary bits in the digital-value word and the

accuracy of the word are determined by the preset switch position.

Symbol:

 $0 \rightarrow A-D$ Flag at start of conversion, then

 $1 \rightarrow A-D$ Flag when conversion is done.

ADRB Read A-D Converter Buffer

Octal code:

6534

Event time:

3

Execution time:

 $4.25 \mu s$

Operation:

The converted number contained in the converter buffer (ADCB) is transferred into the AC

left justified; unused bits of the AC are left in a clear state, and the A-D converter flag is

cleared. This instruction must be preceded by a CLA instruction.

Symbol:

 $ADCB \rightarrow AC$

0 → A-D Converter Flag

^{**}If system is to operate at less than 10 bits continuously, conversion times may be reduced to times shown in parentheses.

ADCC Clear Multiplexer Channel

Octal code:

6541

Event time:

1

Execution time:

 $4.25 \,\mu s$

Operation:

The channel address register (CAR) of the multiplexer is cleared in preparation for setting of a

new channel.

Symbol:

 $0 \rightarrow CAR$

ADSC Set Multiplexer Channel

Octal code:

6542

Event time:

2

Execution time:

 $4.25 \mu s$

Operation:

The channel address register of the multiplexer is set to the channel specified by AC₆₋₁₁. A

maximum of 64 single-ended input channels can be used.

ADIC Increment Multiplexer Channel

Octal code:

6544

Event time:

3

Execution time:

4.25 μs

Operation:

The contents of the channel address register of the multiplexer are incremented by one. If the

maximum address is contained in the register when this instruction is given, the minimum

address (00) is selected.

Symbol:

 $CAR + 1 \rightarrow CAR$

The converter/multiplexer may be operated by the program in either the random or sequential addressing mode. In the random addressing mode, the analog channel is selected arbitrarily by the program for digitizing and the resultant binary word is read into the accumulator. A sample program for the random addressing mode is as follows:

TAD ADDR /YES-GET CHANNEL ADDRESS ADSC /AND SEND TO MULTIPLEXER

ADCV /CONVERT A TO D

CLA /CLEAR AC

ADSF /SKIP ON A/D DONE FLAG

JMP.-1 /WAIT FOR FLAG ADRB /AND READ INTO AC

In the sequential address mode, the program advances the multiplexer channel-address register to the next channel each time an analog value is converted and read into the accumulator.

Should the converter/multiplexer be operated in the interrupt mode, the computer will be signaled each time that a binary word is ready, enabling the system to use processor time more efficiently.

Amplifier, Sample and Hold Options for AF01-A

The AH03 consists of a DEC amplifier (part #1505379-10) mounted on an A990 Amplifier Board with appropriate scaling networks and gain trim and balance potentiometers.

Open loop gain	2 x 10 ⁶		
Rated output voltage	(@ 10 ma) ±11V		
Frequency response			
Unity Gain, small signal	10 MHz		
Full output voltage	1 MHz		
Slewing rate	$100V/\mu s$		
Overload recovery	50 μs		
Input voltage offset	Adjustable to 0		
Avg vs temp	20 μv/°C		
Vs supply voltage	15 μ ν/%		
Vs time	10 μv/day		
Input current	50 pA max		
Avg vs temp	doubles every 10°C		
Vs supply voltage	10 pA/%		
Input impedance (ohms)			
Between inputs	10 ¹⁰ (5 pF shunt c)		
Common mode	10 ¹⁰ (5 pF shunt c)		
Input Voltage	±15 V		
Max common mode	±10 V		
Common mode rejection	50,000V		
Power			
Voltage	±15 to 16V		
Current at rated load	40 ma		
A400 (standard gain options)			
Acquisition time to 0.01% (full-			
scale step)	<12 μs		
Aperture time	<150 ns		
Hold inaccuracy (droop)	<1 mv/ms		
Temperature coefficient	0.1 mv/ms/°C		
Gain (negative)	1.0 or 0.5		
Input range (volts)	±5.0 ±10.0		
Output Impedance	<1.0 ohm		

6.12 DIGITAL-TO-ANALOG

6.12.1 Digital-to-Analog Converter, Type AA01-A

The general-purpose Digital-to-Analog Converter Type AA01-A converts 12-bit binary numbers into analog voltages. The basic option consists of three channels, each containing a 12-bit digital buffer register and a digital-to-analog converter (DAC). A common digital input to all three registers is provided by a 12-bit input channel which receives bussed output connections from the accumulator. Appropriate precision voltage reference supplies are provided for the converters.

One IOT microinstruction simultaneously selects a channel and transfers a digital number into the selected register. Each converter operates continuously on the contents of the associated register, providing an analog output voltage.

Type AA01-A options can be specified in a wide range of basic configurations; e.g., with from one to three channels, with or without output operational amplifiers, and with internally or externally supplied reference voltages. Configurations with double buffer registers in each channel are also available.

Each single-buffered channel is operated by a single IOT command. Select codes of 55, 56, and 57 are assigned to the AA01-A, making it possible to operate nine single-buffered channels or various configurations of double-buffered channels. A typical instruction for the AA01-A is:

DALI Load Digital-to-Analog Convert 1

Octal code:

6551

Event time:

1

Execution time:

 $4.25 \mu s$

Operation:

The contents of the accumulator are loaded into the digital buffer register of channel 1.

Symbol:

 $AC \rightarrow DAC1$

CHAPTER 7 PROGRAM LIBRARY

Because of the dual nature of the PDP-12, virtually all PDP-8 classic LINC, and LINC-8 programs will run on the PDP-12 equipped with the necessary peripherals. The following programs are normally supplied with the PDP-12, and most will run on just the PDP-12A. There are other programs available from both Digital Equipment Corporation and from DECUS. These have not been included in the Standard Library. This chapter is divided into four sections: PDP-12 Programs, PDP-8 Programs, DECUS Programs, and Diagnostic Programs. This list is representative and subject to change. The Digital Program Library and the DECUS Program Library maintain the current program lists.

7.1 PDP-12 PROGRAMS

The PDP-12 is delivered to the user complete with an extensive selection of system programs and routines making the full data processing capability of the new computer immediately available to each user, and eliminating many commonly experienced initial programming delays.

7.1.1 LAP6-DIAL Display Interactive Assembly Language (DEC-12-SE2D-D)

LAP6-DIAL provides the PDP-12 user with an operating system that includes editing, assembling, and data handling capabilities. An interactive display permits quick user response; a File Index and Peripheral device Interchange Program (PIP) facilitate file manipulation. The minimum hardware configuration for using LAP6-DIAL is a 4K PDP-12B system. (The character editing facility is, however, designed primarily around the use of the AD12 Analog-to-Digital Converter and Multiplexer for the PDP-12A.) In addition, the system will utilize an additional 4K of memory to improve its efficiency significantly.

The LAP6-DIAL system is provided to the user on LINCtape. Each tape contains a reserved area occupied by LAP6-DIAL, a working area for temporary storage of user programs, and a file area for permanent storage of user programs. The LAP6-DIAL area of the tape contains the Editor, Assembly and Utility Programs, and a File Index. The Index stores the name, starting block number, and length of each stored file. User programs are saved as named files in the file area of the system tape. The scope is used as a moving window to view source programs in the working area. Up to 17 lines with up to 40 characters per line can be displayed at a time on the scope (maximum of 256). In the edit mode, any portion of a program in the Working Area can be displayed by an appropriate locate request.

A LINCtape containing LAP6-DIAL is designated as the system tape, and is assigned to tape unit 0. Some operations may be performed with only one LINCtape containing LAP6-DIAL, but many procedures, such as assembling programs, require two tapes. Most efficient operation is achieved when both tapes contain LAP6-DIAL.

On startup the system automatically enters the edit mode. A source program may be typed in via the TTY keyboard. The program will reside in the Working Area and will be displayed on the CRT Display character-by-character as it is entered. The LAP6-DIAL Editor may be used at this time to add, modify, or delete characters, lines, or large sections of the program. A command may also be issued via the TTY keyboard to the Monitor. When called, the Monitor writes out its buffer pointers and is replaced by the called program. When the system program operation is completed, the Monitor is automatically called back into core and it retrieves its buffer pointers.

The Monitor Commands are summarized in the following table. Items in parentheses are optional; if they are omitted, the user's program that was most recently manipulated is used.

	Commands	Functions
AS	(N, U)	Assemble $(U = 0, 1)$
LO	(N, U)	Load Binary
LI	(L, L,) (N, U)	Assemble & List (U - 0, 1)
QL	(L, L,) (N, U)	Assemble & Quick List $(U = 0, 1)$
PS	(L(,L),) (N, U)	Print Source
SB	N, U(M[A])	Save Binary
SP	N, U	Save Program (Source)
AP	(L, L,) N, U or B, U	Add Program (Source)
DX	(, U)	Display Index
PX	(, U)	Print Index
CL		Clear Working Area
PI		Peripheral Interchange Program
EX		Exit
MC	X(Y), U	User's Monitor Command (READS IN
		USER PROGRAM FROM FREE AREA)

Legend:

```
N = File Name M = Mode (L for LINC or P for PDP-8)
U = Tape Unit A = Address (5 digits-used only if mode is specified)
L = Line Number B = Tape Block Number
```

The assembler processes both LINC mode and 8 mode statements, assembling programs up to 8K in length. Six-character alphanumeric symbols can be defined; source listings, assembly listings, or abbreviated assembly listings may be optionally obtained on the Teletype or, if provided, the Line Printer. To facilitate the preparation of system programs and large programs, conditional assembly pseudo-operations are provided along with a facility to preserve the tag table definitions from one assembly to another assembly (or to several assemblies).

Upon loading, programs may be started automatically in either LINC or 8 mode at any memory location.

A second version of LAP6-DIAL, LAP6-DIAL-MS, provides the user of the PDP-12 (with 8K of memory and a disk) with a fully-integrated tape-disk system. The additional facilities include:

- 1. Mass storage capabilities to support DF32, RS08, or RK8 disks (or LINCtape).
- 2. Monitor commands to clear the Binary Working Area and to merge binary files.
- 3. I/O routines to read, write, or move data.
- 4. An automatic system built to specialize the system tape for the user's present configuration.
- 5. Increased assembler facilities for processing large programs.

7.1.2 Peripheral Interchange Program (PIP)

The Peripheral Interchange Program provides a flexible means of transferring data among peripheral devices such as LINCtape, Teletype, High Speed Paper-Tape Reader/Punch, Line Printer, Disk, and Card Reader. Symbolic and binary files, as well as absolute data, are processed in response to scope-directed operator requests.

7.1.3 **QUANDA (DEC-12-FISA-D)**

QANDA is a subroutine which allows a user to display textual information on the CRT Display, ask questions of the viewer, allow editing of the input, and receive answers.

7.1.4 DATAM* (DEC-L8-FDAA-D)

The DATAM program retrieves, displays, and stores individual data blocks from LINCtape and provides the user with a repertoire of mathematical operations for manipulating this data. These operations include high and low pass filtration, differentiation and integration, attenuation and amplification, inversion, addition of a constant, and plotting of a bar graph. The data or resulting waveforms are continuously displayed.

7.1.5 GRAPHA* (DEC-L8-UGAA-D)

The GRAPHA program allows data to be retrieved from LINCtape and displayed, and allows a graph to be composed for this data, with appropriate lettering and axes. The graph is assembled on the display and the finished product may be photographed, plotted on an incremental plotter, or saved on LINCtape for future reference.

7.1.6 FRQANA* (DEC-L8-FANA-D)

The FRQANA program performs a frequency analysis of 512 points of data, and resolves the resulting spectrum into 64 components. The sine, cosine, and rms spectra are subsequently displayed and can be scaled. A resynthesis from the spectra can then be performed to provide a comparative display of the original data and the resynthesized waveform.

7.1.7 **MAGSPY (DEC-12-UZSA-D)**

The MAGSPY program provides a moving window for scanning data stored on LINCtape. The data is displayed on the scope and can be scanned at a rate determined by a potentiometer setting. The data is interpreted either as a binary point plot or as packed ASCII characters depending on a switch setting.

7.1.8 COMPAR* (DEC-L8-EUCA-D)

The COMPAR program compares contents of specified LINCtape blocks on a word by word basis.

7.1.9 SEARCH* (DEC-L8-EUSA-D)

The SEARCH program performs a search of blocks of LINCtape for a specific word. The user may specify the word to be searched and a mask of bits for comparison.

7.1.10 **CONVERT (DEC-12-ESYB-D)**

The CONVERT program is used to convert symbolic text from LAP-4 and LAP-6 manuscripts for compatibility with the LAP6-DIAL Assembler.

*LINC-8 Programs.

7.1.11 MARK 12 (DEC-12-YITB-D)

The MARK 12 program is used to format tapes to be used with the PDP-12. Several format options are available and, by using the subroutines within MARK 12, the user can generate a tape of arbitrary format.

7.1.12 L8SIM (DEC-12-SI1B-D)

The LINC-8 Simulator Trap Processor handles Teletype input and output for LINC-8 and classic LINC programs so they can be run on the PDP-12 without modifications. It must be loaded into the PDP-12 core memory with any LINC-8 or classic LINC program which uses the keyboard or the Teleprinter, in order for that program to be run on the PDP-12.

The trap processor operates by using the PDP-12 Instruction Trap Facility to detect execution of either of the two LINC-8 Teletype input/output instructions by the user's program. It responds to user's execution of a Teletype instruction by executing coding to simulate the instruction's LINC-8 or classic LINC effect. After simulation of the instruction, the trap processor returns control to the user program.

Users may easily adapt the LINC-8 Simulator Trap Processor to handle other devices or for their own purposes. Explicit instructions for a number of useful adaptations are provided in this document, along with enough information on the internal operation of the program to permit users to easily implement adaptations of their own invention.

An important limitation of the trap processor is that it is not interruptible. It may not be operated when the PDP-12 Program Interrupt facility is enabled.

7.1.13 FRED (DEC-12-FZFA-D)

The File Replacement, Entry, and Deletion subroutine processes the LAP6-DIAL Index for the user, freeing him from the clerical function of maintaining the file entries. A second version Mildred (DEC-12-FZDA-D) performs these operations in a disk based system.

7.1.14 PRTC 12-F (DEC-12-YIYA-D)

PRTC12-F is a PDP-12 program to utilize the TC12-F tape hardware option in transferring data between LINCtape and DECtape. The DECtape may have been formatted on a PDP-8, PDP-8/I, PDP-9, PDP-10, and PDP-15. For a complete description of the TC12-F hardware see Section 6.4.3.

7.1.15 SIGAVG/SINPRE (DEC-12-UZ1A-D/DEC-12-UW4A-D)

SIGAVG is a multisweep signal averager that allows the user to enhance signals with a low signal/noise ratio and display them on the CRT Display. SIGAVG will sample at rates ranging from 55 to 4095 μ s per point per instrument, supporting a maximum of five instruments. It can take up to 4096 sweeps, and can output averaged results to LINCtape. SINPRE converts the output of SIGAVG (two-word) to the commonly used one-word format.

7.1.16 CATACAL (DEC-12-UW1A-D)

CATACAL is a "boxcar" averager and data manipulation program that acquires data from an external instrument at rates that range from .2 ms to 35 seconds per point. CATACAL is capable of reading and writing on LINCtape; it can output one or two data files (spectra) to either the CRT display or an X-Y recorder. It can also differentiate, integrate, edit (strip), and compare data files (spectra), and display the results on the scope. It has the capability of curve-fitting and deconvolution, using Lorentzian or Gaussian equations.

7.1.17 NMRSIM (Nuclear Magnetic Resonance Simulation) (DEC-12-UW5A-D)

NMRSIM allows the user to calculate theoretical spectra of a wide variety of compounds. The user inputs the appropriate parameters from the keyboard (such as spin, chemical shifts, and coupling constants), and calculated

line-spectra are then displayed on the scope. NMRSIM can output spectra to LINCtape and can also read, merge, and display a series of spectra from LINCtape which effectively simulate large spin systems or mixtures of compounds.

7.1.18 ADTAPE/ADCON (DEC-12-UW2A-D)

ADTAPE is a data acquisition program that allows the user to: sample simultaneously from 1 to 16 A/D channels at sampling rates ranging from 1000 points per second to 40 seconds per point; display the output of any two channels on the CRT display; and output all results to LINCtape in real time. ADTAPE has a setup mode that allows the user to define a wide variety of sampling schemes using either the keyboard, CRT display or LINCtape. The program ADCON is utilized upon completion of ADTAPE and allows the user to sort the ADTAPE LINCtape output for a given channel onto contiguous tape blocks for further processing.

7.1.19 TISA (DEC-12-UW3A-D)

TISA can acquire asynchronous (time-independent) or synchronous data simultaneously from up to five instruments at rates that do not exceed 2 milliseconds per point. TISA stores data on LINCtape and supports up to 32K of core. Data is displayed on the CRT display via a moving window and cursor with X-Y decimal readout. TISA has a setup mode that allows the user to define a wide variety of parameters using either the keyboard/CRT display of LINCtape. TISA is capable of acquiring data from instruments that are interfaced via shaft encoders or potentiometers, or both. With the ability to call any LAP6-DIAL program, TISA is able to interact with all PDP-12 software.

7.1.20 **FOCAL 12**

FOCAL-12 is an adaptation of the conversational FOCAL® (FOrmula CALculator) language designed specifically to optimize use of the PDP-12 computer and its standard peripheral devices. The LINCtape, console switches, external sense lines, and VR12 display can all be utilized effectively through FOCAL-12. Simple data acquisition and reduction tasks may be quickly programmed using FOCAL-12, and the language can be used to analyze previously generated data stored on LINCtape. FOCAL-12 requires 8K of memory.

7.2 PDP-8 PROGRAMS

The PDP-8 programs available to the user are listed in this section. The programs described in these abstracts come from two sources, past programming efforts on the PDP-5, 8, 8/S, 8/I, 8/L, and present and continuing programming effort on these machines plus the PDP-12. Thus the programming system takes advantage of the many man-years of program development and field testing by Digital computer users. There are over 3500 Family-of-8 systems already in the field.

Although all utility and functional program documentation is issued in a newer format than that introduced with the Family-of-8 computers, in many cases PDP-12 programs originated from previous Family-of-8 computers. Programs written by users of Family-of-8 computers and submitted to the DECUS library (DECUS — Digital Equipment Corporation User's Society) are immediately available to PDP-12 users. Consequently, users of all PDP-12 computers can take full advantage of continuing program developments.

7.2.1 System Programs

DEC-08-AJAD-D FOCAL – FOCAL (for FOrmula CALculator) is an on-line, conversational service program for the PDP-8 family of computers, designed to help scientists, engineers, and students solve numerical problems. The language consists of short imperative English statements which are relatively easy to learn. Mathematical expressions are typed in standard notation for the most part. No previous programming experience is needed either to understand the manual or to use FOCAL at the Teletype console. However, the best way to learn the FOCAL language is to sit at the Teletype and try the commands, starting with the examples given in the Programming Languages Handbook.

DEC-D8-SDAB-D Disk Monitor System (8 Mode) — This system consists of a keyboard-oriented Monitor, which enables the user to efficiently control the flow of programs through his PDP-12, and a comprehensive software package, including a FORTRAN Compiler, Program Assembly Language (PAL-D), Edit program (EDITOR), Peripheral Interchange Program (PIP), and Dynamic Debugging Technique (DDT-0) program. Also provided is a program (BUILDER) for generating a customized monitor according to the user's particular machine configuration (amount of core, number of discs, etc).

The system is modular and open-ended, permitting the user to construct the software required in his environment, and allows the user full access to his disk (referred to as the system device) for storage and retrieval of his programs. By typing appropriate commands into the Monitor, the user can load a program (construct it from one or more units of binary coding previously punched out on paper tape or written on the disk by the Assembler, and assign it core locations), save it (write it out, with an assigned starting address, on the system device), and later call it (read it back into core from the system device) for execution. See Introduction To Programming for further details.

DEC-08-AFC0-D, 4K FORTRAN

The 4K FORTRAN Compiler lets the user express problems in a mixture of English words and mathematical statements. It reduces the time needed for program preparation and enables users with little or no knowledge of the computer's organization and operating language to write effective programs.

The 4K FORTRAN language consists of four general types of statements; arithmetic, logic, control, and input/output. FORTRAN functions include addition, subtraction, multiplication, division, sine, cosine, arctangent, square root, natural logarithm, and exponentiation.

DEC-08-KFXB-D, 8K FORTRAN

The 8K FORTRAN system translates a source program into relocatable binary code. The relocatable binary code is output on paper tape and then loaded into the computer for program execution. The 8K FORTRAN system features: USA Standard FORTRAN syntax; subroutines; two levels of subscripting; function subprograms; input/output supervisors; relocatable output loaded by the 8K Linking Loader; COMMON statements; I, F, E, A, X, and H format specifications; and arithmetic and trigonometric library subroutines.

The 8K FORTRAN system consists of a one-pass compiler, the 8K SABR Assembler, 8K Linking Loader, and a comprehensive Library of subprograms. The system requires a PDP-8 Family Computer with at least 8K words of core memory, an ASR33 Teletype, and a high-speed paper tape reader and punch. 8K FORTRAN utilizes all available core to 32K. 8K FORTRAN is a modified version of USASI Basic FORTRAN and is further described in Programming Languages Handbook.

DEC-08-CDDB-D, DDT

The Dynamic Debugging Technique provides a means for on-line program debugging at the symbolic or mnemonic level. By typing commands on the console teleprinter, memory locations can be examined and changed, program tapes can be inserted, selected portions of the program can be run, and the updated program can be punched. This and it's octal counterpart ODT-8 (DEC-08-C0C0-D) are described in Introduction To Programming.

DEC-08-YQYB-D, Floating-Point System

- A Basic System (DEC-08-YQ1B-PB)
- B Interpreter, I/O, I/O Controller (-YQ2B-)
- C Interpreter, I/O Functions (-YQ3B-)
- D Interpreter, I/O, I/O Controller, Functions (-YQ4B-)

As described in Programming Languages Handbook this includes Floating-Point Interpreter and I/O subsystems. Allows the programmer to code his problem in floating-point machine language.

Floating-point operations automatically align the binary points of operands, retaining the maximum precision available by discarding leading zeros. In addition to increasing accuracy, floating-point operations relieve the programmer of the scaling problems common in fixed-point operations. This system includes elementary function subroutines programmed in floating-point. These subroutines are sine, cosine, square root, logarithm, arctan, and exponential functions. Data being processed in floating-point is maintained in three words of memory (12-bit exponent, 24-bit mantissa). An accuracy of six digits is maintained.

DEC-08-AFA2-PB, FORTRAN SYMBOL PRINT

Loaded after the FORTRAN Compiler, this program lists the variables used and where they will be located in core. It also indicates the section of core not used by the compiled program and data.

7.2.2 Elementary Function Routines

The following routines are described in the Program Library Math Routines Manual (DEC-08-FFAC-D) and in the Programming Languages Handbook.

Square Root Subroutine-Single Precision

Forms the square root of a single-precision number. An attempt to take the square root of a negative number will give 0 for a result.

Signed Multiply Subroutine-Single Precision

Forms a 22-bit signed product from 11-bit signed multiplier and multiplicand.

Signed Divide Subroutine-Single Precision

This routine divides a signed 11-bit divisor into a signed 23-bit dividend giving a signed 11-bit quotient and a remainder of 11 bits with the sign of the dividend.

Double-Precision Multiply Subroutine-Signed

This subroutine multiplies a 23-bit signed multiplicand by a 23-bit signed multiplier and returns with a 46-bit signed product.

Double-Precision Divide Subroutine-Signed

This routine divides a 23-bit signed divisor into a 47-bit signed dividend and returns with a 23-bit signed quotient and a remainder of 23 bits with the sign of the dividend.

Sine Routine-Double Precision

The Double-Precision sine subroutine evaluates the function Sin(X) for -4 < 4 (X is in radians). The argument is a double-precision word, two bits representing the integer part and 21 bits representing the fractional part. The result is a 23-bit fraction -1 < Sin(X) 1.

Cosine Routine-Double Precision

This subroutine forms the cosine of a double-precision argument (in radians). The input range is -4 < X < 4.

Four-Word Floating-Point Package

This is a basic floating-point package that carries data as three words of mantissa and one word of exponent. Common arithmetic operations are included as well as basic input/output control. No functions are included.

Logical Subroutines

Subroutines for performing the logical operations of inclusive and exclusive OR are presented as a package.

Arithmetic Shift Subroutines

Four basic subroutines, arithmetic shift right and arithmetic shift left at both single and double precision, are presented as a package.

Logical Shift Subroutines

Two basic subroutines, logical shift right at both single and double precision are presented as a package.

Digital-8-21-F Signed Multiply (Uses EAE) Single Precision

This subroutine forms a 22-bit signed product from an 11-bit signed multiplier and multiplicand using the Extended Arithmetic Element. It occupies less storage and takes less time to execute than its non-EAE counterpart, and it has the same calling sequence.

Digital-8-22-F Signed Divide (Uses EAE) Single Precision

This subroutine divides a double-precision signed 22-bit dividend by a signed 11-bit divisor, producing a signed 11-bit quotient and a remainder of 11 bits having the sign of the dividend.

It makes use of the Extended Arithmetic Element instruction set and occupies less storage and takes less time to execute than its non-EAE counterpart. It has the same calling sequence except that the subroutine name is changed from DIVIDE to SPDIV.

Digital-8-23-F Signed Multiply (Uses EAE) Double Precision

This subroutine multiplies a 23-bit, signed 2's complement binary number by a 23-bit signed 2's complement binary number, giving a 46-bit product with two signs on the higher order end. It makes use of the Extended Arithmetic Element instruction set and, because of this, occupies less storage and takes less time to execute than its non-EAE counterpart. Its calling sequence is comparable with the non-EAE version.

Digital-8-25-F EAE Floating-Point Package

These packages perform the same tasks as the Floating-Point Packages (DEC-08-YQ1B through YQ4B), except that certain routines have been speeded up by the use of the Extended Arithmetic Element.

For a detailed description of floating-point arithmetic and the interpretive Floating-Point Packages, the reader is referred to DEC-08-YQYB-D or the Programming Languages Handbook.

7.2.3 Utility Program

DEC-08-LRAA-D, Read-In-Mode Loader

The RIM Loader is a minimum-sized routine for reading and storing the information in Read-In Mode coded tapes via the 33 ASR Perforated Tape Reader (also high speed reader version).

DEC-08-LBAA-D, Binary Loader (33 ASR, PR12, MC12 Memory Extension)

The Binary Loader is a routine for reading and storing the information in binary-coded tapes via the 33 ASR Perforated Tape Reader or by means of the Type PR12 High-Speed Perforated Tape Reader.

DEC-08-PMP0-D, RIM Punch

This program provides a means of punching out the information in selected blocks of core memory as (Read-In Mode) RIM-coded tape via the 33 ASR Perforated Tape Reader or the High Speed Punch PP12.

DEC-08-YX1A, Binary Punch (33 ASR) DEC-08-YX2A, Binary Punch (PP12)

This program provides a means of punching out the information in selected blocks of core memory as binary-coded tape via the 33 ASR Perforated Tape Punch or the High Speed Punch PP12.

DEC-08-YPPA, Octal Memory Dump

This routine reads the console switches to obtain the upper and lower limits of an area of memory, then types on the Teletype an absolute address plus the octal contents of the first four words specified; it repeats this until the block is exhausted, at which time the user may repeat the operation.

Digital-8-11-U Double Precision BCD-to-Binary by Radix Deflation

This subroutine converts a 6-digit BCD number to its equivalent binary value contained in two computer words.

Digital-8-12-U Incremental Plotter Subroutine

This subroutine moves the pen of an incremental plotter to a new position along the best straight line. The pen may be raised or lowered during the motion.

Digital-8-14-U Binary to Binary-Coded-Decimal Conversion

This subroutine provides the basic means of converting binary data to binary-coded-decimal (BCD) data for typeout, magnetic tape recording, etc.

Digital-8-15-U-SYM Binary-to-Binary-Coded-Decimal Conversion (Four Digit)

This subroutine extends the method used in Digital-8-14-U so that binary integers from 0 to 4095 in a single computer word may be converted to four binary-coded-decimal characters packed in two computer words.

Digital-8-17-U EAE Instruction Set Simulator

This routine permits the automatic multiply-divide hardware option to be simulated.

Digital-8-20-U-SYM Character String Typeout Subroutine

This basic subroutine types messages stored internally as a string of coded characters. All 33 ASR characters are legal.

Digital-8-21-U-SYM Symbolic Tape Formal Generator

The Format generator allows the user to create PDP-8 symbolic tapes with Formatting. It may be used to condense tapes with spaces by inserting tabs, or merely to align tabs, instructions, and comments.

Digital-8-22-U-SYM Unsigned Decimal Print, Single Precision

This subroutine permits the typeout of the contents of a computer word as a four-digit, positive, decimal integer.

Digital-8-23-U-SYM Signed Decimal Print, Single Precision

This subroutine permits the typeout of the contents of a computer word as a signed two's complement number. If bit 0 of the computer word is a 1, the remaining bits represent a negative integer in two's complement form; if bit 0 equals 0, the remaining bits represent a positive integer. If the number is negative, a minus sign is printed; if positive, a space.

Digital-8-24-U-SYM Unsigned Decimal Print, Double Precision

This subroutine permits the typeout of a double-precision integer stored in the usual convention for double-precision numbers (see DEC-08-FFAC-D or Programming Languages Handbook). The one exception is that all 24 bits are interpreted as magnitude bits (i.e., the bit 0 of the high-order word is not a sign bit). The typeout is in the form of a seven-digit, positive, decimal integer.

Digital-8-25-U-SYM Signed Decimal Print, Double Precision

This subroutine permits the typeout of the contents of two consecutive computer words as one signed, double-precision, two's complement number. If bit 0 of the high order word is a 1, the remaining 23 bits represent a negative integer in two's complement form; if bit 0 equals 0, the remaining bits represent a positive integer. If the number is negative, a minus sign is printed; if positive, space.

Digital-8-28-U-SYM Single Precision Decimal-to-Binary Conversion & Input (ASR-33) Signed or Unsigned

This routine accepts a string of up to four decimal digits (single precision for the PDP-12) from the Teletype keyboard and converts it to the corresponding two's complement binary number. The string may contain as legal characters a sign (+, -, or space) and the digits from 0-9. If the first legal character is not a sign, the conversion is unsigned.

Digital-8-29-U-SYM Double Precision Decimal-to-Binary Conversion & Input (ASR-33) Signed or Unsigned

This routine accepts a string of up to eight decimal digits (double-precision for the PDP-12) from the Teletype keyboard and converts it to the corresponding two's complement binary number. The string may contain as legal characters a sign (+, -, or space) and the digits 0-9. If the first legal character is not a sign, the conversion is unsigned.

7.3 DECUS PROGRAM

DECUS is the Digital Equipment Corporation Users' Society, which collects, files, and distributes user-written programs for all DEC computers. Below is a partial list of PDP-8 programs available through DECUS. More detailed lists are available in the periodic DECUS program catalog.

DECUS No. 5-5, EXPANDED ADDING MACHINE

Expanded Adding Machine is a minimum-space version of Expensive Adding Machine (DEC 5-43-D) using a table lookup method including an error space facility.

This is a basic version to which additional control functions can easily be added. Optional vertical or horizontal format, optional storage of intermediate result with reentry, fixed-point output of results within reason, and other features that can be had in little additional space under switch register control. (Write-up and Listing Only)

DECUS NO. 5/8-9, ANALYSIS OF VARIANCE PDP-5/8

An analysis of variance program for the standard PDP-5/8 configuration.

The output consists of:

- A. For each sample:
 - 1. sample number
 - 2. sample size
 - 3. sample mean
 - 4. sample variance
 - 5. sample standard deviation
- B. The grand mean
- C. Analysis of Variance Table

This is the standard analysis of variance table that can be used with the F test to determine the significance, if any, of the differences between sample means. The output is also useful as a first description of the data.

All arithmetic calculations are carried out by the Floating Point Interpretive Package DEC-08-YQYB-D described in Programming Languages Handbook.

DECUS NO. 5/8-18a, BINARY TAPE DISASSEMBLY PROGRAM

Disassembles a PDP-8 program, which is on tape in BIN format. It prints the margin setting, address, octal contents, and mnemonic interpretation (PAL) of the octal contents. A normal program or a program which uses Floating Point may be disassembled.

DECUS NO. 5/8-20, REMOTE OPERATOR FORTRAN SYSTEM

Program modification and instructions to make the FORTRAN OTS version dated 2/12/65 operate from remote stations.

DECUS NO. 5/8-21, TRIPLE PRECISION ARITHMETIC PACKAGE

An arithmetic package to operate on 36-bit signed integers. The operations are add, subtract, multiply, divide, input conversion, and output conversion. The largest integer which may be represented is 2^{35} -1 or 10 decimal digits. The routines simulate a 36-bit (3 word) accumulator in core locations 40,41, and 42, and a 36-bit multiplier quotient register in core locations 43, 44, and 45. Aside from the few locations in page 0, the routines use less core storage space than the equivalent double-precision routines.

DECUS NO. 5-25, A PSEUDO RANDOM NUMBER GENERATOR

The random number generator subroutine, when called repeatedly, will return a sequence of 12-bit numbers which, though deterministic, appears to be drawn from a random sequence uniform over the interval 0000_8 to 7777_8 . Successive numbers will be found to be statistically uncorrelated. The sequence will not repeat itself until it has been called over 4 billion times.

DECUS NO. 8-26a, COMPRESSED BINARY LOADER (CBL)

The CBL (Compressed Binary Loader) format, in contrast to BIN format, utilizes all eight information channels of the tape, thus achieving nearly 25% in time savings.

Whereas BIN tapes include only one checksum at the end of the tape, CBL tapes are divided into many independent blocks, each of which includes its own checksum. Each block has an initial loading address for the block and a word count of the number of words to be loaded.

The CBL loader occupies locations 7700 through 7777.

DECUS NO. 8-26c, XCBL - EXTENDED MEMORY CBL LOADER

XCBL is used to load binary tapes punched in CBL format into any 4K memory field. This loader occupies locations 7670 through 7777 of any memory field.

DECUS NO. 8-26d, XCBL PUNCH PROGRAM

This program permits a user to prepare an XCBL tape of portions of extended memory through the control of the keyboard of the on-line Teletype.

DECUS NO. 5/8-27a, BOOTSTRAP LOADER AND ABSOLUTE MEMORY CLEAR

Bootstrap Loader inserts a bootstrap loading program in page 0 from a minimum of toggled instructions.

Absolute Memory Clear leaves the machine in an absolutely clear state and, therefore, cycling around memory, obeying an AND instruction with location zero. Should not be used unless one plans to reinsert the loader program.

DECUS NO. 5/8-28a, PAL III MODIFICATIONS-PHOENIX ASSEMBLER

This modification of the PAL III Assembler speeds up assembly on the ASR-33/35 and operates only with this I/O device. Operation is essentially the same as PAL III, except that an additional pass has been added, Pass 0. This pass starts in the usual manner but, with the switches set to zero, reads the symbolic tape into a core buffer area. Subsequent passes then read the tape image from storage instead of from the Teletype.

DECUS NO. 5/8-29, BCD TO BINARY CONVERSION SUBROUTINES

These two subroutines improve upon the DEC-supplied conversion routine.

DECUS NO. 5-30, GENPLOT - GENERAL PLOTTING SUBROUTINE

This self-contained subroutine is for the PDP-5 with a 4K memory and a CALCOMP incremental plotter. The subroutine can move (with the pen in the up position) to location (x,y), make an x at this location, draw a line from this present position to location (x,y), and initialize the program location counters.

DECUS NO. 5-31, FORPLOT – FORTRAN PLOTTING PROGRAM

FORPLOT is a general-purpose plotting program for use in conjunction with the CALCOMP 560 Plotter. It is self-contained and occupies memory locations 0000 to 4177. FORPLOT accepts decimal data inputted on paper tape in either fixed or floating point formats. Formats can be mixed at will. FORTRAN output tapes are acceptable directly, and any comments on these are filtered out.

DECUS NO. 5/8-32a, PROGRAM TO RELOCATE AND PACK PROGRAM IN BINARY FORMAT

Provides a means to shuffle machine language program around in memory to make the most efficient use of computer storage.

DECUS NO. 5/8-33, TAPE TO MEMORY COMPARATOR

Tape to Memory Comparator is a debugging program which allows comparison of the computer memory with a binary tape. It is particularly useful for detecting reader problems, or during stages of debugging a new program. Presently uses high-speed reader, but may be modified for TTY reader.

DECUS NO. 5/8-35, BCD TO BINARY CONVERSION SUBROUTINE AND BINARY TO BCD SUBROUTINE (DOUBLE PRECISION)

This program consists of a pair of relatively simple and straightforward double-precision conversions.

DECUS NO. 5/3-38, FTYPE – FRACTIONAL SIGNED DECIMAL TYPE-IN

Enables a user to type fractions of the form: .582. -.73, etc, which will be interpreted as sign plus 11 bits (e.g., 0.5 μ 2000). Subroutine reads into 300-3177 and is easily relocated, as it will work on any page without modifications.

DECUS NO. 5/8-39, DSDPRINT, DDTYPE — DOUBLE-PRECISION SIGNED DECIMAL INPUT-OUTPUT PACKAGE

DSDPRINT, when given a signed 24-bit integer, types a space or minus sign, and then a 7-digit decimal number in the range -8388608 to +8388607. DDTYPE enables user to type in a signed decimal number in either single or double precision. These routines are already separately available, but the present subroutine package occupies only one memory page and allows for more efficient memory allocation. Located in 3000-3177, but will work on any page.

DECUS NO. 5/8-43, UNSIGNED OCTAL-DECIMAL FRACTION CONVERSION

This routine accepts a four-digit octal fraction in the accumulator and prints it out as an N-digit decimal fraction where N = 12 unless otherwise specified. After N digits, the fraction is truncated. Programs are included for use with the Extended Arithmetic Element.

Storage requirements: 55 Octal locations for the PDP-5, 47 Octal locations for the PDP-8.

DECUS NO. 8-44, MODIFICATIONS TO THE FIXED POINT OUTPUT IN THE PDP-8 FLOATING POINT PACKAGE (DEC-08-YQYA-D)

The Floating Point Package (DEC-08-YQYA-D) includes an Output Controller which allows output in fixed point as well as floating point format. This Output Controller takes the form of a certain number of patches to the "Floating Output E Format" routine, plus an additional page of coding.

Certain deficiencies were noted in the fixed-point output format, particularly the lack of any automatic rounding off. For example, the number 9, if outputted as a single digit, appears as 8. Modification attempts to provide automatic rounding off resulted in the Output Controller being completely rewritten with minor changes in the format.

This new version of the Output Controller is also in the form of patches to the Floating Output with an additional page of coding, thereby not increasing the size of the Floating-Point Package.

The following summarizes this new version:

- 1. The number output is automatically rounded off to the last digit printed, or the sixth significant digit, whichever is reached first. Floating point output is rounded off to six figures, since the seventh is usually meaningless.
 - 2. A number less than one is printed with a zero preceding the decimal point (e.g., +0.5 instead of +.5).
 - 3. A zero result, after rounding off, is printed as +0 instead of +.
- 4. The basic Floating Point Package includes the facility to specify a carriage return/line feed after the number using location 55 as a flag for this purpose. The patches for the Output Controller caused this facility to be lost. This version restores this facility.

DECUS NO. 8-47, ALBIN – A PDP-8 LOADER FOR RELOCATABLE BINARY PROGRAMS

ALBIN is a simple method for constructing relocatable binary formatted programs, using the PAL III Assembler. Allocation of these programs can be varied in units of one memory page (128₁₀ registers.). When loading an ALBIN program, the actual absolute addresses of indicated program elements (e.g., the keypoint of subroutines) are noted down in fixed program-specified location on page zero. In order to make a DEC symbolic program suitable for translation into its relocatable binary equivalent, minor changes are required which, however, do not influence the length of the program. Due to its similarity to the standard DEC BIN loader, the ALBIN loader is also able to read-in normal DEC binary tapes. ALBIN requires 122₁₀ locations, RIM loader included. Piling-up in core memory of ALBIN programs stored on conventional or DECtape can be achieved using the same method with some modifications.

DECUS NO. 5/8-48, MODIFIED BINARY LOADER MKIV

The Mark IV loader was developed to accomplish four objectives:

- 1. Incorporate the self-starting format described in DECUS 5/8-27, ERC Boot.
- 2. Select the reader in use automatically, without switch register settings.
- 3. Enable a newly-prepared binary tape to be checked prior to loading by calculating the checksum.
- 4. Reduce the storage requirements for the loader so that a special program would fit on the last page of memory with it.

DECUS NO. 8-49, RELATIVISTIC DYNAMICS

Prints tables for relativistic particle collisions and decay in the same format as the Oxford Kinematic Tables. It can be used in two ways:

- 1. Two-particle Collisions Given the masses of incident, target, and emitted particles, the incident energy, and center-of-mass angles, the program calculates angles and energies of the emitted particles in the Lab frame. If the process if forbidden energetically, program outputs E, allowing the threshold energy to be found.
- 2. Single Particle Decays By specifying M2 = 0 (target), the problem will be treated as a decay, and tables similar to the above will be printed.

DECUS NO. 5/8-50, ADDITIONS TO SYMBOLIC TAPE FORMAT GENERATOR (DEC-8-21-U)

Performs further useful functions by the addition of a few octal patches. By making the appropriate octal patches via the toggles, the Format Generator can also format FORTRAN tapes, shorten tape by converting space to tabs, and convert the type of tape.

A short binary tape may be made and added on to the end of 8-21-U to edit an original tape that was punched off-line.

The rubout character will cause successive deletion of the previous characters until the last C. R. is reached but not removed. The use of \leftarrow will cause the current line to be restarted. Thus an input tape may be prepared off-line without attention to format spacing, with mistakes corrected as they occur, and finally passed through the Format Generator to create a correctly formatted, edited, and line-fed on either rolled or fanfold paper tape.

DECUS NO. 5/8-51, CHARACTER PACKING AND UNPACKING ROUTINES

ASCII characters may be packed two to a word and recovered. Control characters are also packable but are preceded by a 37 before being packed into the buffer. The two programs total 663₁₀ registers.

The program occupies 72₁₀ registers.

DECUS NO. 5/8-54, TIC-TAC-TOE LEARNING PROGRAM - T³

This program plays Tic-tac-toe, basing its moves on stored descriptions of previously lost games. The main program is written in FORTRAN. There is a short subroutine written in PAL II used to print out the Tic-tac-toe board. The program comes already educated with about 32 lost games stored. Requires FORTRAN Object Time System.

DECUS NO. 5/8-56, FIXED POINT TRACE NO. 1

A minimum size monitor program which executes the user's program one instruction at a time and reports the contents of the program counter, the octal instruction, the contents of the accumulator and link, and the contents of the effective address by means of the ASR-33 Teletype. Storage Requirements: two pages.

DECUS NO. 5/8-57, FIXED POINT TRACE NO. 2

Similar to Fixed Point No. 1, except that the symbolic tape provided has a single origin setting instruction of (6000). Any four consecutive memory pages can be used, with the exception of page zero, by changing this one instruction.

DECUS NO. 8-58, ONE-PAGE DECTAPE ROUTINE (522 CONTROL)

A general-purpose program for reading, writing, and searching of magnetic tape. This program was written for the Type 552 Control. It has many advantages over both of the standard DEC routines and also over the DECUS No. 5-46. The routines are one page long and can be operated with the interrupt on or off. The DEC program delays the calling program while waiting for the unit and movement delays to time out. This routine returns control to the calling program. This saves 1/4 second every time the tape searches forward, and half that time when it reverses. In addition, it will read and write block O₁. This program is an advantage over the previous one-page routines in that it allows interrupt operations, doesn't overflow by one location, interrupts the end zone correctly and not as an error, and provides a calling sequence identical to the DEC program.

DECUS NO. 8-60, SQUARE ROOT FUNCTION BY SUBTRACTION REDUCTION

A single precision square routine using EAE. This routine is usually faster than the DEC routine and can easily be modified for double precision calculation at only twice the computation time.

DECUS NO. 8-61, IMPROVEMENT TO DIGITAL 8-9 F SQUARE ROOT

An improved version of the DEC Single Precision Square Root Routine (without EAE). Saves a few words of storage and execution is speeded up by 12 per cent.

DECUS NO. 8-62, HIGH-SPEED READER OPTION FOR FORTRAN COMPILER

Program modification that allows the PDP-8 FORTRAN Compiler to read source tapes through the high-speed reader, and punch on the ASR-33. The program is loaded in over the compiler. It can be punched on an extension of the compiler tape so that, by depressing the CONTINUE key, it can be read in immediately following the compiler.

DECUS NO. 8-65, A PROGRAMMED ASSOCIATIVE MULTICHANNEL ANALYZER

The program describes the use of a small computer as an associate analyzer with special reference to the PDP-8. The advantages and limitations of the method are discussed in the write-up, and general program algorithms are presented.

DECUS NO. 8-68 a LABEL for PDP-8, ALP PROGRAM

The ALP Program punches labels for paper tapes. When a key is stuck on the on-line Teletype keyboard, no echo is performed, but the computer outputs a few characters to the Teletype punch which form the outline of the character associated with the key.

The character outlines have a fixed width of 5 lines of tape, followed by 3 blank lines for separation between characters; all 8 columns of the paper tape are used to provide the maximum height of character outlines.

DECUS NO. 5/8-69, LESQ29 and LESQ11

The purpose of the program is to fit the best sequences of parabolas to a given 400-point parabola least squares fit to approximate a given data curve. Approximately 400 individual parabolas are computed.

DECUS NO. 8-70, EAE ROUTINES FOR FORTRAN OPERATING SYSTEM (DEC-08-CFA3)

These are two binary patches to the FORTRAN Operating System which utilizes the Type 182 EAE hardware for single precision multiplication and normalization, replacing the software routines in FOSSIL (the operating system). The binary tape is loaded by the BIN Loader after FOSSIL has been loaded. Execution time of a Gauss-Jordan matrix inversion is reduced by approximately 30%.

Other Programs Needed: FORTRAN Operating System (DEC-08-CFA3-PB), dated March 2, 1967.

DECUS NO. 8-72, MATRIX INVERSION - REAL NUMBERS

The program inverts a matrix, up to size 12 x 12, of real numbers. The algorithm used is the Gauss-Jordan method. A unit vector of appropriate size is generated internally at each stage. Following the Gauss sweepout, the matrix is shifted in storage, another unit vector is generated, and the calculation proceeds.

Other Programs Needed: FORTRAN Compiler and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution time: Actual computation takes less than 10 seconds. Data read-in and read-out may take up to five minutes.

DECUS NO. 8-73, MATRIX INVERSION - COMPLEX NUMBERS

The program inverts a matrix, up to size 6×6 , of complex numbers. The algorithm used is the Gauss-Jordan method, programmed to carry out complex number calculations. A unit vector of appropriate size is generated internally. Following the Gauss sweep-out, the matrix is shifted, another unit vector is generated, and the calculation proceeds. The print-out of the matrices uses the symbol J to designate the imaginary part; e.g., A = a + jb.

Other Programs Needed: FORTRAN Compiler and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution Time: Actual computation takes less than 10 seconds. Data read-in and read-out may take up to five minutes.

DECUS NO. 8-74, SOLUTION OF SYSTEM OF LINEAR EQUATION: AX = B, BY MATRIX INVERSION AND VECTOR MULTIPLICATIONS

This program solves the set of linear algebraic equations AX = B by inverting matrix A, using a Gauss-Jordan method. When the inverse matrix has been calculated, it is printed out. At that point, the program requests the B-vector entries. After read-in of the B-vector, the product is computed and printed out. The program then loops back to request another B-vector, allowing the system to solve many sets of B-vectors without the need to invert matrix A again. Maximum size is 8 x 8.

Other Programs Needed: FORTRAN Compiler and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution Time: Actual computation is less than 10 seconds. Data read-in and read-out may take up to five minutes.

DECUS NO. 8-75, MATRIX MULTIPLICATION - INCLUDING CONFORMING RECTANGULAR MATRICES

This program multiplies two matrices, not necessarily square but which conform for multiplication.

Other Programs Needed: FORTRAN Complier and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution Time: Actual computation takes less than 10 seconds. Data read-in and read-out may take up to five minutes.

DECUS NO. 8-76, PDP NAVIG 2/2

This program utilizes the output of the U.S. Navy's AN/SRN-9 satellite navigation receiver to obtain fixes. This program except for some details of input and output, follows very closely NAVIG 2 written for the IBM 1620, which, in turn, is derived from the TRIDON program written at the Applied Physics Laboratory of Johns Hopkins University for the IBM 7090.

PDP NAVIG 2/2 is written in PAL III for 4096-core machine using the ASR-33. Floating point numbers using two 12-bit words as mantissa and one 12-bit word as exponent are employed. The accuracy is slightly less than that when using 7 decimal digits per word.

DECUS NO. 8-77, PDP-8 DUAL PROCESS SYSTEM

The purpose of this system is to expedite the programming of multiprocessing problems on the PDP-8. It maximizes both the input speed and the portion of real time actually used for calculations by allowing the program to run during the intervals between issuing I/O commands and the raising of the device flag to signal completion of the command. The technique also allows queuing of input data or commands so that the user need not wait while his last line is being processed, and so that each line of input may be processed as fast as possible regardless of its length. The system uses the interrupt facilities, and has about 0.1% overhead on the PDP-8.

This method is especially useful for a slower machine where the problem may easily be calculation-limited, but would, without such a system, become I/O Bound.

The system requires 600₈ registers for two TTYs plus buffer space. Several device configurations are possible.

DECUS NO. 8-78, DIAGNOSE: A VERSATILE TRACE ROUTINE FOR THE PDP-8 COMPUTER WITH EAE

This trace routine will track down logical errors in a program (the *sick* program). Starting at any convenient location in the *sick* program, instructions are executed, one at a time, and a record of all operations is printed out via the Teletype. To avoid tracing proven subroutines, an option is provided to omit subroutine tracing. The present routine is significantly more versatile than two other trace routines in the DECUS library (DECUS Nos. 8-56 and 8-57 — Biavati) for the PDP-8 in that it is able to trace *sick* programs containing floating-point, extended arithmetical, and a variety of input-output instructions. Diagnose is, however, at a disadvantage compared with

Biavati's routines in requiring more memory space than his first one (DECUS No. 8-56) (five pages as opposed to two) and in not possessing the trace-suppression features of his second one (DECUS No. 8-57). The mode of operation of Diagnose is quite different from that of the trace routines of Biavati.

Minimum Hardware: PDP-8 with EAE

Other Programs Needed: Floating Point Package needed for floating point tracing.

Storage: 5(4) pages of memory.

Miscellaneous: Program is relocatable.

DECUS NO. 8-79, TAC-TAC-TOE (TRINITY COLLEGE VERSION)

This TIC-TAC-TOE game is programmed, using internal logic, so that the computer will either win or stalemate, but not lose a game. Either the player or the computer may choose to go first. At the termination of a game, the program restarts for the next game by typing anew the grid code to be followed.

DECUS NO. 8-80, DETERMINATION OF REAL EIGENVALUES OF A REAL MATRIX

This is a two-part program for determining the real eigenvalues of a real-valued matrix. The matrix does not have to be symmetric. Part I uses the power method of iterating on an eigenvector to determine the largest eigenvalue of the matrix. Part II then deflates the matrix using the results of part I so as to produce a matrix of order one less than that solved for in Part I. Part I can then be reloaded, and the next eigenvalue in line may be calculated. In this manner, all the real eigenvalues may be computed in order.

DECUS NO. 5/8-83A AND B, OCTAL DEBUGGING PACKAGE (WITH AND WITHOUT FLOATING POINT)

This program is an on-line debugger which will communicate with the operator through the ASR-33 Teletype. It allows register examination and modification, octal dumping, binary punching, multiple and simultaneous breakpoints, starting a program, and running at a particular location with preset AC link. ODP is completely relocatable at the beginning of all pages except page zero, and is compatible with the PDP-5, the PDP-8, and the PDP-8/S.

Requirements: The high version of ODP requires locations 7000-7577. The low version requires locations 0200-0777. All versions will require three pages. Also, location 0002 is used for a breakpoint pointer to ODP.

Equipment: The standard PDP-8 with ASR-33 Teletype is required. A highspeed punch is optional.

DECUS NO. 5/8-85, SET MEMORY EQUAL TO ANYTHING

This program will preset all locations to any desired settings. Thus, combining a memory clear, set memory equal to HALT, etc, into a single program. The program is loaded via the switch registers into core.

DECUS NO. 5/8-126, CUMULATIVE GAUSSIAN DISTRIBUTION CURVE FITTING

This is a curve fitting program that will take a set of any number of points with any spacing describing a cumulative Gaussian distribution and determine the mean and standard deviation by an iterative least squares differentialcorrection technique. The mean square error of the final fitted curve is also computed. The program is coded in

PDP-8 FORTRAN.

DECUS NO. 8-133, FIRST ORDER KINETICS

First order kinetic processes are common in chemistry and in other areas. This program accepts up to 42 data points, calculates the rate constant and intercept by the method of least squares, and gives the rms deviation, the correlation coeffecient, and an estimate of the error in slope. It permits graphical (CRT) examination of deviations

from the least squares line and iteration to a "best" infinity value. It also provides options for plotting the deviation between observed and calculated quantities on a CRT, and may be used in other cases in which one

wishes to correlate the natural logarithm of one quantity with another, as in linear free energy relationships.

DECUS NO. 8-134, LSQ: LEAST SQUARES SUBROUTINE

The subroutine calculates the slope and intercept for the equation $y_i = mx_i + b$ by the method of least squares. It also returns the ms deviation of y, the correlation coefficent, and an estimate of the error in the slope. The calculated values of y and the differences between the given and calculated values are also available on return from the

subroutine.

Other Programs Needed: FLOAT, floating point interpreter "C" - (DEC-08-YQ3B-PB)

DECUS NO. 8-136, FOURIER TRANSFORM PROGRAM IN FORTRAN II

The program, written in PDP-8 FORTRAN II, performs the discrete Fourier Transform of a function defined over N(N<200) evenly spaced points. I/O is via the ASR-33. The program requests the number of function points, then

that number of function values, and then prints out the values of the sine and cosine components of the function at each defined harmonic. A conventional (not Cooley-Tukey) algorithm is used, since I/O time relative to computing

time is significant.

DECUS NO. 8-143, FFTS-R: FAST FOURIER TRANSFORM SUBROUTINE FOR REAL VALUED FUNCTIONS

This subroutine computes the Fast Fourier Transform (FFT) or its inverse of a data sequence which has been stored in core. It will accommodate up to 2048 time samples, and will transform that number in under 5 seconds.

Minimum Hardware: PDP-8, PDP-8/I, or PDP-12 with EAE

DECUS NO. 8-144, FFTS-C: FAST FOURIER TRANSFORM SUBROUTINE FOR COMPLEX DATA

FFTS-C enables computation of the Discrete Fourier Transformation in a minimum amount of time. By using the Cooley-Tukey algorithm, up to 1024 points may be transformed in only 4.5 seconds, introducing a reduction of 99

percent in computation time.

Minimum Hardware: PDP-8, PDP-8/I, or PDP-12

7-21

DECUS NO. 8-192, TALC (TAYLOR'S ALGEBRAIC LINEAR CALCULATOR)

TALC is a general-purpose calculator designed to evaluate a general algebraic equation, given all quantities involved in the equation. In effect, TALC turns any of the family-of-eight computers into a powerful desk calculator capable of evaluating complex algebraic, trigonometric, and logarthmic functions. In addition, TALC utilizes the concept of "idiot-proofing" to virtually eliminate the possibility of an operator error invalidating the equation. Thus, TALC is easy to use and presents unlimited possibilities in any field where fast and accurate calculations are required.

Minimum Hardware: 4K PDP-8 or PDP-12 High-Speed Reader, DF32 Disk File, and ASR-33/35

DECUS NO. 8-195, POLY BASIC

POLY BASIC is a compiler and operating stand-alone system designed for the PDP-8 family. It has a total user program storage of 32K characters in which the disk is utilized. Some of the features of the compiler are:

- a. It has all BASIC system commands.
- b. It has all BASIC operations.
- c. It contains all built-in functions except TAN.
- d. Its accuracy is 1 part in 2²³ rather than 1 part in 2³⁵, because of word size difference.
- e. Maximum program size is 6144 characters as in regular (Dartmouth) BASIC.
- f. Maximum usable statement number 4095 rather than 99999.
- g. Maximum array space is 3600 characters, and maximum number of statements is 330; however, these can be traded off against one another at the rate of 25 array elements per statement.
 - h. There are no matrix operations.
- i. The argument "EDIT resequence" is implemented, and the command "EDID" renumbers the user file from line number 100 in steps of 10.
 - j. There is a set of error messages to signal compilation errors and a set for execution errors.

Minimum Hardware: PDP-8 or PDP-12 with DECtape, DF32 Disk, RF08 Disk, or LINCtape

DECUS NO. 8-202, PLOT

PLOT will plot data points on a graph, calculate and plot a linear, least squares regression line, and print out the coefficient of correlation, the equation of the regression line, and other pertinent parameters.

Minimum Hardware: 4K PDP-8 or PDP-12 with a Houston Instrument Complot Plotter Model 6650, DP-1-1, or equivalent

DECUS NO. 12-2, PDP-12 UTILITY AND DATA REDUCTION PROGRAMS

Contains a variety of programs written for the classic LINC or LINC-8 and modified to run in the PDP-12. Included are data reduction programs which perform autocorrelation, fourier analysis, power spectral analysis, and convolution. Utility programs allow selected blocks of LINCtape to be searched, compared, or typed out. Also included are programs which allow the user to convert LAP-4 or LAP-6 manuscripts into LAP6-DIAL or to disassemble binary code into LAP6 or LAP6-DIAL source. The current version of this tape contains binary and/or source for the programs listed below. Also listed are the original authors. Documents, but no listings, are available from DECUS.

SIMONS FREOAN HANCE AUTOCOR GLAESER QAFILTER FFOURIER BRYAN BRYAN FFSAMPLE DATAM **HANCE ENGEBRETSON FRQANA** LANAHAN **TAPEDUMP STEIN** SEARCH DAVISSON **COMPAR NICHOLS** COMPARE LAP4-6 **BJERKE BJERKE BINLAP6 LANGBEIN** L8SIM0 McDONALD LAP4Q+A **OVERTON DSCTABLE NICHOLS PARAMS DIVSUB STEIN** DILL **SPFLT HANCE** QIKDIV **LEWIS** RANDOM **CLAYTON NU INDEX**

DECUS NO. 12-3, 8K OPERATING SYSTEM

This modification of DECUS NO. L-80 adapts it to run on the PDP-12.

DECUS NO. 8-203, ALPHA

ALPHA is used for titling graphs on the plotter. It can be used in conjunction with DECUS NO. 8-202.

Minimum Hardware: 4K PDP-8 with a Houston Instrument Complot Plotter Model 6650, DP-1-1, or equivalent

Storage Requirement: 2, 10, 11, 12, 20-167, 200-3654, 4000-777 is reserved for storage.

Restriction: When used in conjunction with PLOT (DECUS No. 8-202), extended memory is required.

DECUS NO. FOCAL-14, LEAST SQUARES FIT TO A STRAIGHT LINE

This is a program using the principle of least squares to fit a straight line to a set of up to 35 experimental data points.

The program requires one pass of the data. At the end of the pass the output gives the values of the slope and the intercept of the straight line equation. In addition, the calculated values of the experimental data based on the straight line equation are pointed out. Finally, the program gives the value of R which is a criterion of fitness of equation to the input data.

DECUS NO. FOCAL-15, LEAST SQUARES FIT TO A CUBIC POLYNOMIAL

This is a program using the method of least squares to fit a cubic polynomial to a set of experimental data. The program demands two passes of the data for its completion; however, the coefficients of the polynomial are outputted after the first pass, and, at the end of the second pass, the output gives the value of R which is a criterion of fitness and gives the calculated values of the experimental data based on the cubic polynomial.

In addition, a section of the program can be used as a self-contained program for solution of a set of N by N linear equations.

DECUS NO. FOCAL-16, ONE-SAMPLE STATISTICS, TWO-SAMPLE STATISTICS, WELCH PROCEDURE; ONE-WAY ANALYSIS OF VARIANCE; SHEFFE'S CONTRAST BETWEEN MEANS

A three part program used to perform one-sample and two-sample statistics, Welch Procedure; One-way Analysis of Variance: and Sheffe's Contrast Between Means, which allows one to investigate more thoroughly the source of the difference between group means.

DECUS NO. FOCAL-17, FOCAL: HOW TO WRITE NEW SUBROUTINES AND USE INTERNAL ROUTINES

The aim of this document is to help the user to code specific routines in FOCAL so that his dialect of FOCAL can be applied to his application (without being forced to understand in detail all the working of FOCAL). In this way, perhaps, each user can make his particular dialect of FOCAL "perfect".

It is assumed that the reader has a basic knowledge of PDP-8 processor instructions and PAL mnemonics, as well as a familiarity with the Floating Point Package. In addition, he should be familiar with the FOCAL language.

This document is an attempt to explain how user-developed software can be interfaced with the basic FOCAL package, without requiring the user to spend valuable time trying to understand all of its detailed workings. Section II deals with a general description of how FOCAL works. Section III is concerned with the philosophy of the language; and the last few sections are technically oriented toward helping the user actually code his additions. Several examples and ready-coded routines which may be used to simplify the user's problems are included.

DECUS NO. FOCAL-25, PAYROLL CALCULATIONS (CALIFORNIA, 1968)

This routine is used to calculate payrolls. It is based on the California State Unemployment Insurance rate, FICA rate, and withholding tax.

This program could be modified easily to fit the rules of any particular state. If some of the pay ranges would not be used, they could be omitted from the two tables, making more room for other routines, such as providing running totals on gross pay, deductions, and net pay.

DECUS NO. FOCAL-26, CURVE FITTING

This program finds the best curve of a set of points. There are three types of curves involved:

Exponential Curve $Y = Ae^{BX}$

The variables solved for are A and B. The function is reduced to linear form by logarithms: LOG Y = BX + LOG A. A table of values is formed and solved simultaneously to get the values of A and B.

Power Curve $Y = AX^N$

This function is reduced to linear form: LOG Y = N LOG X + LOG A. Once a table of values is made, it is solved simultaneously for A and N.

Linear Line Y = MX + B

A table is made and solved simultaneously for the value of M and B.

DECUS NO. FOCAL-33, SQUARE MATRIX MULTIPLY

The arduous task of multiplying two square matrices is quickly done by this FOCAL Matrix Multiplication routine. The user inputs "N", indicating the number of rows and columns each matrix will have. The computer then requests input of the elements of the two matrices. The result of the multiplication is typed out in an understandable matrix-like format.

Notable characteristics of this program are:

- a. It is expressed in only five lines of FOCAL script so that it loads quickly.
- b. It will process matrices of varying dimensions. Size of each matrix is limited only by memory capacity. (In 4K FOCAL the limit is about 6 rows and columns.)
- c. Because it inputs and outputs the matrix values in a matrix-like format, input transcription errors are less likely to occur.

DECUS NO. FOCAL-37, Nth DEGREE POLYNOMIAL DATA POINT FITTING ROUTINE, Nth DEGREE POLYNOMIAL DATA POINT FITTING ROUTINE WITH RMS ERROR

a. Nth Degree Polynomial Data Point Fitting Routine — This program accepts the x- and y-coordinates for an unlimited number of data points and calculates for the equation

$$Y = A_0 + A_1 X + A_2 X^2 + ... + A_N X^N$$
,

the coefficients A_N which best fit the equation to the data points. The fitting criterion is "least squares". The program allows the user to select the degree, N, of the fitting equation. N may be as large as 7.

b. Nth Degree Polynomial Data Point Fitting Routine with RMS Error — This program is the same as Nth Degree Polynomial Fitting Routine except that it calculates the RMS error between the y-coordinates of the data points and the evaluated fitting equation. It will accept only a limited number of data points and the maximum equation degree allowed is inversely related to this number.

DECUS NO. FOCAL-40, SIMPLE CHI-SQUARE TEST

The program will type out the data matrix and cell contents. Each cell will contain two values, 0 = xxx.xxx and E = xxx.xxx. The "O=" number is the "OBSERVED" value which was typed in by the user. The "E=" value is the

expected value calculated by the program. The program will also type out row sums (RS=) and column sums (CS=), and the grand total (T=). The last line of output will be "X2=" and "DF=". These are the CHI-SQUARE and degrees of freedom.

DECUS NO. L-11, DATUM8

DATUM8 is a revision of an addition to DATAM by James Hance contained in the general library supplied with the LINC-8 computer. This program has retained all the features of DATAM. Some of the original routines have been changed in order to eliminate undesired features. In addition, DATUM8 has the ability to multiply, subtract, and display the data with two cursors. The data not included between the cursors can be suppressed, allowing, for instance, integration between definite limits. The program has been recoded to facilitate future modifications.

Minimum Hardware: LINC (2K) or LINC-8

DECUS NO. L-60, FORTRAN WITH LINCTAPE

The system adapts 4K PDP-8 FORTRAN to make use of the magnetic tape facility of the basic LINC-8 computer. FORTRAN programs can be called from the left-hand tape (unit 0) by statements in the FORTRAN program in the core; data can be stored and recalled by WRITE and READ statements, using the right-hand tape (unit 1).

The programs may be called in any order, and may be read in at less than full length in order to leave data in core. Data can be transferred to and from tape in blocks of any length which may be chosen to correspond with program variables. Incorporation of the program-calling facility does not involve any sacrifice of core space for program or data; use of the data transfer facilities uses from half to one page of core.

The system includes a modified, improved version of SYMBOL PRINT, increases the maximum length of the statement number tables, and corrects some errors in the compiler.

Other Programs Needed: PDP-8 FORTRAN System (DEC-08-AFCO)

Source Language: PAL III

DECUS NO. L-80 AND 12-3, 8K OPERATING SYSTEM

The 8K Operating System was developed at the University of Michigan (Cooley Electronics Lab). It is a two-tape-resident operating system for the LINC-8 with a special 33ASR reader modification. It allows a user to enter and edit programs from the Teletype keyboard, store them in files on magnetic tape, assemble or compile these files into PDP-8 machine language, and run the resulting program. These operations are done entirely from the Teletype keyboard without the use of paper tapes or manipulation of the switches. One of the language translators is the DEC 8-K FORTRAN system (February 1969 version).

The 8K Operating System consists of 3 system components: a filing system, a system of loaders for running programs, and a command language interpreter. A file is a collection of information (which the user generates) in machine-readable form; for example, it may be the set of characters comprising a FORTRAN program. Using the filing system, the user may name this set of characters and store it on magnetic tape. To use the file containing the program (for example, in a FORTRAN compilation) the user need only refer to the file name and the system will handle all bookkeeping necessary to communicate the file to the FORTRAN compiler. A user may change the contents of files, destroy files, and copy files from other users' tapes. The assembler processes both LINC mode and PDP-8 mode statements, assembling programs up to 8K in length. Six character alphanumeric symbols can be defined; source listings, assembly listings, or abbreviated assembly listings may be (optionally) obtained on the Teletype or, if present, the Line Printer. To facilitate the preparation of system programs and/or large programs,

conditional assembly pseudo ops are provided, along with a facility to preserve the tag table definitions from one assembly to another, or to several others.

Upon loading, programs may be started automatically in either LINC or PDP-8 mode at any memory location permanent file by means of a "SAVE" command.

The loading system contains two separate loaders, the absolute loader and the relocating loader. These loaders do not load programs directly into core memory, but rather into a core memory image kept on magnetic tape. (This intermediate step is necessary because of core space limitations and the flexibility desired of the loaders.) Both loaders take their binary (and core image) input from the system files; both include provisions for changing and viewing the contents of various core image locations.

The absolute loader operates on the binary output of either the MACRO-8 of PAL-III assemblers to produce a core image. It is capable of merging an extant core image into the core image it is building. It will also page-relocate binary input information to be within a different memory page from that for which it was assembled.

The relocating loader operates on FORTRAN compiler and SABR assembler output. It is the final part of the 3-part FORTRAN/SABR/Relocating Loader package, which allows the programmer to write programs for the PDP-8 disregarding the memory addressing structure of the machine. After the loading process is complete, the core image file containing the program is available to the user in -B, and may be saved or run immediately using the "RUN" command.

The "RUN" command software is also part of the loading system. It allows execution of a program contained in a core image file.

7.4 DIAGNOSTIC PROGRAMS

PDP-12 PROCESSOR TESTS

Maindec-12-DOAB Tests SKIPs and data handling (LINC mode).

These diagnostics test the LINC mode processor and memory control instructions.

PDP-12 TAPE CONTROL TESTS (TC12)

Maindec-12-D3AC Tests tape control logic and interregister transfers.

These diagnostics make use of the TC12 maintenance instructions to thoroughly test the tape control. After all static tests are performed, data transfers and dynamic characteristics are tested.

PDP-12 DISPLAY TEST (VR12)

Maindec-12-D6BA Tests display system using DIS and DSC instructions.

The diagnostic tests both the VC12 CRT display control and the VR12 CRT display oscilloscope.

PDP-12 REAL-TIME INTERFACE TEST (KW12)

Maindec-12-D8CB

This diagnostic thoroughly tests the KW12-A Real-Time Interface.

PDP-12 A-D TEST (AD12)

Maindec-12-D6CB-Tests A-D converter and calibration.

This test verifies the logic of the AD12 and allows checking and alignment of all 32 channels of the A-D converter.

Maindec-08-D03A-D Basic JMS and JMP Test

This is a diagnostic program for testing the JMP and JMS instructions of the PDP-8/I.

Maindec-08-D04B-D Random JMP Test

This program tests the JMP instruction of the PDP-12. Most of memory is used as a JUMP field with a random number generator selecting each JUMP FROM and JUMP TO location.

Maindec-08-D05B-D Random JMP-JMS Test

This program tests the JMS instruction of the PDP-12. Random FROM and TO addresses are selected for each test. The JMP instruction is tested in that each test requires a JMP to reach JMS.

Maindec-08-D07B-D Random ISZ Test

This program tests the ISZ instruction of the PDP-12. An ISZ instruction is placed in a FROM location, and a TO location contains the OPERAND. Part 1 of the program selects FROM, TO, and OPERAND from a random number generator, with the option of holding any or all constant. Part 2 uses fixed set of FROM, TO, and OPERAND numbers.

Maindec-08-D0AA-D Instruction Test (EAE) Part 3A

This program tests the Extended Arithmetic Element Type KE12. The following instructions are tested: MQL, MQA, SHL, LSR, ASR, NMI, SCA. An attempt is made to detect and isolate errors to their most basic faults and to the minimum number of logic cards. Multiply and divide are tested by Maindec-08-D0BA-D.

Maindec-08-D0BA-D Instruction Test (EAE) Part 3B

Divide overflow detection hardware and divide and multiply hardware are tested by using a pseudo random-number generator to produce the parameters for each test. A software simulated divide and multiply are used to test the results of the hardware divide and multiply.

Maindec-08-D1AC-D Memory Power On/Off Test

This program is a Memory Data Validity Test to be used after a simulated power failure.

Maindec-08-D1L1-D Memory Checkerboard Test Low Maindec-08-D1L2-D Memory Checkerboard Test High

Tests memory for core failure on half-selected lines under the worst possible conditions for reading and writing. It is used primarily for testing the operation of memory at marginal voltages.

Maindec-08-D1CA-D Extended Memory Control Part 1

This program exercises and tests Extended Memory instructions CDF, CIF, RDF, RIF, RMF, and RIB, for proper operation. Basically, this program tests the control section of the memory. Data is tested by tests Maindec-08-D1L1-D, Maindec-08-D1L2-D and Maindec-08-D1DA-D.

Maindec-08-D1DA-D Extended Memory Checkerboard Part 2

This preliminary program tests for core memory failures on half-selected lines under worst-case conditions of reading and writing. It is used to test memory module X while running the program in memory module Y.

Maindec-08-D2PE-D Teletype Reader Test

This program tests performance of the Teletype Model 33 Perforated Tape Reader, using the reader to scan a closed-top test page punched with alternating groups of character codes 000 to 377. Each character is tested for

bits dropped or gained while reading; each group of characters is checked for characters missed entirely or read more than once.

Maindec-08-D2BA-D Exerciser for the Teletype Paper-Tape Reader

This exerciser program tests for the Teletype Paper-Tape Reader. Test tapes are read in a random start-stop fashion and errors are reported on the Teletype printer.

Maindec-08-D2CA-D Teletype Punch Test

This program punches a test tape in a predetermined pattern. The tape passes directly from the Teletype punch to the Teletype reader, which checks the pattern for accuracy.

Maindec-08-D2DA-D Teleprinter Test

This program tests the Teleprinter performance of the Teletype 33 Keyboard Printer. There are two parts to the test, selectable by the operator. The first part tests keyboard input by immediately causing the character typed to be printed for comparison. The second part tests continuous operation of the teleprinter by causing a line consisting of the ASCII character set to be repeatedly printed. The latter also tests for correct functioning of the interrupt after a character has been printed.

Maindec-08-D2GF-D High Speed Reader Test

This program tests performance of the Type 750 High-Speed Perforated-Tape Reader and control by scanning a closed-loop tape for transmission accuracy. The reader control is tested for correct operation with the PDP-8 interrupt system.

Maindec-08-D2FA-D High Speed Reader Test (PR12)

This is a diagnostic program for the Digitronics 2500, the PR12, and the PR8/I High-Speed Paper-Tape Readers. The program is divided into three parts. The first is a test tape generator that punches test tapes for parts two and three on the high-speed punch. Part two is a series of specific tests with module isolation provided for error situations. Part three reads a preselected tape pattern with the choice of random or fixed block lengths and stalls between blocks.

Maindec-08-D2GA-D High Speed Punch Test

This program consists of two separate tests. The first causes the PP12 and PP8/I High-Speed Paper-Tape Punch to produce a tape containing a sequence of pseudo-random character codes. This tape is checked for accuracy, using either the high-speed reader or the Teletype reader.

In the second test, the character code represented by the setting SR₄₋₁₁ is punched repeatedly. The switch setting may be changed while the test is running.

Maindec-08-D6CB-D Calcomp Plotter Test

This program tests the CALCOMP or HOUSTON Plotters and their control. All control and plotting functions are tested.

PDP-12 JMP SELF MAINDEC-12-D1BA-D

This program tests the ability of the read/write gates to switch rapidly between read and write.

PDP-12 Instruction Test 1 MAINDEC-12-D0BA

This program tests for the basic overall test of most of the LINC mode instructions.

PDP-12 Address Test (R/W Gate) MAINDEC-12-D1CA

This program tests the ability of the R/W gates to rapidly change addresses. It generates two random addresses, loads these addresses with jumps to each other, and allows the jump sequence to continue until interrupted.

PDP-12 Memory Data Test (Float 1s and 0s) MAINDEC-12-D1EB

This program floats a single one then a single zero through all of memory to evaluate data handling.

PDP-12 Memory Checkerboard MAINDEC-12-D1DA

Tests memory for core failure on half-select lines under the worst possible conditions for reading and writing. It is used primarily for testing the operation of memory.

APPENDIX A LINC MODE INSTRUCTIONS

The following table lists all LINC mode instructions and their mnemonics, octal codes, and execution times. Full instruction descriptions are in Chapter 3.

Table A-1. LINC Mode Instructions

Mnemonic	Function	Octal	Time (µs)
	ADD		
ADD	Add memory to AC (full address)	2000	3.2*
ADA	Add memory to AC (index class)	1100	3.2*
ADM	Add AC to memory (sum also in AC)	1140	3.2*
LAM	Add link and AC to memory (sum also in AC)	1200	3.2*
	MULTIPLY		
MUL	Signed multiply	1240	9*
	LOAD		
LDA	Load AC, full register	1000	3.2*
LDH	Load AC, half register	1300	3.2*
	STORE (sum also in AC)		
STC	Store and clear AC (full address)	4000	3.2
STA	Store AC (index class)	1040	3.2*
STH	Store half AC	1340	3.2*
	SHIFT/ROTATE		
ROL N	Rotate left N places	0240	1.6-6.4
ROR N	Rotate right N places	0300	1.6-6.4
SCR N	Scale right N places	0340	1.6-6.4

^{*} See Note at end of table.

Table A-1. LINC Mode Instructions (cont)

Mnemonic	Function	Octal	Time (μs)
	OPERATE		
HLT	Halt	0000	1.6
NOP	No operation	0016	1.6
CLR	Clear AC and LINC	0011	1.6
SET	Set register N to contents or register Y	0040	4.8
JMP	Jump to register Y	6000	1.6*
DJR	Disable JMP return save	0006	1.6
ESF	Enable Special Function	0004	1.6
SFA	Special Function to AC	0024	1.6
QAC	MQ transfer to AC	0005	1.6
	LOGICAL OPERATIONS		
BCL	Bit clear (any combination of 12-bits)	1540	3.2*
BSE	Bit set (any combination of 12-bits)	1600	3.2*
BCO	Bit complement (any combination of 12 bits)	1640	3.2*
COM	Complement AC	0017	1.6
	SKIP		
	Skip next instruction if:		
SAE	AC equals memory register Y	1440	3.2*
SHD	Right half AC unequal to specified half	1400	3.2*
	of memory register Y		
SNS N	SENSE switch N is set	0440+N	1.6
SKP	Unconditional skip	0456	1.6
AZE	AC equals 0000 or 7777	0450	1.6
APO	AC contains positive number	0451	1.6
LZE	Link bit equals 0	0452	1.6
IBZ	Between blocks on LINC tape	0453	1.6
FLO	Add overflow is set	0454	1.6
QLZ	MQ low-order bit zero	0455	1.6
SXL N	External level N is low	0400+N	1.6
KST	Keyboard has been struck	0415	1.6
SRO	Rotate memory register right one place; then if bit 0 of Y equals 0, skip next	1500	3.2*
XSK	instruction Index memory register Y, skip when contents of Y equal 1777	0200	3.2
	INPUT/OUTPUT		
ATR	AC to relay buffer	0014	1.6
RTA	Relay buffer to AC	0015	1.6-18
SAM N	Sample analog chan N	0100+N	1.6**
DIS	Display point on oscilloscope	0140	3.2-23

^{**}See Note at end of table.

Table A-1. LINC Mode Instructions (cont)

Mnemonic	Function	Octal	Time (μs)
DSC	Display character on oscilloscope (2 x 6 matrix)	1740	4.8-56**
RSW	RIGHT SWITCH register to AC	0516	1.6
LSW	LEFT SWITCH register to AC	0517	1.6
IOB	Execute input/output control through IO Bus	0500	5.9
LINC	8 Mode to LINC Mode MEMORY	6141	4.25
LIF	Load instruction field buffer with N	0600	1.6
LDF	Load data field register with N	0640	1.6
IOB		0500	
RIF	Read instruction field	6224	5.9
IOB		0500	
RDF	Read data field	6214	5.9
IOB		0500	
RIB	Read interrupt buffer (Save Field)	6234	5.9
IOB		0500	
RMF	Restore memory fields	6244	5.9
	LINC TAPE		
RDE	Read one block into memory	0702	3.2**
RDC	Read and check one block	0700	3.2**
RCG	Read and check N consecutive	0701	3.2**
WRI	Write one block on tape	0706	3.2**
WRC	Write and check one block	0704	3.2**
WCG	Write and check N blocks	0705	3.2**
CHK	Check one block of tape	0707	3.2**
MTB	Move tape toward selected block	0703	3.2**
AXO	AC to Tape Extended Operations Buffer	0001	1.6
XOA	Extended Operations Buffer to AC	0021	1.6
TMA	AC to TMA setup register	0023	1.6
STD	Skip if tape idle	0416	1.6
TWC	Skip if tape word complete	0417	1.6

^{*}Indicates both direct and indirect addressing; add 1.6 µsec when indirect addressing is used.

^{**}Indicates additional time dependent on I/O device such as tape (Chapter 3 LINC Mode Instructions.)

APPENDIX B 8-MODE INSTRUCTIONS

Table B-1. 8-Mode Memory Reference Instructions

		Direct	t Addr.	Indired	t Addr.	Operation
Mne- monic Symbol	Opera- tion Code	States En- tered	Execution Time (µs)	States En- tered	Execution Time (μs)	
, AND Y	0000	F,E	3.2	F,D,E	4.8	Logical AND. The AND operation is performed between the contents of memory location Y and the contents of the AC. The result is left in the AC, the original contents of the AC are lost, and the contents of Y are restored. Corresponding bits of the AC and Y are operated upon independently. $AC_j \wedge Y_j \rightarrow AC_j$
TAD Y	1000	F,E	3.2	F,D,E	4.8	Two's complement add. The contents of memory location Y are added to the contents of the AC in two's complement arithmetic. The result of this addition is held in the AC, the original contents of the AC are lost, and the contents of Y are restored. If there is a carry from AC_0 , the link is complemented. $AC + Y \rightarrow AC$

Table B-1. 8-Mode Memory Reference Instructions (cont)

		Direct	Addr.	Indire	ct Addr.	
Mne- monic Symbol	Opera- tion Code	States En- tered	Execution Time (µs)	States En- tered	Execution Time (μs)	Operation
ISZ Y	2000	F,E	3.2	F,D,E	4.8	Increment and skip if zero. The contents of memory location Y are incremented by one. If the resultant contents of Y equals zero, the contents of the PC are incremented and the next instruction is skipped. If the resultant contents of Y do not equal zero, the program proceeds to the next instruction. The incremented contents of Y are restored to memory. If resultant Y = 0, PC + 1 \rightarrow PC.
DCA	3000	F,E	3.2	F,D,E	4.8	Deposit and clear AC. The contents of the AC are deposited in core memory at address Y and the AC is cleared. The previous contents of memory location Y are lost. $AC \rightarrow Y$ $0 \rightarrow AC$
JMS Y	4000	F,E	3.2	F,D,E	4.8	Jump to subroutine. The contents of the PC are deposited in core memory location Y and the next instruction is taken from core memory location $Y + 1$. PC + 1 \rightarrow Y Y + 1 \rightarrow PC
ЈМР Ү	5000	F	1.6	F,D	3.2	Jump to Y. Address Y is set into the PC so that the next instruc- tion is taken from core memory address Y. The original contents of the PC are lost. $Y \rightarrow PC$

Table B-2. 8 Mode Group 1 Operate Microinstructions

Mnemonic Symbol	Octal Code	Sequence	Operation
NOP	7000		No operation. Causes a 1.6 μs program delay.
IAC	7000	3	Increment AC. The contents of the AC are incremented by one
iac	7001	3	in two's complement arithmetic.
RAL	7004	4	Rotate AC and L left. The contents of the AC and the L are rotated left one place.
RTL	7006	4	Rotate two places to the left. Equivalent to two successive RAL operations.
RAR	7010	4	Rotate AC and L right. The contents of the AC and L are rotated right one place.
RTR	7012	4	Rotate two places to the right. Equivalent to two successive
		_	RAR operations.
CML	7020	2	Complement L.
CMA	7040	2	Complement AC. The contents of the AC are set to the one's complement of its current contents.
CIA	7041	2,3	Complement and increment accumulator. Used to form two's complement number.
CLL	7100	1	Clear L. The L is cleared to contain a binary zero.
CLL RAL	7104	1,4	Shift positive number one left.
CLL RTL	7106	1,4	Clear Link, rotate two left.
CLL RAR	7110	1,4	Shift positive number one right.
CLL RTR	7112	1,4	Clear Link, rotate two right.
STL	7120	1,2	Set Link, the L is set to contain a binary one.
CLA	7200	1	Clear AC. To be used alone or in OPR 1 combinations.
CLA IAC	7201	1,3	Set $AC = 1$.
GLK	7204	1,4	Get link, Transfer L into AC ₁₁ .
CLA CLL	7300	1	Clear AC and L.
STA	7240	2	Set AC = -1. Each bit of the AC is set to contain a binary one.

Table B-3. 8 Mode Group 2 Operate Microinstructions

Mnemonic Symbol	Octal Code	Sequence	Operation
HLT	7402	3	Halt. Stops the program after completion of the cycle in process. If this instruction is combined with others in the OPR 2 group, the other operations are completed before the end of
OSR	7404	3	the cycle. OR with Right Switch register. The OR function is performed between the contents of the RSW and the contents of the AC, with the result left in the AC.
SKP	7410	1	Skip, unconditional. The next instruction is skipped.
SNL	7420	1	Skip if $L \neq 0$.
SZL	7430	1	Skip if $L = 0$.
SZA	7440	1	Skip if $AC = 0$.
SNA	7450	1	Skip if $AC \neq 0$.

Table B-3. 8 Mode Group 2 Operate Microinstructions (cont)

Mnemonic Symbol	Octal Code	Sequence	Operation
SZA SNL	7460	1	Skip if $AC = 0$, or $L = 1$, or both.
SNA SZL	7470	1	Skip if $AC \neq 0$ and $L = 0$.
SMA	7500	1	Skip on minus AC. If the AC contains a negative number, the next instruction is skipped.
SPA	7510	1	Skip on positive AC. If the AC contains a positive number, the next instruction is skipped.
SMA SNL	7520	1	Skip if $AC < 0$, or $L = 1$, or both.
SPA SZL	7530	1	Skip if $AC \ge 0$ and if $L = 0$.
SMA SZA	7540	1	Skip if $AC \leq 0$.
SPA SNA	7550	1	Skip if $AC \ge 0$.
CLA	7600	2	Clear AC. To be used alone or in OPR 2 combinations.
LAS	7604	2,3	Load AC with SR.
SZA CLA	7640	1,2	Skip if $AC = 0$, then clear AC .
SNA CLA	7650	1,2	Skip if $AC \neq 0$, then clear AC .
SMA CLA	7700	1,2	Skip if $AC < 0$, then clear AC .
SPA CLA	7710	1,2	Skip if AC > 0, then clear AC.

Table B-4. 8 Mode Extended Arithmetic Element Microinstructions

Mnemonic Symbol	Octal Code	Sequence	Operation
MUY	7405	3	Multiply. The number held in the MQ is multiplied by the number held in core memory location PC + 1 (or the next successive core memory location after the MUY Command). At the conclusion of this instruction the most significant 12 bits of the product are contained in the AC and the least significant 12 bits of the product are contained in the MQ. $Y \times MQ \rightarrow AC,MQ$
DVI	7407	3	Divide. The 24-bit dividend held in the AC (most significant 12 bits) and the MQ (least significant 12 bits) is divided by the number held in core memory location PC + 1 (or the next successive core memory location following the DVI instruction). At the conclusion of this instruction the quotient is held in the MQ, the remainder is in the AC, and the L contains a 0. If the L contains a 1, divide overflow occured so the operation was concluded after the first cycle of the division. AC,MQ ÷ Y → MQ.
NMI	7411	3	Normalize. This instruction is used as part of the conversion of a binary number to a fraction and its exponent for use in floating-point arithmetic. The combined contents of the AC and the MQ are shifted left by this one instruction until the content of AC_0 is not equal to the content of AC_1 , thus forming the fraction. Zeros are shifted into vacated $MQ_{1,1}$ positions for each shift.

Table B-4. 8 Mode Extended Arithmetic Element Microinstructions (cont)

Mnemonic Symbol	Octal Code	Sequence	Operation
			At the conclusion of this operation, the step counter contains a number equal to the number of shifts performed. The content of L is lost. $AC_j \to AC_{j^{-1}} \\ AC_0 \to L \\ MQ_0 \to AC_{11} \\ MQ_j \to MQ_{j^{-1}} \\ 0 \to MQ_{11} \text{ until } AC_0 \neq AC_1$
SHL	7413	3	Shift left. This instruction shifts the combined contents of the AC and MQ to the left one position more than the number of positions indicated by the contents of the core memory at address PC + 1 (or the next successive core memory location following the SHL instruction). During the shifting, zeros are shifted into vacated MQ ₁₁ positions. Shift Y + 1 positions as follows: $AC_j \rightarrow AC_{j-1}$ $AC_0 \rightarrow L$ $MQ_0 \rightarrow AC_{11}$
ASR	7415	3	$MQ_j \rightarrow MQ_{j-1}$ $0 \rightarrow MQ_{11}$ Arithmetic shift right. The combined contents of the AC and the MQ are shifted right one position more than the number contained in memory location PC + 1 (or the next successive core memory location following the ASR instruction). The sign bit, contained in AC ₀ , enters vacated positions, the sign bit is preserved, information shifted out of MQ_{11} is lost, and the L is undisturbed during this operation. Shift Y + 1 positions as follows:
LSR	7417	3	$AC_0 ightharpoonup AC_0$ $AC_j ightharpoonup AC_j +_1$ $AC_{11} ightharpoonup MQ_0$ $MQ_j ightharpoonup MQ_j +_1$ Logical shift right. The combined contents of the AC and MQ are shifted right one position more than the number contained in memory location PC + 1 (or the next successive core memory location following the LSR instruction). This instruction is similar to the ASR instruction except that zeros enter vacated positions instead of the sign bit. Information shifted out of MQ_{11} is lost and the L is undisturbed during this operation. Shift Y + 1 positions as follows: $0 ightharpoonup AC_0$ $AC_j ightharpoonup AC_j +_1$ $AC_{11} ightharpoonup MQ_0$ $MQ_j ightharpoonup MQ_j +_1$

Table B-4. 8 Mode Extended Arithmetic Element Microinstructions (cont)

Mnemonic Symbol	Octal Code	Sequence	Operation
MQL	7421	2	Load multiplier quotient. This instruction clears the MQ, loads the contents of the AC into the MQ, then clears the AC. $0 \rightarrow MQ$ AC $\rightarrow MQ$ $0 \rightarrow AC$
SCA	7441	2	Step counter load into accumulator. The contents of the step counter are transferred into the AC. The AC should be cleared prior to issuing this instruction or the CLA instruction may be combined with the SCA to clear the AC, then effect the transfer. SC V AC → AC
SCL	7403	3	Step counter load from memory. Loads complement of bits 7 through 11 of the word in memory following the instruction into the step counter. Two's $MB_{7-1} \rightarrow SC$ $PC + 2 \rightarrow PC$
MQA	7501	2	Multiplier quotient load into accumulator. The contents of the MQ are transferred into the AC. This instruction is given to load the 12 least significant bits of the product into the AC following a multiplication or to load the quotient into the AC following a division. The AC should be cleared prior to issuing this instruction or the CLA instruction can be combined with the MQA to clear the AC then effect the transfer. MQ V AC → AC
CLA	7601	1	Clear accumulator. The AC is cleared during sequence 1, allowing this instruction to be combined with other EAE instructions that load the AC during sequence 2 (such as SCA and MQA). $0 \rightarrow AC$
CAM	7621	1,2	Clear accumulator and multiplier quotient. CAM = CLA MQL

APPENDIX C I/O BUS INSTRUCTIONS

In the 8 mode these instructions are given directly, whereas in the LINC mode they must be preceded by the instruction IOB (0500).

Table C-1. IOT Instructions

Mnemonic	Octal	Operation
Program Inter	rupt	
ION	6001	Turn interrupt on and enable the computer to respond to an interrupt request. When this instruction is given, the computer executes the next instruction, then enables the interrupt. The additional instruction allows exit from the interrupt subroutine before allowing another interrupt to occur.
IOF	6002	Turn interrupt off; i.e., disable the interrupt.
High-Speed Pe	erforated-Tape R	eader and Control Type PR12
RSF	6011	Skip if reader flag is a 1.
RRB	6012	Read the contents of the reader buffer and clear the reader flag. (This instruction does not clear the AC). RB V $AC_{4-1} \rightarrow AC_{4-1}$
RFC	6014	Clear reader flag and reader buffer, fetch one character from tape and load it into the reader buffer, and set the reader flag when done.
High-Speed Po	erforated-Tape Pu	unch and Control Type PP12
PSF	6021	Skip if punch flag is a 1.
PCF	6022	Clear punch flag and punch buffer.
PPC	6024	Load the punch buffer from AC_{4-11} and punch the character. (This instruction does not clear the punch flag or punch buffer). AC_{4-11} V PB \rightarrow PB
PLS	6026	Clear the punch flag, clear the punch buffer, load the punch buffer from AC ₄₋₁₁ , punch the character, and set the punch flag when done.

Table C-1. IOT Instructions (Cont)

Mnemonic	Octal	Operation
Teletype Key	board/Reader	
KSF	6031	Skip if keyboard flag is a 1.
KCC	6032	Clear AC and clear keyboard flag.
KRS	6034	Read keyboard buffer static. (This is a static command in that neither the AC nor the keyboard flag is cleared.) TTI V $AC_{4-1,1} \rightarrow AC_{4-1,1}$
KRB	6036	Clear AC, clear keyboard flag, and read the contents of the keyboard buffer into AC ₄₋₁₁ . TTO VAC ₄₋₁₁ \rightarrow AC ₄₋₁₁
Teletype Tele	printer/Punch	
TSF	6041	Skip if teleprinter flag is a 1.
TCF	6042	Clear teleprinter flag.
TPC	6044	Load the TTO from AC ₄₋₁₁ and print and/or punch the character.
TLS	6046	Load the TTO from AC_{4-11} , clear the teleprinter flag, and print and/or punch the character.
Power Fail/Re	estart Type KP12	
SPL	6102	Skip if power is low.
Memory Exte	nsion Control Ty	pe MC12
CDF	62N1	Change to data field N. The data field register is loaded with the selected field number (0 to 7). All subsequent memory requests for operands are automatically switched to that data field until the data field number is changed by a pay CDE instruction.
CIF	62N2	changed by a new CDF instruction. Prepare to change to instruction field N. The instruction buffer register is loaded with the selected field number (0 to 7). The next JMP or JMS instruction causes the new field to be entered.
RDF	6214	Read data field into AC ₆₋₈ . Bits 0-5 and 9-11 of the AC are not affected.
RIF	6224	Same as RDF except reads the instruction field.
RIB	6234	Read interrupt buffer. The instruction field and data field stored during an interrupt are read into AC_{6-8} and $AC_{9-1,1}$ respectively.
RMF	6244	Restore memory field. Used to exit from a program interrupt.
Incremental P	lotter and Contro	ol Type XY12
PLSF	6501	Skip if plotter flag is a 1.
PLCF	6502	Clear plotter flag.
PLPU	6504	Plotter pen up. Raise pen off paper.
PLPR	6511	Plotter pen right.
PLDU	6512	Plotter drum (paper) upward.
PLDD	6514	Plotter drum (paper) downward.

Table C-1. IOT Instructions (Cont)

Mnemonic	Octal	Operation					
PLPL	6521	Plotter pen left.					
PLUD	6522	Plotter drum (paper) upward. (Same as 6512).					
PLPD	6524	Plotter pen down. Lower pen to paper.					
	ss Disk File Typ	e DF32					
DCMA	6601	Clears memory address register, parity error and completion flags. The instruction clears the disk memory request flag and interrupt flags.					
DMAR	6603	The contents of the AC are loaded into the disk memory address register are the AC is cleared. Begin to read information from the disk into the specific core location. Clears parity error and completion flags. Clears interrupt flags.					
DMAW	6605	The contents of the AC are loaded into the disk memory address register an the AC is cleared. Begin to write information into the disk from the specific core location. Clears parity error and completion flags.					
DCEA	6611	Clears the disk extended address and memory address extension register.					
DSAC	6612	Skips next instruction if address confirmed flag is a 1 (AC is cleared).					
DEAL	6615	The disk extended address extension registers are cleared and loaded with the track data held in the AC.					
DEAC	6616	Clears the AC, then loads the contents of the disk extended address regist into the AC to allow program evaluation. Skips next instruction if address confirmed flag is a 1.					
DFSE	6621	Skips next instruction if parity error, data request late, or write lock swittling is a zero. Indicates no errors.					
DFSC	6622	Skips next instruction if the completion flag is a 1. Indicates data transfer complete.					
DMAC	6626	Clears the AC, then loads contents of disk memory address register into t AC to allow program evaluation.					
Disk Control a	nd Disk File Ty	pe RF08/RS08					
DCMA	6601	Clears memory address register, parity error and completion flags. The instruction clears the disk memory request flag and interrupt flags.					
DMAR	6603	The contents of the AC are loaded into the disk memory address register a the AC is cleared. Begin to read information from the disk into the specific core location. Clears parity and completion flags. Clears interrupt flags.					
DMAW	6605	The contents of the AC are loaded into the disk memory address register a the AC is cleared. Begin to write information into the disk from the specific core location. Clears parity error and completion flags.					
DCIM	6611	Clears the disk interrupt flag and memory address extension register.					
DSAC	6612	Skips next instruction if address confirmed flag is a 1 (AC is cleared).					
DIML	6615	Accumulator to interrupt enables and memory extension register.					
DIMA	6616	Status to AC.					
DFSC	6621	Skip on error condition.					
DFSC	6622	Skip next instruction if the completion flag is a 1. Indicates data transfe					
		complete. Clears the AC then loads contents of disk memory address register into					
DMAC	6626	Clears the AC then loads contents of this memory address register into					

Table C-1. IOT Instructions (cont)

Mnemonic	Octal	Operation
Disk Cartridge	Memory Type	RK8/RK01
DLDC	6732	Loads the command register from the AC and then clears the AC.
DLDR	6733	Loads the track, surface, and sector address from the AC; the instruction then clears the AC and starts to read data from the disk if command register bit 4 is a 0.
DLDW	6735	Loads the track, surface, and sector address from the AC. The instruction then clears the AC and starts to write on the disk if command register bit 4 is a 0.
DCHP	6737	Loads the track, surface, and sector address from the AC. The instruction then clears the AC and reads data and checks parity if command register bit 4 is a 0.
DRDA	6734	Clears the AC and then reads the Track Address Counter and surface/sector counter into the AC.
DRDC	6736	Clears the AC and then reads the command register into the AC.
DRDS	6741	Clears the AC and then reads the status register into the AC.
DCLS	6742	Clears the status register.
DMNT	6743	Load maintenance register. This instruction loads the maintenance register from the AC and carries out the operation specified. The bits will remain set until DMNT is reissued with all AC bits cleared to 0.
DLDA	6731	Loads the disk address. This instruction is a maintenance operation.
DSKD	6745	Skip On Transfer Done flag equal to 0.
DSKE	6747	Skip when the error flag is set to 1.
DCLA	6751	Clear All. This instruction clears the selected disk to Track 000 and then clears all the control registers and status flags except the disk selection. Transfer Done is set when the disk is positioned on Track 000.
DRWC	6752	Read word count register. This instruction clears the AC, then reads the contents of the word count register into the AC.
DLWC	6753	Load word count register. This instruction loads the word count register from the AC and then clears the AC.
DLCA	6755	Load current address register. This instruction loads the current address register from the AC and then clears the AC.
DRCA	6757	Read current address register. This instruction clears the AC and then reads the contents of the current address register into the AC.
Real Time Inte	erface Type KW	12A
CLSK	6131	Skip if Clock Interrupt condition exists
CLLR	6132	AC to Clock Control register
CLAB	6133	AC to Clock Buffer-Preset register
CLEN	6134	AC to Clock Enable register
CLSA	6135	Clock Status to AC
CLBA	6136	Clock Buffer-Preset register to AC
CLCA	6137	Clock Counter to Buffer Preset register and AC.
Fixed-Interval (Clock Type KW	12-B, C
CSOF	6131	Skip on clock flag.
CTOC	6132	Turn off the clock, clears the clock flag and disables the clock interrupt.
CTON	6134	Turn the clock on and clears the flag.

Mnemonic	Octal	Operation
Fixed-Interval	l Clock Type KW	V12-B,C (cont)
CRUN	6135	Clock running. Turns on the clock, enables the clock interrupt, and clears the clock flag. If the clock flag was set when the instruction was issued, it will skip.
Automatic Li	ne Printer and Co	ontrol Type LP12
LSE	6651	Skip if the printer done flag is a 1.
LCF	6652	Clear both sections of the printing buffer.
LLB	6654	Skip if line printer error flag is a 1.
LSD	6661	Clear line printer done and error flags.
LCB	6662	Load printing buffer from the contents of $AC_{6-1,1}$ and clear the AC.
LPR	6664	Clear the format register, load the format register from the contents of AC_{9-11} , print the line contained in the section of the printer buffer loaded last, clear the AC, and advance the paper in accordance with the selected channel of the format tape if the content of $AC_8 = 1$. If the content of $AC_8 = 0$, the line is printed and paper advance is inhibited.
Line Printer	Type LP08	
LSF	6661	Skip on character flag.
LCF	6662	Clear the character flag.
LSR	6663	Skip on error status line. (Error status line monitors interrupts caused by the
		printer not being ready; i.e., power error, paper jam, out of paper, etc.)
LPC	6664	Load the character into the print buffer and print if buffer is full or character was a control function. This instruction does not clear the AC.
LIN	6665	Set the program interrupts. Enable
LLS	6666	Microprogram combination of LCF and LPC.
LIF	6667	Clear the program interrupt flag.
Card Reader	and Control Type	e CR12
RCSF	6631	Skip if card reader data ready flag is a 1.
RCRA	6632	The alphanumeric code for the column is read into AC_{6-1} , and the data ready flag is cleared.
RCRB	6634	The binary data in a card column is transferred into AC_{0-1} , and the data ready flag is cleared.
RCSP	6671	Skip if card reader card done flag is a 1.
RCSE	6672	Clear the card one flag, select the card reader and start card motion towards the read station, and skip if the reader-not-ready flag is a 1.
RCRD	6674	Clear card done flag.
Automatic M	agnetic Tape Cor	ntrol Type TC58
MTSF	6701	Skip on error flag or magnetic tape flag. The status of the error flag (EF) and the magnetic tape flag (MTF) are sampled. If either or both are set to 1, the contents of the PC are incremented by one skipping the next sequential instruction.

Table C-1. IOT Instructions (cont)

Mnemonic	Octal	Operation			
Automatic Ma	ngnetic Tape Cor	ntrol Type TC58 (cont)			
MTCR	6711	Skip on tape control ready (TCR). If the tape control is ready to receive an instructionn, the PC is incremented by one skipping the next sequential instruction.			
MTTR	6721	Skip on tape transport ready (TTR). The next sequential instruction is skipped if the tape transport is ready.			
MTAF	6712	Clear the status and command registers, and the EF and MTF if tape control ready. If tape control not ready, clears MTF and EF flags only.			
MTRC	6724	Inclusively OR the contents of the command register into $AC_{0-1,1}$.			
MTCM	6714	Inclusively OR the contents of AC_{0-5} and AC_{9-1} into the command register; JAM transfer bits 6, 7, 8 (command function).			
MTLC	6716	Load the contents of $AC_{0-1,1}$ into the command register.			
	6704	Inclusively OR the contents of the status register into AC_{0-1} .			
MTRS	6706	Read the contents of the status register into AC_{0-1} .			
MTGO	6722	Set "to" bit to execute instructions in the command register if instruction is legal.			
MCLA	6702	Clear the accumulator.			
General Purpo	se Converter and	Multiplexer Control Type AF01A			
ADSF	6531	Skip if A/D converter flag is a 1.			
ADVC	6532	Clear A/D converter flag and convert input voltage to a digital number; flag will set at end of conversion. Number of bits in converted number determined by switch setting, 11 bits maximum.			
ADRB	6534	Read A/D converter buffer into AC, left justified, and clear flag.			
ADCC	6541	Clear multiplexer channel address register.			
ADSC	6542	Set up multiplexer channel as per AC_{6-11} . Maximum of 64 single-ended or 32 differential input channels.			
ADIC	6544	Index multiplexer channel address (present address + 1). Upon reaching address limit, increment will cause channel 00 to be selected.			

APPENDIX D 8-MODE PERFORATED - TAPE LOADER

READIN MODE LOADER

The readin mode (RIM) loader is a minimum length, basic, perforated-tape reader program for the 33 ASR. It is initially stored in memory by manual use of the operator console keys and switches. The loader is permanently stored in 18 locations of page 37.

A perforated tape to be read by the RIM loader must be in RIM format:

Tap	e Ch	anne	l					
8	7	6	5	4	S	3	2	1
1	0	0	0	0		0	0	0
0	1	Α	.1			A2		
0	0	A	.3			A4		
0	0	Х	[1			X2		
0	0	Х	3			X4		
0	1	A	.1			A 2		
0	0	A	.3		•	X2		
0	0	Х	1			X2		
0	0		(3			X4		
1	0	(E)	tc.) 0	0		0	0	0

The RIM loader can only be used in conjunction with the 33 ASR reader (not the high-speed perforated-tape reader). Because a tape in RIM format is, in effect, twice as long as it need be, it is suggested that the RIM loader be used only to read the binary loader when using the 33 ASR. (Note that some PDP-12 diagnostic program tapes are in RIM format.)

The complete PDP-12 RIM loader (SA = 7756) is as follows:

Absolute Address	Octal Content	Tag	Instruction 1 Z	Comments
7756	6032	BEG,	KCC	/CLEAR AC AND FLAG
7757	6031	ŕ	KSF	/SKIP IF FLAG = 1
7760,	5357		JMP-1	/LOOKING FOR CHARACTER
7761,	6036		KRB	/READ BUFFER
7762,	7106		CLL RTL	,
7763,	7006		RTL	/CHANNEL 8 IN ACO
7764,	7510		SPA	CHECKING FOR LEADER
7765,	5357		JMP BEG+1	/FOUND LEADER
7766,	7006		RTL	OK, CHANNEL 7 IN LINK
7767,	6031		KSF	, ,
7770,	5367		JMP-1	
7771,	6034		KRS	/READ, DO NOT CLEAR
7772,	7420		SNL	/CHECKING FOR ADDRESS
7773,	3776		DCA 1 TEMP	STORE CONTENT
7774,	3376		DCA TEMP	/STORE ADDRESS
7775,	5356		JMP BEG	/NEXT WORD
7776,	0	TEMP,	0	/TEMP STORAGE
7777,	5XXX	ŕ	JMP X	/JMP START OF BIN LOADER

Manually loading the RIM loader in core memory is accomplished as follows:

- 1. Set the starting address 7756 in the Left Switches.
- 2. Set the first instruction (6032) in the Right Switches.
- 3. Press the FILL Switch and then press the FILL STEP Switch.
- 4. Set the next instruction (6031) in the Right Switches.
- 5. Press the FILL STEP Switch.
- 6. Repeat steps 4 and 5 until all 16 instructions have been deposited.
- 7. To ensure that RIM is in core, press Exam. The MA will = 7756, and the MB should = the first RIM instruction (6032 for low-speed reader).
 - 8. To check sequential core locations, press Step Exam, and observe the contents of the MB.

To load a tape in RIM format, place the tape in the reader, set the Left Switches to the starting address 7756 of the RIM loader (not of the program being read), press the START LS key, and start the Teletype reader.

Refer to Digital Program Library document Digital-8-1-U for additional information on the Readin Mode Loader program.

BINARY LOADER (8 MODE)

The binary loader (BIN) is used to read machine language tapes (in binary format) produced by the program assembly language (PAL). A tape in binary format is about one half the length of a comparable RIM format tape. It can, therefore, be read about twice as fast as a RIM tape and is, for this reason, the more desirable format to use with the 10 cps 33 ASR reader or the Type PR12 High-Speed Perforated-Tape Reader.

The format of a binary tape is as follows:

LEADER: About 2 feet of leader-trailer codes.

BODY: Characters representing the absolute, machine language program in easy-to-read binary (or octal) form. The selection of tape may contain characters representing instructions (channels 8 and 7 not punched) or origin resettings (channel 8 not punched, channel 7 punched), and is concluded by 2 characters (channels 8 and 7 not punched) that represent a checksum for the entire section.

TRAILER: Same as leader.

BODY: Characters representing the absolute, machine language program in easy-to-read binary (or octal) form. The selection of tape may contain characters representing instructions (channels 8 and 7 not punched) or origin resettings (channel 8 not punched, channel 7 punched), and is concluded by 2 characters (channels 8 and 7 not punched) that represent a checksum for the entire section.

TRAILER: Same as leader.

Tap	e Ch	annel	Men	ory						
8	7	6	5	4	S	3	2	1	Location Conte	nt Comments
1	0	0	0	0		0	0	0		leader-trailer code
0 0	1	0	0	0 0		0	1 0	0 0	0200	origin setting
0 0	0	1	1 0	1		0 0	1	0	0200 CLA	
0 0	0	0 1	0 1	1		0 1	1	0 1	0201 TAD 2	277
0 0	0 0	0 1	1 1	1 1		0 1	1	0 0	0202 DCA 2	276
0 0	0 0	1 0	1 0	1 0	•	1 0	0 1	0 0	0203 HLT	
0 0	1 0	0 1	0	0		0 1	1 1	0 1	0277	origin setting
0 0	0 0	0 1	0 0	0 1		0 0	0 1	0 1	0277 0053	
0 0	0 0	0	0 0	1		0 1	0 1	0 1	1007	sum check
1	0	0	0	0		0	0	0		leader-trailer code

To load BIN

- 1. Select the 8 mode.
- 2. Press the IO Preset switch twice.
- 3. Put tape in the TTY reader, turn the reader on.
- 4. Press Start LS (still set to 7756).
- 5. When tape is read in, turn the reader off and stop the computer by pressing the Stop switch.

To load binary tapes with the BIN loader

- 1. Place 7777 in Left Switches.
- 2. Set bit 0 of Right Switches to 1 for low-speed reader (TTY) or set bit 0 of Right Switches to 0 for high-speed reader.
 - 3. Press Start LS.
 - 4. Tape is read in and computer halts.
 - 5. If AC unequal to 0000 a checksum error has occurred.

After a BIN tape has been read in, one of the two following conditions exists:

- a. No checksum error: halt with AC = 0
- b. Checksum error: halt with AC = (computed checksum) (tape checksum)

Operation of the BIN loader in no way depends upon or uses the RIM loader. To load a tape in BIN format place the tape in the reader, set the Left Switches to 7777 (the starting address of the BIN loader), set Right Switch register bit_{00} up for loading via the Teletype unit or down for loading via the high-speed perforated-tape reader, then press the START LS key, and start the tape reader.

Refer to Digital Program Library document Digital-8-2-U-RIM for additional information on the Binary Loader program.

APPENDIX E

TAPE MAINTENANCE INSTRUCTIONS

E.1 GENERAL

In the Maintenance Mode, all signals from the tape transport are inhibited and data is simulated under program control. This mode is especially useful for troubleshooting and checking the operation of the TC12 Tape Control Logic.

E.2 TAPE MAINTENANCE INSTRUCTIONS

E.2.1 **IOT 6141**

This instruction is used to load the Tape Maintenance Instruction Register (used with IOT 6154) and to provide data and timing information to the TC12 tape control unit when it is operating in the maintenance mode. It also checks the status of the Tape Done flag. This instruction is not to be microprogrammed and it should not be used to generate timing information during tape transfers, although it can be used to set the Tape Maintenance Instruction Register at any time.

Any deviation from the above should be carefully checked with the logic diagrams to determine the expected result. The functions of the AC bits during this instruction are shown in Table E-1.

Table E-1. AC Bit Functions

AC Bit Number	Function
00	Load into the Tape Maintenance Register (Bit 0)
01	Load into the Tape Maintenance Register (Bit 1)
02	Load into the Tape Maintenance Register (Bit 2)
03	Load into the Tape Maintenance Register (Bit 3)
04	Clear the Tape Done Flag
05	Skip if Tape Done Flag is set
06	Generate TT0
07	Generate TT3
08	Simulate input data Mark Channel
09	Simulate input data Data Channel 1
10	Simulate input data Data Channel 2
11	Simulate input data Data Channel 3

E.2.2 IOT 6152

This instruction is used to generate various control pulses within the TC12 Tape control unit. These control signals are used primarily for maintenance purposes. In special situations these controls are useful for handling nonstandard tape formats.

The bits of instruction 6152 are gated with individual bits of AC register to generate a specific control function. These functions are intended to be used singly, and not while a tape instruction is in progress, and this instruction cannot be microprogrammed. Any deviation from the above should be carefully checked with the logic diagrams to determine the exact result. The functions of the AC bits during this instruction are shown in Table E-2.

AC Bit Number	Function
00	Tape Preset
01	Shift RWB
02	$TB \rightarrow RWB$
03	$TB + TAC \rightarrow TAC$
04*	Clear 8 Block
05*	Set Direction Backward
06*	Select Unit number 1
07*	Set Direction Forward
08*	Set Write Sync
09*	Set Motion. Set Direction Forward if motion was cleared
10*	Select 8 Tape
11*	$AC_{1,1} \rightarrow 8$ Write Flip-Flop

Table E-2. AC Bit Functions

E.2.3 IOT 6154

This instruction is used to load and examine the various registers of the TC12 Tape Control Unit. The action of this instruction is controlled by the contents of the Tape Maintenance Instruction Register and this action is shown in Table E-3. This instruction is not to be used during the operation of a tape instruction.

Register C		Function Performed
Binary	Octal	
0000	00	AC → TB
0001	01	$AC \rightarrow TBN$
0010	02	$AC \rightarrow TAC$
0011	03	$AC \rightarrow TMA$
0100	04	TMA Setup → AC
0101	05	$TBN \rightarrow AC$

Table E-3. IOT 6154 Effect of Tape Maintenance Instruction

^{*}These Bits are used in the TC12-F Tape Control

Table E-3. IOT 6154 Effect of Tape Maintenance Instruction (cont)

Register Contents Contents of bits 0, 1, 2, & 3		Function Performed			
Binary	Octal				
0110	06	TB → AC			
0111	07	$RWB \rightarrow AC$			
1000	10	Mark Window → AC			
1001	11	Control States, Timing → AC			
1010	12	Units & MTN → AC			
1011 13		Tape Inst → AC			
1100	14	Misc. Status 1 → AC			
1101	15	Misc. Status $2 \rightarrow AC$			
1110	16	$TMA \rightarrow AC$			
1111	17				

E.2.4 IOT 6154 Detailed Transfer Information

The Tape Maintenance Instruction Register is decoded to give a count of 00_8 to 17_8 . These count levels generate the signals necessary to enable the selected data onto the Tape Bus for a 12-bit parallel transfer between the AC and the Tape Registers. The following tables show the contents of the AC after the instruction associated with each table is given.

Table E-4. Tape Maintenance Instruction Register Equal 108

Mark	Window → AC			
AC Bit	Data Read into AC			
00	LWN Wind Shade (1)			
01	LWN Wind 00 (1)			
02	LWN Wind 01 (1)			
03	LWN Wind 02 (1)			
04	LWN Wind 03 (1)			
05	LWN EM			
06	LWN CM			
07	LWN GM			
08	LWN DM			
09	LWN FM			
10	LWN BM			
11	LWN IM			

Table E-5. Tape Maintenance Instruction Register Equals 118

Control States & Timing → AC				
AC Bit	Data Read Into AC			
00	TAC = 7777			
01	LCS Idle (1)			
02	LCS Search (1)			
03	LCS Block (1)			
04	LCS Check Word (1)			
05	LCS Turn Around (1)			
06	LCS Write (1)			
07	LCS Write Cycle (1)			
08	LTD ACIP			
09	LTD TTOK			
10	LTD Timing OK			
11	LTD Tape Fail Delay			

Table E-6. Tape Maintenance Instructions Register Equals 12_8

Units & Motion – AC					
AC Bit	Data Read Into AC				
00	LTC Unit 0 (0)				
01	LTC Unit 1 (0)				
02	LTC Unit 2 (0)				
03	LTC Unit 3 (0)				
04	LTC Unit 4 (0)				
05	LTC Unit 5 (0)				
06	LTC Unit 6 (0)				
07	LTC Unit 7 (0)				
08	LMU motion (1)				
09	LMU Direction (1)				
10	LCS Tape OK (1)				
11	LTC Write EN (1)				

Table E-7. Tape Maintenance Instruction Register Equals 138

TINS	TR AC	
AC Bit	Data Read Into AC	
00	LIN RDC	
01	LIN RCG	
02	LIN RDE	
03	LIN MTB	
04	LIN WRC	
05	LIN WRG	
06	LIN WRI	

Table E-7. Tape Maintenance Instruction Register Equals 13_8 (cont)

TINST	R – AC
AC Bit	Data Read Into AC
07	LIN CHK
08	LIN I (1)
09	LGP GP 0 (1)
10	LGP GP 1 (1)
11	LGP GP 2 (1)

Table E-8. Tape Maintenance Instruction Register Equals 148

MSC S	Status 1
AC Bit	Data Read Into AC
00	LTS PHASE
01	LIP IN PROGRESS (1)
02	LTS LC 00 (1)
03	LTS LC 01 (1)
04	Mark Chan Write
05	Data Chan 1 Write
06	Data Chan 2 Write
07	Data Chan 3 Write
08	LGP GP = GPC (1)
09	LGP GPCNT 0 (1)
10	LGP GPCNT 1 (1)
11	LGP GPCNT 2 (1)

Table E-9. Tape Maintenance Instruction Register Equals 15_8

MSC S	Status 2
AC Bit	Data Read Into AC
00	TC12-F WRITE SEL (1)
01	TC12-F TAPE SEL (1)
02	
03	
04	
05	
06	Not word
07	Not used
08	
09	
10	
11)	
11 <i>)</i>	

	,
	Name .
	•
	×
	<u> </u>

APPENDIX F TABLES OF CODES

Table F-1. Model 33/35 ASR/KSR Teletype Code (ASCII) in Octal Form

Character	8-Bit Code (in octal)	Character	8-Bit Code (in octal)	
Α	301	!	241	
В	302	"	242	
С	303	#	243	
D	304	\$	244	
E	305	%	245	
F	30 6	&	246	
G	307	,	247	
н	310	(250	
1	311)	251	
J	312	*	252	
K	313	+	253	
L	314	,	254	
M	315	_	255	
N	316		256	
О	317	/	257	
P	320		272	
Q	321	;	273	
R	322	<	274	
s	323	=	275	
Т	324	>	276	
U	325	?	277	
V	326	@	300	
w	327	1	333	
x	330	\	334	
Υ	331]]	335	
Z	332	↑	336	
		←	337	
0	260			
1	261	Leader/Trailer	200	
2	262	Line-Feed	212	
3	263	Carriage-Retur	n 215	
4	264	Space	240	
5	265	Rub-out	377	
6	266	Blank	000	
7	267	alt-mode	375	
, 8	270	escape	233	
9	271	230000		

1 = HOLE PUNCHED = MARK MOST SIGNIFICANT BIT LEAST SIGNIFICANT BIT 0 = NO HOLE PUNCHED = SPACE ▶8 7 6 5 4 S 3 2 1 € SPACE NULL/IDLE @ 00 000 A START OF MESSAGE 0 0 0 0 В END OF ADDRESS 0 0 0 1 0 С END OF MESSAGE 0 0 0 1 D END OF TRANSMISSION \$ 0 0 1 0 0 Ε % WHO ARE YOU 0 0 1 0 1 F ARE YOU 0 0 & 1 1 0 G , BELL 0 0 1 1 1 Н FORMÁT EFFECTOR (0 1 0 0 0 1 HORIZONTAL TAB 0 0 1 0 1) J LINE FEED 0 1 0 1 0 Κ + VERTICAL TAB 0 1 0 1 1 L FORM FEED 1 0 1 0 0 , М _ CARRIAGE RETURN 0 1 101 N SHIFT OUT 0 1 1 0 0 SHIFT IN 0 1 1 1 1 P 0 DCO 1 0 0 0 0 Q READER ON 1 0 0 0 1 1 R TAPE (AUX ON) 1 0 0 1 0 2 S 3 READER OFF 1 0 0 1 1 T (AUX OFF) 1 0 1 0 0 4 1 0 1 U 5 ERROR 1 0 ٧ 6 SYNCHRONOUS IDLE 1 0 1 1 0 W 7 LOGICAL END OF MEDIA 1 0 1 1 1 X 8 S O 1 1 000

1 1

1 1

1 1

1 1

1 | 1

1 1

0 0

0

1 0

1 1

0 0 1

0 1 1

SAME

SAME

SAME

0 1 0

1 0 1

1 1 1

0 0

1 0

Y

Z

[

]

RUB OUT

9

<

=

>

?

S 1

S 2

S 3

S 4

S 5

S 6

S 7

Table F-2. Model 33 ASR/KSR Teletype Code (ASCII) in Binary Form

Table F-3. LT-37 Transmit and Receive Code Table

37 KSR MODE				33 ASR MODE			
SHIF	SHIFT		NOT SHIFT		SHIFT		IFT
CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE
A	101	a	341			A	301
В	102	b	342		ĺ	В	302
C	303	С	143			C	303
D	104	d	344			D	304
Е	305	e	145			E	305
F	306	f	146	}		F	306
G	107	g	347			G	307
Н	110	h	350			Н	310
I	311	i	151			I	311
J	312	j	152			J	312
K	113	k	353			K	313
L	314	1	154			L	314
M	115	m	355			M	315
N	116	n	356			N	316
O	317	0	157			О	317
P	120	p	360	1		P	320
Q	321	q	161			Q	321
R	321	r	162			R	322
		1	363			S	323
S	123	S	363 164			T	324
T	324	t		1		U	325
U	125	u	365			V	323 326
V	126	v	366				
W	327	w	167			W	327
X	330	х	170			X	330
Y	131	у	371			Y	331
Z	132	Z	372			Z	332
SPACE	240	0	60	SPACE	240	0	260
!	41	1	261	!	241	1	261
,,	42	2	262	"	242	2	262
#	243	3	63	#	243	3	263
\$	44	4	264	\$	244	4	264
%	245	5	65	%	245	5	265
&	246	6	66	&	246	6	266
,	47	7	267	,	247	7	267
(250	8	270	(250	8	270
)	251	9	71)	251	9	271
:	72	*	252	:	272	*	252
;	273	+	53	;	273	+	253
<	74	1 .	254	<	274	,	254
=	275		55	=	275		255
>	276		5 6	>	276		256
?	77	,	257	?	277	,	257
@	300	1 '	140	@	300	'	- - -
[333	r	173		333		
'	333 134	1 1		'	334		
`	134	,	374	'	334		
L							

Table F-3. LT-37 Transmit and Receive Code Table (cont)

37 KSR MODE			33 ASR MODE				
SHIFT		NOT SHIFT		SHIFT		NOT SHIFT	
CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE
1	225	1	17.5	1	225	AIT	27.5
] ↑	335 336	} ~	175 176		335 336	ALT OR MODE	375
	137	DEL	377	l →	337	DEL DEL	377
NULL	000	DLE	220	NULL	200	DLE	220
SOH	201	DC1	21	SOH	201	DC1	221
STX	202	DC2	22	STX	202	DC2	222
ETX	3	DC3	223	EXT	203	DC3	223
EOT	204	DC4	24	EOT	204	DC4	224
ENQ	5	NAK	225	ENQ	205	NAK	225
ACK	6	SYNC	226	ACK	206	SYNC	226
BELL	207	ЕТВ	27	BELL	207	ETB	227
BACK SPACE	210	CANCEL	30	BACK SPACE	210	CANCEL	230
→ TAB	11	EM	231	→ TAB	211	EM	231
NEW LINE	12	SUB	232	NEW LINE	212	SUB	232
v TAB	213	ESCAPE	33	v TAB	213	ESCAPE	233
FORM	14	FS	234	FORM	214	FS	234
RETURN	215	GS	35	RETURN	215	GS	233
So	216	RS	36	So	216	RS	236
Si	217	QS	237	Si	217	QS	237

NOTE

Letter codes <u>transmitted</u> from the 37 KSR keyboard in 33 mode will be upper case regardless of the position of the shift key; however, letter codes <u>received</u> by the KSR 37 in 33 mode will be printed in upper or lower case, as received.

Table F-4. Card Reader Codes

The following table gives the octal representation of the internal (binary) codes for the listed punch combinations. These internal codes are generated by the card reader and are transmitted to the PDP-12 upon execution of the appropriate IOT instruction. Any combination of punches which is not shown in the table is invalid, and the card reader can not detect invalid combinations.

Card C	Code	Internal	Character	Card Code	Internal	Character
Zone	Num.	Code		Zone Num.	Code	
Zone - 12 12 12 12 12 12 12 11 11 11 11 11	Num. - 8 · 2 8 · 3 8 · 4 8 · 5 8 · 6 8 · 7 - 8 · 2 8 · 3 8 · 4 8 · 5 8 · 6	Code 00 0000 11 1010 11 1011 11 1100 11 1101 11 1110 11 1111 11 0000 10 1010 10 1011 10 1100 10 1101 10 1101	Space [Zone Num. 12 7 12 8 12 9 11 1 11 2 11 3 11 4 11 5 11 6 11 7 11 8 11 9 0 2	Code 11 0111 11 1000 11 1001 10 0001 10 0010 10 0101 10 0110 10 0111 10 1000 10 1001 01 1001 01 1001	G H I J K L M O P Q R S
11	8•7	10 1111	, \	0 3 0 4	01 0011 01 0100	T U
11 0	1	10 0000 01 0001	<u> </u>	0 5	01 0101	v
0 0 0	8·2 8·3 8·4	01 1010 01 1011 01 1100] , %	0 6 0 7 0 8	01 0110 01 0111 01 1000	W X Y
0 0	8·5 8·6 8·7	01 1101 01 1110 01 1111	> ?	0 9 - 0 - 1	01 1001 00 1010 00 0001	Z 0 1
- - -	8·3 8·4 8·5	00 1011 00 1100 00 1101	# @ ,	- 2 - 3 - 4	00 0010 00 0011 00 0100	2 3 4
_ _	8·6 8·7	00 1110 00 1111	= ,,	- 5 - 6	00 0101 00 0110	5 6 7
12 12 12	1 2 3	11 0001 11 0010 11 0011	A B C	- 7 - 8 - 9	00 0111 00 1000 00 1001	8 9
12 12 12	4 5 6	11 0100 11 0101 11 0110	D E F			

Table F-5. LP08 Line Printer Code

64-Character Printer AC_5 0 0 0 1 1 1 1 AC_6 0 1 1 0 0 1 1 AC_7 1 0 0 0 0 1 1 AC₁₀ AC₁₁ AC₈ AC₉ 0 0 0 0 Space 0 @ p 0 0 0 1 1 Α Q a q 0 0 0 2 В R b r 0 0 # 3 C 1 S S 0 0 0 \$ 4 D T d t E 0 0 % 5 U 1 u 0 1 0 & 6 F V v 0 7 G W 1 g W 0 0 0 8 Η \mathbf{X} h X 9 Y 0 0 1 у 0 0 PF J Z 1 j z { ¬} K 0 1 k FF 0 0 < L \Diamond 1 1 0 1 CR = M m > 1 1 1 0 N Λ n

96-Character Printer

0

 \heartsuit

o

1

1

1

Table F-6. LP12 Automatic Line Printer Code

Character (ASCII)	6-Bit Code (in octal)	Character (ASCII)	6-Bit Code (in octal)	
<u> </u>		· · · · · · · · · · · · · · · · · · ·		
=	0		40	
A	1	!	41	
В	2	 4	42	
C	3	π -	43	
D	4	\$	44	
[<u>E</u>	5	%	45	
F	6	&	46	
G	7	4	47	
Н	10	(50	
I	11)	51	
j	12	*	52	
K	13	+	53	
L	14	,	54	
M	15	-	55	
N	16	•	56	
0	1 <i>7</i>	/	57	
P	20	Ô	60	
Q	21	1	61	
R	22	2	62	
S	23	3	63	
l T	24	4	64	
Ù	25	5	65	
V	26	6	66	
ĺ	27	7	67	
l	30	8	70	
Ŷ	31	9	70 71	
ż	32	,	72	
ŕ	33	:	72 73	
1	34	; <	73 74	
1	3 4 35			
!	33 37	=	75 7.	
'	36 27	>	76 77	
<u> </u>	37	?	77	

APPENDIX G CABLE CONNECTIONS TO PDP-12 FRONT PANEL

Access to analog channels 10-17 and the extension scope socket is by means of the relay and analog input panel (see Figure 2-3). The addition of 16 channels of analog input with the AG12 option, 16 additional preamplifiers, connects channels 20_8 to 37_8 to the analog extension panel supplied with the option.

Analog knobs 0_8 to 7_8 , analog channels 10_8 to 37_8 , console scope display, and extension scope display utilize the following connectors and connect to the following module slots in the EM12 memory wing:

Device	Front Panel Connector	Module Slot
Analog Knobs 0 ₈ -7 ₈	5K, 10-turn Potentiometers	F33
Analog Chan 10 ₈ -17 ₈	Switchcraft JAX #13B	F32
Analog Chan 20 ₈ -27 ₈	Amphenol 26-4401-32P	F31
Analog Chan 30_8 - 37_8	Amphenol 26-4401-32P	F30
Extension Scope Display	Amphenol 26-4401-24P	F39
Console Display	Amphenol 57-30240	F38

Table G-1 lists cable connections and signal names from each front panel termination to its corresponding slot in the EM12 memory wing.

Table G-1. Cable Connections for PDP-12 Front Panel

		FRONT			MODULE
DEVICE	SIGNAL NAME	PANEL PIN	SIGNAL NAME	FRONT PANEL PIN	SLOT PIN
Analog Knobs 0-7 Analog Channels 10-17	+7 volts - 7 volts Analog Chan 7 Analog Chan 6 Analog Chan 5 Analog Chan 4 Analog Chan 3 Analog Chan 2 Analog Chan 1 Analog Chan 0	All Knobs All Knobs Knob 7 Knob 6 Knob 5 Knob 4 Knob 3 Knob 2 Knob 1 Knob 0	- Analog Chan 10 + Analog Chan 10 - Analog Chan 11 + Analog Chan 11 - Analog Chan 12 + Analog Chan 12 - Analog Chan 13 + Analog Chan 13 + Analog Chan 14 - Analog Chan 14 - Analog Chan 15 - Analog Chan 15 - Analog Chan 16 + Analog Chan 16	Analog Phone Jack 10 Analog Phone Jack 10 Analog Phone Jack 11 Analog Phone Jack 11 Analog Phone Jack 12 Analog Phone Jack 12 Analog Phone Jack 13 Analog Phone Jack 13 Analog Phone Jack 14 Analog Phone Jack 14 Analog Phone Jack 15 Analog Phone Jack 15 Analog Phone Jack 16 Analog Phone Jack 16 Analog Phone Jack 16	A1 B1 C1 D1 E1 H1 J1 K1 L1 M1 N1 P1 S1 T1
Analog Channels 20-37 Console Display and Extension Scope Display	- Analog Chan 20 + Analog Chan 20 DRAIN - Analog Chan 21 + Analog Chan 21 DRAIN - Analog Chan 22 + Analog Chan 22 DRAIN - Analog Chan 23 - Analog Chan 23 DRAIN - Analog Chan 23 DRAIN - Analog Chan 24 + Analog Chan 24 DRAIN - Analog Chan 25 - Analog Chan 25 DRAIN - Analog Chan 25 DRAIN - Analog Chan 26 + Analog Chan 26 - Analog Chan 27 DRAIN - Analog Chan 27 - Analog Chan 27 DRAIN DSX Chan Sel. (1) H System GND DRAIN DSC Intensity L System GND DRAIN	1 2 3 4 5 6 6 7 7 8 9 10 11 12 13 14 15 16 32 31 30 29 28 27 26 25 1 2 3 4 5 6	- Analog Chan 17 + Analog Chan 17 - Analog Chan 30 + Analog Chan 30 DRAIN - Analog Chan 31 + Analog Chan 31 DRAIN - Analog Chan 32 + Analog Chan 32 - Analog Chan 33 + Analog Chan 33 - Analog Chan 34 + Analog Chan 34 DRAIN - Analog Chan 35 + Analog Chan 35 + Analog Chan 35 - Analog Chan 35 - Analog Chan 35 - Analog Chan 35 DRAIN - Analog Chan 36 - Analog Chan 36 - Analog Chan 37	Analog Phone Jack 17 Analog Phone Jack 17 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 32 31 30 29 28 27 26 25	VI A1 B1 GND C1 D1 GND E1 H1 GND J1 K1 GND L1 M1 GND V1 GND S1 T1 GND U1 V1 GND A1 B1 GND C1 D1 GND
Type 503 Scope Connections	X HQ GND DSX X Defl. DRAIN Y HQ GND DSY Y Defl. DRAIN 503 Intensify System GND DRAIN	7 8 9 10 11 12 19 20 21			E1 H1 GND J1 K1 GND S1 T1 GND

APPENDIX H MATHEMATICAL DATA

Scales of Notation 2^X IN Decimal 10⁺ⁿ IN Octal 10 10-112 402 762 000 1 351 035 564 000 16 432 451 210 000 221 411 634 520 000 2 657 142 036 440 000 34 327 724 461 500 000 15 0.000 000 000 000 000 022 01 434 157 115 760 200 000 16 0.000 000 000 000 000 001 63 5 432 127 413 542 400 000 17 0.000 000 000 000 000 000 167 405 553 164 731 000 000 18 0.000 000 000 000 000 000 000 01 n $\log_{10} 2$, n $\log 2$ 10 IN Decimal n log₂ 10 n log₁₀ 2 Addition and Multiplication Tables Addition Multiplication **Binary Scale** Octal Scale 7 16 25 34 43 52 61 Mathematical Constants in Octal Scale e = 2.55760 521305 0.44742 147707 $\pi = 3.11037 552421$ e-1 = 0.27426 530661s $\ln \gamma = -0.43127 233602$ $\pi^{-1} = 0.24276 \quad 301556_{1}$ $\sqrt{\pi} = 1.61337 611067$ $\log_2 \gamma = -.0.62573 \ 030645_4$ $\ln \pi = 1.11206 \ 404435$ logio e = 0.33626 754251s $\sqrt{2} = 1.32404 746320$ log2 e = 1.34252 166245 0.54271 027760 2.23273 067355 log₂ 10 = 3.24464 741136₈ In 10 = $\sqrt{10} = 3.12305 \ 407267_{\bullet}$

Powers of Two

```
2<sup>n</sup>
                                                                                                    2<sup>-n</sup>
                                                                                           n
                                                                               1
                                                                                            0
                                                                                                      1.0
                                                                                                      0.5
                                                                               2
4
8
                                                                                           1
2
3
4
5
6
7
8
9
                                                                                                      0.25
                                                                                                      0.125
                                                                                                      0.062 5
0.031 25
                                                                            16
32
                                                                                                      0.015 625
                                                                          128
                                                                                                      0.007 812 5
                                                                         256
                                                                                                      0.003 906 25
0.001 953 125
                                                                          512
                                                                                                      0.000 976 562 5
0.000 488 281 25
0.000 244 140 625
                                                                        024
                                                                                          10
                                                                   2 048
4 096
                                                                                        11
12
                                                                         192
                                                                                         13
                                                                                                      0.000 122 070 312 5
                                                                 16 384
32 768
65 536
                                                                                        14
15
                                                                                                      0.000 061 035 156 25
0.000 030 517 578 125
                                                                                          16
                                                                                                      0.000 015 258 789 062
                                                              131 072
262 144
                                                                                                      0.000 007 629 394 531 25
0.000 003 814 697 265 625
0.000 001 907 348 632 812 5
                                                                                        17
18
                                                       262 144
524 288
1 048 576
2 097 152
4 194 304
                                                                                         19
                                                                                        20
21
22
                                                                                                      0.000 000 953 674 316 406 25
0.000 000 476 837 158 203 125
0.000 000 238 418 579 101 562 5
                                                                                                    0.000 000 238 418 579 101 562 5
0.000 000 119 209 289 550 781 25
0.000 000 059 604 644 775 390 625
0.000 000 029 802 322 387 695 312 5
0.000 000 014 901 161 193 847 656 25
0.000 000 007 450 580 596 923 828 125
0.000 000 003 725 290 298 461 914 062 5
0.000 000 001 862 645 149 230 957 031 25
0.000 000 000 931 322 574 615 478 515 625
0.000 000 000 465 661 287 307 739 257 812 5
0.000 000 000 465 661 287 307 739 257 812 5
0.000 000 000 164 561 287 307 739 257 812 5
0.000 000 000 016 415 321 826 934 814 453 125
0.000 000 000 000 588 207 660 913 467 407 226 562 5
0.000 000 000 000 124 551 915 228 366 851 806 640 620
                                                     8 388 608
16 777 216
                                                                                        23
24
                                                             554 432
                                                                                        25
                                                                                        26
27
28
                                                   67 108 864
134 217 728
                                                   268 435 456
                                            536 870 912
1 073 741 824
                                                                                         29
                                                                                        30
                                            1 073 741 824
2 147 483 648
4 294 967 296
8 589 934 592
17 179 869 184
                                                                                        31
                                                                                        32
33
                                                                                        34
35
                                       34 359 738 368
68 719 476 736
137 438 953 472
                                                                                                     0.000 000 000 014 551 915 228 366 851 806 640 625
0.000 000 000 007 275 957 614 183 425 903 320 312 5
0.000 000 000 003 637 978 807 091 712 951 660 156 25
                                                                                        36
37
                                       274 877 906 944
                                                                                        38
                                                                                                    0.000 000 000 003 637 978 807 091 712 951 660 156 25
0.000 000 000 001 818 989 403 545 856 475 830 078 125
0.000 000 000 000 909 494 701 772 928 237 915 039 062 5
0.000 000 000 000 454 747 350 886 464 118 957 519 531 25
0.000 000 000 000 002 27 373 675 443 232 059 478 759 765 625
0.000 000 000 000 0113 686 837 721 616 029 739 379 882 812 5
0.000 000 000 000 056 843 418 860 808 014 869 689 941 406 25
0.000 000 000 000 028 421 709 430 404 007 434 844 970 703 125
0.000 000 000 000 001 210 854 715 202 003 717 422 485 351 562 5
0.000 000 000 000 007 105 427 357 601 001 858 711 242 675 781 25
                                                                                        39
40
                                 549 755 813 888
1 099 511 627 776
                                 2 199 023 255 552
                                                                                        41
                                 4 398 046 511 104
8 796 093 022 208
                                                                                        42
                                                                                       43
44
                                17 592 186 044 416
                              35 184 372 088 832
70 368 744 177 664
                                                                                        45
                                                                                       46
47
                             140 737 488 355 328
                                                                                                    0.000 000 000 000 003 552 713 678 800 500 929 355 621 337 890 625 0.000 000 000 000 001 776 356 839 400 250 464 677 810 668 945 312 5 0.000 000 000 000 000 888 178 419 700 125 232 338 905 334 472 656 25
                            281 474 976 710 656
562 949 953 421 312
                                                                                        48
                                                                                       49
50
                      1 125 899 906 842 624
                      2 251 799 813 685 248
                                                                                                     0.000 000 000 000 000 444 089 209 850 062 616 169 452 667 236 328 125
                     4 503 599 627 370 496
9 007 199 254 740 992
                                                                                       52
53
                                                                                                     0.000 000 000 000 000 222 044 604 925 031 308 084 726 333 618 164
                                                                                                    0.000 000 000 000 000 000 111 022 302 462 515 654 042 363 166 809 082 031 25 0.000 000 000 000 000 055 511 151 231 257 827 021 181 583 404 541 015 625 0.000 000 000 000 000 027 755 575 615 628 913 510 590 791 702 270 507 812
                                                                                       54
55
                    18 014 398 509 481 984
                   36 028 797 018 963 968
72 057 594 037 927 936
                                                                                       56
57
                                                                                                    0.000 000 000 000 000 000 013 877 787 807 814 456 755 295 395 851 135 253 906 25 0.000 000 000 000 000 006 938 893 903 907 228 377 647 697 925 567 626 953 125 0.000 000 000 000 000 003 469 446 951 953 614 188 823 848 962 783 813 476 562
                 144 115 188 075 855 872
                288 230 376 151 711 744
576 460 752 303 423 488
                                                                                       58
                                                                                                    0.000 000 000 000 000 000 001 469 446 951 953 614 188 823 848 962 783 813 476 562 5
0.000 000 000 000 000 001 734 723 475 976 807 094 411 924 481 391 906 738 281 25
0.000 000 000 000 000 000 000 867 361 737 988 403 547 205 962 240 695 953 369 140 625
0.000 000 000 000 000 000 000 433 680 868 994 201 773 602 981 120 347 976 684 570 312 5
0.000 000 000 000 000 000 000 108 420 217 248 550 443 400 745 280 086 994 171 142 578 125
0.000 000 000 000 000 000 000 54 210 108 624 275 221 700 372 640 043 497 085 571 289 062 5
                                                                                       59
60
                152 921 504 606 846 976
          2 305 843 009 213 693 952
4 611 686 018 427 387 904
                                                                                       62
63
                223 372 036 854 775 808
       18 446 744 073 709 551 616
36 893 488 147 419 103 232
                                                                                                    0.000 000 000 000 000 000 000 027 105 054 312 137 610 850 186 320 021 748 542 785 644 531 25 0.000 000 000 000 000 000 013 552 527 156 068 805 425 093 160 010 874 271 392 822 265 625 0.000 000 000 000 000 000 000 006 776 263 578 034 402 712 546 580 005 437 135 696 411 132 812
                                                                                       65
66
                786 976 294 838 206 464
    147 573 952 589 676 412 928
295 147 905 179 352 825 856
                                                                                                    0.000 000 000 000 000 000 000 3388 131 789 017 201 356 273 290 002 718 567 848 205 566 406 25 0.000 000 000 000 000 000 001 694 065 894 508 600 678 136 645 001 359 283 924 102 783 203 125 0.000 000 000 000 000 000 000 847 032 947 254 300 339 068 322 500 679 641 962 051 391 601 562
                                                                                       68
      590 295 810 358 705 651 712
                                                                                       69
1 180 591 620 717 411 303 424
                                                                                                                                                                                                                                                                                                                                                            562
    361 183 241 434 822 606 848
722 366 482 869 645 213 696
                                                                                       71
72
                                                                                                    0.000 000 000 000 000 000 000 000 423 516 473 627 150 169 534 161 250 339 820 981 025 695 800 781 25 0.000 000 000 000 000 000 000 000 211 758 236 813 575 084 767 080 625 169 910 490 512 847 900 390 625
```

Octal-Decimal Integer Conversion Table

								gei		_									
		C	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
0000 0000	0	000 00	000	0002	0003	0004	0005	0006	0007] [0400	0256	0257	0258	0259	0260	0261	0262	0263
10 10 0777 0511	0	010 00	000 80	0010	0011	0012	0013	0014	0015		0410	0264	0265	0266	0267	0268	0269	0270	0271
(Octal) (Decima	al)	020 00								}						0276			
		030 00 040 00								1						0284 0292			
	. 0	050 00														0300			
Octal Decima	10	060 00														0308			
10000 - 4096 20000 - 8192		070 00	6 005	7 0058	0059	0060	0061	0062	0063		0470	0312	0313	0314	0315	0316	0317	0318	0319
30000 - 12288		100 00	54 006	5 0066	0067	0068	9800	0070	0071		0500	0320	0321	0322	0323	0324	0325	0326	0327
40000 - 16384		110 00														0332			
50000 - 20480		120 00														0340			
60000 - 24576		130 00														0348			
70000 - 28672		140 00 150 01														035 6 036 4			
		160 01														0372			
	0	170 01	012	0122	0123	0124	0125	0126	0127		0570	0376	0377	0378	0379	0380	0381	0362	0383
		200 01														0388			
		210 01														0396			
		220 01 · 230 01 ·														0404 0412			
		240 01														0420			
		250 01														0428			
		260 01° 270 01°	6 017 4 018													0436 0444			
																			i
		300 019 310 020														0452 0460			
			8 0209													0468			
		330 02														0476			
		340 02														0484			
		350 023 360 024														0492 0500			
		370 024														0508			
		0	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
1600 0512	. [1	000 05								,	1400					4 0772			
10 10	{ i	000 05 010 05	12 051 20 052	3 0514 1 0522	0515 0523	0516 0524	0517 0525	0518 0526	0519 0527		1410	07 68 07 76	0769 0777	0770 0778	0771 0779	0772 0780	0773 0781	0774 0782	0775 0783
10 10 1777 1023		000 05 010 05 020 05	12 051 20 052 28 052	3 0514 1 0522 9 0530	0515 0523 0531	0516 0524 0532	0517 0525 0533	0518 0526 0534	0519 0527 0535		1410 1420	0768 0776 0784	0769 0777 0785	0770 0778 0786	0771 0779 0787	0772 0780 0788	0773 0781 0789	0774 0782 0790	0775 0783 0791
10 10) 1 1 1	000 05 010 05 020 05 030 05	12 051 20 052 28 052 36 053	3 0514 1 0522 9 0530 7 0538	0515 0523 0531 0539	0516 0524 0532 0540	0517 0525 0533 0541	0518 0526 0534 0542	0519 0527 0535 0543		1410 1420 1430	0768 0776 0784 0792	0769 0777 0785 0793	0770 0778 0786 0794	0771 0779 0787 0795	0772 0780 0788 0796	0773 0781 0789 0797	0774 0782 0790 0798	0775 0783 0791 0799
10 10 1777 1023	ol) 1 1 1 1	000 05 010 05 020 05	12 051 20 052 28 052 36 053	3 0514 1 0522 9 0530 7 0538 5 0546	0515 0523 0531 0539 0547	0516 0524 0532 0540 0548	0517 0525 0533 0541 0549	0518 0526 0534 0542 0550	0519 0527 0535 0543 0551		1410 1420 1430 1440 1450	0768 0776 0784 0792 0800 0808	0769 0777 0785 0793 0801 0809	0770 0778 0786 0794 0802 0810	0771 0779 0787 0795 0803 0811	0772 0780 0788 0796 0804 0812	0773 0781 0789 0797 0805 0813	0774 0782 0790 0798 0806 0814	0775 0783 0791 0799 0807 0815
10 10 1777 1023	oi) 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05	12 051 20 052 28 052 36 053 44 054 52 055	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562	0515 0523 0531 0539 0547 0555 0563	0516 0524 0532 0540 0548 0556 0564	0517 0525 0533 0541 0549 0557 0565	0518 0526 0534 0542 0550 0558 0566	0519 0527 0535 0543 0551 0559 0567		1410 1420 1430 1440 1450 1460	0768 0776 0784 0792 0800 0808 0816	0769 0777 0785 0793 0801 0809 0817	0770 0778 0786 0794 0802 0810 0818	0771 0779 0787 0795 0803 0811 0819	0772 0780 0788 0796 0804 0812 0820	0773 0781 0789 0797 0805 0813 0821	0774 0782 0790 0798 0806 0814 0822	0775 0783 0791 0799 0807 0815 0823
10 10 1777 1023	1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05	12 051 20 052 28 052 36 053 44 054 52 055 60 056 58 056	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570	0515 0523 0531 0539 0547 0555 0563 0571	0516 0524 0532 0540 0548 0556 0564 0572	0517 0525 0533 0541 0549 0557 0565 0573	0518 0526 0534 0542 0550 0558 0566 0574	0519 0527 0535 0543 0551 0559 0567 0575		1410 1420 1430 1440 1450 1460 1470	0768 0776 0784 0792 0800 0808 0816 0824	0769 0777 0785 0793 0801 0809 0817 0825	0770 0778 0786 0794 0802 0810 0818 0826	0771 0779 0787 0795 0803 0811 0819 0827	0772 0780 0788 0796 0804 0812 0820 0828	0773 0781 0789 0797 0805 0813 0821 0829	0774 0782 0790 0798 0806 0814 0822 0830	0775 0783 0791 0799 0807 0815 0823 0831
10 10 1777 1023) 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05 070 05	12 051 20 052 28 052 36 053 44 054 52 055 50 056 58 056	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570	0515 0523 0531 0539 0547 0555 0563 0571	0516 0524 0532 0540 0548 0556 0564 0572	0517 0525 0533 0541 0549 0557 0565 0573	0518 0526 0534 0542 0550 0558 0566 0574	0519 0527 0535 0543 0551 0559 0567 0575		1410 1420 1430 1443 1450 1460 1470	0768 0776 0784 0792 0800 0808 0816 0824	0769 0777 0785 0793 0801 0809 0817 0825	0770 0778 0786 0794 0802 0810 0818 0826	0771 0779 0787 0795 0803 0811 0819 0827	0772 0780 0788 0796 0804 0812 0820 0828	0773 0781 0789 0797 0805 0813 0821 0829	0774 0782 0790 0798 0806 0814 0822 0830	0775 0783 0791 0799 0807 0815 0823 0831
10 10 1777 1023	1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05	12 051 20 052 28 052 28 053 34 054 52 055 50 056 58 056	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578	0515 0523 0531 0539 0547 0555 0563 0571	0516 0524 0532 0540 0548 0556 0564 0572	0517 0525 0533 0541 0549 0557 0565 0573	0518 0526 0534 0542 0550 0558 0566 0574	0519 0527 0535 0543 0551 0559 0567 0575		1410 1420 1430 1440 1450 1460 1470	0768 0776 0784 0792 0800 0808 0816 0824	0769 0777 0785 0793 0801 0809 0817 0825	0770 0778 0786 0794 0802 0810 0818 0826	0771 0779 0787 0795 0803 0811 0819 0827	0772 0780 0788 0798 0804 0812 0820 0828	0773 0781 0789 0797 0805 0813 0821 0829	0774 0782 0790 0798 0806 0814 0822 0830	0775 0783 0791 0799 0807 0815 0823 0831
10 10 1777 1023	(le	000 05 010 05 020 05 030 05 040 05 050 05 070 05 110 05 110 05 120 05 130 06	12 051 20 052 28 052 36 053 34 054 52 055 60 056 60 057 84 058 92 059 90 060	3 05141 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 5 0586 5 0586 1 0602	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0598 0606	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857	0770 0778 0786 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 110 05 120 05 130 06 140 06	12 051 20 052 28 052 28 052 36 053 344 054 52 055 60 056 658 056 76 057 84 058 92 059 90 060	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 5 0586 3 0594 1 0602 9 0610	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611	0516 0524 0532 0540 0548 0556 0564 0572 0588 0596 0604 0612	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605 0613	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0598 0606 0614	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530 1540	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858 0866	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861	0774 0782 0790 0798 0806 0814 0822 0830 0846 0854 0854	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05 070 05 100 05 110 05 120 05 130 06 140 06	12 051 20 052 28 052 28 052 36 053 34 054 52 055 60 056 658 056 76 057 34 058 32 059 00 060 060 061 061	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 5 0586 3 0594 1 0602 9 0610	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619	0516 0524 0532 0540 0548 0556 0564 0572 0588 0596 0604 0612 0620	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605 0613	0518 0526 0534 0542 0550 0558 0566 0574 0582 0598 0606 0614 0622	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530 1540 1550	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858 0866 0874	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877	0774 0782 0790 0798 0806 0814 0822 0830 0846 0854 0852 0870 0878	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 110 05 120 05 130 06 140 06	12 051 20 052 28 052 36 053 36 053 36 055 50 056 58 056 76 057 84 058 90 059 90 060 08 060 061 061 24 062	3 0514 1 0522 9 0530 9 0530 5 0546 5 0546 5 0556 9 0570 7 0578 5 0586 0 0586 1 0602 9 0610 9 0610	0515 0523 0531 0539 0547 0555 0563 0571 0579 0687 0603 0611 0619 0627	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605 0613 0621 0629	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0598 0606 0614 0622 0630	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0591 0607 0615 0623 0631		1410 1420 1430 1440 1450 1460 1470 1510 1520 1530 1540 1550 1560	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858 0866 0874	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0852 0870 0878	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 110 05 120 05 130 06 140 06 150 06	12 051 20 052 28 052 28 052 34 054 52 055 60 056 658 056 76 057 34 058 92 059 90 060 96 061 16 061 24 062 32 063	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 5 0586 3 0594 1 0602 9 0610 7 0618 5 0624	0515 0523 0531 0539 0547 0555 0563 0571 0579 0687 0603 0611 0619 0625	0516 0524 0532 0540 0548 0556 0572 0580 0588 0596 0604 0612 0620 0628 0636	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605 0613 0629 0637	0518 0526 0534 0542 0550 0558 0556 0574 0582 0590 0598 0606 0614 0612 0638	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0639		1410 1420 1430 1440 1450 1460 1510 1510 1520 1530 1540 1550 1550 1570	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0889	0770 0778 0786 0794 0802 0810 0826 0834 0842 0850 0858 0866 0874 0882	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0867 0883	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876	0773 0781 0789 0797 0805 0813 0829 0837 0845 0853 0861 0869 0885 0885	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0852 0870 0878	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 050 05 050 05 070 05 110 05 110 05 120 05 140 06 150 06 160 06 170 06	12 051 20 052 28 052 36 053 34 054 52 055 60 056 658 056 76 057 84 058 92 059 90 060 08 060 08 061 24 062 32 063	3 05141 1 05230 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 5 0586 3 0594 0590 0610 7 0618 5 0626 3 0634	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0603 0611 0619 0627 0635	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628 0636	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0697 0605 0613 0621 0629 0637	0518 0526 0534 0542 0550 0558 0566 0574 0582 0598 0606 0614 0622 0630 0638	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631 0639		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1540 1550 1570 1600 1610	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880 0888	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858 0866 0874 0882 0890	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0883 0891	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876 0884 0892	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0861 0869 0877 0885 0893	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0862 0870 0878 0894	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887 0895
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 020 05 030 05 040 05 050 05 060 05 100 05 110 05 120 05 130 06 140 06 140 06 170 06 200 06 220 06	12 051 22 052 28 052 28 052 36 053 34 054 560 056 58 056 58 056 76 057 784 058 92 059 90 060 90 060 91 061 124 062 32 063	3 0514 1 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 5 0586 3 0594 1 0602 9 0610 0 063 3 0634	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619 0627 0635	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628 0636	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0603 0613 0621 0629 0637	0518 0526 0534 0542 0550 0558 0566 0574 0582 0598 0606 0614 0622 0630 0638	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0699 0607 0615 0623 0631 0639		1410 1420 1430 1440 1450 1460 1510 1520 1530 1550 1550 1570 1600 1610 1620	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880 0888	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889	077Q 0778 0786 0786 0802 0810 0818 0826 0834 0842 0850 0858 0866 0874 0882 0890	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 08675 0883 0891	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876 0884 0892	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885 0893	0774 0782 0799 0896 0814 0822 0830 0838 0846 0854 0854 0878 0878 0878 0894	0775 0783 0791 0799 0807 0813 0831 0839 0847 0855 0863 0871 0895
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 050 05 050 05 070 05 110 05 110 05 120 05 140 06 150 06 160 06 170 06	12 051 22 0 052 228 052 236 053 344 054 552 055 560 056 58 056 76 057 84 058 92 059 90 060 08 060 08 060 061 061 24 062 332 063 40 064 418 064 556 065	3 0514 0522 9 0530 7 0538 5 0546 3 0554 1 0562 9 0570 7 0578 3 0594 1 0602 9 0610 9 0610 0626 3 0634 1 0642 9 0650 7 0658 6 0666	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0695 0603 0611 0619 0627 0635	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628 0636	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0697 0605 0613 0621 0629 0637	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0614 0622 0630 0638 0646 0654 0654 0656 0670	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0699 0607 0615 0623 0631 0647 0653 0663 0671		1410 1420 1430 1440 1450 1460 1510 1510 1520 1530 1550 1560 1570 1600 1610 1620 1630	0768 07784 07784 07840 0830 0816 0824 0832 0840 0856 0864 0878 0878 0896 0912 0920	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889	077Q 0778 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858 0866 0874 0882 0890 0898	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0891 0899	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876 0884 0892	0773 0781 0789 0797 0805 0813 0821 0829 0837 0853 0861 0869 0877 0885 0893	0774 0782 0790 0806 0814 0822 0830 0838 0846 0854 0862 0870 09870 0990 0991 0991	0775 0783 0791 0799 0807 0815 0823 0831 0847 0855 0863 0871 0879 0887 0895
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 100 05 110 05 120 05 130 06 140 06 150 06 200 06 220 06 220 06 220 06 230 06 230 06 250 06	12 051 20 052 28 052 36 053 36 053 36 054 52 055 60 056 658 056 76 057 84 058 92 059 90 060 98 060 98 060 98 064 98 064 9	3 05141 1 0522 9 0530 7 0538 3 05546 3 05546 1 0562 9 0570 7 0578 5 0586 1 0602 9 0610 9 0610 9 0650 3 0634 1 0642 9 0650 7 0658 5 0666 5 0666 1 0682	0515 0523 0533 0539 0547 0555 0563 0571 0579 0683 0611 0619 0627 0635	0516 0524 0532 0540 0548 0556 0564 0558 0696 0604 0612 0620 0628 0636 0666 0668	0517 0525 0533 0541 0549 0557 0565 0573 0581 0689 0621 0629 0637	0518 0526 0534 0542 0550 0558 0566 0574 0598 0606 0614 0622 0630 0638 0646 0654 0662 0678	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631 0639 0647 0655 0663 0671 0679 0687		1410 1420 1430 1440 1450 1450 1500 1520 1530 1540 1550 1600 1610 1623 1640 1650	0768 0776 0776 0784 0792 0830 0816 0824 0848 0856 0864 0862 0868 0872 0880 0990 0912 0920 0928 0936	0769 0777 0785 0793 0801 0804 0817 0825 0833 0841 0857 0865 0873 0863 0873 0921 0929 0929 0937	077Q 0778 0786 0794 0802 0810 0826 0834 0856 0858 0866 0874 0882 0890	0771 0779 0787 0795 0803 0811 0859 0867 0875 0867 0875 0883 0891	0772 0780 0788 0796 0804 0812 0820 0828 0844 0852 0866 0876 0868 0876 0990 0908 0916 0924	0773 0781 0789 0797 0805 0813 0829 0837 0845 0861 0869 0877 0885 0893	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0876 0878 0902 0910 0918 0926 0934 0934	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0863 0871 0879 0887 0895
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 110 05 110 05 110 06 140 06 150 06 170 06 200 06 210 06 220 06 230 06 240 06 250 06 260 06	12 051 20 052 28 052 36 053 36 053 44 054 52 055 60 056 892 059 60 060 892 059 892 059 892 059 893 068 894 068 895 068 895 068 895 068 895 068 895 068 895 068 895 068 895 068	3 05144 1 05222 3 0530 3 0530 3 0550 3 0650 3 0650	0515 0523 0531 0539 0547 0555 0563 0571 0595 0603 0611 0619 0627 0635 0651 0651 0651 0651 0653	0516 0524 0532 0540 0548 0556 0564 0572 0580 0618 0612 0620 0628 0636 0644 0652 0668 0676 0668 0676	0517 0525 0525 0533 0541 0549 0557 0565 0573 0695 0693 0693 0637	0518 0526 0534 0542 0550 0558 0566 0574 0582 0690 0618 0622 0630 0638 0654 0662 0670 0678	0519 0527 0535 0543 0551 0559 0567 0575 0697 0607 0615 0623 0631 0639 0647 0655 0663 0671 0679 0687		1410 1420 1430 1440 1440 1500 1510 1520 1530 1540 1550 1560 1570 1660 1610 1620 1630 1640 1650 1660	0768 0776 0776 0784 0792 0830 0816 0824 0832 0840 0848 0856 0864 0872 09880 0994 0912 0928 0928 0936 0936	0769 0777 0777 0785 0793 0801 0807 0817 0825 0833 0841 0849 0857 0865 0873 0989 09905 0913 0929 0937 0945	077Q 0778 0786 0794 0802 0810 0826 0834 0850 0858 0866 0874 0882 0890	0771 0779 0787 0795 0803 0811 0827 0835 0843 0851 0867 08683 0891	0772 0780 0788 0796 0804 0812 0820 0828 0844 0852 0868 0876 0892	0773 0781 0789 0797 0805 0813 0821 0845 0853 0861 0869 0877 0885 0893	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0862 0870 0918 0910 0918 0926 0934 0942 0950	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0885 0863 0871 0895 0903 0911 0927 0935 0993
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 100 05 110 05 120 05 130 06 140 06 150 06 210 06 220 06	12 0511 20 05228 05228 05236 053 36 053 0565 0566 0566 0566 0566 0566 056	3 05144 1 05222 3 0533 3 0554 3 0554 3 0554 1 0562 3 0557 7 0578 3 0594 4 1 0602 3 0610 3 0634 1 0642 3 0634 1 0642 3 0634 1 0642 9 0650 9 0650	0515 0523 0531 0539 0547 0555 0563 0571 0579 0683 0611 0619 0627 0635 0663 0665 0665 0667 06683	0516 0524 0532 0540 0548 0556 0556 0564 0612 0620 0628 0636 0664 0652 0660 0668 0692 0700	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0605 0613 0629 0637 0645 06693 0693 0701	0518 0526 0534 0542 0550 0558 0566 0574 0598 0606 0614 0622 0670 0638 0662 0678 0694 0702	0519 0527 0527 0535 0543 0551 0559 0667 0615 0623 0631 0631 0639 0647 0655 0663 0671 0695 0697		1410 1420 1430 1440 1450 1510 1520 1530 1540 1550 1560 1570 1610 1620 1630 1640 1650 1670	0768 0776 0776 0784 0792 0800 0816 0824 0848 0856 0864 0872 0880 0912 0920 0920 0936 0944 0952	0769 0777 0785 0793 0801 0817 0825 0833 0841 0849 0857 0865 0873 0989 0995 0913 0921 0921 0937 0945 0953	0770 07786 0786 0794 0802 0810 0818 0826 0850 0858 0866 0874 0882 0890 0914 0922 0930 0938 0946 0954	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0867 0875 0899 0907 0915 0923 0939 0947 0955	0772 0780 0788 0796 0804 0812 0820 0828 0836 0846 0852 0860 0868 0876 0992 0990 0998 0993 0940 0948 0956	0773 0781 0789 0797 0805 0813 0829 0837 0845 0853 0861 0869 0877 0985 0991 0909 0917 0923 0941 0949 0957	0774 0782 0790 0798 0806 0814 0822 0830 0846 0854 0866 0870 0918 0918 0918 0918 0924 0950 0958	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0865 0867 0895 0903 0919 0927 09927 0993 09919 0995 0995
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05 070 05 110 05 110 05 110 06 140 06 150 06 170 06 200 06 210 06 220 06 240 06 240 06 240 06 250 06 270 06	12 051 12 051 12 052 18 052 18 052 14 054 15 056 16 057 16 057 17 058 18 064 18 064	3 05144 1 05222 3 0530 7 0538 3 0554 1 0562 3 0570 7 0578 3 0594 1 0602 3 0634 1 0642 3 0634 1 0642 3 0634 1 0642 3 0634 3 0642 3 0674 2 0698 3 0674 5 0698	0515 0523 0531 0539 0547 0555 0563 0571 0597 0697 0627 0635 0651 0659 0667 0669 0699	0516 0524 0532 0540 0548 0556 0556 0564 0572 0682 0604 0612 0620 0636 0636 0668 0676 0684 0692 0700	0517 0525 0533 0541 0549 0557 0565 0573 0581 0581 0629 0637 0663 0661 0669 0669 0677 0693 0701	0518 0526 0526 0534 0542 0550 0558 0566 0574 0682 0636 0636 0636 0636 0636 0654 0662 0670 0686 0694 0702	0519 0527 0527 0535 0543 0551 0559 0567 0599 0607 0615 0623 0631 0639 0647 0655 0663 0671 0695 0695 0703		1410 1420 1430 1443 1450 1500 1510 1510 1550 1550 1550 1610 1620 1630 1640 1640 1660 1670	0768 07766 0784 0792 0800 0808 0816 0824 0840 0856 0856 08672 0880 09904 0912 0920 0920 0936 0944 0952	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0857 0857 0989 0993 0913 0929 0921 0929 0937 0945 0953	0770 07786 0786 0794 0802 0810 0818 0826 0850 0850 0866 0874 0892 0890 0906 0916 0922 0930 0938 0946 0954	0771 0779 0787 0795 0803 0811 0819 0827 0835 0851 0867 0891 0899 0907 0915 0923 0931 0939 0947 0955	0772 0780 0788 0796 0804 0812 0820 0852 0860 0844 0892 0908 0908 0908 0908 0909 0908 0909 0000 0000 0000 0000 0000 0000 0000 0000	0773 0781 0789 0797 0805 0813 0829 0837 0853 0853 0853 0869 0877 0885 0901 0909 0917 0925 0933 0941 0949 0957	0774 0782 0790 0798 0806 0814 0822 0830 0846 0854 0864 0894 0902 0910 0918 0926 0934 0950	0775 0783 0791 0799 0807 0815 0823 0831 0847 0855 0863 0871 0879 0992 09927 0993 0993 0995 0995 0995
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 060 05 110 05 110 05 120 05 120 06 150 06 170 06 200 06 220 06 220 06 220 06 230 06 240 06 250 06 250 06 300 07 310 07	12 051 12 051 12 052 13 052 14 054 15 052 15 055 15 056 16 057 16 061 16 061 16 061 16 061 16 061 16 061 16 061 17 062 18 064 18 064	3 05144 1 05222 3 0530 5 0546 5 0546 6 0586 6 0586 6 0586 6 0686 6 0686	0515 0523 0531 0539 0557 0555 0563 0577 0595 0603 0611 0619 0627 0635 0663 0667 0683 0691 0707 0715	0516 0524 0532 0540 0548 0556 0556 0564 0672 0620 0620 0620 0628 0636 0644 0652 0668 0676 0688 0700 0700	0517 0525 0533 0541 0549 0557 0557 0565 0573 0581 0629 0637 0665 0661 06629 0677 0685 0661 0683 0701	0518 0526 0534 0546 0550 0558 0566 0574 0598 0606 0614 0632 0630 0638 0664 0654 0664 0670 0670 0670 0670 0702	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0699 0607 0615 0623 0631 0639 0667 0679 0687 0699 0697		1410 1420 1440 1450 1460 1510 1510 1520 1530 1540 1650 1660 1670 1700 1710	0768 07766 07766 0784 0792 0800 0808 0816 0824 0848 0856 0864 0872 0880 0988 0994 0912 0928 0936 0944 0952 0952	0769 0777 0785 0793 0801 0817 0825 0849 0857 0865 0873 0881 0889 0913 0929 0937 0945 0953	0770 07786 07984 0802 0810 0818 0826 0834 0842 0850 0850 0850 0850 0850 0874 0942 0930 0938 0946 0922 0930 0938 0946 0954	0771 0779 0787 0795 0893 0811 0819 0827 0843 0851 0859 0867 0875 0915 0923 0931 0939 0947 0955	0772 0780 0788 0796 0804 0804 0820 0828 0836 0846 0852 0860 0868 0876 0984 0998 0948 0948 0948 0948 0948 0948	0773 0781 0789 0797 0805 0813 0829 0837 0845 0869 0877 09893 0901 0909 0917 0923 0941 0949 0957	0774 0782 0790 0798 0806 0806 0814 0822 0830 0846 0854 0862 0870 0918 0910 0918 0926 0934 0942 0950 0958	0775 07783 0791 0799 0815 0823 0831 0839 0847 0855 0863 0863 0887 0887 0895 0991 0912 0913 0913 0913 0913 0913 0913
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 000 05 020 05 020 05 030 05 050 05 050 05 060 05 110 05 110 05 110 06 140 06 150 06 150 06 170 06 220 06 220 06 240 06 240 06 240 06 250 06 240 06 250 06 270 06 300 07 310 07 320 07	12 051 12 051 12 052 18 052 18 052 14 054 15 058 16 053 16 057 17 058 18 058	3 05144 1 0522 3 0533 6 0546 6 0546 6 0546 6 0556 6 0566 6 0616 7 0618 8 0614 1 0602 9 0610 9	0515 0523 0531 0539 0555 0563 0571 0579 0687 0693 0667 0667 0667 0683 0699	0516 0524 0532 0540 0556 0556 0556 0572 0580 0692 0620 0620 0628 0636 0660 0660 0660 0668 0666 0716 0716 0716	0517 0525 0533 0541 0549 0557 0565 0573 0581 0682 0697 0663 0663 0663 0669 0677 0685 0699 0717 0725	0518 0526 0534 0546 0550 0550 0558 0566 0574 0582 0690 0612 0630 0638 0646 0654 0702 0718 0718 0716	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0693 0633 0631 0671 0679 0687 0687 0687 0687 0703		1410 1420 1443 1450 1460 1510 1520 1530 1540 1550 1540 1550 1610 1620 1630 1640 1650 1660 1670	0768 07766 0784 0792 0800 0808 0816 0824 0848 0856 0864 0872 09880 0904 0912 0920 0928 0938 0944 0952	0769 0777 0785 0793 0801 0809 0817 0825 0849 0857 0865 0889 0905 0913 0921 0929 0929 0929 0953	0770 07786 0786 0794 0802 0810 0818 0826 0850 0858 0866 0858 0866 0890 0906 0914 0922 0930 0946 0954	0771 0779 0787 0795 0803 0811 0819 0827 0835 0841 0859 08675 08675 0983 0907 0915 0923 0931 0993 0997 0955	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0892 0990 0998 0994 0932 0940 0924 0956	0773 0781 0781 0789 0797 0805 0813 0821 0829 0837 0845 08661 0869 0909 0917 0917 0925 0933 0901 0949 0957	0774 0782 0790 07982 0896 0814 0822 0830 0846 0846 0865 0878 0910 0918 0926 0934 0950 0958 0958	0775 0783 0791 0799 0807 0815 0823 0831 0853 0863 0871 0879 0887 0993 0993 0993 0993 0995 0995 0995
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 1100 05 1120 05 1120 05 130 06 150 06 150 06 200 06 220 06 220 06 220 06 230 06 250 06 250 06 310 07 310 07 310 07 320 07 320 07 330 07	12 051 12 051 12 052 13 052 14 054 15 052 15 055 15 056 16 057 16 057 17 057 17 057 18 057	3 05144 1 05222 3 0530 3 0554 3 0554 3 0554 1 0522 3 0554 1 0522 3 0574 1 0622 1 0622	0515 0523 0531 0539 0547 0555 0563 0577 0595 0603 0611 0619 0627 0675 0683 0691 0670 0707 0715 0723 0731	0516 0524 0532 0548 0556 0568 0564 0572 0580 0602 0620 0622 0620 0636 0636 0636 0676 0684 0692 0700 0700	0517 0525 0533 0541 0555 0573 0565 0573 0605 0613 0621 0629 0637 0645 0693 0693 0701 0709 0717 0725 0735	0518 0526 0534 0542 0550 0558 0568 0574 0582 0638 0646 0638 0646 0678 0678 0678 0702 0710 0718 0726 0734 0734	0519 0527 0535 0543 0551 0559 0567 0575 0683 0631 0639 0647 0645 0663 0679 0687 0699 0679 0679 0679 0703		1410 1420 1430 1443 1450 1510 1520 1550 1560 1660 1660 1660 1670 1700 1710 1720 1730 1740	0768 07766 0784 0792 0830 0816 0824 0848 0856 0864 0872 0880 0988 0991 0920 0928 0936 0944 0952	0769 0777 0785 0793 0801 0809 0817 0825 0833 0857 0887 0897 0913 0921 0945 0993 0969 0977	0770 07786 0786 0794 0802 0810 0818 0826 0850 0858 0850 0914 0922 0890 0914 0922 0970 0978 0956 0954 0956 0954 0956 0954 0958 0958 0958 0958 0958 0958 0958 0958	0771 0777 0787 0787 0787 0803 0811 0819 0827 0851 0853 0867 0875 0923 0931 0931 0931 0939 0947 0971 0979 0979 0979 0979	0772 0780 0788 0796 0804 0812 0820 0828 0844 0852 0860 0868 0876 0924 0992 0990 0994 0992 0940 0948 0956	0773 0781 0789 0797 0805 0813 0821 0829 0837 0865 0893 0901 0949 0917 0945 0941 0949 0957 0965	0774 0782 0790 07982 0806 0814 0822 0830 0838 0854 0854 0894 0910 0918 0926 0934 0950 0958	0775 07783 0791 0799 0815 0823 0831 0839 0847 0855 0863 0863 0991 0913 0913 0913 0913 0913 0913 091
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 050 05 100 05 110 05 120 05 130 06 150 06 150 06 200 06 220 06 220 06 220 06 220 06 220 06 220 06 230 06 240 06 270 070 070 070 070 070 070 070 070 070	12 0511 12 0512 13 052 14 054 15 052 15 055 15 056 16 057 16 057 17 057 18 068 18 0	3 05144 1 05222 3 0530 7 0538 3 0554 1 0562 3 0557 3 0557 3 0557 3 0557 3 0577 6 0588 5 0588 6 0588 6 0588 6 0588 6 0588 6 0628 6 0628 6 0638 6 0638 7 0658 8 0638 8 0638	0515 0523 0531 0539 0557 0555 0563 0571 0579 0627 0635 0641 0659 0667 0675 0683 0691 0707 0715 0723 0731 0739	0516 0524 0532 0540 0556 0556 0572 0580 0612 0620 0628 0636 0636 0642 0660 0668 0676 0700 0700 0700 0700 0716 0724 0732	0517 0525 0525 0533 0541 0565 0573 0589 0597 0605 0613 0621 0629 0637 0645 0669 0777 0707 0707 0717 0717 0717 0725 0733	0518 0526 0534 0542 0550 0550 0550 0558 0566 0574 0680 0630 0638 0646 0670 0686 0694 0710 0718 0726 0734	0519 0527 0535 0543 0551 0559 0567 0575 0683 0639 0607 0639 0647 0645 0663 0671 0679 0697 0707 0707 0707 0719		1410 1420 1443 1450 1510 1520 1530 1540 1550 1560 1570 1600 1610 1620 1630 1640 1670 1710 1720 1730 1740 1740 1740	0768 0776 0784 0792 0800 0816 0824 0832 0846 0848 0856 0864 0986 0912 0920 0920 0936 0944 0952	0769 0777 0785 0801 0809 0817 0841 0849 0857 0865 0873 0965 0913 0921 0929 0937 0945 0953 0961 0969 0997 0995	0770 07786 0786 0794 0802 0810 0810 0842 0850 0858 0868 0868 0868 0991 0920 0930 0954 0954 0965 0978 0978	0771 0779 0787 0795 0803 0811 0819 0827 0835 0851 0859 0867 0987 0995 0993 0991 0995 0995 0995 0997 0995	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876 0984 0990 0916 0924 0930 0948 0956 0964 0972 0980 0980 0980	0773 0781 0781 0789 0797 0805 0813 0821 0829 0837 0861 0867 0885 0901 0909 0917 0925 0933 0941 0949 0957	0774 0782 0790 0798 0806 0814 0822 0830 0836 0854 0862 0870 0910 0918 0926 0910 0958 0959 0958	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0879 0887 0895 0993 0991 09927 0993 0991 0995 0995 0995 0995 0995
10 10 1777 1023	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000 05 010 05 020 05 030 05 040 05 050 05 070 05 1100 05 1120 05 1120 05 130 06 150 06 150 06 200 06 220 06 220 06 220 06 230 06 250 06 250 06 310 07 310 07 310 07 320 07 320 07 330 07	12 051 12 052 13 052 14 054 15 053 16 053 16 053 17 055 17 055 17 055 17 055 17 055 18 056 18 056	3 05144 1 05222 3 0533 5 0546 5 0546 5 0546 5 0546 5 0546 5 0586 5 0586 5 0586 5 0586 5 0586 6 0586	0515 0523 0531 0539 0555 0563 0579 0587 0595 0603 0611 0619 0627 0667 0667 0667 0667 0707 0715 0723 0731 0731 0739	0516 0524 0532 0548 0556 0564 0572 0588 0596 0604 0612 0620 0628 0636 0644 0652 0668 0676 0684 0724 0770 0770 0770 0770 0770 0770	0517 0525 0533 0541 0549 0557 0565 0573 0581 0682 0697 0695 0697 0683 0661 0669 0677 0685 0697 0707 0709 0717 0725 0737 0741 0749	0518 0526 0534 0554 0550 0558 0566 0574 0590 0698 0606 0614 0622 0630 0670 0678 0710 0718 0726 0710 0718 0726 0734 0742 0759	0519 0527 0535 0543 0551 0559 0567 0575 0697 0607 0615 0623 0631 0671 0679 0687 0667 0703 0711 0719 0727 0735 0743 0759		1410 1420 1430 1440 1450 1550 1520 1530 1540 1550 1560 1560 1610 1620 1640 1670 1700 1710 1720 1730 1740 1740 1740 1740 1740 1740	0768 0776 0784 0792 0830 0824 0840 0848 0856 0864 0872 0994 0912 0920 0928 0936 0952 0960 0968 0976 0968	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0995 0913 0921 0929 0937 0929 0937 0953 0969 0973 0975	0770 0778 0786 0794 0786 0794 0802 0810 0826 0858 0858 0858 0874 08822 0930 0938 0906 0914 0922 0930 0938 0906 0954 0962 0970 0978 0986 0994 1002 1010 1010	0771 0777 0787 0787 0787 0803 0811 0819 0827 0843 0851 0867 0867 0891 0990 0993 0993 0993 0993 0995 0995	0772 0780 0788 0796 0804 0812 0820 0828 0844 0852 0860 0868 0876 0924 0992 0990 0994 0992 0940 0948 0956	0773 0781 0789 0797 0805 0813 0829 0837 0845 0853 0869 0877 0885 0993 0997 0993 0997 0987 0989 0997 0989	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0852 0862 0990 0991 0918 0926 0910 0918 0926 0934 0942 0958	0775 0783 0791 0799 0807 0815 0823 0831 0853 0863 0863 0863 0871 0879 0987 0991 0995 0995 0995 0995 0995

Octal-Decimal Integer Conversion Table (Cont)

1												,	,	4	5	6	7		
,	0	1	2			5	6			0	1	2	3	-					
					1028 1036					1280								2000 to	1024 to
					1044				2420	1296	1297	1298	1299	1 300	1301	1 302	1303	2777	1535
2030	1048	1049	1050	1051	1052	1053	1054	1055	2430	1304	1305	1306	1307	1308	1309	1310	1311	(Octal)	(Decimal)
					1060 1068				2440	1312	1313	1314	1315	1324	1325	1326	1327		
2060	1072	1073	1074	1075	1076	1077	1078	1079	2460	1328	1329	1330	1331	1332	1333	1334	1335	Octol	Decimal
2070	1080	1081	1082	1083	1084	1085	1086	1087	2470	1336	1337	1338	1339	1340	1341	1342	1343	10000	
2100	1088	1089	1090	1091	1092	1093	1094	1095	2500	1344	1345	1346	1347	1348	1349	1350	1351	20000	
2110	1096	1097	1098	1099	1100	1101	1102	1103		1352								30000 - 40000 -	
					1108 1116					1360 1368								50000	
					1124				2540	1376	1377	1378	1379	1380	1381	1382	1383	60000	
					1132				2550	1384 1392	1385	1386	1387	1388	1389	1390	1391	70000	- 280/2
					1140 1148				2570	1400	1401	1402	1403	1404	1405	1406	1407		
1									2500	1400	1400	1410	1411	1412	1413	1414	1415		
					1156 1164				2600 2610							1422			
2220	1168	1169	1170	1171	1172	1173	1174	1175		1424									
					1180 1188					1432									
					1196				2650	1448	1449	1450	1451	1452	1453	1454	1455		
					1204					1456 1464									
2270	1208	-1209	1210	1211	1212	1213	1219	1215											
					1220					1472									
					1228 1236					1488									
2330	1240	1241	1242	1243	1244	1245	1246	1247	2730	1496	1497	1498	1499	1500	1501	1502	1503		
					1252 1260					1504									
					1268					1520									
2370	1272	1273	1274	1275	1276	1277	1278	1279	2770	1528	1529	1530	1531	1532	1533	1534	1535		
					_				1										
	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7		
	1536	1537	1538	1539	1540	1541	1542	1543		1792	1793	1794	1795	1796	1797	1798	1799	3000	1536
3010	1536	1537 1545	1538 1546	1539 1547	1540 1548	1541 1549	1542 1550	1543 1551	341	0 1792 0 1800	1793 1801	1794 1802	1795 1803	1796 1804	1797 1805	1798 1806	1799 1807,	3000 to 3777	1536 ta 2047
3010 3020 3030	1536 1544 1552 1560	1537 1545 1553 1561	1538 1546 1554 1562	1539 1547 1555 1563	1540 1548 1556 1564	1541 1549 1557 1565	1542 1550 1558 1566	1543 1551 1559 1567	341 342 343	0 1792 0 1800 0 1808 0 1816	1793 1801 1809 1817	1794 1802 1810 1818	1795 1803 1811 1819	1796 1804 1812 1820	1797 1805 1813 1821	1798 1806 1814 1822	1799 1807, 1815 1823	to	to 2047
3010 3020 3030 3040	1536 1544 1552 1560 1568	1537 1545 1553 1561 1569	1538 1546 1554 1562	1539 1547 1555 1563 1571	1540 1548 1556 1564 1572	1541 1549 1557 1565 1573	1542 1550 1558 1566 1574	1543 1551 1559 1567 1575	341 342 343 344	0 1792 0 1800 0 1808 0 1816 0 1824	1793 1801 1809 1817 1825	1794 1802 1810 1818 1826	1795 1803 1811 1819 1827	1796 1804 1812 1820 1828	1797 1805 1813 1821 1829	1798 1806 1814 1822 1830	1799 1807, 1815 1823 1831	10 3777	to 2047
3010 3020 3030 3040 3050	1536 1544 1552 1560 1568	1537 1545 1553 1561 1569 1577	1538 1546 1554 1562 1570	1539 1547 1555 1563 1571	1540 1548 1556 1564 1572 1580	1541 1549 1557 1565 1573 1581	1542 1550 1558 1566 1574 1582	1543 1551 1559 1567 1575 1583	341 342 343 344 345	1792 1800 1808 0 1816 0 1824 0 1832	1793 1801 1809 1817 1825 1833 1841	1794 1802 1810 1818 1826 1834 1842	1795 1803 1811 1819 1827 1835 1843	1796 1804 1812 1820 1828 1836 1844	1797 1805 1813 1821 1829 1837 1845	1798 1806 1814 1822 1830 1838 1846	1799 1807, 1815 1823 1831 1839 1847	10 3777	to 2047
3010 3020 3030 3040 3050 3060	1536 1544 1552 1560 1568 1576	1537 1545 1553 1561 1569 1577 1585	1538 1546 1554 1562 1570 1578	1539 1547 1555 1563 1571 1579	1540 1548 1556 1564 1572	1541 1549 1557 1565 1573 1581 1589	1542 1550 1558 1566 1574 1582 1590	1543 1551 1559 1567 1575 1583 1591	341 342 343 344 345	1792 1800 1808 0 1816 0 1824 0 1832	1793 1801 1809 1817 1825 1833 1841	1794 1802 1810 1818 1826 1834 1842	1795 1803 1811 1819 1827 1835 1843	1796 1804 1812 1820 1828 1836 1844	1797 1805 1813 1821 1829 1837 1845	1798 1806 1814 1822 1830 1838	1799 1807, 1815 1823 1831 1839 1847	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3070	1536 1544 1552 1560 1568 1576 1584 1592	1537 1545 1553 1561 1569 1577 1585 1593	1538 1546 1554 1562 1570 1578 1586 1594	1539 1547 1555 1563 1571 1579 1587	1540 1548 1556 1564 1572 1580 1588 1596	1541 1549 1557 1565 1573 1581 1589 1597	1542 1550 1558 1566 1574 1582 1590 1598	1543 1551 1559 1567 1575 1583 1591 1599	341 342 343 344 345 346	0 1792 0 1800 0 1808 0 1816 0 1824 0 1832 0 1848	1793 1801 1809 1817 1825 1833 1841 1849	1794 1802 1810 1818 1826 1834 1842 1850	1795 1803 1811 1819 1827 1835 1843	1796 1804 1812 1820 1828 1836 1844 1852	1797 1805 1813 1821 J829 1837 1845	1798 1806 1814 1822 1830 1838 1846	1799 1807, 1815 1823 1831 1839 1847 1855	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3070	1536 1544 1552 1560 1568 1576 1584 1592	1537 1545 1553 1561 1569 1577 1585 1593	1538 1546 1554 1562 1570 1578 1586 1594	1539 1547 1555 1563 1571 1579 1587 1595	1540 1548 1556 1564 1572 1580 1588 1596	1541 1549 1557 1565 1573 1581 1589 1597	1542 1550 1558 1566 1574 1582 1590 1598	1543 1551 1559 1567 1575 1583 1591 1599	341 342 343 344 345 346 347 350 351	0 1792 0 1808 0 1816 0 1824 0 1832 0 1840 0 1848 0 1848	1793 1801 1809 1817 1825 1833 1841 1849	1794 1802 1810 1818 1826 1834 1842 1850	1795 1803 1811 1819 1827 1835 1843 1851	1796 1804 1812 1820 1828 1836 1844 1852	1797 1805 1813 1821 1829 1837 1845 1853	1798 1806 1814 1822 1830 1838 1846 1854	1799 1807, 1815 1823 1831 1839 1847 1855	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3070 3110 3120	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616	1537 1545 1553 1561 1569 1577 1585 1593	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610	1539 1547 1555 1563 1571 1579 1587 1595	1540 1548 1556 1564 1572 1580 1588 1596	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615	341 342 343 344 345 346 347 350 351 352	0 1792 0 1800 0 1808 0 1816 0 1824 0 1832 0 1848 0 1856	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876	1797 1805 1813 1821 1829 1837 1845 1853	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878	1799 1807, 1815 1823 1831 1839 1847 1855	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3110 3120 3130 3140	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633	1538 1546 1554 1562 1570 1578 1586 1594 1602 1618 1626 1634	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631	341 342 343 344 345 346 347 350 351 352 353 353	0 1792 0 1808 0 1816 0 1824 0 1832 0 1848 0 1856 0 1864 0 1872 0 1888	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3110 3120 3130 3140 3150	1536 1544 1552 1560 1568 1576 1584 1592 1600 1600 1616 1624 1632	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633	1538 1546 1554 1562 1570 1578 1586 1594 1602 1618 1626 1634 1642	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639	341 342 343 344 345 346 347 350 351 352 353 354 355	0 1792 0 1808 0 1816 0 1824 0 1832 0 1848 0 1856 0 1864 0 1872 0 1888 0 1888 0 1896	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3110 3120 3130 3140 3150 3160	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641	1538 1546 1554 1562 1570 1578 1586 1594 1602 1618 1628 1634 1642	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647	341 342 343 344 345 346 347 350 351 352 353 354 355	0 1792 0 1808 0 1816 0 1824 0 1832 0 1848 0 1856 0 1864 0 1872 0 1888	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1899	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894 1902	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903	10 3777	10 2047
3010 3020 3030 3040 3050 3070 3110 3120 3130 3140 3150 3170	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1642 1650	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1628 1636 1644 1652	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1663	1542 1550 1558 1566 1574 1582 1598 1606 1614 1622 1630 1638 1646 1634	1543 1551 1559 1567 1578 1583 1591 1607 1615 1623 1631 1639 1647 1655	341 342 343 344 345 346 347 350 351 352 353 354 355 357	0 1792 0 1800 0 1808 0 1816 0 1824 0 1832 0 1840 0 1856 0 1866 0 1888 0 1888 0 1896 0 1904 0 1912	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1997	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900 1908	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1909 1917	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894 1902 1918	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1993 1911	10 3777	10 2047
3010 3020 3030 3040 3050 3070 3110 3120 3130 3140 3150 3170	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 16163 1632 1640 1648 1656	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657	1538 1546 1554 1562 1570 1578 1586 1594 1602 1618 1626 1634 1642 1650 1658	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659	1540 1548 1556 1564 1572 1580 1588 1604 1612 1620 1628 1636 1636	1541 1549 1557 1563 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653 1661	1542 1550 1558 1568 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1654	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655	341 342 343 344 345 346 347 350 351 352 353 354 355 356 357	0 1792 0 1808 0 1808 0 1816 0 1824 0 1832 0 1848 0 1848 0 1864 0 1872 0 1880 0 1896 0 1904 0 1912	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898 1906 1914	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1899 1907 1915	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900 1908 1916	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909 1917	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1992 1910 1918	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1993 1911 1919	10 3777	10 2047
3010 3020 3030 3040 3050 3070 3110 3120 3130 3140 3150 3160 3170	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1632 1648 1656	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657	1538 1546 1554 1562 1570 1578 1586 1594 1602 1618 1628 1634 1634 1648 1658	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1625 1643 1651 1659	1540 1548 1556 1564 1572 1580 1588 1596 1612 1620 1628 1636 1644 1652 1660 1668	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1635 1661 1669 1677 1685	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1654 1662	1543 1551 1559 1567 1575 1583 1591 1697 1615 1623 1631 1639 1647 1655 1663	341 342 343 344 345 346 350 351 352 353 354 355 356 357	0 1792 0 1808 0 1816 0 1824 0 1832 0 1848 0 1848 0 1848 0 1864 0 1888 0 1888 0 1888 0 1920 0 1920 0 1920 0 1920	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1914	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1907 1915	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1990 1908 1916	1797 1805 1813 1821 1837 1845 1853 1861 1869 1877 1885 1893 1909 1917	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1991 1910 1918	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919	10 3777	10 2047
3010 3020 3030 3040 3050 3060 3070 3110 3120 3130 3140 3150 3160 3210 3210 3210 3210 3210 3210 3210 321	1536 1542 1552 1568 1576 1584 1576 1608 1608 1616 162 1648 1656 1664 1672 1688	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1657	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1642 1650 1658	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1651 1651 1667 1667 1667 1668	1540 1548 1556 1564 1572 1580 1598 1598 1692 1628 1636 1644 1652 1668 1678 1668 1678	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1661 1669	1542 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1634 1654 1656 1670	1543 1551 1559 1567 1575 1583 1591 1599 1607 1612 1631 1631 1639 1647 1653 1671 1671 1679	341 342 343 344 345 346 347 350 351 352 353 354 355 356 357 360 361 362 362	0 1792 0 1808 0 1816 0 1824 0 1848 0 1848 0 1864 0 1864 0 1886 0 1896 0 1994 0 1912 0 1920 0 1936 0 1936	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1921 1929 1937 1945	1794 1802 1818 1816 1826 1834 1842 1850 1858 1866 1874 1882 1890 1914	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1997 1997	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1990 1908 1916 1924 1932 1948	1797 1805 1813 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909 1917 1925 1933 1949	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1986 1991 1918 1926 1934 1942 1950	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1987 1993 1911 1919	10 3777	to 2047
3010 3020 3030 3040 3050 3060 3110 3120 3130 3140 3150 3170 3220 3230 3240 3250	1536 1544 1552 1560 1568 1576 1592 1600 1608 1616 1624 1632 1632 1640 1648 1656 1688 1688 1688 1688 1688 1688 168	1537 1545 1553 1561 1569 1577 1585 1601 1617 1625 1633 1641 1649 1657 1665 1673 1661 1681 1681 1682 1697 1705	1538 1546 1554 1554 1562 1570 1570 1588 1586 1618 1618 1618 1628 1632 1652 1652 1652 1652 1652 1652 1653 1654 1654 1654 1654 1654 1654 1654 1654	1539 1547 1555 1563 1571 1579 1587 1693 1691 1619 1627 1635 1643 1651 1665 1667 1668 1699 1707	1540 1548 1556 1564 1572 1580 1596 1604 1612 1620 1628 1636 1644 1652 1666 1668 1676 1684 1676 1684 1670 1700	1541 1549 1557 1565 1573 1581 1597 1605 1613 1621 1645 1653 1661 1669 1677 1685 1691 1701 1709	1542 1550 1558 1566 1574 1582 1590 1606 1614 1622 1630 1638 1646 1654 1662 1670 1678 1686 1694 1702 1710	1543 1551 1559 1567 1575 1583 1591 1615 1623 1631 1631 1637 1647 1679 1687 1697 1697	341 342 343 344 345 346 347 350 351 352 353 354 355 356 361 361 363 364	0 1792 1800 0 1816 0 1834 0 1832 0 1832 0 1840 0 1848 0 1864 0 1886 0 1886 0 1888 0 1896 0 1994 1912 0 1920 0 1936 0 1944 0 1950 0 1960 0 1960	1793 1801 1817 1825 1833 1841 1849 1857 1865 1873 1881 1897 1905 1913	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1914 1922 1930 1938 1946 1954	1795 1803 1811 1819 1827 1833 1851 1859 1867 1875 1899 1907 1915	1796 1804 1812 1820 1828 1836 1844 1852 1860 1884 1990 1916 1924 1932 1940 1948 1956	1797 1805 1813 1821 1821 1829 1837 1865 1869 1877 1885 1893 1909 1917	1798 1806 1814 1822 1830 1838 1846 1854 1870 1878 1898 19902 1910 1918 1926 1934 1942 1950	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1971 1993 1991 1993 1943 1951 1959 1967	10 3777	10 2047
3010 3020 3030 3040 3050 3060 3110 3110 3150 3150 3160 3210 3220 3230 3240 3250 3250 3260	1536 1544 1552 1560 1568 1576 1576 1608 1616 1616 162 162 162 162 163 164 1656	1537 1545 1553 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1657 1665 1673 1681 1681 1689 1697 1705 1713	1538 1546 1554 1562 1570 1586 1586 1586 1610 1618 1626 1638 1642 1655 1666 1674 1688 1698 1698 1698 1698	1539 1547 1555 1563 1571 1579 1603 1611 1619 1627 1659 1663 1651 1663 1661 1675 1675 1675 1683 1691 1691 1715	1540 1548 1556 1564 1570 1580 1580 1580 1604 1612 1620 1620 1620 1636 1644 1652 1660 1660 1660 1660 1660 1676 1676 1684 1692 1700	1541 1549 1557 1565 1573 1581 1587 1597 1605 1613 1621 1629 1637 1643 1661 1669 1677 1685 1693 1701 1709 1717	1542 1550 1558 1566 1574 1582 1590 1698 1606 1614 1622 1630 1638 1646 1644 1662 1670 1678 1686 1694 1702	1543 1551 1559 1567 1575 1583 1591 1697 1615 1631 1631 1647 1679 1687 1695 1703 1711 1719	341 342 343 344 345 346 350 351 352 353 354 355 356 361 362 363 364 365	0 1792 0 1800 0 1800 0 1800 0 1816 0 1824 0 1832 0 1848 0 1848	1793 1801 1817 1825 1833 1841 1849 1857 1865 1873 1881 1899 1913 1921 1929 1937 1945 1953 1969	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1892 1890 1914 1922 1930 1946 1952 1952	1795 1803 1811 1827 1835 1845 1859 1867 1875 1883 1891 1997 1915	1796 1804 1812 1828 1836 1844 1852 1860 1868 1990 1990 1994 1932 1932 1940 1948 1956 1964 1972	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1999 1917 1925 1933 1941 1949 1957 1965	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1910 1918 1921 1934 1950 1958 1958	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1995 1993 1994 1995 1993 1995 1997 1997	10 3777	10 2047
3010 3020 3030 3050 3050 3100 3110 3130 3140 3150 3210 3210 3220 3230 3240 3250 3260 3270	1536 1544 1552 1560 1568 1576 1576 1600 16168 16162 1632 1648 1656 1686 1704 1712 1720	1537 1548 1553 1561 1569 1577 1585 1593 1601 1625 1633 1641 1657 1665 1673 1705 1713 1772	1538 1546 1554 1562 1570 1578 1586 1694 1612 1613 1626 1634 1642 1658 1666 1674 1698 1706 1714 1772	1539 1547 1555 1563 1571 1579 1587 1691 1611 1619 1627 1635 1643 1651 1659 1707 1715 1772 1772 1772	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1646 1652 1660 1668 1676 1684 1692 1700 1708	1541 1549 1557 1565 1573 1681 1589 1693 1602 1637 1643 1653 1661 1669 1677 1685 1693 1709 1717 1725	1542 1550 1558 1566 1574 1692 1693 1606 1614 1622 1638 1646 1638 1646 1670 1710 1718	1543 1551 1559 1567 1575 1583 1591 1697 1615 1623 1631 1647 1655 1663 1671 1679 1687 1697 1711 1719	341 342 343 344 345 346 346 350 351 352 353 354 355 356 357 360 361 362 363 364 365 366 367	0 1792 0 1792 0 1800 0 1816 0 1816 0 1824 1848 0 1848 0 1848	1793 1801 1809 1817 1825 1833 1841 1849 1857 1905 1897 1905 1913 1921 1929 1937 1945 1969 1969	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1996 1994 1930 1938 1946 1954 1957 1978	1795 1803 1811 1819 1827 1835 1843 1851 1859 1967 1997 1997 1993 1947 1963 1971 1979	1796 1804 1812 1820 1828 1836 1844 1852 1860 1908 1916 1924 1932 1940 1948 1956 1964 1972 1980	1797 1805 1813 1821 1829 1837 1845 1869 1877 1893 1901 1917 1925 1933 1941 1949 1957 1965 1973 1981	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1910 1910 1918 1926 1934 1942 1950 1974 1982	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1993 1991 1919 1927 1935 1943 1951 1967 1975 1983	10 3777	10 2047
3010 3020 3040 3050 3050 3100 3110 3131 3131 3131 313	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1616 1624 1632 1648 1656 1664 1672 1688 1690 1712	1537 1545 1553 1561 1569 1577 1609 1617 1625 1633 1641 1649 1657 1665 1797 1713 1721	1538 1546 1554 1562 1570 1586 1610 1618 1626 1634 1650 1650 1650 1698 1704 1714 1712 1712	1539 1547 1555 1563 1571 1579 1603 1611 1619 1627 1635 1643 1651 1659 1669 1707 1715 1715 1723	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1628 1634 1652 1660 1668 1676 1684 1692 1700 1716 1716 1716 1717 1717 1717 1717	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1661 1677 1685 1693 1701 1709 1717 1725	1542 1550 1558 1566 1574 1582 1590 1606 1614 1622 1638 1646 1634 1662 1670 1772 1778	1543 1551 1559 1567 1573 1591 1695 1607 1615 1623 1639 1647 1655 1663 1671 1679 1687 1791 1719 1719 1719	341 342 343 344 345 346 350 351 352 353 354 355 356 361 362 363 364 365 366 367	0 1792 0 1792 0 1800 0 1816 0 1816 0 1816 0 1816 0 1816 1816 1816 1816 1816 1816 1816 1816 1816 1816 1816 1817 18	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1981 1992 1993 1992 1993 1994 1995 1969 1977	1794 1802 1810 1818 1826 1834 1842 1850 1858 1966 1914 1922 1930 1938 1946 1954 1957 1962	1795 1803 1811 1819 1827 1833 1851 1859 1907 1915 1923 1931 1939 1947 1955 1971 1979	1796 1804 1812 1820 1828 1836 1844 1852 1860 1900 1908 1916 1932 1932 1948 1956 1964 1972 1980	1797 1805 1813 1821 1829 1837 1845 1861 1869 1877 1885 1991 1909 1917 1925 1933 1941 1949 1957 1973 1981	1798 1806 1814 1822 1830 1854 1854 1862 1870 1910 1911 1926 1934 1950 1958 1958 1974 1982	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1903 1911 1919 1927 1943 1951 1951 1967 1967 1983	10 3777	10 2047
30100 30202 30303 30400 30500 31000 31100 31203 3140 31503 31603 3170 32100 3230 3240 3250 3250 3260 3270 3300 33100 33100 33100 321	1536 1544 1552 1560 1588 1576 1588 1576 1592 1600 1616 1624 1632 1630 1648 1656 1664 1666 1666 1666 1670 1688 1792 1792 1792 1792 1792 1792 1792 1792	1537 1545 1553 1561 1577 1585 1593 1601 1617 1625 1633 1649 1657 1665 1713 1721 1722 1723 1721 1729	1538 1546 1554 1562 1570 1578 1586 1602 1618 1626 1632 1632 1633 1636 1636 1636 1637 1638 1638 1638 1638 1638 1638 1638 1638	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1659 1667 1675 1675 1773 1739 1731 1739	1540 1548 1556 1564 1572 1580 1588 1596 1602 1628 1628 1644 1652 1700 1708 1716 1716 1724	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1663 1661 1669 1771 1717 1725	1542 1550 1558 1566 1574 1582 1590 1606 1614 1614 1622 1630 1638 1636 1634 1644 1702 1772 1772 1772 1774 1774 1774 1774 177	1543 1551 1559 1567 1575 1583 1591 1607 1615 1623 1631 1647 1655 1663 1671 1679 1687 1791 1719 1727	341 342 343 344 345 346 347 350 351 352 353 354 355 366 361 362 363 364 365 367	0 1792 0 1792 0 1800 0 1816 0 1816 0 1816 0 1824 1848 0 1836 0 1848 0 1836 0 1848 0 1848	1793 1801 1809 1817 1827 1827 1833 1841 1849 1857 1969 1913 1921 1929 1937 1945 1958 1977	1794 1810 1818 1810 1818 1826 1834 1845 1850 1858 1906 1914 1938 1946 1954 1954 1970 1978	1795 1803 1811 1819 1827 1835 1843 1851 1875 1875 1987 1997 1995 1997 1997 1997 1997	1796 1812 1820 1828 1836 1844 1852 1860 1908 1916 1924 1932 1940 1948 1956 1988 1996	1797 1805 1813 1821 1837 1845 1853 1861 1869 1997 1917 1925 1933 1941 1949 1957 1973 1981	1798 1806 1814 1822 1830 1838 1846 1854 1862 1910 1918 1926 1934 1942 1950 1948 1948 1949 1949 1949 1949 1949 1949	1799 1807, 1815 1823 1831 1847 1855 1867 1879 1887 1891 1991 1917 1927 1943 1951 1959 1967 1975 1983	10 3777	to 2047
30100 3020 30400 30505 30700 31100 3120 313100 32100 32100 32100 32200 3240 32500 32700 331100 331100 3200 32	1536 1544 1552 1560 1568 1576 1592 1600 1608 16164 1632 1632 1632 1632 1632 1632 1632 1632	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1633 1649 1657 1665 1673 1773 1772 1772 1772 1773 1774	1538 1546 1554 1562 1578 1586 1594 1610 1618 1624 1634 1658 1658 1668 1674 1698 1706 1738 1738 1738 1738 1738 1738 1738 1738	1539 1547 1555 1563 1563 1579 1587 1691 1611 1619 1627 1635 1659 1707 1707 1707 1717 1723	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1700 1708 1708 1719 1719 1724 1732 1740 1748	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1661 1669 1677 1701 1717 1725 1733 1741 1749 1757	1542 1550 1558 1566 1574 1582 1590 1606 1614 1622 1630 1638 1634 1662 1670 1670 1770 1771 1772 1773 1774 1774 1774 1775	1543 1551 1559 1567 1575 1583 1591 1693 1623 1631 1633 1631 1635 1663 1671 1677 1673 1773 1773 1743 1751	341 342 343 344 345 346 347 350 351 352 353 354 355 356 361 362 363 364 365 367 371 372	0 1792 0 1800 0 1816 0 1816 0 1816 0 1816 0 1816 0 1816 0 1816 0 182 1840 0 1840 0	1793 1801 1817 1829 1817 1823 1841 1849 1857 1865 1913 1921 1929 1937 1945 1953 1961 1977	1794 1802 1810 1818 1826 1850 1858 1866 1868 1906 1914 1922 1930 1938 1946 1954 1970 1978	1795 1803 1811 1819 1827 1835 1843 1851 1875 1875 1875 1997 1995 1993 1997 1997 1997 1998 2003	1796 1804 1812 1820 1828 1836 1844 1852 1860 1908 1916 1932 1940 1948 1956 1976 1980 1988 1996 2004	1797 1805 1813 1821 1829 1837 1845 1861 1869 1997 1997 1997 1998 1997 1997 2001	1798 1806 1814 1822 1830 1854 1854 1862 1870 1910 1911 1926 1934 1942 1950 1958 1974 1982	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1991 1992 1993 1991 1995 1995 1995 1995 1995 1995	10 3777	to 2047
30100 30202 30303 30400 30505 30700 31100 31203 31300 3140 3150 3150 3160 3220 3230 3240 3250 3260 3310 3320 3330 3330 3330 3330 3330 333	1536 1544 1552 1560 1588 1576 1588 1576 1592 1600 1616 1624 1638 1638 1638 1638 1704 1712 1728 1738 1738 1738 1738 1738 1738 1738 173	1537 1545 1553 1561 1569 1607 1609 1617 1625 1641 1649 1657 1705 1713 1721 1729 1727 1745 1745 1745 1745	1538 1546 1554 1562 1570 1578 1586 1602 1618 1618 1618 1634 1642 1658 1664 1698 1706 1714 1722 1738 1738 1748 1748 1758	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1659 1675 1683 1691 1707 1715 1723 1723 1731 1747 1755 1763	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1636 1636 1644 1652 1668 1676 1708 1708 1708 1708 1708 1708 1708 1708	1541 1549 1557 1565 1573 1581 1589 1597 1603 1621 1629 1627 1645 1653 1661 1709 1717 1709 1717 1725 1733 1741 1749 1757	1542 1550 1558 1566 1574 1582 1598 1604 1622 1630 1646 1644 1662 1670 1718 1786 1770 1710 1711 1726 1734 1750 1750	1543 1551 1559 1567 1575 1583 1591 1607 1623 1631 1647 1655 1663 1711 1719 1727 1735 1743 1751	341 342 343 344 345 346 347 350 351 352 353 354 355 361 362 363 364 365 367 371 372 373 373 373	0 1792 0 1792 0 1800 0 1816 0 1816 0 1816 0 1824 1848 0 1836 0 1836 0 1848 0 1836 0 1836 0 1836 0 1836 0 1848 0 1848	1793 1801 1809 1817 1827 1827 1833 1841 1849 1857 1969 1913 1921 1929 1937 1945 1953 1969 1977 1985 1993 1995 1993 1995 1995 1995 1995 199	1794 1810 1818 1816 1818 1826 1834 1845 1850 1858 1906 1914 1938 1946 1954 1970 1978 1986 1997 2002 2010 2018	1795 1811 1819 1827 1835 1843 1851 1859 1967 1995 1997 1997 1998 1997 1997 1997 1998 1997 1997	1796 1812 1820 1836 1844 1852 1860 1966 1998 1916 1948 1956 1940 1948 1956 1988 1996 2012 2012	1797 1805 1813 1821 1837 1845 1853 1861 1869 1997 1997 1949 1957 1949 1957 1949 1957 1949 1957 1968 1973 1981	1798 1806 1814 1822 1830 1838 1846 1854 1862 1910 1918 1926 1934 1942 1950 1998 1998 2014 2022 2030	1799 1807, 1815 1823 1831 1847 1855 1867 1877 1895 1991 1911 1919 1927 1943 1951 1951 1959 1967 1975 1983	10 3777	to 2047
30100 3020 30400 30500 30700 31100 3120 313100 31400 32100 32100 32200 3240 32500 32100 3200 32	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 162 162 163 164 164 167 168 170 172 173 174 173 174 174 175 175 176 176 176 176 176 176 176 176 176 176	1537 1545 1553 1561 1569 1577 1585 1593 1601 1617 1625 1633 1641 1649 1657 1761 1762 1773 1745 1753 1761 1769 1775	1538 1546 1554 1562 1578 1586 1594 1602 1616 1624 1634 1642 1650 1650 1650 1650 1650 1750 1730 1738 1746 1750 1750 1750 1750 1750 1750 1750 1750	1539 1547 1555 1563 1571 1579 1587 1691 1611 1619 1627 1635 1651 1659 1707 1707 1717 1739 1747 1755 1763	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1700 1708 1708 1719 1719 1719 1719 1719 1719 1719	1541 1549 1557 1565 1573 1581 1583 1597 1605 1653 1661 1669 1677 1685 1701 1717 1725 1733 1741 1749 1757 1765 1773 1781	1542 1550 1558 1566 1574 1582 1590 1606 1614 1622 1630 1646 1638 1646 1652 1710 1710 1710 1726 1734 1742 1753 1766 1774	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1647 1655 1703 1711 1727 1735 1743 1751 1775 1775 1775 1775	341 342 343 344 345 346 347 350 351 352 353 354 355 366 361 362 363 364 365 366 371 372 373 374	0 1792 0 1800 0 1816 0 1816 0 1816 0 1816 0 1832 0 1840 0 1848 0 1848	1793 1801 1817 1829 1817 1825 1833 1841 1849 1857 1905 1913 1921 1929 1937 1945 1953 1969 1977 1985 1993 2001 2002 2017 2023	1794 1802 1810 1818 1826 1850 1858 1866 1868 1906 1914 1922 1930 1938 1946 1954 1962 1970 2010 2018 2026	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1971 1995 1993 1994 1995 1995 1995 2003 2011 2019 2027	1796 1804 1812 1820 1828 1836 1844 1852 1860 1908 1916 1924 1932 1940 1948 1956 1972 1980 1988 1996 2004 2020 2020 2020 2020 2020	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1917 1925 1933 1941 1949 1957 1965 2005 2001 2002 2002 2003 2002 2003	1798 1806 1814 1822 1830 1854 1854 1862 1870 1918 1926 1934 1942 1950 1998 1998 1998 2006 2038	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1991 1992 1993 1991 1995 1998 1999 1999 2007 2015 2023 2031	10 3777	to 2047

Octal-Decimal Integer Conversion Table (Cont)

										_	-		•						
		0	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
	1000		2040	2050	2051	2052	2062	2054	2055	1	4400	2204	2205	2206	0207	2200	2200	2210	4411
4000 2048	4000				2051 2059							2304							
10 10 4777 2559					2067							2320							
4777 2559 (Octal) (Decimal)					2075							2328							
(00.0.) ((00.0					2083							2336							
Out-I Desired					2091						1	2344							
Octal Decimal					2099						1460				2355				
10000 - 4096	4070	2104	2105	2106	2107	2108	2109	2110	2111	i .	4470	2360	2361	2362	2363	2364	2365	2366	2367
20000 - 8192 30000 - 12288	4100	2112	2113	2114	2115	2116	2117	2118	2119	l	4500	2368	2369	2370	2371	2372	2373	2374	2375
40000 - 16384					2123						4510				2379				
50000 - 20480					2131							2384							
60000 - 24576					2139							2392							
70000 - 28672					2147							2400							
					2155							2408							
					2163							2416							
	1110	2100	2109	2170	2171	2112	21/3	21/4	2173		4310	2424	2423	2420	2421	2428	2429	2430	2431
	4200	2176	2177	2178	2179	2180	2181	2182	2183	ł	4600	2432	2433	2434	2435	2436	2437	2438	2439
					2187							2440							
	4220	2192	2193	2194	2195	2196	2197	2198	2199		4620	2448	2449	2450	2451	2452	2453	2454	2455
					2203							2456							
					2211							2464							
					2219							2472							
					2227							2480							
	4270	2232	2233	2234	2235	2236	2231	2230	2235	ĺ	4010	2488	2489	2490	2491	2492	2493	2494	2495
	4300	2240	2241	2242	2243	2244	2245	2246	2247		4700	2496	2497	2498	2499	2500	2501	2502	2503
	4310	2248	2249	2250	2251	2252	2253	2254	2255	1		2504							
	4320	2256	2257	2258	2259	2260	2261	2262	2263	1		2512							
					2267							2520							
					2275						4740	2528	2529	2530	2531	2532	2533	2534	2535
					2283						4750	2536	2537	2538	2539	2540	2541	2542	2543
					2291						4760	2544	2545	2546	2547	2548	2549	2550	2551
	4370	2290	2291	2296	2299	2300	2301	2302	2303	J	4770	2552	2003	2554	2555	2556	2557	2558	2559
	ſ	0	1	2	3	4	5	6	7	i i		<u> </u>	1	2	3	4	5	6	7
		0	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
5000 2560		2560	2561	2562	2563	2564	2565	2566	2567		5400	0 2816							
5000 2560 to to	5010	2560 2568	2561 2569	2562 2570	2563 2571	2564 2572	2565 2573	2566 2574	2567 2575		5410	2816 2824	2817 2825	2818 2826	2819 2827	2820 2828	2821 2829	2822 2830	2823 2831
	5010 5020	2560 2568 2576	2561 2569 2577	2562 2570 2578	2563 2571 2579	2564 2572 2580	2565 2573 2581	2566 2574 2582	2567 2575 2583		5410 5420	2816 2824 2832	2817 2825 2833	2818 2826 2834	2819 2827 2835	2820 2828 2836	2821 2829 2837	2822 2830 2838	2823 2831 2830
to to	5010 5020 5030	2560 2568 2576 2584	2561 2569 2577 2585	2562 2570 2578 2586	2563 2571 2579 2587	2564 2572 2580 2588	2565 2573 2581 2589	2566 2574 2582 2590	2567 2575 2583 2591	!	5410 5420 5430	2816 2824 2832 2840	2817 2825 2833 2841	2818 2826 2834 2842	2819 2827 2835 2843	2820 2828 2836 2844	2821 2829 2837 2845	2822 2830 2838 2846	2823 2831 2839 2847
10 10 5777 3071	5010 5020 5030 5040	2560 2568 2576 2584 2592	2561 2569 2577 2585 2593	2562 2570 2578 2586 2594	2563 2571 2579 2587 2595	2564 2572 2580 2588 2596	2565 2573 2581 2589 2597	2566 2574 2582 2590 2598	2567 2575 2583 2591 2599		5410 5420 5430 5440.	2816 2824 2832 2840 2848	2817 2825 2833 2841 2849	2818 2826 2834 2842 2850	2819 2827 2835 2843 2851	2820 2828 2836 2844 2852	2821 2829 2837 2845 2853	2822 2830 2838 2846 2854	2823 2831 2830 2847 2855
10 10 5777 3071	5010 5020 5030 5040 5050	2560 2568 2576 2584 2592 2600	2561 2569 2577 2585 2593 2601	2562 2570 2578 2586 2594 2602	2563 2571 2579 2587 2595 2603	2564 2572 2580 2588 2596 2604	2565 2573 2581 2589 2597 2605	2566 2574 2582 2590 2598 2606	2567 2575 2583 2591 2599 2607		5410 5420 5430 5440 5450	2816 2824 2832 2840 2848 2856	2817 2825 2833 2841 2849 2857	2818 2826 2834 2842 2850 2858	2819 2827 2835 2843 2851 2859	2820 2828 2836 2844 2852 2860	2821 2829 2837 2845 2853 2861	2822 2830 2838 2846 2854 2862	2823 2831 2839 2847 2855 2863
10 10 5777 3071	5010 5020 5030 5040 5050 5060	2560 2568 2576 2584 2592 2600 2608	2561 2569 2577 2585 2593 2601 2609	2562 2570 2578 2586 2594 2602 2610	2563 2571 2579 2587 2587 2595 2603 2611	2564 2572 2580 2588 2596 2604 2612	2565 2573 2581 2589 2589 2597 2605 2613	2566 2574 2582 2590 2598 2606 2614	2567 2575 2583 2591 2599 2607 2615		5410 5420 5430 5440 5450 5460	2816 2824 2832 2840 2848 2856 2864	2817 2825 2833 2841 2849 2857 2865	2818 2826 2834 2842 2850 2858 2866	2819 2827 2835 2843 2851 2859 2867	2820 2828 2836 2844 2852 2860 2868	2821 2829 2837 2845 2853 2861 2869	2822 2830 2838 2846 2854 2862 2870	2823 2831 2838 2847 2855 2863 2871
10 10 5777 3071	5010 5020 5030 5040 5050 5060	2560 2568 2576 2584 2592 2600 2608	2561 2569 2577 2585 2593 2601 2609	2562 2570 2578 2586 2594 2602 2610	2563 2571 2579 2587 2595 2603	2564 2572 2580 2588 2596 2604 2612	2565 2573 2581 2589 2589 2597 2605 2613	2566 2574 2582 2590 2598 2606 2614	2567 2575 2583 2591 2599 2607 2615		5410 5420 5430 5440 5450 5460	2816 2824 2832 2840 2848 2856	2817 2825 2833 2841 2849 2857 2865	2818 2826 2834 2842 2850 2858 2866	2819 2827 2835 2843 2851 2859 2867	2820 2828 2836 2844 2852 2860 2868	2821 2829 2837 2845 2853 2861 2869	2822 2830 2838 2846 2854 2862 2870	2823 2831 2838 2847 2855 2863 2871
to 5777 3071 (Octol) (Decimal)	5010 5020 5030 5040 5050 5060 5070	2560 2568 2576 2584 2592 2600 2608 2616	2561 2569 2577 2585 2593 2601 2609 2617	2562 2570 2578 2586 2594 2602 2610 2618	2563 2571 2579 2587 2595 2603 2611 2619	2564 2572 2580 2588 2596 2604 2612 2620	2565 2573 2581 2589 2597 2605 2613 2621	2566 2574 2582 2590 2598 2606 2614 2622	2567 2575 2583 2591 2599 2607 2615 2623		5410 5420 5430 5440 5450 5460 5470	2816 2824 2832 2840 2848 2856 2864 2872	2817 2825 2833 2841 2849 2857 2865 2873	2818 2826 2834 2842 2850 2858 2866 2874	2819 2827 2835 2843 2851 2859 2867 2875	2820 2828 2836 2844 2852 2860 2868 2876	2821 2829 2837 2845 2853 2861 2869 2877	2822 2830 2838 2846 2854 2862 2870 2878	2823 2831 2839 2847 2855 2863 2871 2879
to	5010 5020 5030 5040 5050 5060 5070 5100 5110	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639		5410 5420 5430 5440 5450 5460 5470 5500 5510	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889	2818 2826 2834 2842 2850 2858 2866 2874 2882 2889	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891	2820 2828 2836 2844 2852 2860 2868 2876 2884 2892	2821 2829 2837 2845 2853 2861 2869 2877	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894	2823 2831 2839 2847 2855 2863 2871 2879 2887 2887
to	5010 5020 5030 5040 5050 5060 5070 5110 5120	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647		5410 5420 5430 5440 5450 5460 5470 5500 5510 5520	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897	2818 2826 2834 2842 2850 2858 2866 2874 2882 2889 2898	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899	2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902	2823 2831 2839 2847 2855 2863 2871 2879 2887 2887 2895 2903
to	5010 5020 5030 5040 5050 5060 5070 5100 5110 5120 5130	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655		5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907	2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910	2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663		5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530 5540	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915	2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910 2918	2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5150	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658 2666	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660 2668	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669	2566 2574 2582 2590 2598 2606 2614 2622 2630 2646 2654 2662 2670	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671		5410 5420 5430 5440. 5450 5460 5470 5510 5520 5530 5540 5550	2816 2824 2832 2840 2848 2856 2864 2872 2888 2896 2904 2912 2920	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914 2922	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915 2923	2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916 2924	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910 2918 2926	2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919 2927
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5150 5160	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2672	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658 2666 2674	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660 2668 2676	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669 2677	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678	2567 2575 2583 2591 2599 2607 2615 2623 2631 2631 2647 2655 2663 2671 2679		5410 5420 5430 5440. 5450 5460 5470 5510 5520 5530 5540 5550 5560	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914 2922 2930	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931	2820 2828 2836 2844 2852 2860 2868 2876 2884 2890 2908 2916 2924 2932	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925 2933	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910 2918 2926 2934	2823 2831 2839 2847 2855 2863 2671 2879 2887 2903 2903 2901 2919 2927 2935
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5150 5160 5170	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2656 2672 2680	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2657 2673 2681	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658 2656 2674 2682	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2675 2683	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660 2668 2676 2684	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669 2677 2685	2566 2574 2582 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678 2686	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2667 2679 2687		5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530 5540 5550 5560 5570	2816 2824 2832 2840 2848 2856 2872 2880 2888 2896 2904 2912 2920 2928 2936	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2929 2937	2818 2826 2834 2842 2850 2858 2874 2882 2890 2898 2906 2914 2930 2938	2819 2827 2835 2843 2851 2859 2875 2883 2891 2899 2907 2915 2915 2939	2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916 2932 2940	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2923 2933 2941	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910 2918 2934 2942	2823 2831 2839 2847 2855 2863 2879 2887 2895 2903 2911 2919 2927 2935 2943
10 to 3071 (Octol) (Decimol)	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5150 5160 5170	2560 2568 2576 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2650 2658 2666 2674 2682	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2651 2659 2667 2675 2683	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660 2668 2676 2684	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669 2677 2685	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678 2686	2567 2575 2583 2591 2599 2607 2615 2623 2631 2631 2639 2647 2655 2663 2671 2679 2687		5410 5420 5430 5440 5450 5460 5510 5510 5520 5530 5540 5550 5550 5550 5560 5560	2816 2824 2832 2840 2848 2856 2864 2872 2888 2896 2904 2912 2920 2928 2936	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929 2937	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914 2922 2930 2938 2946	2819 2827 2835 2843 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931 2939 2947	2820 2828 2836 2844 2852 2860 2868 2876 2884 2890 2908 2916 2924 2932 2940 2948	2821 2829 2837 2845 2853 2861 2869 2877 2885 29901 2909 2917 2925 2933 2941 2949	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910 2918 2926 2934 2942	2823 2831 2839 2847 2853 2871 2879 2887 2895 29903 2911 2919 2927 2935 2943 2951
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5150 5160 5170	2560 2568 2576 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680 2688 2696	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2689 2697	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2650 2658 2666 2674 2682 2690 2698	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2651 2659 2667 2675 2683 2691 2699	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660 2668 2676 2684	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669 2677 2685 2693 2701	2566 2574 2582 2599 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678 2686	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687		5410 5420 5430 5440 5450 5460 5510 5510 5520 5530 5540 5550 5550 5560 5570	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2912 2920 2928 2936 2944 2952	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929 2937	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914 2922 2930 2938 2946 2954	2819 2827 2835 2843 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931 2939 2947 2955	2820 2828 2836 2844 2852 2860 2868 2876 2884 2890 2908 2916 2924 2932 2940 2948 2956	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925 2933 2941 2949 2957	2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2994 2910 2918 2926 2934 2942 2950 2958	2823 2831 2839 2847 2853 2871 2879 2887 2895 2991 2911 2919 2927 2935 2943 2951 2959
to	5010 5020 5030 5040 5050 5060 5070 5100 5120 5130 5140 5150 5160 5170	2560 2568 2576 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680 2688 2688 2688	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2689 2697 2705	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658 2666 2674 2682 2690 2698 2706	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2675 2683	2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2668 2676 2684 2692 2700 2708	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2669 2677 2685 2693 2701 2709	2566 2574 2582 2598 2606 2614 2622 2630 2638 2646 2654 2664 2667 2678 2686 2694 2710	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2665 2667 2679 2687		5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530 5540 5550 5560 5570	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920 2928 2936 2944 2952 2960	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929 2937 2945 2945 2961	2818 2826 2834 2850 2858 2866 2874 2882 2890 2898 2906 2914 2912 2930 2938 2946 2954 2962	2819 2827 2835 2851 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931 2939 2947 2955 2963	2820 2828 2836 2836 2852 2860 2868 2876 2892 2900 2908 2916 2924 2932 2940 2948 2946 2948	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925 2933 2941 2949 2957 2965	2822 2830 2838 2854 2854 2862 2870 2878 2886 2894 2902 2910 2918 2926 2934 2942 2950 2958 2966	2823 2831 2839 2847 2855 2863 2871 2879 2887 2991 2911 2919 2927 2935 2943 2951 2959 2957
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5150 5150 5170	2560 2568 2576 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680 2688 2688 2704 2712	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2667 2665 2673 2681 2689 2705 2713	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658 2666 2674 2682 2690 2698 2714	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2675 2683 2691 2699 2715	2564 2572 2588 2596 2504 2612 2620 2628 2636 2644 2652 2668 2676 2688 2670 2708 2718	2565 2573 2581 2581 2597 2605 2613 2621 2629 2637 2645 2653 2669 2677 2685 2693 2709 2717	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678 2678 2678 2679 2710 2718	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687 2695 2711 2719		5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530 5540 5550 5560 5570	2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 29904 2912 2920 2928 2936 2944 2952 2968	2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2991 2913 2921 2929 2937 2945 2953 2961 2969	2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2993 2993 2914 2922 2930 2938 2946 2954 2970	2819 2827 2835 2843 2851 2859 2867 2875 2883 2899 2907 2915 2923 2931 2939 2947 2955 2971	2820 2828 2836 2836 2852 2860 2868 2876 2990 2916 2923 2934 2934 2954 2954 2954 2954 2954 2954	2821 2829 2837 2845 2853 2861 2869 2877 2885 2991 2909 2917 2925 2933 2941 2949 2957 2957 2973	2822 2830 2838 2854 2862 2870 2878 2992 2910 2918 2924 2924 2950 2950 2958 2954 2950 2954	2823 2831 2839 2839 2855 2863 2271 2879 2887 2903 2911 2919 2927 2935 2943 2951 2959 2975
to	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5160 5170 5220 5220 5230 5240	2560 2568 2576 2576 2584 2592 2600 2608 2616 2624 2640 2648 2672 2680 2688 2696 2696 2712 2720	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2649 2657 2665 2673 2681 2689 2773 2713 2721	2562 2570 25786 2594 2602 2618 2626 2634 2642 2650 2658 2666 2674 2682 2690 2714 2722	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2678 2683 2691 2690 2715 2723	2564 2572 2580 2588 2596 2602 2620 2628 2636 2644 2652 2666 2668 2676 2684 2692 2700 2710 2716 2724	2565 2573 2581 2581 2589 2597 2605 2613 2621 2629 2637 2645 2645 2669 2677 2685 2693 2700 2707 2717 2725	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2644 2662 2670 2678 2686 2694 2710 2718 2726	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687 2695 2703 2711 2719 2727		5410 5420 5430 5440 5450 5460 5470 5510 5520 5530 5540 5560 5560 5610 5620 5630 5640	2816 2824 2832 2840 2852 2864 2872 2880 2896 2904 2912 2920 2928 2936 2944 2952 2968 2968 2976	2817 2825 2833 2841 2849 2857 2865 2873 2881 2899 2997 2905 2913 2921 2929 2937 2945 2969 2969 2977	2818 2826 2834 2842 2850 2858 2866 2874 2890 2914 2922 2930 2938 2946 2954 2964 2970 2978	2819 2827 2835 2843 2851 2859 2875 2875 2891 29907 2915 2923 2931 2939 2947 2955 2965 2971 2979	2820 2828 2836 2844 2852 2860 2876 2884 2990 2916 2924 2932 2940 2948 2956 2972 2980	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2917 2925 2933 2941 2949 2957 2967 2967 2967 2968	2822 2830 2836 2846 2854 2862 2870 2878 2894 2902 2918 2925 2934 2942 2950 2958 2968 2968 2974 2982	2823 2831 2839 2847 2855 2863 2271 2879 2903 2903 2911 2919 2927 2935 2943 2951 2959 2959 2959 2959 2959 2959 2959
to	5010 5020 5030 5040 5050 5060 5110 5110 5120 5130 5140 5150 5160 5170	2560 2568 2576 2584 2592 2600 2608 2616 2644 2632 2640 2648 2664 2672 2688 2696 2704 2712 2712 2728	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2689 2713 2713 2712 2722	2562 2570 2578 2586 2594 2610 2618 2626 2634 2642 2650 2658 2666 2674 2682 2690 2698 2714 2722 2722 2730	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2667 2683 2691 2699 2707 2715 2723 2723 2723	2564 2572 2588 2596 2602 2612 2620 2636 2644 2652 2660 2668 2676 2684 2706 2708 2718 2718 2724 2732	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2669 2677 2685 2701 2709 2717 2725 2723	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2652 2670 2678 2678 2670 2718 2710 2718 2726 2734	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2679 2687 2679 2687 2703 2711 2719 2727 2727 2735		5410 5420 5430 5440 5440 5450 5510 5510 5520 5530 5540 5550 5560 5570 5620 5620 5640 5650	2816 2824 2832 2840 2848 2856 2864 2872 2888 29904 2912 2920 2928 2936 2944 2952 2960 2968 2960 2968 2976 2984	2817 2825 2825 2833 2841 2849 2857 2865 2873 2881 2992 2913 2929 2937 2945 2953 2961 2969 2977 2985	2818 2826 2834 2842 2850 2858 2866 2874 2892 2993 2914 2922 2930 2938 2946 2954 2978 2978 2986	2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2993 2923 2923 2931 2939 2947 2955 2963 2979 2979 2987	2820 2828 2836 2844 2852 2860 2868 2876 29908 2916 2924 2932 2940 2948 2956 2964 2972 2974 2972 2988	2821 2829 2837 2845 2853 2861 2869 2877 2885 2990 2917 2925 2933 2941 2949 2957 2965 2973 2981 2989	2822 2830 2838 2846 2854 2862 2870 2918 2918 2914 2925 2934 2942 2950 2958 2966 2974 2982 2999	2823 2831 2837 2847 2855 2863 2879 2879 2903 2911 2919 2927 2935 2943 2951 2959 2967 2975 2973 2973 2973 2973 2973 2973 2973 2973
to 5777 3071 (Octal) (Decimal)	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5140 5160 5170 5220 5220 5230 5240	2560 2568 2576 2584 2592 2600 2616 2632 2644 2632 2664 2652 2664 2672 2688 2704 2712 2720 2720 2728 2736	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2689 2705 2713 2721 2729 2729 2737	2562 2578 2586 2594 2610 2618 2626 2634 2650 2658 2666 2674 2682 2690 2714 2722 2730 2738	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2653 2657 2667 2667 2683 2691 2707 2715 2723 2731 2731	2564 2572 2580 2588 2596 2602 2612 2620 2636 2636 2644 2652 2668 2668 2668 2724 2732 2732 2732	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2669 2677 2685 2701 2709 2717 2725 2733 2741	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678 2678 2702 2710 2718 2726 2734 2734	2567 2575 2583 2591 2599 2607 2615 2639 2631 2639 2671 2679 2687 2703 2711 2719 2727 2735 2743		5410 5420 5440 5440 5450 5460 5510 5520 5530 5550 5550 5560 5570 5600 5610 5620 5630 5630 5630 5630 5630 5630 5630 563	2816 2824 2832 2840 2852 2864 2872 2880 2896 2904 2912 2920 2928 2936 2944 2952 2968 2968 2976	2817 2825 2833 2841 2849 2857 2865 2873 2881 2989 2913 2921 2929 2937 2945 2953 2961 2969 2977 2978 2978 2978 2978 2978	2818 2826 2834 2842 2850 2858 2866 2874 2890 2914 2922 2930 2938 2946 2970 2978 2978 2978	2819 2827 2835 2843 2851 2859 2867 2875 2893 2997 2915 2923 2931 2939 2947 2975 2971 2979 2971 2979	2820 2828 2836 2844 2852 2860 2968 2970 2908 2916 2924 2932 2940 2948 2956 2964 2972 2980 2996	2821 2829 2837 2845 2853 2861 2869 2877 2985 2990 2917 2925 2933 2941 2949 2957 2965 2973 2989 2989 2997	2822 2830 2836 2846 2854 2862 2870 2878 2990 2918 2928 2934 2934 2950 2958 2966 2974 2982 2996	2823 2831 2837 2847 2855 2863 2879 2887 2993 2911 2919 2927 2935 2943 2951 2959 2967 2975 2983 2991 2999
to 5777 3071 (Octal) (Decimal)	5010 5020 5030 5040 5050 5070 5100 5110 5120 5130 5140 5220 5220 5230 5230 5240 5250 5270	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2648 2656 2664 2667 2672 2688 2704 2712 2728 2736 2744	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2663 2673 2681 2689 2713 2713 2729 2737 2745	2562 2570 2578 2586 2594 2612 2610 2618 2626 2634 2650 2658 2666 2674 2682 2714 2730 2738 2746	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2675 2675 2683 2707 2715 2731 2739 2747	2564 2572 2580 2588 2596 2602 2620 2628 2636 2644 2652 2660 2700 2708 2716 2716 2732 2740 2748	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2665 2667 2677 2685 2701 2709 2717 2717 2717 2717 2717 2717 2717 271	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2710 2718 2710 2718 2734 2750	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687 2695 2703 2711 2719 2727 2735 2743 2751		5410 5420 5430 5450 5470 5510 5520 5530 5540 5550 5550 5550 5550 560 5610 5620 5630 5630 5630 5630 5640 5650 5650 5650	2816 2816 2824 2832 2840 2848 2856 2864 2872 2888 2994 2912 2920 2928 2936 2944 2952 2960 2968 2966 2968 2969 2969 2969 2969 2969	2817 2825 2825 2833 2841 2849 2857 2865 2975 2995 2913 2921 2929 2937 2945 2953 2961 2969 2969 2995 2995 2995 2995 2995 2995	2818 2826 2834 2842 2850 2858 2866 2874 2890 2914 2922 2930 2938 2946 2954 2954 2954 2959 3002	2819 2827 2835 2843 2851 2867 2875 2883 2891 2899 2907 2915 2923 2931 2939 2947 2955 2963 2979 2987 2997 2997 2997	2820 2838 2836 2844 2852 2860 2868 2876 2990 2916 2924 2932 2940 2948 2956 2972 2949 2972 2988 3004	2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2925 2933 2941 2949 2957 2965 2973 2989 2997 3005	2822 2830 2838 2846 2854 2862 2870 2910 2918 2928 2934 2934 2950 2958 2966 2974 2999 2998 3006	2823 2831 2839 2847 2853 2871 2863 2971 2919 2927 2935 2943 2951 2959 2967 2975 2973 2993 2991 2993 2993 2993 2993
to to 3071 (Octal) (Decimal)	5010 5020 5030 5040 5050 5060 5070 5100 5110 5120 5130 5140 5150 5220 5230 5220 5230 5240 5240 5240 5240 5240 5240 5240 524	2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2648 2656 2664 2672 2672 2672 2672 2774 2712 2728 2736 2744	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2713 2721 2729 2737 2745 2753	2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2642 2650 2658 2666 2674 2682 2706 2714 2722 2730 2738 2746	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 27675 2723 2731 2739 2747 2755	2564 2572 2580 2588 2596 2602 2628 2636 2644 2652 26660 2678 2676 2774 2770 2778 2774 2774 27748	2565 2573 2581 2581 2589 2597 2605 2613 2621 2629 2637 2645 2663 2677 2685 2701 2709 2717 2725 2733 2741 2749	2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2718 2726 2710 2718 2726 2734 2750 2758	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687 2703 2711 2719 2727 2735 2743 2751		5410 5420 5430 5440 5450 5500 5510 5520 5520 5530 5540 5560 5570 5630 5640 5640 5640 5650 5660 5670 5670	2816 2816 2824 2832 2840 2848 2856 2864 2872 2880 2992 2912 2920 2928 2936 2956 2966 2968 2974 2952 2968 2973 3000	2817 2825 2825 2833 2841 2849 2857 2865 2975 2995 29913 2921 2929 2937 2945 2969 2977 2969 2973 3001	2818 2826 2834 2842 2850 2858 2866 2874 2892 2990 2914 2922 2930 2938 2946 2954 2954 2954 3002	2819 2827 2835 2843 2851 2859 2867 2875 2893 2907 2915 2923 2931 2939 2947 2975 2975 2978 2979 3003	2820 2828 2836 2844 2852 2860 2868 2876 2990 2916 2924 2932 2940 2948 2956 2956 2964 2972 2980 3004	2821 2829 2837 2845 2853 2869 2877 2885 2893 2901 2925 2933 2941 2949 2957 2985 2973 2981 2989 2997 3005	2822 2830 2838 2846 2854 2852 2870 2878 2990 2918 2925 2934 2942 2958 2958 2958 2958 2958 2958 2958 3006	2823 2831 2839 2847 2853 2271 2863 2271 2879 2993 2991 2919 2927 2935 2943 2959 2959 2959 2959 2959 2993 3007
to 5777 3071 (Octal) (Decimal)	5010 5020 5030 5040 5050 5050 5060 5070 5130 5130 5140 5150 5170 5210 5210 5220 5220 5220 5220 5230 5240 5270	2560 2568 2576 2584 2692 2600 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680 2704 2712 2720 2728 2736 2744	2561 2569 2577 2585 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2692 2713 2729 2713 2721 2729 2737 2745	2562 2570 2578 2586 2502 2610 2618 26264 2634 2650 2658 2668 2668 2674 2682 2706 2714 2722 2730 2738 2746	2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2651 2667 2667 2667 2667 2683 2691 2699 2707 2715 2723 2731 2739 2747	2564 2572 2580 2588 2593 2694 2612 2620 2628 2636 2636 2668 2676 2688 2700 2708 2716 2724 2732 2742 2732 2748 2756	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2709 2717 2725 2733 2741 2749 2757 2765	2566 2574 2582 2590 2598 2614 2622 2630 2638 2646 2654 2662 2670 2678 2686 2734 2710 2734 2726 2734 2750	2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2667 2679 2687 2703 2711 2719 2727 2735 2743 2751 2759 2767		5410 5420 5430 5440 5450 5570 5510 5520 5530 5550 5560 5570 5600 5610 5620 5630 5640 5650 5650 5650 5670 5770	2816 2816 2824 2832 2840 2848 2856 2864 2912 29904 2912 2920 2928 2936 2944 2952 2968 2976 2968 2976 2988 3000 3008	2817 2825 2833 2841 2849 2857 2865 2873 2881 2899 2913 2929 2937 2945 2953 2969 2977 2985 2969 2977 2985 3001	2818 2826 2834 2842 2850 2858 2866 2874 2892 2993 2914 2992 2930 2938 2946 2954 2962 2970 2978 2988 3002	2819 2827 2835 2843 2859 2867 2875 2899 2907 2915 2923 2931 2931 2939 2947 2955 2963 2971 2979 2987 3003	2820 2828 2836 2844 2852 2860 2868 2876 2990 2908 2916 2924 2932 2940 2948 2956 2962 2962 2972 2980 2980 2980 3004	2821 2829 2837 2845 2853 2851 2869 2877 2895 2991 2909 2917 2925 2933 2941 2949 2957 2981 2989 2981 2989 3005	2822 2830 2838 2846 2854 2862 2870 2910 2918 2912 2912 2913 2914 2914 2915 2915 2916 2918 2918 2918 2918 2918 2918 2918 2918	2823 2831 2839 2847 2858 2863 2271 2879 2991 2917 2927 2935 2943 2951 2959 2959 2967 2983 2991 2993 2993 2993 2993 2993 2993 299
to 5777 3071 (Octol) (Decimal)	5010 5030 5040 5050 5060 5070 5120 5130 5130 5140 5150 5220 5230 5240 5250 5270 5300 5310 5310 5320	2560 2568 25784 2592 2600 2608 2616 2624 2632 2640 2648 2672 2680 2774 2712 2728 2736 2746 2712 2728 2736	2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2773 2681 2705 2713 2713 2737 2745 2753 2753 2761 2769	2562 2570 2578 2586 2586 2602 2610 2618 2626 2634 2658 2666 2674 2682 2706 2712 2723 2738 2746 2754 2754 2754 2754	2563 2571 2579 2587 2695 2603 2611 2619 2627 2635 2643 2659 2667 2675 2683 2691 2707 2715 2723 2731 2739 2747 2755 2763	2564 2572 2580 2588 2596 2602 2620 2628 2634 2652 2660 2708 2716 2716 2716 2740 2740 2740 2740 2740 2740 2740 2740	2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2709 2717 2749 2717 2741 2749 2757 2757	2566 2574 2582 2590 2614 2622 2638 2646 2652 2638 2646 2662 2670 2718 2724 2734 2742 2750 2758 2758 2774	2567 2575 2583 2591 2699 2607 2615 2623 2639 2647 2655 2663 2671 2679 2687 2695 2703 2711 2719 2727 2735 2743 2751 2759 2759		5410 5420 5430 5450 5470 5510 5520 5530 5540 5550 5560 5570 5620 5630 5640 5650 5630 5640 5650 5670 5700 5710 5710 5710	2816 2824 2832 2840 2848 2856 2864 2872 2880 2904 2912 2920 2928 2928 2936 2944 2952 2960 2968 2968 2976 2984 2992 3000 3008 3016 3024	2817 2825 2825 2833 2841 2849 2857 2865 2873 2891 2991 2992 2937 2929 2937 2945 2969 2969 2977 2985 2993 3000 3009 3007 3007 3007 3007 3007 3	2818 2826 2834 2842 2858 2866 2874 2890 2898 2906 2938 2938 2944 2922 2930 2938 2945 2970 2978 2978 3002	2819 2827 2835 2843 2859 2867 2875 2889 2907 2923 2931 2939 2947 2945 2963 2971 2979 2987 2997 2997 3003	2820 2828 2836 2844 2852 2860 2868 2970 2990 2916 2924 2932 2940 2972 2932 2940 3004 3012 3012 3023 3023	2821 2829 2837 2845 2861 2869 2877 2885 29901 2909 2917 2925 2933 2941 2949 2957 2965 2973 3005 3001 3001 3002 3002	2822 2830 2838 2846 2854 2862 2870 2918 2928 2934 2942 2950 2958 2966 2974 2974 2999 3006 3014 3022 3030	2823 2831 2839 2845 2855 2863 2871 2879 2991 2927 2935 2943 2951 2959 2959 2959 2967 2975 2993 3007
to 5777 3071 (Octal) (Decimal)	5010 5020 5030 5040 5050 5050 5060 5070 5130 5130 5140 5150 5170 5210 5210 5220 5220 5220 5220 5230 5240 5270	2560 2568 2576 2592 2600 2608 2616 2624 2632 2640 2648 2664 2672 2680 2704 2712 2720 2720 2736 2744 27.2 2768 2776	2561 2569 2577 2585 2601 2609 2617 2625 2633 2641 2649 2667 2673 2681 2689 2705 2713 2721 2745 2753 2761 2753 2761 2769 2777	2562 2570 2578 2586 2602 2610 2618 26264 2634 2642 2650 2658 2668 2674 2682 2706 2714 2722 2738 2746 2754 2754 2754 2778	2563 2571 2579 2587 2603 2611 2619 2627 2635 2643 2651 2659 2667 2675 2707 2715 2723 2771 2723 2747 2755 2763	2564 2572 2580 2588 2604 2612 2620 2626 2636 2636 2668 2676 2724 2700 2718 2716 2714 2714 2714 2714 2714 2716 2716	2565 2573 2581 2587 2697 2605 2613 2621 2629 2637 2645 2653 2661 2669 2709 2717 2725 2709 2717 2749 2757 2765	2566 2574 2582 2590 2614 2622 2630 2638 2646 2654 2662 2670 2678 2678 2710 2718 2726 2750 2750 2758	2567 2583 2591 2699 2607 2615 2623 2631 2639 2667 2679 2687 2695 2703 2711 2719 2727 2727 2743 2751 2759 2767 2775 2775 2775 2783		5410 5420 5430 5440 5450 5560 5570 5550 5550 5550 5560 5570 5610 5610 5620 5630 5640 5660 5670 5710 5710 5710 5710	2816 2816 2824 2832 2840 2856 2864 2872 2880 2992 2912 2920 2928 2936 2956 2968 2976 2968 2973 3000 3008 3016 3024 3032	2817 2825 2833 2841 2857 2865 2873 2881 2897 2905 2913 2929 2937 2945 2953 2961 2969 2977 2969 2977 2973 3001 3009 3017 3009 3017 3023 3023 3033	2818 2826 2834 2842 2858 2866 2874 2890 28908 2914 2952 2930 2938 2946 2952 2970 2978 2978 2978 2978 2979 3010 3018 3016 3016 3016 3016	2819 2819 2827 2835 2843 2859 2867 2875 2883 2997 2915 2923 2931 2939 2947 2955 2963 2971 2979 2979 2979 3003	2820 2828 2836 2844 2852 2860 2868 2876 2908 2914 2932 2940 2956 2964 2972 2980 2964 2973 2980 3004	2821 2829 2837 2845 2863 2863 2877 2885 2991 2909 2917 2909 2917 2949 2957 2965 2973 2981 2997 3005	2822 2830 2838 2846 2846 2862 2870 2918 29912 2912 2914 2950 2958 2954 2959 2959 3006 3014 3022 3030 3030 3038	2823 2831 2839 2847 2853 2871 2879 2903 2911 2919 2927 2935 2943 2951 2959 2967 2975 2983 2999 3007 3015 3023 3031 3031 3039
to 5777 3071 (Octal) (Decimal)	5010 5020 5030 5040 5050 5060 5070 5110 5120 5130 5130 5150 5170 5200 5220 5230 5240 5250 5250 5270 5310 5310 5310 5310 5310 5310 5310 531	2560 2568 2578 2578 2600 2608 2616 2624 2632 2640 2648 2656 2664 2704 2712 2720 2728 2734 2744 2712 2774 2774 2774	2561 2569 2577 2585 2693 2601 2609 2617 2625 2633 2641 2649 2657 2665 2713 2705 2713 2729 2737 2745 2753 2761 2762 2763	2562 2570 2578 2586 2586 2602 2618 2626 2634 2642 2658 2666 26714 2722 2730 2738 2746 2776 2776 2776 2776 2778	2563 2571 2579 2587 2687 2603 2611 2619 2627 2643 2651 2667 2675 2683 2683 2683 2691 2707 2715 2723 2731 2739 2747 2755 2763 2771 2779 27763	2564 2572 2580 2588 2604 2612 2620 2628 2644 2652 2668 2676 2678 2716 2719 2719 2719 2719 2719 2719 2719 2719	2565 2573 2581 2589 2605 2613 2621 2629 2637 2645 2653 2669 2677 2685 2793 2717 2715 2715 2715 2715 2715 2715 2715	2566 2574 2582 2590 2696 2614 2622 2630 2646 2654 2670 2678 2678 2670 2718 2710 2718 2710 2712 2710 2712 2716 2714 2712 2750 2718	2567 2575 2583 2591 2607 2615 2623 2631 2631 2671 2679 2687 2695 2687 2695 2793 2711 2719 2727 2735 2743 2751 2752 2753 2753 2753 2753 2753 2753 2753		5410 5420 5430 5440 5450 5560 5510 5520 5530 5540 5550 5560 5570 5660 5670 5720 5720 5720 5720 5720 5730 5740	2816 2824 2832 2840 2848 2856 2864 2872 2880 2904 2912 2920 2928 2928 2936 2944 2952 2960 2968 2968 2976 2984 2992 3000 3008 3016 3024	2817 2825 2833 2841 2857 2865 2873 2881 2997 2905 2913 2921 2929 2937 2945 2953 2961 2969 2977 2985 3001 3009 3017 3025 3033 3041	2818 2826 2834 2842 2850 2858 2866 2874 2890 2990 2990 2930 2938 2946 2952 2970 2970 2970 2930 3010 3018 3026 3034 3034	2819 2827 2835 2843 2859 2867 2875 2872 2939 2937 2939 2947 2955 2963 2979 2979 2987 2979 2987 2979 2987 3003 3011 3019 3027 3035 3043	2820 2838 2844 2852 2860 2868 2876 2998 2998 2932 2940 2942 2932 2940 2948 2972 2980 2988 2996 3004 3012 3020 3028 3036 3036 3044	2821 2829 2837 2845 2853 2861 2869 2877 2985 2917 2925 2933 2941 2949 2957 2967 2973 2989 2997 3005 3013 3021 3023 3037 3045	2822 2830 2836 2846 2862 2870 2878 2990 2910 2926 2934 2992 2942 2950 2974 2998 2999 3030 3014 3032 3038 3038 3046	2823 2831 2839 2845 2855 2863 2871 2879 2903 2911 2935 2943 2951 2959 2967 2975 2999 3007 3015 3023 3031 3039 3007
to 5777 3071 (Octal) (Decimal)	5010 5030 5040 5050 5050 5050 5050 5050 5100 51100 5120 512	2560 2568 2576 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2712 2720 2720 2720 2720 2736 2744 27.2 2768 2768 2776 2776 2782 2782 2782 278	2561 2569 2577 2585 2691 2601 2609 2617 2625 2633 2641 2649 2667 2673 2681 2705 2713 2721 2737 2745 2753 2761 2769 2777 2785 2785	2562 2570 2578 2586 2602 2610 2618 26264 2634 2642 2650 26686 2674 2682 2690 2714 2722 2738 2746 2754 2754 2768 2778 2778 2778	2563 2571 2577 2587 2603 2611 2619 2627 2635 2643 2651 2667 2675 2683 2691 2707 2715 2723 2747 2755 2763 2771 2779 2787 2779 2787 2779 2787 2787 2787	2564 2572 2580 2588 2604 2612 2620 2628 2636 2636 2668 2676 2688 2716 2724 2732 2740 2748 2756 2768 2778 2778 2778 2778 2778 2778 277	2565 2573 2581 2587 2587 2697 2605 2613 2621 2629 2637 2645 2653 2661 2669 2777 2785 2799 2717 2725 2741 2749 2757 2768 2773 2781 2789 2773 2781 2789 2789	2566 2574 2582 2590 2614 2622 2630 2638 2646 2654 26672 2670 2678 2710 2718 2726 2750 2750 2758 2762 2774 2774 2775 2778 2778 2778 2778 2778 2778 2778	2567 2583 2591 2699 2607 2615 2623 2631 2639 2667 2663 2667 2679 2687 2711 2719 2727 2719 2727 2743 2751 2759 2767 2775 2783 2791 2775 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2793 2793 2793 2793 2793 2793 2793		5410 5420 5440 5440 5450 55460 5550 5550 5550 55	2816 2816 2824 2832 2848 2856 2864 2872 2888 2896 2910 2912 2920 2928 2936 2968 2976 2968 2976 3008 3016 3013 3024 3032 3040 3035	2817 2817 2825 2833 2841 2857 2865 2873 2881 2897 2905 2913 2929 2937 2945 2953 3001 3009 3017 3009 3013 3009 3013 3025 3033 3041 3057	2818 2826 2834 2842 2858 2866 2874 2890 2890 2914 2930 2938 2946 2952 2970 2978 2978 2978 3002 3010 3018 3026 3034 3042 3058	2819 2827 2835 2843 2843 2859 2867 2875 2883 2997 2915 2923 2931 2939 2947 2972 2973 2973 2973 3003 3011 3019 3027 3035 3043 3059	2820 2848 2848 2852 2860 2868 2876 29908 2916 2992 2994 2932 2940 2958 2964 2972 2980 2964 2973 2980 3012 3020 3012 3020 3044 3036 3044 3060	2821 2829 2837 2845 2863 2867 2877 2885 2990 2917 2909 2917 2933 2941 2949 2957 3005 3013 3021 3029 3037 3045 3061	2822 2830 2838 2846 2846 2870 2878 2886 29912 2912 2912 2914 2914 2914 2914 291	2823 2831 2839 2847 2853 2871 2879 2903 2911 2919 2927 2935 2943 2951 2959 2967 2975 2983 2999 3007 3015 3023 3031 3031 3039 3047 3063
to 5777 3071 (Octol) (Decimal)	5010 5030 5040 5050 5060 5070 5120 5130 5140 5150 5220 5230 5240 5250 5270 5300 5330 5330 5330 5330	2560 2568 2576 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2712 2720 2720 2720 2720 2736 2744 27.2 2768 2768 2776 2776 2782 2782 2782 278	2561 2569 2577 2585 2691 2601 2609 2617 2625 2633 2641 2649 2667 2673 2681 2705 2713 2721 2737 2745 2753 2761 2769 2777 2785 2785	2562 2570 2578 2586 2602 2610 2618 26264 2634 2642 2650 26686 2674 2682 2690 2714 2722 2738 2746 2754 2754 2768 2778 2778 2778	2563 2571 2577 2587 2603 2611 2619 2627 2635 2643 2651 2667 2675 2683 2691 2707 2715 2723 2747 2755 2763 2771 2779 2787 2779 2787 2779 2787 2787 2787	2564 2572 2580 2588 2604 2612 2620 2628 2636 2636 2668 2676 2688 2716 2724 2732 2740 2748 2756 2768 2778 2778 2778 2778 2778 2778 277	2565 2573 2581 2587 2587 2697 2605 2613 2621 2629 2637 2645 2653 2661 2669 2777 2785 2799 2717 2725 2741 2749 2757 2768 2773 2781 2789 2773 2781 2789 2789	2566 2574 2582 2590 2614 2622 2630 2638 2646 2654 26672 2670 2678 2710 2718 2726 2750 2750 2758 2762 2774 2774 2775 2778 2778 2778 2778 2778 2778 2778	2567 2583 2591 2699 2607 2615 2623 2631 2639 2667 2663 2667 2679 2687 2711 2719 2727 2719 2727 2743 2751 2759 2767 2775 2783 2791 2775 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2783 2791 2792 2793 2793 2793 2793 2793 2793 2793		5410 5420 5440 5440 5450 55460 5550 5550 5550 55	2816 2824 2832 2840 2848 2856 2864 2872 2880 2904 2912 2920 2928 2936 2944 2992 2960 2960 2960 2964 2993 3008 3008 3016 3024 3032 3048	2817 2817 2825 2833 2841 2857 2865 2873 2881 2897 2905 2913 2929 2937 2945 2953 3001 3009 3017 3009 3013 3009 3013 3025 3033 3041 3057	2818 2826 2834 2842 2858 2866 2874 2890 2890 2914 2930 2938 2946 2952 2970 2978 2978 2978 3002 3010 3018 3026 3034 3042 3058	2819 2827 2835 2843 2843 2859 2867 2875 2883 2997 2915 2923 2931 2939 2947 2972 2973 2973 2973 3003 3011 3019 3027 3035 3043 3059	2820 2848 2848 2852 2860 2868 2876 29908 2916 2992 2994 2932 2940 2958 2964 2972 2980 2964 2973 2980 3012 3020 3012 3020 3044 3036 3044 3060	2821 2829 2837 2845 2863 2867 2877 2885 2990 2917 2909 2917 2933 2941 2949 2957 3005 3013 3021 3029 3037 3045 3061	2822 2830 2838 2846 2846 2870 2878 2886 29912 2912 2912 2914 2914 2914 2914 291	2823 2831 2839 2847 2853 2871 2879 2903 2911 2919 2927 2935 2943 2951 2959 2967 2975 2983 2999 3007 3015 3023 3031 3031 3039 3047 3063

Octal-Decimal Integer Conversion Table (Cont)

									١										
	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7		
<u></u>						***	2050	2000	640	3328	2220	2220	3331	2222	3333	3334	2225	4000	3072
6000					3076 3084					3336								6000 10	10
6020					3092				642	3344	3345	3346	3347	3348	3349	3350	3351	6777	3583
6030	3096	3097	3098	3099	3100	3101	3102	3103	643	3352								(Octal)	(Decimal)
					3108				644	3360 3368	3361	3362	3363	3364	3365	3374	3375		
6060					3116 3124					3376								Octob	Decimal
					3132				647	3384	3385	3386	3387	3388	3389	3390	3391		- 4096
								.				2004	2225	222		2200	2200		- 8192
6100					3140 3148					3392									- 12288
					3156					3408								40000	
6130	3160	3161	3162	3163	3164	3165	3166	3167	653	3416								60000	- 204 8 0 - 24576
					3172					3424									- 28672
					3180 3188					3432									
					3196					3448									
1																			
					3204					3456 3464									
					3212 3220					3472									
6230	3224	3225	3226	3227	3228	3229	3230	3231	6630	3480	3481	3482	3483	3484	3485	3486	3487		
6240	3232	3238	3234	3235	3236	3237	3238	3239		3488									
					3244					3496									
					3252 3260					3512									
••••	3230	3231	0230	0233	0200		••••												
6300	3264	3265	3266	3267	3268	3269	3270	3271		3520									
					3276					3528 3536									
					3284 3292					3544									
6340	3296	3297	3298	3299	3300	3301	3302	3303	6740	3552	3553	3554	3555	3556	3557	3558	3559		
6350	3304	3305	3306	3307	3308	3309	3310	3311		3560									
					3316 3324					3568 3576									
6370	3320	3321	3322	3343	3324	3323	3320	3321	[0110	33.0	3311	00.0	00.0	0000					
_																			
ſ	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7		
									740									7000	1 3584
7000	3584	3585	3586	3587	3588	3589	3590	3591	7414	3840	3841 3849	3842 3850	3843 3851	3844 3852	3845 3853	3846 3854	3847 3855	7000 to	3584
7010	3584 3592	3585 3593 3601	3586 3594 3602	3587 3595 3603	3588 3596 3604	3589 3597 3605	3590 3598 3606	3591 3599 3607	7416	3840 3848 3856	3841 3849 3857	3842 3850 3858	3843 3851 3859	3844 3852 3860	3845 3853 3861	3846 3854 3862	3847 3855 3863	10 7777	10 4095
7010 7020	3584 3592 3600	3585 3593 3601 3609	3586 3594 3602 3610	3587 3595 3603 3611	3588 3596 3604 3612	3589 3597 3605 3613	3590 3598 3606 3614	3591 3599 3607 3615	7416 7426 7436	3840 3848 3856 3864	3841 3849 3857 3865	3842 3850 3858 3866	3843 3851 3859 3867	3844 3852 3860 3868	3845 3853 3861 3869	3846 3854 3862 3870	3847 3855 3863 3871	10 7777	10 4095
7010 7020 7030	3584 3592 3600 3608	3585 3593 3601 3609	3586 3594 3602 3610 3618	3587 3595 3603 3611 3619	3588 3596 3604 3612 3620	3589 3597 3605 3613 3621	3590 3598 3606 3614 3622	3591 3599 3607 3615 3623	7416 7426 7436 7446	3840 3848 3856 3864 3872	3841 3849 3857 3865 3873	3842 3850 3858 3866 3874	3843 3851 3859 3867 3875	3844 3852 3860 3868 3876	3845 3853 3861 3869 3877	3846 3854 3862 3870 3878	3847 3855 3863 3871 3879	10 7777	10 4095
7010 7020 7030 7040 7050	3584 3592 3600 3608 3616 3624	3585 3593 3601 3609 3617 3625 3633	3586 3594 3602 3610 3618 3626 3634	3587 3595 3603 3611 3619 3627 3635	3588 3596 3604 3612 3620 3628 3636	3589 3597 3605 3613 3621 3629 3637	3590 3598 3606 3614 3622 3630 3638	3591 3599 3607 3615 3623 3631 3639	7416 7426 7436 7446 7456	3840 3848 3856 3864 3872 3880 3888	3841 3849 3857 3865 3873 3881 3889	3842 3850 3858 3866 3874 3882 3890	3843 3851 3859 3867 3875 3883 3891	3844 3852 3860 3868 3876 3884 3892	3845 3853 3861 3869 3877 3885 3893	3846 3854 3862 3870 3878 3886 3894	3847 3855 3863 3871 3879 3887 3887	10 7777	10
7010 7020 7030 7040 7050	3584 3592 3600 3608 3616 3624	3585 3593 3601 3609 3617 3625 3633	3586 3594 3602 3610 3618 3626 3634	3587 3595 3603 3611 3619 3627 3635	3588 3596 3604 3612 3620 3628 3636	3589 3597 3605 3613 3621 3629 3637	3590 3598 3606 3614 3622 3630 3638	3591 3599 3607 3615 3623 3631 3639	7416 7426 7436 7446 7456	3840 3848 3856 3864 3872 3880	3841 3849 3857 3865 3873 3881 3889	3842 3850 3858 3866 3874 3882 3890	3843 3851 3859 3867 3875 3883 3891	3844 3852 3860 3868 3876 3884 3892	3845 3853 3861 3869 3877 3885 3893	3846 3854 3862 3870 3878 3886 3894	3847 3855 3863 3871 3879 3887 3887	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070	3584 3592 3600 3608 3616 3624 3632 3640	3585 3593 3601 3609 3617 3625 3633 3641	3586 3594 3602 3610 3618 3626 3634 3642	3587 3595 3603 3611 3619 3627 3635 3643	3588 3596 3604 3612 3620 3628 3636 3644	3589 3597 3605 3613 3621 3629 3637 3645	3590 3598 3606 3614 3622 3630 3638 3646	3591 3599 3607 3615 3623 3631 3639 3647	7416 7426 7436 7446 7456 7476	3840 3848 3856 3864 3872 3880 3888 3896	3841 3849 3857 3865 3873 3881 3889 3897	3842 3850 3858 3866 3874 3882 3890 3898	3843 3851 3859 3867 3875 3883 3891 3899	3844 3852 3860 3868 3876 3884 3892 3900	3845 3853 3861 3869 3877 3885 3893 3901	3846 3854 3862 3870 3878 3886 3894 3902	3847 3855 3863 3871 3879 3887 3895 3903	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070	3584 3592 3600 3608 3616 3624 3632 3640	3585 3593 3601 3609 3617 3625 3633 3641	3586 3594 3602 3610 3618 3626 3634 3642	3587 3595 3603 3611 3619 3627 3635 3643	3588 3596 3604 3612 3620 3628 3636 3644	3589 3597 3605 3613 3621 3629 3637 3645	3590 3598 3606 3614 3622 3630 3638 3646	3591 3599 3607 3615 3623 3631 3639 3647	7416 7426 7436 7446 7456 7476 7500	3840 3848 3856 3864 3872 3880 3888	3841 3849 3857 3865 3873 3881 3889 3897	3842 3850 3858 3866 3874 3882 3890 3898	3843 3851 3859 3867 3875 3883 3891 3899	3844 3852 3860 3868 3876 3884 3892 3900	3845 3853 3861 3869 3877 3885 3893 3901	3846 3854 3862 3870 3878 3886 3894 3902	3847 3855 3863 3871 3879 3887 3895 3903	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669	3590 3598 3606 3614 3622 3630 3638 3646 3654 3652 3670	3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671	7416 7426 7437 7446 7456 7476 7500 7510 7526	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3658 3674	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3676	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677	3590 3598 3606 3614 3622 3630 3638 3646 3654 3652 3670 3678	3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679	7416 7426 7436 7446 7456 7476 7500 7516 7526 7536	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120 7130	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3676 3684	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677 3685	3590 3598 3606 3614 3622 3630 3638 3646 3654 3652 3670 3678 3686	3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679 3687	7416 7426 7436 7446 7456 7476 7500 7516 7526 7536 7546	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928 3936	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3942	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120 7130 7140	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3688	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 36673 3681	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690	3587 3595 3603 3611 3619 3627 3635 3643 3651 3657 3667 3667 3683 3691	3588 3596 3604 3612 3620 3628 3636 3644 3652 3668 3676 3684 3692	3589 3597 3605 3613 3621 3629 3637 3645 3653 3663 3669 3677 3685 3693	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3670 3678 3686 3694	3591 3599 3607 3615 3623 3631 3639 3647 3655 3665 3671 3679 3687 3695	7416 7427 7436 7446 7456 7466 7476 7506 7516 7526 7536 7546 7556	3840 3848 3856 3864 3872 3880 3886 3886 3896 3904 3912 3920 3928 3936 3936 3936	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3945 3953	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938 3946 3954	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955	3844 3852 3860 3868 3876 3884 3892 3900 3908 3918 3924 3932 3940 3948 3956	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3942 3950 3958	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943 3951 3959	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7110 7110 7120 7130 7150 7160	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3696	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3665 3673 3689 3697	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3666 3682 3690 3698	3587 3595 3603 3611 3619 3627 3635 3643 3651 3651 3657 3675 3683 3691 3699	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3676 3684	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677 3685 3693 3701	3590 3598 3606 3614 3622 3630 3638 3646 3654 3670 3678 3686 3694 3702	3591 3599 3607 3615 3623 3631 3639 3647 3655 3671 3679 3687 3695 3703	7416 7427 7436 7446 7456 7466 7476 7506 7516 7526 7536 7546 7556	3840 3848 3856 3864 3872 3880 3888 3904 3912 3920 3928 3936	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3945 3953	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938 3946 3954	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955	3844 3852 3860 3868 3876 3884 3892 3900 3908 3918 3924 3932 3940 3948 3956	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3942 3950 3958	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943 3951 3959	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120 7130 7140 7150 7160 7170	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3696 3704	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697 3705	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690 3698 3706	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683 3691 3699 3707	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3678 3684 3692 3700 3708	3589 3597 3605 3613 3621 3623 3645 3653 3661 3669 3677 3685 3693 3701 3709	3590 3598 3606 3614 3622 3630 3638 3646 3654 3652 3670 3678 3686 3696 3702 3710	3591 3599 3607 3615 3623 3631 3631 3647 3655 3663 3671 3679 3687 3687 3693 3711	7416 7426 7436 7446 7456 7466 7516 7526 7536 7536 7536 7536	3840 3848 3856 3864 3872 3880 3886 3904 3912 3920 3928 3936 3944 3952 3960	3841 3849 3857 3865 3873 3881 38897 3905 3913 3921 3929 3937 3945 3953 3961	3842 3850 3858 3866 3874 3882 3898 3906 3914 3922 3930 3938 3944 3954 3962	3843 3851 3859 3867 3875 3883 3899 3907 3915 3923 3931 3939 3947 3955 3963	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3946 3956 3964	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3957 3965	3846 3854 3862 3870 3878 3886 3896 3918 3926 3918 3926 3934 3942 3958 3958	3847 3855 3863 3871 3879 3887 3993 3913 3919 3927 3935 3943 3959 3967	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120 7130 7140 7150 7170	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3696 3704	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3705	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3674 3682 3690 3698 3706	3587 3595 3603 3611 3619 3627 3635 3643 3651 3667 3675 3683 3691 3699 3707	3588 3596 3604 3612 3622 3628 3636 3644 3652 3660 3668 3678 3684 3692 3700 3708	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677 3685 3693 3701 3709	3590 3598 3606 3614 3622 3630 3638 3646 3654 3652 3670 3678 3686 3694 3702 3710	3591 3599 3607 3613 3623 3631 3639 3647 3655 3663 3671 3679 3687 3695 3703 3711	7410 7421 7431 7441 7451 7461 7501 7521 7531 7541 7551 7561 7571	3840 3848 3856 3866 3872 3880 3888 3904 3912 3920 3928 3920 3928 3936 3944 3952 3960	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945 3953 3961	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3914 3922 3930 3938 3946 3954 3952 3970	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955 3963	3844 3852 3860 3868 3876 3884 3892 3900 3908 3918 3924 3932 3940 3948 3956 3964	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957 3965	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3942 3950 3958 3966	3847, 3855, 3863, 3871, 3879, 3887, 3895, 3903, 3911, 3919, 3927, 3935, 3943, 3951, 3959, 3967, 3975,	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7110 7120 7130 7140 7150 7170 7200 7210	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3704 3712 3728	3585 3593 3601 3607 3625 3633 3641 3649 3657 3665 3673 3681 3689 3705	3586 3594 3602 3618 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690 3798 3714 3732	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683 3699 3707 3715 3723	3588 3596 3604 3620 3628 3636 3636 3644 3652 3660 3668 3678 3684 3678 3700 3708	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677 3685 3693 3701 3709	3590 3598 3606 3614 3622 3630 3638 3646 3654 3662 3670 3678 3686 3702 3710	3591 3599 3607 3623 3623 3631 3639 3647 3655 3663 3671 3679 3687 3693 3711 3719 3717 3719	7414 7424 7433 7444 7456 7466 7477 7500 7514 7537 7544 7566 7570 7600 7610	3840 3848 3856 3864 3872 3880 3896 3912 3920 3928 3936 3944 3952 3950	3841 3849 3857 3853 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945 3953 3961 3969 3977 3985	3842 3850 3858 3874 3882 3890 3898 3914 3922 3930 3938 3954 3952 3970 3978 3986	3843 3851 3859 3875 3883 3891 3899 3907 3915 3923 3931 3934 3955 3963 3971 3979 3987	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3948 3956 3964	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957 3965	3846 3854 3862 3870 3878 3886 3894 3902 3918 3926 3934 3942 3950 3958 3956 3974 3982 3990	3847, 3855, 3863, 3871, 3879, 3887, 3895, 3911, 3919, 3927, 3935, 3951, 3959, 3957, 3957, 3975, 3983, 3991,	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7070 7110 7120 7130 7140 7150 7170 7200 7210 7230	3584 3592 3608 3616 3624 3632 3640 3648 3656 3664 3688 3696 3704 3712 3728 3738	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3687 3705 3713 3721 3721 3721 3737	3586 3594 3602 3618 3628 3634 3642 3650 3658 3668 3674 3682 3690 3706 3712 3732 3730	3587 3593 3603 3611 3619 3627 3635 3643 3651 3659 3675 3683 3691 3699 3707 3715 3723 3731	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3688 3678 3684 3692 3700 3708	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3693 3701 3709 3717 3725 3733 3741	3590 3598 3696 3614 3622 3630 3638 3646 3654 3678 3678 3678 3710 3718 3726 3734 3742	3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3679 3687 3695 3703 3711 3719 3727 3735	7416 7427 7433 7446 7457 7466 7477 7500 7511 7527 7540 7557 7660 7611 7627	3840 3848 3854 3864 3872 3880 3888 3992 3920 3928 3928 3936 3952 3960 3968 3968 3968	3841 3849 3857 3873 3881 3889 3897 3905 3913 3929 3937 3945 3953 3961 3969 3977 3985 3983	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3923 3930 3938 3946 3954 3952 3970 3978 3988	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3931 3939 3947 3955 3963 3971 3977 3995	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3922 3940 3948 3956 3964 3972 3980 3980 3980 3980 3980	3845 3853 3861 3877 3885 3893 3901 3917 3925 3933 3941 3949 3957 3965	3846 3854 3862 3878 3886 3894 3902 3910 3918 3926 3934 3958 3958 3958 3958 3958 3958 3958 3958	3847, 3855, 3863, 3871, 3879, 3887, 3993, 3911, 3919, 3927, 3935, 3943, 3959, 3967, 3975, 3975, 3999,	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7170 7120 7130 7140 7150 7170 7200 7210 7220 7240	3584 3592 3608 3616 3624 3632 3640 3656 3664 3686 3704 3712 3720 3728 3736 3736 3736	3585 3593 3601 3617 3625 3633 3641 3649 3657 3665 3689 3705 3713 3721 3723 3723 3737 3737	3586 3594 3610 3618 3626 3634 3642 3650 3658 3668 3682 3690 3714 3732 3730 3738 3738	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3683 3691 3707 3715 3723 3731 3731 3737	3588 3596 3604 3612 3628 3636 3636 3644 3652 3660 3688 3692 3700 3708 3718 3724 3732 3732 3748	3589 3597 3613 3621 3629 3637 3645 3653 3661 3667 3685 3693 3701 3709 3717 3723 3733 3731 3741	3590 3598 3606 3614 3622 3630 3638 3646 3654 3670 3678 3686 3702 3710 3718 3726 3734 3742 3750	3591 3599 3607 3615 3623 3631 3637 3647 3655 3663 3671 3687 3695 3703 3711 3719 3727 3735 3743 3751	7414 7424 7433 7444 7457 7466 7476 7504 7524 7536 7544 7557 7566 7577 7604 7614 7634	3840 3848 3856 3864 3872 3880 3896 3912 3920 3928 3936 3944 3952 3960 3968 3968 3968 3968	3841 3849 3857 3865 3873 3881 3989 3993 3913 3921 3937 3945 3953 3969 3977 3985 3993 4001	3842 3850 3858 3866 3874 3882 3996 3914 3922 3938 3938 3946 3954 3970 3978 3988 3988 4002	3843 3851 3859 3867 3875 3883 3891 3907 3915 3923 3939 3947 3955 3963 3971 3979 3987 3987 3987 3987 3987 3987	3844 3852 3868 3876 3884 3990 3916 3924 3948 3956 3964 3972 3980 3986 4004	3845 3853 3861 3869 3877 3885 3991 3909 3917 3925 3941 3949 3957 3965 3973 3981 3989 4005	3846 3854 3862 3870 3878 3986 3991 3918 3926 3950 3958 3958 3974 3982 3998 4008	3847, 3855, 3863, 3871, 3879, 3887, 3903, 3911, 3919, 3927, 3953, 3951, 3959, 3967, 3975, 3983, 3991, 3999, 4007,	10 7777	10 4095
7010 7020 7030 7030 7040 7050 7060 7110 7120 7130 7140 7150 7150 7170 7220 7230 7230 7230 7259	3584 3592 3608 3616 3623 3632 3643 3656 3656 3656 3658 3704 3712 3720 3728 3736 3736 3736 3736 3736 3736	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3689 3705 3713 3721 3729 3737 3737 3733	3586 3594 3602 3610 3618 3626 3634 3650 3658 3658 3658 3658 3706 3714 3722 3730 3738 3738 3738 3738	3587 3595 3603 3611 3619 3627 3643 3651 3659 3667 3699 3707 3715 3723 3731 3739 3747 3755	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3688 3676 3700 3708 3716 3724 3732 3740 3748 3748 3756	3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3701 3709 3717 3725 3733 3741 3749 3757	3590 3598 3606 3614 3622 3630 3638 3654 3678 3682 3702 3710 3718 3726 3734 3742 3750 3758	3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679 3703 3711 3719 3727 3735 3743 3751 3759	7411 7421 7431 7441 7451 7461 7501 7521 7531 7541 7561 7611 762 7631 7641	3840 3848 3856 3864 3872 3880 3888 3896 3912 3920 3928 3936 3944 3952 3966 3984 3984 3992 4098	3841 3849 3857 3865 3873 3881 3995 3913 3921 3929 3937 3945 3953 3961 3969 3977 3985 3993 4001 4009	3842 3850 3858 3866 3874 3882 3990 3998 3914 3922 3930 3938 3954 3954 3962 3970 3978 3986 3994 4002 4002	3843 3851 3867 3875 3883 3891 3997 3915 3923 3931 3939 3947 3955 3963 3971 3979 3987 3995 3963	3844 3852 3860 3868 3876 3892 3900 3916 3924 3932 3948 3956 3964 3972 3980 3988 3998 4004 4012	3845 3853 3861 3869 3877 3885 39901 3993 3997 3995 3943 3957 3965 3973 3989 3997 4005 4013	3846 3854 3870 3878 38862 3970 3918 3926 3934 3942 3950 3958 3958 3966 3974 3982 3990 4014	3847, 3855, 3863, 3871, 3879, 3887, 3913, 3919, 3927, 3959, 3951, 3959, 3967, 3975, 3983, 3991, 3999, 4007, 4015	10 7777	10 4095
7010 7020 7030 7040 7050 7060 7170 7110 7110 7150 7150 7170 7210 7220 7230 7240 7250 7250	3584 3592 3600 3608 3616 3624 3632 3640 3656 3664 3672 3688 3696 3704 3712 3720 3728 3738 3743 3743 3743 3743	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3689 3713 3721 3723 3737 3745 3737 3745 3753 3761	3586 3594 3610 3618 3618 3628 3634 3642 3658 3658 3658 3698 3714 3722 3730 3738 3746 3738 3745 3754	3587 3595 3603 3611 3619 3627 3635 3643 3659 3667 3663 3699 3707 3715 3733 3731 3739 3747 3755 3763	3598 3596 3604 3612 3628 3636 3644 3652 3668 3678 3678 3678 3708 3718 3712 3712 3740 3745 3745 3758	3589 3597 3605 3613 3629 3637 3645 3663 3663 3685 3693 3701 3709 3717 3725 3725 3725 3733 3741 3749 3757 3765	3590 3598 3606 3614 3622 3630 3638 3646 3670 3686 3694 3702 3710 3718 3726 3734 3742 3750 3758 3758	3591 3599 3697 3615 3623 3631 3639 3647 3687 3687 3687 3703 3711 3719 3727 3735 3743 3751 3759	7414 7437 7437 7444 7457 7507 7517 7527 7537 7547 7557 7607 7617 7627 7637 7647 7657	3840 3848 3856 3864 3872 3880 3896 3912 3920 3928 3936 3944 3952 3960 3968 3968 3968 3968	3841 3849 3857 3865 3873 3889 3897 3905 3913 3923 3923 3945 3953 3961 3969 3977 3985 3989 4001 4001 4001	3842 3850 3858 3866 3874 3892 3998 3914 3914 3914 3954 3954 3954 4002 4010 4018	3843 3851 3859 3867 3875 3883 3891 3997 3915 3923 3931 3939 3947 3955 3963 3971 3979 3987 3995 4003 4014 4019	3844 3852 3860 3868 3878 3892 3900 3916 3916 3948 3956 3964 3972 3980 3980 3980 3996 4004 4012 4012	3845 3853 3861 3869 3877 3885 3993 3991 3925 3933 3941 3949 3957 3965 3973 3989 3989 4005 4002 4013 4021	3846 3854 3870 3878 3882 3902 3918 3926 3934 3950 3950 3950 3950 3966 3974 3982 3990 4008 4014 1022	3847, 3853, 3863, 3871, 3887, 3993, 3991, 3913, 3941, 3953, 3954,	10 7777	10 4095
7010 7020 7030 7040 7050 7070 7100 71100 7120 7130 7140 7150 7220 7230 7230 7240 7250 7240 7250	3584 3592 3600 3608 3616 3624 3632 3640 3656 3672 3680 3704 3712 3720 3738 3738 3738 3738 3738 3738 3752 3760 3768	3585 3593 3601 3609 3617 3643 3641 3649 3657 3665 3681 3687 3687 3705 3713 3721 3723 3737 3737 3753 3761 3769	3586 3594 3602 3610 3618 3626 3634 3650 3658 3674 3688 3706 3714 3722 3730 3738 3778 3778 3778	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3699 3707 3715 3739 3731 3739 3731 3739 3755 3763 3771	3588 3596 3604 3612 3628 3636 3644 3652 3668 3688 3698 3700 3708 3718 3724 3732 3740 3756 3764 3772	3589 3597 3605 3613 3621 3637 3645 3653 3669 3677 3685 3701 3709 3717 3725 3733 3741 3757 3757 3765 3773	3590 3598 3606 3614 3622 3630 3638 3646 3654 3670 3702 3710 3718 3718 3726 3734 3742 3758 3758 3774	3591 3599 3697 3615 3623 3631 3639 3647 3655 3667 3679 3687 3793 3711 3719 3727 3735 3743 3759 3767 3775	7414 7424 7434 7446 7454 7476 7500 7511 7524 7536 7576 7611 7637 7644 7646 7646 7646 7646 7646 7646	3840 3848 3856 3864 3872 3880 3896 3904 3912 3928 3936 3952 3956 3956 3956 3956 3956 3956 3956 3956	3841 3849 3857 3865 3873 3989 3993 3921 3921 3937 3945 3953 3953 3961 3969 3977 3985 3993 4009 4017 4025	3842 3850 3858 3866 3874 3906 3914 3922 3938 3946 3954 3954 3954 4010 4018 4026	3843 3859 3867 3873 3899 3907 3915 3923 3939 3947 3955 3963 3971 3979 3987 3995 4011 4019 4027	3844 3852 3860 3868 3876 3990 3908 3916 3940 3943 3943 3944 3945 3986 3988 3996 4012 4020 4028	3845 3853 3861 3869 3875 3893 3901 3909 3917 3925 3933 3941 3949 3957 3981 3989 4013 4021 4029	3846 3854 3862 3870 3878 3992 3910 3918 3924 3950 3958 3958 3958 3966 3974 3982 3990 4014 1022 4030	3847, 3855, 3863, 3871, 3879, 3993, 3911, 3919, 3927, 3935, 3951, 3959, 3967, 3975, 3983, 3991, 4007, 4015, 4023, 4031,	10 7777	10 4095
7010 7020 7050 7050 7070 7070 7100 7110 7110 711	3584 3592 3608 3618 3616 3624 3632 3640 3656 3664 3672 3688 3704 3712 3720 3728 3736 3748 3752 3768	3585 3593 3601 3609 3617 3633 3641 3649 3657 3663 3673 3689 3705 3713 3721 3721 3721 3721 3737 3745 3753 3761 3769	3586 3594 3602 3610 3618 3618 3618 3618 3618 3618 3650 3658 3666 3682 3690 3714 3722 3730 3738 3746 3770 3778	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3683 3691 3707 3715 3723 3723 3723 3731 3737 3755 3763 3771	3588 3596 3604 3612 3628 3636 3636 3636 3668 3678 3682 3700 3708 3718 3732 3740 3743 3743 3743 3772 3780	3589 3597 3605 3613 3629 3637 3645 3653 3669 3677 3685 3709 3717 3725 3733 3741 3749 3773 3765 3773	3590 3598 3606 3614 3630 3638 3638 3652 3670 3710 3718 3726 3734 3753 3753 3774 3782	3591 3599 3607 3615 3623 3623 3631 3639 3647 3679 3687 3687 3687 3703 3711 3719 3727 3735 3743 3751 3751 3767 3775	7414 7437 7437 7446 7457 7507 7517 7527 7537 7547 7556 7577 7607 7617 7627 7637 7647 7657 7657	3840 3848 3856 3864 3872 3880 3896 3914 3914 3914 3952 3960 3978 3988 3978 3988 3978 3988 3978 3988 398	3841 3849 3857 3865 3873 3981 3929 3937 3929 3937 3953 3961 3969 3977 3985 3993 4001 4017 4025	3842 3850 3858 3866 3874 3920 3938 3946 3954 3952 3970 3978 3978 3986 4002 4010 4018 4026	3843 3851 3859 3867 3873 3883 3899 3907 3915 3923 3939 3947 3955 3963 3979 3987 3995 4003	3844 3852 3860 3868 3878 3990 3908 3918 3924 3932 3940 3956 3964 3972 3980 4004 4020 4028 4036	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957 3967 3989 3989 4005 4001 4021 4029	3846 3854 3862 3870 3878 3986 3990 3918 3926 3934 3953 3958 3964 3990 3998 4008 4014 1022 4030	3847, 3863, 3871, 3879, 3895, 3903, 3911, 3919, 3927, 3935, 3943, 3951, 3959, 3967, 3983, 3991, 4023, 4031, 4039,	10 7777	10 4095
7010 7020 7050 7050 7050 7070 7100 7110 7110 711	3584 3592 3600 3608 3618 3624 3632 3640 3656 3664 3672 3680 3704 3712 3720 3728 3734 3752 3760 3778	3585 3593 3601 3609 3617 3625 3633 3641 3657 3665 3673 3687 3705 3713 3721 3721 3737 3737 3737 3745 3753 3761 3761 3769 3777 3769	3586 3594 3602 3610 3618 3626 3634 3658 3658 3666 3674 3682 3698 3706 3734 3734 3754 3754 3762 3770 3778	3587 3595 3603 3611 3619 3627 3635 3643 3651 3667 3667 3683 3707 3715 3723 3731 3747 3755 3771 3779 3777 37787	3588 3596 3604 3612 3628 3636 3636 3636 3644 3652 3668 3732 3700 3708 3716 3734 3736 3736 3736 3737 3738	3589 3597 3605 3613 3629 3637 3645 3653 3669 3677 3685 3703 3709 3717 3725 3733 3741 3749 3757 3773 3781	3590 3598 3606 3614 3632 3630 3638 3654 3670 3710 3718 3726 3734 3750 3758 3774 3778 3778 3778 3778	3591 3599 3607 3615 3623 3631 3639 3647 3655 3667 3679 3687 3703 3711 3719 3727 3735 3751 3753 3751 3753 3775	7414 7427 7431 7446 7457 7466 7476 7507 7510 7527 7531 7647 7657 7667 7677 7707	3840 3848 3856 3864 3872 3880 3896 3904 3912 3928 3936 3952 3956 3956 3956 3956 3956 3956 3956 3956	3841 3849 3857 3865 3873 3981 3993 3921 3929 3937 3945 3953 3961 3969 3977 3985 4001 4007 4017 4025	3842 3850 3858 3866 3874 3998 3996 3918 3930 3938 3954 3954 3970 3978 3988 3954 4010 4010 4026 4034 4042	3843 3859 3867 3873 3883 3899 3907 3915 3923 3931 3939 3955 3963 3971 3979 4003 4011 4027 4035 4043	3844 3852 3860 3868 3876 3990 3908 3918 3932 3940 3943 3956 3964 3972 3980 3988 3988 3996 4004 4012 4028 4036 4044	3845 3853 3861 3869 3875 3893 3901 3909 3917 3925 3933 3941 3949 3957 3965 3973 3981 4005 4013 4029 4037 4045	3846 3854 3862 3870 3878 3992 3910 3918 3926 3934 3945 3958 3958 3958 3958 3958 4064 4014 4038 4038 4038 4038	3847, 3855, 3863, 3871, 3879, 3895, 3903, 3911, 3919, 3927, 3935, 3959, 3959, 3967, 3975, 3983, 3991, 4047, 4047,	10 7777	10 4095
7010 7020 7050 7050 7060 7070 7100 7110 7110 7110 7110 711	3584 3592 3590 3608 3616 3616 3632 3640 3656 3664 3672 3688 3696 3704 3712 3720 3728 3738 3744 3778 3786 3788 3778 3788 3788 3788	3585 3593 3601 3609 3625 3633 3641 3649 3657 3665 3673 3681 3665 3773 3721 3723 3737 3745 3745 3775 3769 3777 3785 3785 3785	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3674 3682 3706 3714 3722 3730 3738 3736 3737 3782 3770	3587 3595 3603 3611 3619 3627 3635 3643 3651 3667 3667 3683 3707 3715 3723 3731 3731 3731 3737 3747 3787 3787 3787 3787 3783	3588 3596 3604 3612 3628 3636 3636 3636 3668 3676 3708 3718 3724 3732 3740 3743 3743 3743 3743 3743 3743 3743	3589 3597 3605 3613 3629 3637 3645 3653 3669 3677 3685 3701 3709 3717 3725 3733 3741 3749 3773 3781 3783 3781 3789 3797	3590 3598 3606 3614 3630 3638 3638 3652 3670 3710 3718 3726 3734 3753 3774 3782 3798 3798 3798 3798	3591 3599 3607 3615 3623 3623 3631 3639 3647 3679 3687 3687 3687 3703 3711 3719 3727 3735 3743 3751 3767 3775 3783 3791 3799 3807	7414 7427 7431 7444 7451 7501 7501 7501 7531 7541 7531 7541 7531 7641 7651 7651 7671 7701 7711 7721 7731	3840 3848 3856 3864 3872 3880 3896 3914 3912 3928 3952 3952 3950 3952 3952 3950 3952 3952 3952 3952 3952 3952 3952 3952	3841 3849 3857 3865 3873 3981 3929 3937 3929 3937 3953 3953 3961 3969 3977 3985 3993 4001 4002 4003 4041 4044 4049 4049	3842 3850 3858 3866 3874 3890 3998 3994 3954 3954 3970 3978 3978 4002 4018 4026 4034 4042 4050 4058	3843 3851 3859 3867 3873 3883 3891 3997 3915 3923 3931 3937 3955 3963 3971 3979 4003 4019 4027 4035 4041 4045 4051	3844 3852 3860 3868 3872 3990 3916 3924 3932 3940 3956 3964 3972 3980 4044 4020 4028 4036 4044 4052 4052	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3957 3965 3973 3989 3997 4005 4021 4029 4037 4045 4045 40461	3846 3854 3862 3870 3878 3986 3990 3910 3918 3926 3934 3942 3926 3958 3966 3974 3982 4030 4034 4044 4054 4054	3847, 3847, 3855, 3863, 3871, 3879, 3993, 3911, 3919, 3943, 3927, 3935, 3941, 3959, 3967, 3983, 3999, 4007, 4023, 4031, 4047, 4055, 4063,	10 7777	10 4095
7010 7020 7050 7050 7070 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 7100 710	3584 3592 3600 3608 3616 3616 3616 3632 3640 3683 3696 3704 3712 3712 3712 3712 3712 3712 3712 3712	3585 3593 3601 3609 3633 3641 3645 3665 3673 3665 3773 3705 3713 3729 3737 3743 3753 3761 3777 3785 3793 3809	3586 3594 3602 3610 3626 3634 3642 3658 3668 3678 3782 3793 3793 3714 3778 3778 3778 3778 3778 3778 3778	3587 3595 3603 3611 3627 3635 3643 3651 3663 3691 3693 3707 3713 3731 3731 3731 3731 3737 3747 3775 3777 3787 3787 3787 3787 3803 3803	3588 3596 3604 3612 3628 3636 3634 3652 3636 3668 3678 3708 3708 3718 3732 3748 3756 3774 3772 3783 3796 3874	3589 3597 3605 3613 3629 3637 3645 3663 3673 3701 3703 3717 3725 3733 3741 3757 3765 3733 3741 3757 3763 3773 3763 3773 3773 3773 3773	3590 3598 3606 3614 3632 3630 3638 3646 3694 3702 3710 3718 3736 3734 3742 3758 3758 3768 3774 3782 3790 3798 3898	3591 3599 3607 3615 3623 3631 3637 3687 3687 3695 3703 3711 3719 3727 3735 3743 3751 3759 3767 3775 3783 3791 3793 3897 3897	7414 7424 7434 7446 7457 7466 7476 7506 7516 7557 7566 7617 7624 7657 7666 7877 7706 7711 7721 773	3840 3848 3856 3864 3872 3880 3896 3904 3912 3920 3920 3920 3928 3944 3952 3960 4006 4008 4016 4024 4032 4044 4048 4048 4048	3841 3849 3857 3865 3889 3897 3905 3913 3921 3923 3937 3945 3953 3961 4009 4017 4029 4017 4029 4041 4049 4041 4049 4057 4055	3842 3850 3858 3866 3898 3996 3996 3933 3946 3952 3970 3970 3986 4010 4018 4024 4050 4050 4050 4065	3843 3851 3859 3867 3883 3891 3997 3993 3947 3953 3963 3971 3995 4011 4019 4027 4035 4043 4051 4051 4067	3844 3852 3860 3868 3884 3892 3900 3918 3924 3932 3938 3956 4020 4020 4020 4020 4020 4036 4040 4052 4060 4068	3845 3861 3869 3877 3885 3893 3997 3995 3993 3997 4013 4021 4029 4021 4037 4045 4053 4069	3846 3854 3862 3873 3886 3898 3902 3910 3926 3934 3950 3950 3978 3998 4014 1022 4030 4046 4054 4064 4064	3847, 3847, 3855, 3863, 3871, 3895, 3903, 3919, 3927, 3935, 3951, 3951, 3951, 3951, 3967, 4023, 4021, 4024, 4025, 4063, 4063, 4063, 4063, 4071,	10 7777	10 4095
7010 7010 7010 7010 7010 7010 7110 7110	3584 3592 3600 3608 3618 3612 3612 3612 3612 3612 3612 3612 3612	3585 3593 3601 3607 3625 3633 3641 3649 3657 3705 3773 3775 3773 3775 3773 3776 3777 3775 3773 3775 3777 3775 3773 3775 3773 3775 3777 3775 3773 3785 3793 3807 3807 3807 3807 3807 3807 3807 380	3586 3594 3602 3610 3626 3634 3642 3658 3658 3658 3706 3714 3730 3738 3776 3776 3776 3776 3776 3776 3776	3587 3595 3603 3611 3627 3635 3643 3651 3667 3667 3693 3707 3715 3739 3747 3743 3747 3775 3773 3773 3773 3773	3588 3596 3604 3612 3628 3636 3636 3644 3652 3700 3708 3716 3772 3780 3783 3772 3780 3788 3772 3780 3788 3772 3884 3894 3894 3812	3589 3597 3605 3613 3629 3637 3645 3653 3661 3669 3709 3717 3789 3773 3781 3789 3773 3781 3789 3773 3893 3793 3789 3773	3590 3598 3606 3614 3622 3630 3646 3652 3670 3678 3662 3710 3718 3718 3718 3750 3750 3774 3750 3774 3786 3774 3790 3790 3814 3814 3814	3591 3599 3607 3615 3623 3623 3637 3647 3655 3703 3711 3719 3715 3715 3715 3715 3715 3715 3715 3715	7414 7424 7434 7446 7454 7456 7516 7524 7536 7544 7555 7566 7676 7607 7617 7707 7707 7717 7721 7731 7731 7731	3840 3848 3856 3868 3896 3902 3912 3922 3936 3944 3952 3956 3956 3956 3956 3956 3956 3956 3956	3841 3849 3857 3865 3881 3889 3897 3905 3929 3937 3929 3937 3953 3969 3977 4025 4031 4041 4057 4065 4065	3842 3850 3858 3866 3898 3906 3939 3930 3938 3954 3954 4002 4018 4028 4040 4040 4050 4050 4050 4066 4066	3843 3851 3859 3867 3883 3891 3997 3993 3931 3939 3937 3955 3963 3971 4019 4027 4035 4045 4045 4045 4047	3844 3852 3868 3868 3892 3900 3908 3924 3932 3948 3956 3964 4004 4020 4020 4028 4036 4046 4052 4068 4078	3845 3861 3869 3877 3885 3893 3991 3917 3925 3933 3941 3957 3965 3973 3989 4005 4001 4029 4037 4045 4046 4047	3846 3854 3862 3870 3878 3886 3893 3902 3910 3926 3934 3950 3958 3958 3958 3966 4064 4030 4030 4038 4044 4054 4064 4064 4070 4078	3847, 3883, 3873, 3879, 3887, 3893, 3919, 3927, 3935, 3951, 3959, 3967, 3975, 4023, 4031, 4031, 4031, 4034, 4047, 4047, 4065, 4061, 4079,	10 7777	10 4095
7010 7020 7050 7060 7070 7100 7110 7110 7110 7110 711	3584 3592 3590 3608 3618 3612 3632 3640 3658 3664 3672 3680 3704 3712 3720 3728 3738 3745 3745 3745 3788 3788 3788 3788 3788 3788 3788 378	3585 3593 3601 3609 3625 3633 3641 3649 3657 3705 3713 3721 3737 37429 3737 3745 3777 3785 3777 3785 3789 3789 3789 3789 3789 3789 3789 3789	3586 3594 3602 3610 3618 3618 3626 3634 3650 3658 3674 3682 3706 3714 3722 3730 3738 3736 3737 3782 3770 3782 3770 3782 3782 3794 3802 3810 3810 3810	3587 3595 3603 3611 3619 3627 3635 3643 3651 3667 3675 3683 3707 3715 3723 3731 3731 3737 3737 3787 3787 3787 378	3588 3596 3604 3612 3628 3636 3634 3652 3636 3668 3678 3708 3708 3718 3732 3748 3756 3774 3772 3783 3796 3874	3589 3597 3605 3613 3629 3637 3645 3653 3669 3677 3685 3701 3709 3717 3725 3733 3741 3749 3773 3765 3773 3781 3789 3789 3789 3789 3789 3789	3590 3598 3606 3614 3632 3630 3638 3652 3670 3710 3718 3726 3734 3753 3754 3753 3754 3754 3757 3758 3758 3758 3758 3758 3758 3758	3591 3599 3607 3615 3623 3623 3631 3639 3647 3679 3687 3679 3703 3711 3719 3727 3735 3743 3751 3767 3775 3783 3799 3807 3813 3823 3823	7414 7437 7437 7436 7456 7476 7507 7516 7537 7547 7537 7647 7637 7647 7717 7717 7721 7737 7747 7757	3840 3848 3856 3864 3872 3880 3896 3904 3912 3920 3920 3920 3928 3944 3952 3960 4006 4008 4016 4024 4032 4044 4048 4048 4048	3841 3849 3857 3865 3873 3981 3929 3937 3929 3937 3953 3961 3969 3977 4025 4033 4041 4049 4049 4057 4065 4073 4081	3842 3850 3858 3866 3874 3898 3906 3914 3954 3954 3970 3978 3978 4002 4018 4026 4034 4042 4050 4050 4050 4066 4066 4066	3843 3851 3859 3867 3873 3883 3891 3997 3915 3923 3931 3937 3955 3963 3971 3979 4003 4043 4043 4043 4044 4059 4067 4067 4067 4067 4067 4067 4068	3844 3852 3860 3868 3878 3990 3908 3916 3924 3932 3940 3956 3964 3972 3980 4004 4020 4028 4036 4044 4052 4060 4068 4068 4068 4068	3845 3853 3861 3869 3877 3875 3993 3991 3993 3957 3965 3973 3989 3997 4005 4021 4029 4037 4045 4053 4061 4069 4069	3846 3854 3862 3870 3878 3986 3990 3910 3918 3926 3934 3942 3995 3958 3966 3974 3982 4030 4038 4046 4054 4054 4062 4070 4088	3847, 3847, 3855, 3863, 3871, 3879, 3993, 3911, 3919, 3959, 3967, 3975, 3983, 3991, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4074, 4077,	10 7777	10 4095

Octal-Decimal Fraction Conversion Table

OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.
. 000	.000000	. 100	. 125000	. 200	. 250000	. 300	.375000
.001	.001953	. 101	. 126953	. 201	. 251953	.301	. 37G953
.002	. 003906	.102	. 128906	. 202	. 253906	. 302	.378906
. 003	.005859	. 103	. 130859	. 203	. 255859	. 303	.380859
.004	.007812	. 104	. 132812	. 204	.257812	.304	.382812
.005	, 009765	. 105	. 134765	.205	. 259765	. 305	.384765
.006	.011718	, 106	. 136718	. 206	. 261718	.306	.386718
.007	.013671	. 107	. 138671	. 207	. 263671	.307	.388671
. 010	.015625	. 110	. 140625	.210	. 265625	,310	. 390625
				.211	. 267578	311	.392578
.011	.017578	.111	. 142578				
.012	.019531	. 112	. 144531	.212	. 269531	.312	. 394531
.013	.021484	.113	. 146484	.213	. 271484	.313	. 396484
.014	.023437	.114	. 148437	.214	. 273437	.314	.398437
.015	.025390	. 115	. 150390	.215	. 275390	.315	.400390
.016	.027343	. 116	. 152343	. 216	. 277343	.316	.402343
.017	.029296	. 117	. 154296	.217	. 279296	.317	.404296
. 020	.031250	. 120	. 156250	, 220	. 281250	.320	.406250
. 021	.033203	. 121	. 158203	. 221	. 283203	.321	.408203
. 022	.035156	. 122	. 160156	. 222	. 285156	. 322	.410156
. 023	.037109	. 123	. 162109	. 223	. 287109	.323	.412109
, 024	.039062	. 124	, 164062	. 224	. 289062	.324	.414062
		. 125	. 166015	.225	. 291015	.325	.416015
. 025	. 041015				. 292968	.325	.417968
. 026	.042968	. 126	. 167968	. 226		.326	
.027	. 044921	. 127	. 169921	. 227	. 294921	1	.419921
. 030	. 046875	. 130	. 171875	. 230	. 296875	. 330	.421875
. 031	.048828	. 131	. 173828	. 231	. 298828	. 331	. 423828
. 032	. 050781	. 132	. 175781	. 232	.300781	. 332	. 425781
. 033	. 052734	. 133	. 177734	. 233	. 302734	. 333	. 427734
. 034	. 054687	. 134	. 179687	. 234	.304687	.334	.429687
.035	.056640	. 135	. 181640	. 235	. 306640	.335	.431640
. 036	. 058593	. 136	. 183593	. 236	.308593	. 336	. 433593
.037	,060546	. 137	. 185546	. 237	.310546	.337	. 435546
. 040	.062500	. 140	. 187500	, 240	. 312500	.340	. 437500
		. 141	. 189453	.241	.314453	.341	.439453
. 041	. 064453					.342	.441406
.042	. 066406	. 142	. 191406	. 242	. 316406	1	
. 043	.068359	. 143	. 193359	. 243	. 318359	,343	. 443359
. 044	.070312	. 144	. 195312	. 244	. 320312	.344	.445312
. 045	. 072265	. 145	. 197265	. 245	. 322265	. 345	. 447265
. 046	.074218	. 146	.199218	. 246	. 324218	. 346	.449218
.047	.076171	. 147	. 201171	. 247	. 326171	.347	.451171
. 050	.078125	, 150	. 203125	. 250	. 328125	. 350	. 453125
.051	.080078	, 151	. 205078	. 251	. 330078	. 351	. 455078
. 052	.082031	. 152	. 207031	. 252	,332031	, 352	457031
. 053	.083984	. 153	, 208984	. 253	. 333984	, 353	458984
. 054	.085937	. 154	. 210937	. 254	,335937	. 354	. 460937
. 055	.087890	. 155	. 212890	. 255	. 337890	.355	462890
. 056	. 089843	. 156	.214843	. 256	. 339843	.356	. 464843
	. 091796	. 157	. 216796	. 257	. 341796	.357	, 466796
. 057	-	1				1	
.060	. 093750	. 160	. 218750	. 260	. 343750	. 360	. 468750
.061	.095703	. 161	. 220703	. 261	. 345703	.361	. 470703
.062	. 097656	. 162	. 222656	. 262	. 347656	. 362	. 472656
.063	.099609	. 163	. 224609	. 263	. 349609	, 363	.474609
.064	. 101562	. 164	. 226562	. 264	. 351562	, 364	, 476562
. 0 6 5	. 103515	. 165	. 228515	. 265	.353515	. 365	. 478515
.066	. 105468	. 166	. 230468	. 266	.355468	. 366	. 460468
.067	. 107421	. 167	. 232421	. 267	.357421	. 367	. 482421
. 070	. 109375	. 170	. 234375	. 270	. 359375	.370	. 484375
.071	. 111328	, 171	. 236328	.271	.361328	.371	. 486328
					.363281	.372	.488281
. 072	. 113281	. 172	. 238281	.272			
. 073	. 115234	. 173	. 240234	.273	. 365234	.373	. 490234
. 074	. 117187	, 174	. 242187	.274	.367187	.374	. 492187
	110140	. 175	. 244140	.275	.369140	.375	. 494140
. 075	. 119140						
. 075 . 076	. 121093	. 176	. 246093	. 276	.371093	.376	. 496093
.075				. 276 . 277	.371093 .373046	.376 .377	. 496093 . 498046

Octal-Decimal Fraction Conversion Table (Cont)

OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.
. 000000	,000000	.000100	.000244	.000200	.000488	. 000300	.000732
.000001	.000003	,000101	.000247	.000201	.000492	.000301	.000736
,000001	.000007	.000102	.000251	.000202	.000495	.000302	. 000740
000003	.000011	.000103	.000255	.000203	. 000499	.000303	,000743
	-						
000004	.000015	.000104	.000259	.000204	. 000503	. 000304	. 000747
000005	.000019	.000105	.000263	.000205	.000507	. 000305	. 000751
, 000006	.000022	.000106	.000267	.000206	.000511	.000306	.000755
, 000007	. 000026	.000107	.000270	.000207	.000514	.000307	. 000759
000010	. 000030	,000110	. 000274	.000210	.000518	.000310	.000762
000011	.000034	,000111	.000278	.000211	.000522	.000311	.000766
000012	.000038	,000112	.000282	.000212	.000526	.000312	.000770
000013	.000041	.000113	.000286	.000213	.000530	.000313	.000774
	.000041	1		.000214	. 000534	.000314	.000778
000014	•	.000114	.000289				
000015	,000049	,000115	.000293	.000215	. 000537	.000315	.000782
000016	. 000053	.000116	.000297	.000216	. 000541	.000316	.000785
000017	. 000057	.000117	.000301	.000217	. 000545	.000317	.000789
000020	.000061	.000120	. 000305	.000220	. 000549	.000320	.000793
000021	.000064	.000121	.000308	.000221	. 000553	.000321	.000797
000022	.000068	,000122	.000312	.000222	. 000556	.000322	.000801
000022	.000072	.000123	.000316	.000223	. 000560	.000323	.000805
	-	1 '		1	. 000564	.000324	.000808
000024	.000076	.000124	.000320	.000224		1	
000025	.000080	,000125	. 000324	.000225	. 000568	.000325	.000812
000026	.000083	.000126	.000328	.000226	. 000572	. 000326	.000816
000027	.000087	.000127	.000331	.000227	.000576	. 000327	. 000820
000030	.000091	.000130	.000335	.000230	. 000579	.000330	.000823
000031	. 000095	.000131	.000339	.000231	.000583	.000331	.000827
000032	.000099	.000132	,000343	. 000232	. 000587	. 000332	.000831
000033	.000102	.000133	.000347	.000233	. 000591	.000333	.000835
			-	1 -	. 000595	.000334	. 000839
000034	.000106	.000134	. 000350	.000234			
000035	.000110	.000135	.000354	.000235	.000598	. 000335	.000843
000036	.000114	.000136	. 000358	.000236	.000602	. 000336	.000846
000037	.000118	.000137	. 000362	.000237	. 000606	. 000337	. 000850
000040	.000122	.000140	. 000366	.000240	.000610	.000340	.000854
000041	.000125	.000141	.000370	. 600241	.000614	.000341	.000858
000042	.000129	.000142	.000373	.000242	.000617	.000342	.000862
000043	.000133	.000143	.000377	.000243	.000621	.000343	.000865
		ı	-	.000244	. 000625	.000344	.000869
000044	.000137	.000144	.000381				
000045	.000141	.000145	.000385	.000245	. 000629	. 000345	.000873
000046	.000144	,000146	.000389	.000246	. 000633	. 000346	.000877
.00047	.000148	.000147	.000392	.000247	.000637	.000347	.000881
000050	.000152	.000150	.000396	.000250	. 000640	.000350	.000885
000051	.000156	.000151	.000400	.000251	.000644	.000351	.000888
000052	.000160	,000152	.000404	.000252	.000648	.000352	.000892
		1	.000408	.000253	. 000652	.000353	.000896
000053	.000164	.000153	*	1		.000354	.000900
000054	.000167	.000154	.000411	.000254	. 000656		
000055	.000171	.000155	.000415	.000255	. 000659	. 000355	.000904
000056	.000175	,000156	.000419	.000256	. 000663	. 000356	. 000907
000057	.000179	.000157	.000423	.000257	. 000667	.0003	.000911
000060	.000183	.000160	.000427	.000260	,000671	. 000360	.000915
000061	.000186	.000161	.000431	.000261	.000675	.000361	.000919
000062	.000190	.000162	.000434	.000262	.000679	.000362	.000923
		ľ	.000438	.000263	.000682	. 000363	.000926
000063	.000194	.000163	•	.000263	.000686	.000364	.000930
000064	.000198	,000164	.000442			.000365	. 000934
000065	.000202	.000165	.000446	.000265	.000690		
000066	. 000205	.000166	.000450	.000266	.000694	.000366	. 000938
000067	.000209	.000167	.000453	.000267	. 000698	. 000367	. 000942
000070	.000213	.000170	. 000457	.000270	.000701	.000370	. 000946
000071	.000217	.000171	.000461	.000271	.000705	.000371	. 000949
000072	.000221	,000172	.000465	.000272	.000709	,000372	. 000953
000073	.000225	.000173	.000469	.000273	.000713	.000373	. 000957
			•		.000717	.000374	.000961
000074	.000228	.000174	.000473	.000274		1	. 000965
000075	.000232	.000175	.000476	.000275	.000720	. 000375	
. 000076	, 000236	.000176	. 000480	.000276	.000724 .000728	.000376	.000968
000077	.000240	.000177	.000484				

Octal-Decimal Fraction Conversion Table (Cont)

OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.
,000400	.000976	.000500	.001220	.000600	.001464	.000700	,001708
.000401	.000980	.000501	.001224	.000601	.001468	.000701	.001712
.000402	.000984	.000502	.001228	.000602	.001472	.000702	.001716
.000402	.000988	.000503	.001232			.000703	
		1		.000603	.001476		.001720
.000404	.000991	.000504	.001235	.000604	.001480	.000704	.001724
.000405	.000995	.000505	.001239	. 000605	.001483	.000705	.001728
.000406	.000999	.000506	.001243	.000606	.001487	.000706	.001731
.000407	.001003	.000507	.001247	.000607	.001491	.000707	.001735
.000410	.001007	.000510	.001251	.000610	.001495	.000710	.001739
.000411	.001010	.000511	.001255	.000611	.001499	.000711	.001743
.000412	.001014	.000512	.001258	.000612	.001502	.000712	.001747
.000413	.001018	.000513	.001262	.000613	.001506	.000713	.001750
.000414	.001022	.000514	.001266	.000614	.001510	.000714	.001754
.000415	.001026	.000515	.001270	,000615	.001514	.000715	.001758
.000416	.001029	.000516	.001274	.000616	,001518	.000716	.001762
.000417	.001033	.000517	.001277	.000617	.001522	.000717	
		l.					.001766
.000420	.001037	.000520	.001281	.000620	.001525	.000720	.001770
.000421	.001041	.000521	.001285	.000621	.001529	.000721	.001773
.000422	.001045	.000522	.001289	.000622	.001533	.000722	.001777
.000423	.001049	.000523	.001293	.000623	.001537	.000723	.001781
.000424	.001052	. 000524	.001296	.000624	.001541	.000724	.001785
.000425	.001056	.000525	.001300	.000625	.001544	.000725	.001789
.000426	.001060	.000526	.001304	.000626	.001548	.000726	.001792
.000427	.001064	.000527	.001308	,000627	,001552	.000727	.001796
.000430	.001068	.000530	.001312	.000630	.001556	.000730	.001800
.000430	.001008		.001312	.000630		.000731	.001804
		.000531		.000631	.001560	1	
.000432	.001075	.000532	.001319		.001564	.000732	.001808
.000433	. 001079	.000533	.001323	.000633	.001567	.000733	.001811
.000434	.001083	.000534	.001327	.000634	.001571	.000734	.001815
.000435	.001087	.000535	.001331	.000635	.001575	.000735	.001819
.000436	.001091	.000536	.001335	.000636	.001579	.000736	.001823
.000437	.001094	.000537	.001338	.000637	.001583	.000737	.001827
.000440	.001098	.000540	.001342	.000640	.001586	.000740	.001831
.000441	.001102	.000541	.001346	.000641	.001590	.000741	.001834
.000442	.001106	.000542	.001350	.000642	.001594	.000742	.001838
.000443	.001110	.000543	.001354	,000643	.001598	.000743	.001842
.000444	.001113	.000544	.001358	.000644	.001602	.000744	.001846
.000445	.001117	.000545	.001361	.000645	.001605	.000745	.001850
.000446	.001121	.000546	.001365	.000646	.001609	.000746	.001853
.000447	. 001125	.000547	.001369	.000647	.001613	.000747	.001857
				I .			
.000450	.001129	.000550	.001373	.000650	.001617	.000750	.001861
.000451	.001132	.000551	.001377	.000651	.001621	.000751	.001865
.000452	.001136	.000552	.001380	.000652	.001625	.000752	.001869
. 000453	.001140	. 000553	.001384	. 000653	.001628	.000753	.001873
. 000454	.001144	.000554	.001388	.000654	.001632	.000754	.001876
. 000455	.001148	.000555	.001392	.000655	.001636	.000755	.001880
.000456	.001152	.000556	.001396	.000656	.001640	.000756	.001884
.000457	.001155	.000557	.001399	.000657	.001644	.000757	.001888
.000460	.001159	.000560	.001403	.000660	.001647	.000760	.001892
.000451	.001163	.000561	.001407	.000661	.001651	.000761	.001895
.000462	.001167	.000562	.001411	.000662	.001655	.000762	.001899
.000463	.001171	.000563	.001415	,000663	.001659	.000763	.001903
.000464	.001174	.000564	.001419	000664	.001663	.000764	.001907
.000465	.001178	.000565	.001422	.000665	.001667	.000785	.001911
,000466	.001182	.000566	.001426	. 000666	.001670	.000766	.001914
.000467	.001186	4	. 001430	000667			001010
		.000567		i	.001674	.000767	.001918
.000470	.001190	.000570	.001434	. 200670	.001678	.000770	.001922
.000471	,001194	.000571	.001438	.000671	.001682	.000771	.001926
.000472	.001197	.000572	.001441	.000672	.001686	.000772	.001930
.000473	.0012	.000573	.001445	.000673	.001689	.000773	.001934
.000474	.001205	.000574	,001449	.000674	.001693	.000774	.001937
.000475	.001209	.000575	. 001453	.000675	.001697	.000775	.001941
.000476	. 001213	. 000576	.001457	.000676	. 001701	.000776	.001945
.000477	.001216	.000577	.001461	.000677	.001705	. 000777	.001949
		1		1			
				<u> </u>			

Index

${f A}$		В	
AA01-A Digital-To-Analog	6-82	BA12 Peripheral Expander	1-6
Accumulator (AC), Description	1-3	β-Class Format	3-6
Accumulator, I/O Transfers	5-9	β-Class Instruction Format	3-4
A-D Converter Controls	6-78	β-Register	3-4
A-D Converter Instructions	6-78	β-Register Indexing	3-5
AD12 Analog-Digital Converter and Multiplexer	3-35	Block, (LINCtape)	3-39
Addressing: a-Class	3-6	Block Number (BM)	3-39
Addressing, Combination of		Break Field Register, Extended Memory	4-19
Extended Memory Programming	4-21	-	
Addressing Methods, 8 Mode	4-2		
Addressing Methods, Memory	3-3	С	
Addressing: a-Class	3-6	Cable Connections, Front Panel	G-1
β-Register	3-4	Cable Connections to I/O Bus	5-45
β-Register Indexing	3-5	Cable Selection	5-40
Direct Addressing, LINC mode	3-3	Card Readers	6-63
Indirect Addressing: β-Class	3-3	Card Reader and Control CR12	6-63
AF01-A A-D Converter Specifications	6-76	CM12 Optical Mark Card Reader	6-66
AF01-A Analog-To-Digital Converter	6-76	CM12 Optical Mark Card Reader Instructions	6-66
AF01-A Sample and Hold Options	6-81	Controls and Indicators CM12	6-67
a-Class, Addressing	3-6	Control or Indicator, CR12	6-65
a-Class and Non-Memory Reference Format	3-6	Instructions, CM12 Optical Mark	
α-Class and Others	3-6	Card Reader	6-66
a-Class Operations	3-14	Instructions, CR12 Card Reader	6-63
Analog-To-Digital Converter AF01-A	6-76	Optical Mark Card Reader, CM12	6-66
Analog Inputs	1-5,3-35	Card Reader and Control CR12	6-63
Analog Inputs, Equipment	1-1	Central Processor, Logic Description	1-1
Analog Knobs and Power Switch Panel	2-8	Accumulator (AC), Description	1-3
Analog-To-Digital	6-76	Instruction Field Register (IF), 5-Bits	1-4
A-D Converter Controls	6-78	Instruction Register (IR), 12 Bits	1-3
Analog-To-Digital Converter AF01-A	6-76	Link (L) 1 Bit	1-3
Instructions, A-D Converter	6-78	Memory Address Register (MA) 12 Bits	1-3
Sample and Hold Options, AF01-A	6-81	Memory Buffer (MB), 12 Bits	1-3
Specifications, AF01-A A-D Converter	6-76	Mode Status Register 1 Bit	1-3
ASR-33 Character Set Display Pattern	3-34	Program Counter (PC) 12 Bits	1-3
Autoindexing, Extended Memory Programming	4-21	Central Processor, Major State Indicators	2-3
Autoindexing, 8 Mode	4-4	Central Processor, Miscellaneous Indicators	2-4
Auxiliary Scope Connector	1-5	Central Processor, Register Indicators	2-3

Channeston D'aulion	2.22	D . D . L . T . C	
Character Displays	3-32	Data Break Transfers	5-2,5-21
Character Set Character Size	3-33	Data Break Input Interface Logic Data Break Output Interface Logic	5-24
Checksum (CM)	1-5,3-29 3-39	Data Break Output Interface Logic Data Break Output Transfer Timing	5-26 5-25
Check Words (CW)	3-39	Data Break Single Cycle Timing	5-23
Classic LINC	1-4	Data Break Transfer Interface	5-23
CM12 Optical Mark Card Reader	6-66	Increment CA Inhibit, Three Cycle Data Break	5-30
Controls and Indicators CM12	6-67	Input Data Transfers, Data Break	5-22
Codes, Table of	F-1	Memory Increment, Data Break	5-27
Combining Group 1 Operations	4-9	Memory Increment, Data Break Timing	5-28
Combined Operations: Group 1	4-8	Output Data Transfers, Data Break	5-23
Combined Skips In Group II	4-11	Three Cycle Data Break	5-29
Command Register, Contents, Magnetic Tape	6-51	Three Cycle Data Break Timing	5-29
Configuration of, PDP-12	1-1	Word Count Overflow, Three Cycle Data Break	5-30
Connections, Front Panel Cable	G-1	Data Break Transfer Interface	5-21
Connections, Interface	5-44	Data Break, Types of	5-21
Connections, I/O Bus Cable	5-45	Data Buffer DB12-P, N	
Connector Selection	5-41	Data Field	3-1
Console Controls and Indicators	2-1	Data Field in Memory	1-4
Console Key Functions	2-6	Data Field Register, Extended Memory	4-19
Console Switches	3-22	Data Field Reserved Locations	3-2
Console Toggle Switches	3-7	Data, Mathematical Table	H-1
Console Teletype Control	6-5	Data Path	3-39
Controls and Indicators	2-1	Data Terminal	1-5,3-35
Control Registers	3-40	Analog Extension Panel	2-1
Continued Operations, Magnetic Tape	6-49	ATR AC to Relays	3-37
Construction of Interfaces	5-39	Clock Input Panel	2-1
Converting ASCII Code to PDP-12 Teletype	6-3,F-3	Fast Sample	3-36
Conventions, Logic	5-3	Power Switch Panel	2-1
CRT Display Character Size	1-45	Relay and Analog Input Panel	2-7
CRT Display, Equipment	1-1	Relay Terminals and Corresponding AC Bits	3-36
CRT Display, Remote	3-31	RTA Relays to AC	3-37
CRT Display, VR12	2-1,3-31	SAM Sample	3-36
ASR-33 Character, See Display Pattern	3-34	Data Transfers, see Programmed Data Transfers	5-2
Character Displays Character Set	3-32 3-33	Data Transfers, Input	5-10
DIS Display (a-Class)	3-33 3-32	Data Transfers, Output	5-11
DSC Display (α-class) DSC Display Character (β-Class)	3-32 3-32	Data Transfer Timing Data Words (DM, FM)	5-6
DSC Display Pattern for	3-33	DB12-P, N Data Buffer	3-39 6-73
Half-Size Characters	3-33	DC02-D Instructions	6-15
Point Displays	3-33	DC02-E Control Instructions	6-14
CR12 Card Reader and Control	6-63	DC02-E Multiple Teletype Control	6-13
CR12 Card Reader, Control or Indicator	6-65	DC02-F Multiple Teletype Control	6-16
CR12 Card Reader Instructions	6-63	DC02-F Instructions	6-17
Counter Register, KW12-A	6-62	Decoding, Instruction IOT	5-4
Current Address, Three Cycle Data Break	5-29	Device Selector	5-7
•		DF/DS32, -D Random Access Disk File,	
D		Instructions	6-27
D		Digital-To-Analog	6-82
Dataphone Control, Type DP12-B	6-9	Digital-To-Analog AA01-A	6-82
Dataphone Interface DP12-B	1-6	Digital-To-Analog AA01-A	6-82
Data Break, Input Data Transfers	5-22	Direct Address	3-6
Input Interface Logic	5-24	Direct Addressing	4-2
Memory Increment	5-27	Direct Address Format of	3-3
Output Data Transfers	5-23	DIS Display (a-Class)	3-32
Output Interface Logic	5-26	Disable Teletype Interrupt	3-29
Output Transfer Timing	5-25	Disk Cartridge Memory, RK8/RK01	6-38
Request for	5-22	Disk Memory System, RF/RS08	6-30
Single Cycle	5-21	Disk, RK8-P, RK8-N, RK01, RK01-K	6-43
Single Cycle Timing	5-23	Disk Storage	6-27
Three Cycle	5-21,5-29	DF/DS32, -D Instructions	6-27
Three Cycle Timing	5-29	Disk Cartridge Memory, RK8/RK01	6-38

DE 1000	ć 20	DID D. LL D. CC	4.20
Disk Memory System, RF/RS08	6-30	RIB Read Interrupt Buffer	4-20
Instructions, RF32 to RF/RS08 Comparison	6-35	RIF Read Instruction Field	4-20
Instructions, RK08/RK01	6-38	RMF Restore Memory Field	4-20
Programming, Disk Software	6-44	Program Interrupt, Extended Memory	4-22
Programming, RK08/RK01 I/O Subroutine	6-42	Programming, Extended Memory	4-21
Random Access Disk File,	6.07	Register, Extended Memory	4-19
DF/DS32 and DF/DS32-D	6-27	Save Field Register, Extended Memory	4-19
RF/RS08 Instructions	6-30	Extended Memory, 8 Mode see also	
RF/RS08 Programming, Example	6-34	LINC mode control	3-22
Specifications, RF/RS08	6-37	Extended Operations	3-45
Specifications, RK9/RK01	6-43	Extended Operations Buffer	3-41
Display	1-5	Extended Operations, LINCtape	3-40
Display Scope Controls	2-11	Extended Tape Addressing	1-4
Division	4-18	Hold-motion	1-4
Division of 24-bit numbers		No-Pause	1-4
EAE Programming	4-17	Program Interrupt	1-4
DM12	5-20	Tape Interrupt	1-4
DSC Display Character (β-Class)	3-32	with Core	1-4
DSC Display Pattern for,	3-33	Extended Units	3-47
DW08A I/O and Bus Converter	1-6	External Level Lines	3-20
		External Skips	3-20
E			
EAE Instruction Format	4-13	\mathbf{F}	
EAE Instructions	4-13		
ASR Arithmetic Shift Right	4-16	Fast Sample	3-29
ASR, Shift Path for	4-16	Field Address, Use of	3-2
CLA Clear AC	4-14	First Word	3-42
DVI Divide	4-15	Fixed Interval Clocks	6-25
LSR Logical Shift Right	4-16	Format Routines	6-7
LSR, Shift Path for	4-16	Frequency Range, KW12-B,C	6-26
MQA Place MQ in AC	4-14	Front Panel Cable Connections	G-1
MQL Load MQ from AC	4-14	Full-Word Arithmetic	3-8
MUL Multiply	4-15	Full-Word Comparison	3-12
NMI Normalize	4-15	Full-Word Data Transfers	3-7
NMI, SHL Shift Path for,	4-15	Full-Word Instructions	3-7
SCA Step Counter to AC	4-14	Full-Word Logic	3-11
SCL Load Step Counter	4-14	Functional Description, Magnetic	
SHL Shift Left	4-15	Tape Control	6-45
Effective Address, 8 Mode	4-4		
Effective Addressing	3-3	G	
8 Mode Instructions	B-1	O	
8 Mode Perforated Tape Loader	D-1	General Description, System PDP-12	1-1
End-around carry	3-8	Group I, Operate Class Instruction Format	4-7
Extended Address Format	3-46	Group II, Combined Skips	4-11
Extended Arithmetic Element,		Group II, Operate Class	4-9
Programming for	4-16	Guard Word (GM)	3-39
Extended Arithmetic Element (EAE), KE12	1-6,4-13		
Extended Arithmetic Element, KE12	4-13	Н	
Extended Memory	4-2,4-19	11	
Addressing Combination of Extended	,	Half-Size Characters	3-33
Memory Programming	4-21	Half-Word Addressing, defined	3-13,3-14
Autoindexing, Extended Memory Programming		Hold-Motion, Extended Tape Addressing	1-4
Break Field Register, Extended Memory	4-19	Hold Unit Motion	3-48
Data Field Register, Extended Memory	4-19		
Extended Memory, Calling A Subroutine		T	
Across Fields	4-21	Ĭ	
Instruction Field Buffer, Extended Memory	4-21 4-19	I-Bit	3-4
Instruction Field Register, Extended Memory	4-19 4-19	I-Bit, Octal Value	3-7
Instructions, Extended Memory	4-19 4-19	I-Bit, 8 Mode Addressing	4-4
CDF Change Data Field	4-19	Increment CA Inhibit, Three Cycle	, ,
CIF Change Instruction Field	4-20	Data Break	5-30
RDF Read Data Field	4-20 4-20	Incremental Plotter XY12	1-6
NDF Nead Data Field	4-20	merementar rotter A112	1-0

Incremental Plotter and Control		Interface Modules	5-30
Type XY12	6-68	Interrupt, LINC mode,	
Indexing, β-Register	3-5	data path during	3-27
Indicators & Controls	2-3	Interrupt, LINC Mode Service Routine	3-29
Analog Knobs and Power Switch Panel	2-8	Interrupt OFF, IOF	4-13
Central Processor Major State Indicators	2-3	Interrupt ON, ION	4-12
Central Processor Miscellaneous Indicators	2-4	Interrupts, LINC Mode M	3-26
Central Processor Register Indicators	2-3	Instruction Decoding, IOT	5-4
Console Key Functions	2-6	Instruction Descriptions, see Instructions	3-7
Display Scope Controls	2-11	Instruction Field	3-1
Individual Console Toggle Switches	3-7	Instruction Field Buffer (IB)	3-24
Tape Processor Major State Indicators	2-4	Instruction Field and Data Field Registers	3-2
Teletype Model 33ASR Controls	2-14	Instruction Field Register (IF), 5-Bits	1-4
Toggle Switch Registers	2-6	Instruction Field Register,	
TU55 Tape Transport Controls and Indicators	2-12	Extended Memory	4-19
Indirect Address, β-Class	3-6	Instruction Field Reserved Locations	3-2
Indirect Addressing	3-3,4-3	Instruction Format	3-7,3-41
Input Data Transfers	5-10	Instruction Format, Group II Operate Class	4-10
Input Data Transfers, Data Break	5-16	Instruction Formats, Direct Address,	
Input/Output Bus Description	3-22,5-1	Indirect Address β -Class, α -Class and others	3-6
Input/Output Facilities and Display,	,-	Instruction Register (IR), 12 Bits	1-3
LINC mode, I/O Bus	1-5	Instruction Set, 8 Mode	3-1,4-5, B -1
Analog Inputs	1-5	AND Logical And to AC	4-6
Auxiliary Scope Connector	1-5	CIA Complement and Increment AC	4-9
Dataphone Interface DP12-B	1-6	CLA Clear Accumulator	4-10
Data Terminal	1.5	CLL Clear Link	4-7
Display	1-5	CMA Complement Accumulator	4-7
Extended Arithmetic Element (EAE) KE12	1-6	CML Complement Link	4-8
Incremental Plotter XY12	1-6	DCA Deposit and Clear Accumulator	4-5
Input/Output I/O Bus	1-6	GLK Set Link	4-9
Keyboard/Printer	1.6	HLT Halt	4-11
LINCtape	1-5	IAC Increment Accumulator	4-8
Programmable Real-Time Interface KW12A	1-6	ISZ Increment and Skip if Zero	4-6
Relay Buffer	1-5	JMP Jump	4-6
Sense Lines	1-5	JMS Jump to Subroutine	4-6
TTY Interface, DP12-A	1-6	LAS Load Accumulator from Switches	4-10
Input/Output Skip	5-8	LINC Switch to LINC mode	4-12
Input/Output Transfer Class	4-12	NOP No Operation	4-7
Interaction between Modes Switching	1-5	OSR OR Switch Register with AC	4-11
Interface Connections	5-44	RAL Rotate Accumulator Left	4-8
Interface Construction	5-39	RAR Rotate Accumulator Right	4-8
Interface Design and Construction	5-30	RTL Rotate Two Places Left	4-8
Cable Connections to I/O Bus	5-45	RTR Rotate Two Places Right	4-8
Cable Selection	5-40	SKP Skip Unconditionally	4-10
Connector Selection	5-41	SMA Skip on Minus AC	4-10
Construction of Interfaces	5-39	SNA Skip on Non-Zero AC	4-10
Interface Connections	5-44	SNL Skip on Non-Zero Link	4-10
Interface Modules	5-30	SPA Skip on Plus AC	4-11
IOT Allocations, Octal	5-43	STA Set Accumulator	4-9
Module Cooling	5-43	STL Set Link	4-9
Module Layout	5-40	SZA Skip on Zero AC	4-10
Module Selection for Interface Circuit of	5 40	SZL Skip on Zero Link	4-10
Peripheral Equipment	5-32	TAD Two's Complement Add to AC	4-5
M-Series Flip Chip Modules	5-34	Instruction Trap	3-29,3-30,3-49
M-Series Module Summary	5-34 5-35	Instructions,	J-27,J-30,J*47
M101 Bus Data Interface	5-33	A-D Converter	6-78
M103 Device Selector	5-33	CM12 Optical Mark Card Reader	6-66
M111/M906 Positive Input Circuit	5-30	CR12 Card Reader	6-63
M516 Positive Bus Receiver Input Circuit	5-30 5-31	Console Teletype Control	6-5
M623/M906 Positive Output Circuit	5-31 5-31	DC02-D	6-15
M660 Bus Driver Output Circuit	5-31 5-32	DC02-B DC02-E	6-14
Wiring Hints			3-7
withing times	5-32	Descriptions	3-1

DF/DS32, -D	6-27		3-2,A-1
EAE	4-13	Character Size	3-29
Extended Memory	4-19	Console Switches	3-22
Format Explanation of	3-7	Disable Teletype Interrupt	3-29
I/O Bus	C-1	Fast Sample	3-29
IOT	1-4	Full-Word Arithmetic	3-8
LINC	3-1,3-6,A-1	Full-Word Comparison	3-12
KP12	6-74	Full-Word Data Transfers	3-7 3-7
KW12-A	6-22	Full-Word Instructions	3-7 3-9
KW12-B,C	6-26	ADA Add to Accumulator (β-Class)	3-9 3-8
LPO8 Line Printer	6-60 6-59	ADD Add to Accumulator	3-8 3-9
LP12 Line Printer	6-39 6-45	ADM Add to Memory (β-Class)	
Magnetic Tape Control	0-43	APO Accumulator Positive	3-19
PC12, PP12 Paper Tape	6-71	AZE Accumulator Zero	3-19
Readers and Punch	6-71	BCL Bit Clear (β -Class)	3-11 3-12
PR12 Reader	6-12	BCO Bit Complement (β-Class)	3-12
PT08	6-35	BSE Bit Set (β -Class)	
RF32 to RF/RS08 Comparison	6-35 6-30	CLR Clear	3-21
RF/RS08		COM Complement AC	3-21
RK08/RK01	6-38	DJR Disable JUMP Return	3-28
Tape Maintenance	E-1	ESF Enable Special Functions	3-30
Two-word	1-4	FLO Overflow	3-20
XY12 Plotter	6-68	HLT Halt	3-21
IOB I/O Bus Enable	3-23	IBZ LINCtape Inter-Block Zone	3-20
IOB/IOT	3-25	IOB-IOF Interrupt Off	3-26
I/O Bus Access	1-4	IOB-ION Interrupt On	3-26
I/O Bus Cable Connections	5-45	IOB-RIB Read Interrupt Buffer	3-27
I/O Bus External Level Lines	3-20	IOB-RDF Read Data Field	3-26
I/O Bus Instructions	C-1	IOB-RIF Read Instruction Field	3-25
I/O Control	5-4	IOB-RMF Restore Memory Fields	3-27
I/O Handler, LINC-8 Simulator		JMP Jump	3-15
Trap Processor	1-4	KST Key Stuck	3-21
IOP Generation	5-5	LAM Link Add to Memory (β-Class)	3-9 3-8
IOP Generation and Timing	5-6	LDA Load Accumulator (β-Class)	
I/O Preset Pulse	3-29	LDF Load LINC Data Field Register	3-25
I/O Program Interrupt	5-11	LDH Load Half	3-14 3-24
IOS, Multiple Inputs	5-13	LIF Load LINC Instruction Field Buffer	
IOS and Program Interrupts,	5.12	LINC Switch to the LINC Mode (see PDP)	3-22 3-22
Multiple Inputs	5-13	LSW Left Switches	3-22 3-19
IOT Allocations, Octal	5-43	LZE Link Zero	
IOT Command Pulse Generation	5-7	MUL Multiply (β-Class)	3-10
IOT Instruction	1-4	NOP No Operation	3-21
IOT Instruction Decoding	1-4	PDP Switch to the 8 Mode	3-22
		QAC Place MQ in AC	3-21
J-K		QLZ MQ Low-Order Bit Zero	3-19
Keyboard Reader	6-5	ROL Rotate Left	3-16
Keyboard/Printer	1-6	ROR Rotate Right	3-17
KF12B	5-15	RSW Right Switches	3-22
KP12 Instructions	6-74	SAE Skip if Accumulator Equal to	2.12
KP12 Power Failure Option	6-74	Operand (β-Class)	3-12
KP12 Power Fail/Restart	6-74	SCR Scale Right	3-18
KW12-A Input Panel	6-22	SET Set a-Register	3-14
KW12-A Instructions	6-22	SFA Place Special Function Flip-Flops in A	
KW12-A Real-Time Interface	6-18	SHD Skip if Half Differs	3-14
KW12-A with A-D	6-22	SKP Skip Unconditionally	3-20
KW12-B, KW12-C	6-25	SNS Sense Switch	3-20
KW12-B, C Instructions	6-26	SRO Skip and Rotate (β-Class)	3-13
		STA Store Accumulator (β-Class)	3-8
L		STC Store and Clear (Direct Address)	3-7
LAP6-DIAL-MS	6-44	STH Store Half	3-14
LINC Instruction Trap	3-24	SXL Skip on External Level	3-20
LINC Mode Direct Access Devices	1-4	XSK Index and Skip	3-15

Full-Word Logic	3-11	Tape Buffer (TB)	3-40
Half-Word Addressing, defined	3-13,3-14	Tape Interrupt Enable	3-40
LINC Mode I/O Bus Access	1-4	Tape Memory Address (TMA)	3-47
LINC Mode IOT Instructions	3-25	Tape Motion	3-42
LINC Mode, Memory Modules	1-4	Tape Trap	3-49
LINC Mode Programming	3-1	Tape Word Skip	3-49
LINC Mode Program Interrupt	3-26	LINC-8, Comparison with PDP-12	1-1
LINC Mode Provisions of	1-4	LINC-8 Programs	3-31,3-49
LINC Switch to LINC Mode	4-12	LINC-8 Program Changes	1-4
LINCtape, Equipment Required	1-1,1-5	Line Printers	6-59
LINCtape Formats	3-37	Instructions, LP08 Line Printer	6-60
LINCtape Instructions	3-43	Instructions, LP12 Line Printer	6-59
LINCtape Option, TC12-F	6-57	Line Printer and Control LP08	6-60
LINCtape Processor Information Paths	3-40	Line Printer and Control, LP12	6-59
LINCtape Programming	3-41	LP08 Line Printer Specifications	6-62
LINCtape Registers	3-39	Line Printer and Control LP08	6-60
LINCtape Transport, Type TU55	2-1	Line Printer and Control, LP12	6-59
LINCtape TC12	3-37	Link	3-8,3-9
Block (LINCtape)	3-39	Link (L) I Bit	1-3
Block Number (BM)	3-39	Logic Conventions	5-3
Check Words (CM)	3-39	Logic Symbols, Figure 5-1	5-3
Checksum	3-39	LP08 Line Printer and Control	6-60
Control Registers	3-40	LP08 Line Printer Instructions	6-60
Data Path	3-39	LP08 Line Printer Specifications	6-62
Data Words (DM, FM)	3-39	LP12 Line Printer and Control	6-59
Extended Address Format	3-46	LP12 Line Printer Instructions	6-59
Extended Operations	3-45	LT37-AD Option, Teletype	6-4,F-3
Extended Operations Buffer	3-41	••	
Extended Units	3-47	M	
First Word	3-42	Magnetic Tape	6-45
Guard Word (GM)	3-39	Command Register Contents, Magnetic Tape	6-51
Hold Unit Motion	3-48	Continued Operations, Magnetic Tape	6-49
Instruction Format	3-41	Functional Description, Magnetic Tape Contro	
LINCtape Instructions	3-43	General Description, TU20C	6-56
AXO AC to XOB	3-46 2-45	Instructions, Magnetic Tape Control	6-45
CHK Check One Tape Block	3-45	LINCtape Option, TC12-F	6-57
IOB-LMR Load Maintenance Register MTB Move Toward Block	3-48 3-45	Magnetic Tape Control, TC58 Magnetic Tape Functions	6-45 6-47
RDC Read and Check	3-43	Magnetic Tape Transports	6-54
RDE Read Tape	3-43	Magnetic Tape Transports Magnetic Tape Transports, TU20	0-34
RDG Read and Check Group	3-43	(7 Channel, 9-Track)	6-54
STD Skip if Tape Done	3-48	Magnetic Tape Transport, TU20C	6-56
TAC Tape Accumulator to AC	3-45	Magnetic Tape Control, TC58	6-45
TMA Load TMA Setup Register	3-46	Magnetic Tape Control Instructions	6-45
TWC Skip on Tape Word Complete	3-49	Magnetic Tape Functions	6-47
XOA XOB to AC	3-46	Magnetic Tape Transports	6-54
WCG Write and Check Group	3-44	Magnetic Tape Transports, TU20	
WRC Write and Check	3-44	(7 Channel, 9-Track)	6-54
WRI Write Tape	3-44	Magnetic Tape Transport, TU20C	6-56
LINCtape Processor Information Paths	3-40	Maintenance Mode	3-49
LINCtape Programming	3-41	Mark Condition	3-48
Maintenance Mode	3-49	MARK 12 Program	3-48
Mark Condition	3-48	Mathematical Tables	H-1
No Pause Condition	3-48	Maximum Data Rates PT08	6-13
Organization of Data	3-37	Memory Address Control	3-24
Organization of LINCtape Data, Schematic	3-38	Memory Addressing Methods	4-2
Read/Write Buffer (RWB)	3-39	Autoindexing, 8 Mode	4-4
Reverse Block Number (RBM)	3-39	Direct Addressing	4-2
Second Word	3-42	Indirect Addressing	4-3
Subprocessor, LINCtape	3-39	Memory Reference Instruction Format	4-3
Tape Accumulator (TAC)	3-40	Summary Addressing Methods,	
Tape Block Number (TBN)	3-41	8 Mode, Table of	4-4

Memory Address Register (MA) 12 Bits 1-3 CRT Display, Character Size 1-3				1.5
Memory Control Programming 3-24 Tape Interrupt, Rogam Interrupt, Supments of, Pages of 14 Hold Motion, Extended Tape Addressing 1-4 Hold Motion, Extended Tape Addressing 1-5 Memory Extension Control 4-19 Hold Motion, Extended Tape Addressing 1-5 Memory Extended Tape Addressing 1-5 Memory Extended Tape Addressing 1-5 Memory Reference Instructions 4-1,4-3,4-5 Memory Size, PIP-12	Memory Address Register (MA) 12 Bits	1-3	CRT Display, Character Size	1-5
Memory Description Organization of 1-4				
Segments of, Pages of 1-4 Hold-Motion, Extended Tape Addressing 1-4 Memory Paces profile 1-5 Memory Paces profile 1-5 Memory Increment, Data Break 1-5 Memory Increment Data Break Timing 5-28 No-Pause, Extended Tape Addressing 1-4 Memory Organization of 3-1 No-Pause, Extended Tape Addressing 1-4 Memory Organization of 1-4 No-Pause, Extended Tape Addressing 1-4 Memory Organization of 1-4 Memory Size, PDP-12 M		3-24		1-4
Memory Extension Control 4-19 Interaction between Mode Switching 1-5		1-4	·	1-4
Memory Increment, Data Break 5-27 Mo Bus Access 1-4				1-5
Memory Increment Data Breik Timing 5-28 No-Pause, Extended Tape Addressing 1-4 Memory, Organization of 3-1 Special Functions, LINC Programming 1-5 Memory Reference Instructions 4-1,4-3,4-5 Memory Reference Instructions 4-1,4-3,4-5 Microprogrammable EAE Instructions 4-1,4-3,4-5 Microprogrammable EAE Instructions 4-1,4-3,4-5 Microprogrammable Date Instructions 4-1,4-3,4-5 Microprogrammable Date Instructions 4-1,4-3,4-5 Microprogrammable Date Instructions 4-1,4-4 Microprogrammable Date Instructions 4-1,4-4 Microprogrammable Date Instructions 4-1,4-4 Microprogrammable Date Instruction 4-1,4-4 Mode Control 4-1,4-4 Mode Control 4-1,4-4 Mode Control 4-1,4-4 Mode Ontrol, from 8 to LINC 4-1,2 Mode Ontrol, from 8 to LINC 4-1,2 Mode Ontrol Memory, 8 Mode 4-2 Granization of Memory, 8 Mode 4-2 Granization of Memory, 8 Mode 4-2 Field Address, 18-0 4-1 Model Status Register 1 Bit 1-3 Model Status Register 1-8 Model Status R	•			1-4
Memory, Organization of 3-1 Special Functions, LINC Programming 1-5 Memory Deference Instructions 4-1,4-34,5+5 Tape Interrupt, Extended Tape Addressing 1-4 Memory Size, PDP-12 1-1 Operation, Program Interrupt 4-12 Microprogrammable EAE Instructions 4-13 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-9 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-9 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-9 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-9 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-1 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-1 Operate Class Group II 4-1 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-1 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-1 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-1 Option Groupings, Peripheral Devices 6-1 Microprogramming Operate Class Group II 4-1 Option Groupings, Peripheral Devices 3-3 Mode Control, From 8 to LINC 4-12 Organization of LiNC Memory, 8 Mode 6-1 Mode Status Register I Bit 4-1 Option Groupings, Peripheral Devices 3-2 Mode Status Register I Bit 4-1 Option Groupings 4-1 Model Status Register I Bit 4-1 Option Groupings 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping 4-1 Model Status Register I Bit 4-1 Option Grouping		5-28		1-4
Memony Skeference Instructions		3-1		1-5
Memory Size, PDF-12		4-1,4-3,4-5		1-4
Microprogrammable AEA Instructions		1-1	Operation, Program Interrupt	
Microprogrammile Dericals Group II		4-7		
Mode Control, from 8 to LINC 3-22 Organization of LINCtape Data, Schematic 3-38		4-13	Option Groupings, Peripheral Devices	
Mode Control, from 8 to LINC 4.12 Organization of LINCtape Data, Schematic 3.42 Mode Programming, 4.1 Organization of Memory, 8 Mode 4.2 Mode Programming, 4.1 Organization of Memory, 8 Mode 3.2 Organization of Memory, 8 Mode 4.2 Field Address, Use of 3.2 Organization of Memory, 8 Mode 4.2 Field Address, Use of 3.2 Mode Status Register I Bit 1.3 Instruction Field and Data Field Registers 3.2 Model 33KSR, Teletype 6-3 Reserved Field Address, 8 and LINC mode 3.2 Model 33KSR, Teletype 6-4 Output, Data Transfers 5-11 Model 35KSR, Teletype 6-4 Output, Data Transfers 5-11 Model 50 Gypartion, LINC and 8 1-1 Overflow, defined 5-2 Module Looling 5-40 Forgan Counter, LINC 3-8 Module Selection for Interface Forgan Counter, LINC 3-8 Module Selection for Interface Forgan Counter, LINC 4-1 Multiplication of 12-bit Numbers Fage O 4-1 Multiplication of 12-bit N	Microprogramming Operate Class Group II	4-9		
Mode Programming 4-1 Organization of Memory, General 3-1 Extended Memory 4-2 Data Field Reserved Locations 3-2 Page 0 4-1 Instruction Field and Data Field Registers 3-2 Page 0 4-1 Instruction Field Reserved Locations 3-2 Mode Status Register 1 Bit 1-3 Instruction Field and Data Field Registers 3-2 Mode Status Register 1 Bit 1-3 Instruction Field and Data Field Registers 3-2 Mode 33ASR, Teletype 6-3 Program Counter, LINC mode 3-2 Model 33KSR, Teletype 6-4 Output, Data Transfers Sand LINC mode 3-2 Model 35KSR, Teletype 6-4 Output, Data Transfers Data Break 5-23 Module Layout 5-40 Verflow, defined Section for Interface Programming 4-1 Model Selection for Interface Programming 4-1 Pages, Memory 4-1 Multiplication of 1-2-bit Numbers Pages, Memory 4-1 Maseries Module Summary 5-35 Page 0 4-1 Maseries Flip-Chip Modules 5-34 Paper Tape Punch and Reader PC12 6-71 Mil 10 Bus Data Interface 5-33 Instructions, PC12, PP12 Paper Tape Mil Bus Data Interface 5-33 Readers and Punch 6-71 Mil 10 Bus Driver Output Circuit 5-31 Paper Tape Punch and Reader PC12 6-71 M60 Bus Driver Output Circuit 5-31 Paper Tape Punch and Reader PC12 6-71 M60 Bus Driver Output Circuit 5-31 Paper Tape Punch and Reader PC12 6-71 M60 Bus Driver Output Circuit 5-31 Paper Tape Punch and Reader PC12 6-71 M70 Receiver, Teletype Control 6-5 Peripheral Leviese 6-71 Multiple Teletype Control 6-5 Peripheral Equipment requirements of 6-71 Multiple Teletype Control DC0-E 6-13 Peripheral Expander, BA12 6-74 Multiple Use of IOS and Program Interrupt 5-15 Peripheral Expander, BA12 6-74 Multiple Teletype Control DC0-E 6-16 Peripheral Expander, BA12 6-74 Multiple Teletype Control DC0-E 6-16 Peripheral Expander, BA12 6-74 Multiple Teletype Control DC0-E 6-16 Peripheral Expander, BA12 6-74 Multiple T		3-22		
Section Sect	Mode Control, from 8 to LINC	4-12		
Organization of Memory, 8 Mode 4-2 Field Address, Use of 3-2	Mode Programming,			
Page 0	Extended Memory			
Mode Status Register 1 Bit 1-3	Organization of Memory, 8 Mode			
Model 33ASR, Teletype	Page 0			
Model 35KSR, Teletype	Mode Status Register 1 Bit			
Model 37KSR, Teletype				
Model 37KSR, Teletype 6-4 Output, Data Transfers, Data Break 5-23				
Modes of Operation, LINC and 8	, • • •			
Module Cooling S-40 Module Cooling S-40 Module Selection for Interface Circuits of Peripheral Equipment S-32 Page 0 M-Series Module Summary S-35 Page 0 M-Series Module Summary S-35 Page 0 M-Series Module Summary S-35 Page 0 M-Series Module Summary Multiplication of 12-bit Numbers Pages, Memory M-Series Flip-Chip Modules S-34 Paper Tape Punch and Reader PC12 G-71 M-Series Flip-Chip Modules S-34 Paper Tape Punch and Reader PC12 G-71 M-Series Flip-Chip Modules S-33 Instructions, PC12, PP12 Paper Tape M103 Device Selector S-33 Readers and Punch G-71 M11/M906 Positive Input Circuit S-30 Paper Tape Punch and Reader PC12 G-71 M516 Positive Bus Receiver Input Circuit S-31 PC12 Paper Tape Punch and Reader PC12 G-71 M623/M906 Positive Output Circuit S-31 PC12 Paper Tape Punch and Reader PC12 G-71 M660 Bus Driver Output Circuit S-31 PC12 Paper Tape Punch and Reader PC12 G-71 M706 Receiver, Teletype Control G-5 Peripheral Equipment P0P-12 G-1 M707 Transmitter, Teletype Control G-5 Peripheral Equipment requirements of S-4 Multiple Teletype Control DC02-E G-13 Peripheral Equipment requirements of S-4 Multiple Use of IOS and Program Interrupt S-14 Peripheral Status Testing S-9 Multiple Use of IOS and Program Interrupt S-14 Pripheral Status Testing S-3 Multiple Use of IOS and Program Interrupt S-14 Pripheral Status Testing G-71 Program Control G-74 Program Co				
Module Layout 5-40 Module Selection for Interface P Circuits of Peripheral Equipment 5-32 M-Series Module Summary 5-35 Page 0 4-1 Multiplication of 12-bit Numbers Pages, Memory 4-1 EAE Programming 4-17 Paper Tape Punch and Reader PC12 6-71 M-Series Flip-Chip Modules 5-34 Paper Tape 6-71 M101 Bus Data Interface 5-33 Instructions, PC12, PP12 Paper Tape 6-71 M103 Device Selector 5-33 Readers and Punch 6-71 M11/M906 Positive Input Circuit 5-31 PC12 Paper Tape Punch and Reader PC12 6-71 M516 Positive Bus Receiver Input Circuit 5-31 PC12 Paper Tape Punch and Reader PC12 6-71 M650 Bus Driver Output Circuit 5-31 PC12 Paper Tape Punch and Reader PC12 6-71 M660 Bus Driver Output Circuit 5-31 PC12 Paper Tape Punch and Reader PC12 6-71 M660 Bus Driver Output Circuit 5-31 PC12 Paper Tape Punch and Reader PC12 6-71 M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-	•		Overflow, defined	3-0
Module Selection for Interface S-32 Circuits of Peripheral Equipment S-32 Page 0 4-1				
Circuits of Peripheral Equipment 5-32 Meseries Module Summary 5-35 Page 0 4-1 Meseries Module Summary 4-1 Pages, Memory 4-1 Meseries Module Summary 4-1 Pages, Memory 4-1 Meseries Michael Meseries Memory 4-1 Pages,		3-40	p	
Moderies Module Summary S-35 Page 0 4-1		5-32	1	
Multiplication of 12-bit Numbers			Page ()	4-1
EAE Programming		0 00	č	4-1
M-Series Flip-Chip Modules 5-34 Paper Tape 6-71	•	4-17		6-71
M101 Bus Data Interface 5-33 bigs of the program of the program of EAE Instructions, PC12, PP12 Paper Tape M103 Device Selector 5-33 bigs of the program of EAE Faper Tape Punch and Reader PC12 conventions 6-71 M111/M906 Positive Input Circuit 5-31 bigs of PC12, PP12 Instructions 6-71 M623/M906 Positive Output Circuit 5-31 bigs of PC12, PP12 Instructions 6-71 M660 Bus Driver Output Circuit 5-32 bigs of PP-8 Options used with PDP-12 6-1 M706 Receiver, Teletype Control 6-5 bigs of Perforated Tape Loader D-1 M707 Transmitter, Teletype Control 6-5 bigs of Peripheral Devices 6-1 Multiple Teletype Control DC02-E 6-13 bigs of Peripheral Equipment requirements of 5-4 Multiple Teletype Control, DC02-F 6-16 bigs of Peripheral Expander, BA12 6-1 Multiple Use of IOS and Program Interrupt 5-14 bigs of Peripheral Extant Testing 5-9 Multiplication 4-16 bigs of Program Tape Punch 6-71 bigs of Prower Fail/Restart 6-71 bigs of Prower Fail/Restart 6-74 bigs of Prower Fail/Restart 6-74 bigs of Prower Fail/Restart 6-74 bigs of Program Counter (PC) 12 Bits 6-74 bigs of Program Counter (PC) 12 Bits 6-74 bigs of Program Counter (PC) 12 Bits 1-3 bigs of Program			Paper Tape	6-71
M103 Device Selector 5-33 Readers and Punch 6-71 M111/M906 Positive Input Circuit 5-30 Paper Tape Punch and Reader PC12 6-71 M516 Positive Bus Receiver Input Circuit 5-31 PC12 Paper Tape Punch and Reader 6-71 M6623/M906 Positive Output Circuit 5-31 PC12, PP12 Instructions 6-71 M660 Bus Driver Output Circuit 5-32 PDP-8 Options used with PDP-12 6-1 M706 Receiver, Teletype Control 6-5 Perforated Tape Loader D-1 M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-1 Multiple Teletype Control DC02-E 6-13 Peripheral Expander, BA12 6-1 Multiple Teletype Control, DC02-F 6-16 Peripheral Status Testing 5-9 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiplication N Prewired, Optional Groupings 6-1 No Pause (Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing </td <td></td> <td>5-33</td> <td>Instructions, PC12, PP12 Paper Tape</td> <td></td>		5-33	Instructions, PC12, PP12 Paper Tape	
M516 Positive Bus Receiver Input Circuit 5-31 PC12 Paper Tape Punch and Reader 6-71 M623/M906 Positive Output Circuit 5-31 PC12, PP12 Instructions 6-71 M660 Bus Driver Output Circuit 5-32 PDP-8 Options used with PDP-12 6-1 M706 Receiver, Teletype Control 6-5 Perforated Tape Loader D-1 M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-1 Multiple Teletype Control DC02-E 6-13 Peripheral Equipment requirements of 5-4 Multiple Teletype Control, DC02-F 6-16 Peripheral Expander, BA12 6-1 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiple Use of IOS and Program Interrupt 4-16 PP12 Paper Tape Punch 6-71 No Pause I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Fail/restart 6-74 No Pogram Counter,		5-33		
M516 Positive Bus Receiver Input Circuit 5-31 PC12 Paper Tape Punch and Reader 6-71 M623/M906 Positive Output Circuit 5-31 PC12, PP12 Instructions 6-71 M660 Bus Driver Output Circuit 5-32 PDP-8 Options used with PDP-12 6-1 M706 Receiver, Teletype Control 6-5 Perforated Tape Loader D-1 M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-1 Multiple Teletype Control DC02-E 6-13 Peripheral Equipment requirements of 5-4 Multiple Teletype Control, DC02-F 6-16 Peripheral Expander, BA12 6-1 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiplication 4-16 PP12 Paper Tape Punch 6-71 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Faillre Option 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Faillre Option 6-74 Operands 3-3	M111/M906 Positive Input Circuit	5-30	Paper Tape Punch and Reader PC12	
M660 Bus Driver Output Circuit 5-32 PDP-8 Options used with PDP-12 6-1 M706 Receiver, Teletype Control 6-5 Perforated Tape Loader D-1 M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-1 Multiple Teletype Control priority Interrupt 5-15 Peripheral Equipment requirements of 5-4 Multiple Teletype Control DC02-E 6-13 Peripheral Expander, BA12 6-1 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiple Use of IOS and Program Interrupt 4-16 PP12 Paper Tape Punch 6-71 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 3-48 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 1-4 Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Interrupt 4-1		5-31	PC12 Paper Tape Punch and Reader	
M706 Receiver, Teletype Control 6-5 Perforated Tape Loader D-1 M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-1 Multi-Level Automatic Priority Interrupt 5-15 Peripheral Equipment requirements of 5-4 Multiple Teletype Control DC02-E 6-13 Peripheral Expander, BA12 6-1 Multiple Teletype Control, DC02-F 6-16 Peripheral Status Testing 5-9 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiple Use of IOS and Program Interrupt 4-16 PP12 Paper Tape Punch 6-71 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 1-4 Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3	M623/M906 Positive Output Circuit	5-31		
M707 Transmitter, Teletype Control 6-5 Peripheral Devices 6-1 Multi-Level Automatic Priority Interrupt 5-15 Peripheral Equipment requirements of 5-4 Multiple Teletype Control DC02-E 6-13 Peripheral Expander, BA12 6-1 Multiple Teletype Control, DC02-F 6-16 Peripheral Status Testing 5-9 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiplication 4-16 PP12 Paper Tape Punch 6-71 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Fail/Restart 6-74 Operands 3-3 Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3 Operate Class: Group I 4-7 Program Interrupt 4-12,5-12 Operate Class: Group I 4-7 Program Interrupt, see LINC	M660 Bus Driver Output Circuit		•	
Multi-Level Automatic Priority Interrupt 5-15 Peripheral Equipment requirements of 5-4 Multiple Teletype Control DC02-E 6-13 Peripheral Expander, BA12 6-1 Multiple Teletype Control, DC02-F 6-16 Peripheral Status Testing 5-9 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiplication 4-16 PP12 Paper Tape Punch 6-71 N Prower Fail/Restart 6-74 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 1-4 Frogram Counter, LINC mode 3-2 Operands 3-3 Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Interrupt 4-12,5-12 Operate Class: Group I 4-7 Program Interrupt, see LINC 4-12,5-12				
Multiple Teletype Control DC02-E 6-13 Peripheral Expander, BA12 6-1 Multiple Teletype Control, DC02-F 6-16 Peripheral Status Testing 5-9 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Multiplication 4-16 PP12 Paper Tape Punch 6-71 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 Program Counter, LINC mode 3-2 Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3 1-3 Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operation of EAE 4-13 Conventions, Logic 5-3 Operating Modes 1-4	M707 Transmitter, Teletype Control			
Multiple Teletype Control, DC02-F 6-16 Multiple Use of IOS and Program Interrupt Peripheral Status Testing 5-9 Multiple Use of IOS and Program Interrupt 5-14 Point Displays 3-32 Point Displays 3-13 Point Displays	Multi-Level Automatic Priority Interrupt			
Multiple Use of IOS and Program Interrupt Multiplication Solution Multiplication N Prewired, Optional Groupings Power Fail/Restart 6-74 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition No Pause, Extended Tape Addressing 1-4 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option Program Control Program Counter, LINC mode Program Counter (PC) 12 Bits 1-3 Operands Operate Class: Group I Operate Class: Group II Operate Class: Group II Operate Class: Instructions Operate Class Instructions Operation of EAE Operating Modes Operating Modes 5-14 Point Displays Prewired, Optional Groupings Frewired, Optional Grouping Frewired, O	Multiple Teletype Control DC02-E			
Multiplication 4-16 PP12 Paper Tape Punch 6-71 N Prewired, Optional Groupings 6-1 Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 Program Control 3-15 Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3 1-3 Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operation of EAE 4-13 Conventions, Logic 5-3 Operating Modes 1-4 Data Break Transfers 5-2	Multiple Teletype Control, DC02-F		•	
Non-Bus I/O Devices No Pause Condition No Pause Condition No Pause, Extended Tape Addressing Operands Operands Operands Operands Operands Operate Class: Group I Operate Class: Group II Operate Class: Group II Operate Class: Instructions Operation SI-S Operation of EAE Operating Modes Operating Modes Operating Modes Operating Modes Operating Modes Operating Modes Operate Class Instructions Operating Modes Operatic Operatic Operation of EAE Operating Modes Operatic Operation of EAE Operation	-			
Non-Bus I/O Devices 1-5 Instructions, KP12 6-74 No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option 6-74 No Pause, Extended Tape Addressing Program Control 3-15 Operands Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Interrupt 4-12,5-12 Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operating Modes 1-4 Data Break Transfers 5-2	Multiplication	4-10		
Non-Bus I/O Devices No Pause Condition 3-48 KP12 Power Fail/Restart 6-74 No Pause, Extended Tape Addressing 1-4 KP12 Power Failure Option Program Control Program Counter, LINC mode Program Counter (PC) 12 Bits 1-3 Operands Operate Class: Group I Operate Class: Group II Operate Class: Group II Operate Class: Instructions Operate Class Instructions Operation of EAE Operating Modes 1-4 Data Break Transfers 5-2 Operation Operate Class Instructions Operation Operate Class Instructions Operating Modes	N			
No Pause Condition No Pause, Extended Tape Addressing O No Pause, Extended Tape Addressing No Pause, Extended Tape Addressing O No Pause, Extended Tape Addressing Program Countrol Program Counter, LINC mode Program Counter (PC) 12 Bits 1-3 Program Interrupt Program Interrupt, see LINC Operate Class: Group II Operate Class: Group II Operate Class Instructions A-6 Programmed Data Transfers S-2 Operating Modes 1-4 Data Break Transfers 5-2	Non Bus I/O Devices	1-5	•	
No Pause, Extended Tape Addressing O No Pause, Extended Tape Addressing No Pause, Extended Tape Addressing O No Pause, Extended Tape Addressing No Program Counter (PC) 12 Bits 1-3 Program Counter (PC) 12 Bits 1-3 Program Interrupt Program Interrupt, see LINC Operate Class: Group II Operate Class: Group II Operate Class Instructions Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operating Modes 1-4 Data Break Transfers 5-2				
Program Control 3-15 Program Counter, LINC mode 3-2 Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Interrupt 4-12,5-12 Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operation of EAE 4-13 Conventions, Logic 5-3 Operating Modes 1-4 Data Break Transfers 5-2				
Program Counter, LINC mode Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Interrupt 4-12,5-12 Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operation of EAE 4-13 Conventions, Logic 5-3 Operating Modes 1-4 Data Break Transfers 5-2	No Fause, Extended Tape Addressing	1 ,		
Program Counter (PC) 12 Bits 1-3 Operands 3-3 Program Interrupt 4-12,5-12 Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operation of EAE 4-13 Conventions, Logic 5-3 Operating Modes 1-4 Data Break Transfers 5-2	0			3-2
Operands3-3Program Interrupt4-12,5-12Operate Class: Group I4-7Program Interrupt, see LINCOperate Class: Group II4-9Mode and 8 Mode ProgrammingOperate Class Instructions4-6Programmed Data Transfers5-2Operation of EAE4-13Conventions, Logic5-3Operating Modes1-4Data Break Transfers5-2	O			1-3
Operate Class: Group I 4-7 Program Interrupt, see LINC Operate Class: Group II 4-9 Mode and 8 Mode Programming Operate Class Instructions 4-6 Programmed Data Transfers 5-2 Operation of EAE 4-13 Conventions, Logic 5-3 Operating Modes 1-4 Data Break Transfers 5-2	Operands	3-3		
Operate Class: Group II4-9Mode and 8 Mode ProgrammingOperate Class Instructions4-6Programmed Data Transfers5-2Operation of EAE4-13Conventions, Logic5-3Operating Modes1-4Data Break Transfers5-2				•
Operate Class Instructions4-6Programmed Data Transfers5-2Operation of EAE4-13Conventions, Logic5-3Operating Modes1-4Data Break Transfers5-2				
Operation of EAE4-13Conventions, Logic5-3Operating Modes1-4Data Break Transfers5-2				5-2
Operating Modes 1-4 Data Break Transfers 5-2				
		1-5	Logic Symbols	5-3

Program Interrupt	5-2	KW12-A Input Panel	6-22
Signal Names	5-2	KW12-A Instructions	6-22
Programmed Data Transfers and I/O Control	5-4	KW12-A with A-D	6-22 6-25
Accumulator, I/O Transfers	5.9	KW12-B, KW12-C KW12-B, C Instructions	6-25
Data Transfer Timing	5-6	Real Time Interface, KW12-A	6-18
Data Transfers, Input	5-10	Register, Extended Memory	4-19
Device Selector	5-7	Relays	3-36
Input Data Transfers	5-10 5-8	Relay Buffer Equipment Description	1-1,1-5
Input/Output Skip IOS and Program Interrupt	5-8	Relay Terminals and Corresponding AC Bits	3-36
Multiple Inputs	5-13	Reserved Field Address, 8 and LINC Mode	3-2
IOT Command Pulse Generation	5-13 5-7	Reverse Block Number (RBM)	3-39
IOT Instruction Decoding	3-7	RF/RS08 Disk Memory System	6-30
Multiple Use of IOS and Program Interrupt	5-14	RF/RS08 Instructions	6-30
Output Data Transfers	5-11	RF/RS08 Programming, Example	6-34
Peripheral Status Testing	5.9	RF/RS08 Specifications	6-37
Programmed Data Transfer Interface Diagram	5-5	RK08/RK01 Disk Cartridge Memory	6-38
Programmed Data Transfer Timing	5-6	RK08/RK01 Instructions	6-38
Programmed Interrupt, I/O	5-11	RK08/RK01 I/O Subroutine Programming Example	6-43
Timing and IOP Generator	5-6	RK08/RK01 Specifications	6-43
Program Interrupt	4-12		
IOF Interrupt Off	4-13		
ION Interrupt On	4-12	S	
Program Interrupt, Using the	4-13	6 1 1W 110 W AF014	ć 01
Program Interrupt, Extended Memory Programming	4-22	Sample and Hold Options AF01A	6-81
Program Interrupt, Extended Tape Addressing	1-4	Save Field Register, Extended Memory	4-19 3-24
Program Interrupt LINC mode	3-26,4-13	Save Field Register, purpose Scaling, defined, see Shift and Rotate Operations	3-24 3-16
Program Interrupt, Multiple Inputs	5-13	<u> </u>	3-10
Program Interrupt Request	5-12	Second Word Sense Lines	1-5
Program Interrupt, Using the	4-13	Shift and Rotate Operations	3-16
Programmable Real-Time Interface KW12A	1-6	SHL, NMI Shift Path for	4-15
Programmed Data Transfers description of	5-1	Signal Names	5-2
Programmed Data Transfer Interface Diagram	5-5	Sign-bit	3-8
Programmed Data Transfer Timing	5-6	Single and Dual TTY Control,	
Programmed Interrupt, I/O	5-11	Type PT08 Teletype Control	6-10
Programmed Interrupt and Instruction Trap	3-31	Single Teletype Control Type DP12-A	6-9
Programming Disk Software	6-44	Skip, defined	3-19
EAE	4-16	Skip Instructions	3-19
Extended Memory	4-21	Skip loop programming example	3-23
Format Routine, Teletype	6-7	Skips external	3-20
LINC Mode	3-1	Skips, Miscellaneous	3-21
PT08	6-10	Special Functions, LINC mode	3-29
RK8/RK01 I/O Subroutine	6-42	Special Functions, LINC programming	1-5
Teletype	6-7	Specifications, AF01-A A-D Converter	6-76
8 Mode	4-1	Specifications, DC02-E	6-14
PR12 Paper Tape Reader	6-72	Specifications, RF/RS08	6-37
PR12 Paper Tape Reader Instructions	6-72	Specifications, RK08/RK01	6-43
PT08 Equipment Configuration	6-11	Stand Alone Peripherals, list of	6-2
PT08 Instructions	6-11	Standard Mode Addressing, LINCtape	3-42 3-40
PT08 Programming	6-10	Standard Mode, LINCtape	3-40
PT08 Specifications	6-10	Status or Error Conditions, Magnetic Tape	6-49
		Subprocessor, LINCtape	3-39
Q-R		Summary Addressing Methods, 8 Mode	20)
Random Access Disk File,		Table of	4-4
Types DF/DS32 and DF/DS32-D	6-27	Symbols and Abbreviations	1-6
Read/Write Buffer (RWB)	3-39	System Configuration	1-1
Real Time Clocks	6-18	Analog Inputs, Equipment	1-1
Counter Register, KW12-A	6-22	CRT Display, Equipment	1-1
Frequency Range, KW12-B, C	6-26	LINCtape, Equipment Required	1-1
Input Synchronizers, KW12-A	6-19	Relay Buffer, Equipment Description	1-1
• •			

T		PT08 Equipment Configuration	6-11
		PT08 Specifications	6-10
Table of Codes	F-1	Single Teletype Control, DP12-A	6-9
Tape Accumulator (TAC)	3-40	Specifications, DC02-E	6-14
Tape Block Number (TBN)	3-41	Stand Alone Peripherals, List of	6-2
Tape Buffer (TB)	3-40	Teleprinter/Punch	6-7
Tape Interrupt Enable	3-47	Teletype Controls	6-4
Tape Interrupt, Extended Tape Addressing	1-4	Teletype Interface, DP12-A	1-6
Tape Maintenance Instructions	E -1	Teletype Model 33ASR Controls	2-1,2-14
Tape Motion	3-42	Teletype, Subroutine	6-7
Tape Memory (TMA)	3-41	Ten Bit indexing, Program Counter	3-2
Tape Processor Major State Indicators	2-4	Three Cycle Data Break	5-29
Tape Trap	3-21,3-31,3-49	Three Cycle Data Break Timing	5-29
Tape Word Skip	3-49	Timing and IOP Generator	5-6
TC12-F LINCtape Option	6-57	Toggle Switch Registers	2-6
TC58 Instructions	6-45	Transfer Class, Input/Output	4-12
TC58, Magnetic Tape Control	6-45	Transfers, Data Break	5-15
Teleprinter/Punch	6-7	Transports, Magnetic Tape	6-54
Teletype Code, discussion	6-3	Turnaround State, Tape	3-42
Teletype	6-3	TU20 Magnetic Tape Transport,	
Console Teletype Control	6-5	General Description	6-54,6-56
Dataphone Control, DP12-B	6-9	TU20C Magnetic Tape Transport	6-56
DC02-D Instructions	6-15	TU55 Tape Transport Controls and Indicators	2-12
DC02-E Control Instructions	6-14	TU55/56 Tape Transports	1-5
Format Routines	6-7	Two-Word EAE Instructions	4-14
Instructions, Console Teletype Control	6-5	Two-Word Instruction	1-4
Instructions, PT08	6-11		
Keyboard Reader	6-5		
LT37-AD Option, Teletype	6-4	U-V-W	
Maximum Data Rates, PT08	6-13	****	5-42
Model 33ASR, Teletype	6-3	Wiring Hints	5-30
Model 33KSR, Teletype	6-3	Word Count Overflow, Three Cycle Data Break	3-30
Model 35KSR, Teletype	6-4		
Model 37KSR, Teletype	6-4	X-Y-Z	
Multiple Teletype Control, DC02-E	6-13	X-1-L	
Multiple Teletype Control, DC02-F	6-16	XY Plotters	6-68
Option Groupings, Peripheral Devices	6-1	Incremental Plotter and Control,	
Prewired, Optional Groupings	6-1	XY12	6-68
Programming the PT08	6-10	Instructions XY12 Plotter	6-68

PDP-12 COMPUTER SYSTEM REFERENCE MANUAL DEC-12-SRZB-D

READER'S COMMENTS

Digital Equipment Corporation maintains a publications. To do this effectively we need user		to improve the quality and usefulness of its critical evaluation of this manual.
Please comment on this manual's completeness,	accuracy, organiza	tion, usability, and readability.
	· · · · · · · · · · · · · · · · · · ·	
Did you find errors in this manual?		
2.a y 0.a - 2 a - 2 a - 2 a - 2 a - 2 a - 2 a - 2 a - 2 a - 2 a - 2 a - 2 a -		
How can this manual be improved?		
· · · · · · · · · · · · · · · · · · ·		
		d hardware publications. Thus, the following periodically opriate $box(s)$ for a current issue of the publication(s)
PDP-12 Software Manual Update, a collection of	revisions to current sof	tware manuals.
PDP-12 User's Bookshelf, a bibliography of curren	nt software manuals.	
DIGITAL Software News, Announcements for corrections.	r new and revised so	oftware notes, software problems, and documentation
Logic Handbook, an extensive array of logic cap data gathering and control.	abilities, hardware, an	d applications for instrumentation, computer interfacing,
Please describe your position.		
Name	_ Organization	
Street	Department	
City	State	Zip or Country

	Fold Here	
•		
• • • • • • • • • • • • • • • • • • • •	Do not Tear – Fold Here and Staple	
		First Class Permit No. 33
		Maynard, Mass.
BUSINESS REPLY MAIL		
NO POSTAGE STAMP NECES	SARY IF MAILED IN THE UNITED STATES	
Destace will be used to		
Postage will be paid by:	digital	
	Digital Equipment Corporation	
	Software Information Service	
	146 Main Street	
	Maynard, Massachusetts 01754	