DECstation 5000
Model 240
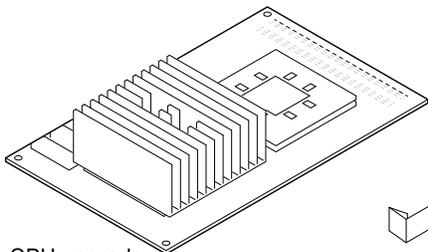
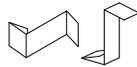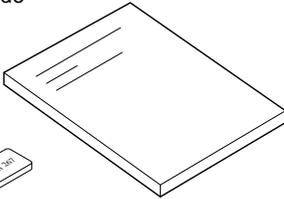**digital**   R4000 Series CPU Upgrade

Check Your Shipment
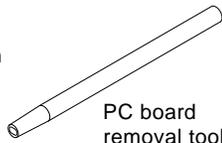
Rivets

CPU upgrade
board
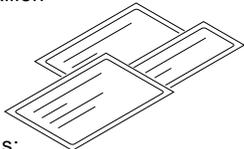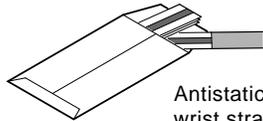
EMI ground
clips

Documentation

Medallion

PC board
removal tool

Labels:
  Power warning
  Product conversion
  Return address

Antistatic
wrist strap

Check the System Software

1. You must be running ULTRIX 4.3A or later before you upgrade the CPU. To find your ULTRIX version number, enter this command:

   ```
   >> more /etc/motd
   ```

2. To shut down your system software, enter this command:

   ```
   # /etc/shutdown -h
   ```

3. To obtain the slot and device numbers needed to reboot your system, enter this command:

   ```
   # printenv
   ```
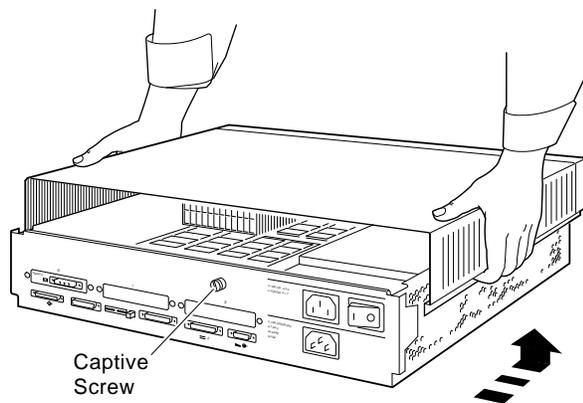
   A sample of the resulting display might be:

   ```
   boot=3/rz0/vmunix -a
   ```

   Write your reboot information here:

See the *Guide to Installing ULTRIX* for information on upgrading your system.

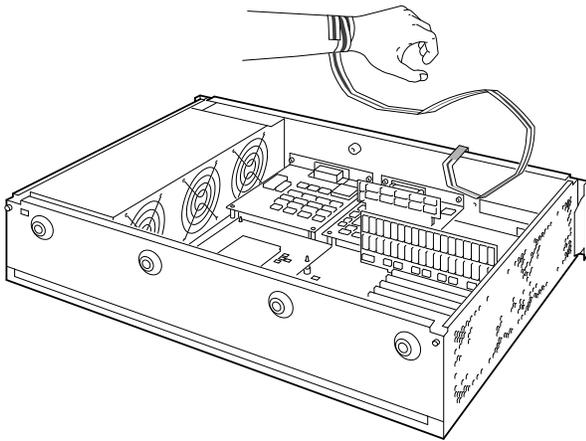## Remove the System Unit Cover

4. Turn off your system unit and any expansion boxes. Keep the system plugged in (grounded) to the outlet.

5. Unscrew the captive screw.

6. Press down on the cover, slide it forward, and lift it off.

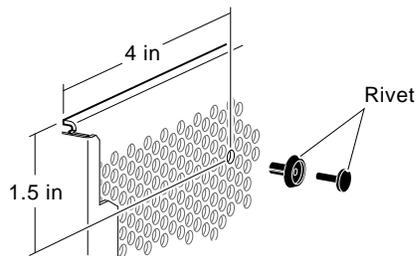

Captive
Screw

Attach Your Wrist Strap

7. Attach the antistatic wrist strap.

Caution: You may damage the equipment
if you do not use the antistatic wrist strap.

Attach the Rivets

8. Push in the rivets.

Rivets

4 in

1.5 in

Rivet

Remove the R3000 CPU Module

9.   Push the PC board removal tool down onto each of the mounting posts to un-lock the posts.

10. Pry up the board with your fingers. Set it aside.

CPU module connectors

CPU module

PC board removal tool

Mounting post (one of four)

Lock

Insert Grounding Clips
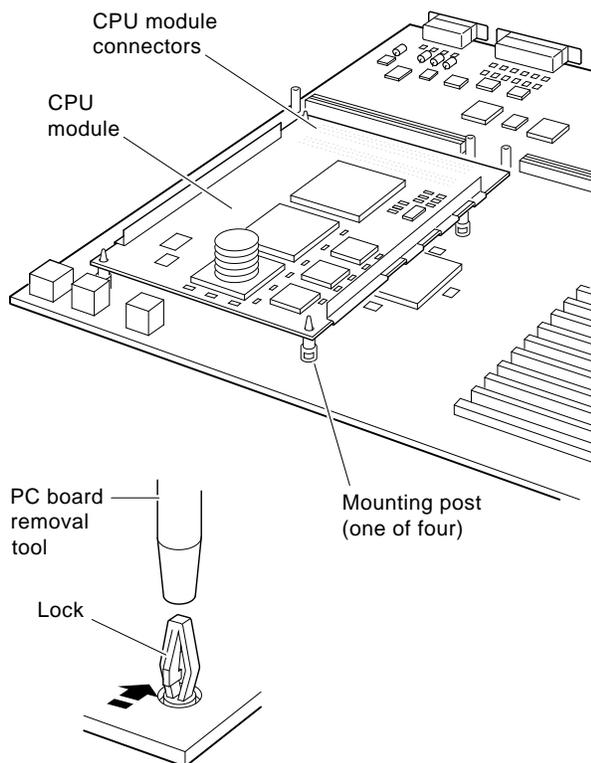
11.   Slide each clip in place under the
power supply. Use the PC board
removal tool to push in the clip
securely.

EMI grounding
clips

EMI
grounding
clip

PC board
removal tool

Install the R4000 Series CPU

12. Align the board mounting holes over the mounting posts.

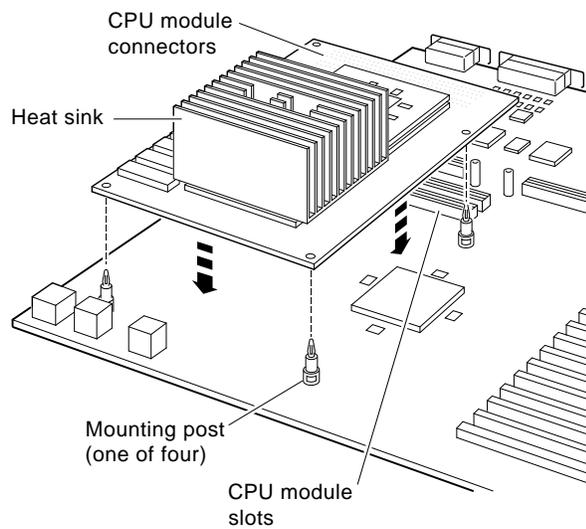13. With your fingers over the holes, push down on the board. Then push down on the rear of the board over the CPU module connectors.

Caution: Do not push on the heat sink.

CPU module
connectors

Heat sink

Mounting post
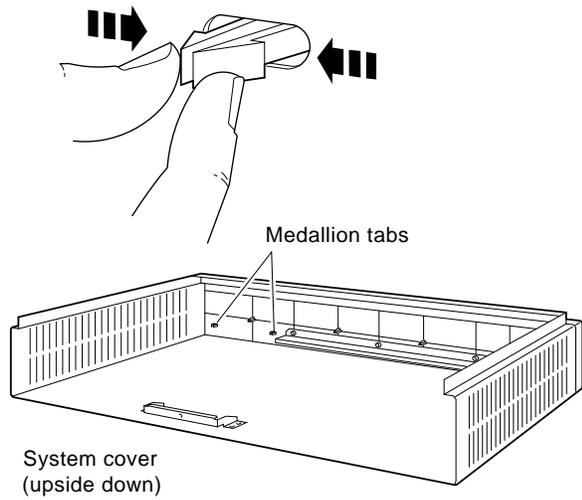(one of four)

CPU module
slots

Replace the Medallion

14. Remove your wrist strap.

15. Place the system unit cover upside
    down on a table.

16. Squeeze together the medallion tabs
    and pop out the medallion.

17. Choose the correct system medallion:

    Workstation: DECstation 5000 Model 240
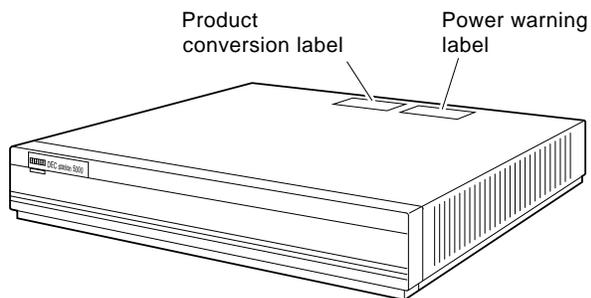
    Server: DECsystem 5000 Model 240

Replace the Medallion

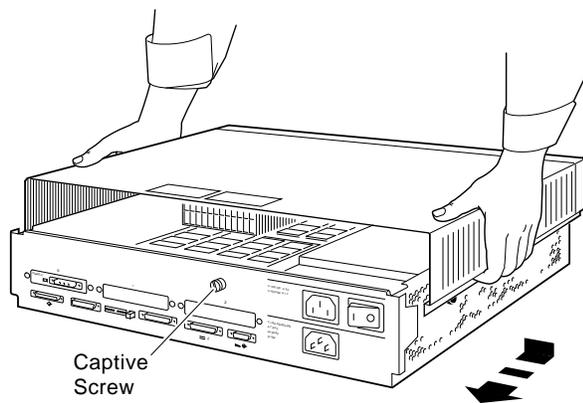18. Snap in the new medallion and turn the cover right side up.

Medallion tabs

System cover
(upside down)

Replace the System Box Cover

19. Paste the power warning and product conversion labels onto the top of the cover.

Product
conversion label

Power warning
label

DEC station 5000

20. Be careful that the cover clears the heat sink when you snap on the cover.

Captive
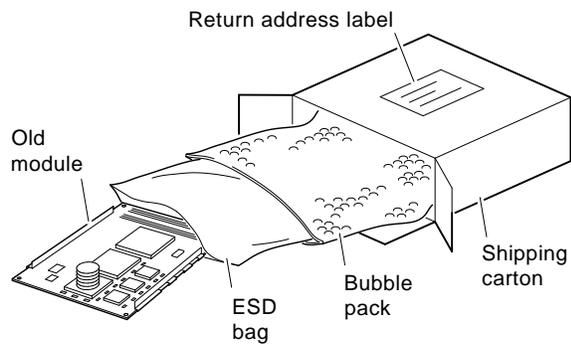Screw

Turn on the System Software

21. Turn on your system unit and any expansion boxes.

22. Use the **printenv** information you recorded earlier to reboot the system as shown in the following example:

```
>>setenv boot "3/rz0/vmunix -a"
>>boot
```

This example shows the software rebooted from a hard disk set to SCSI ID 0 in slot 3.

Return R3000 CPU to Digital

23. Put the R3000 CPU module into the R4000 packaging. Paste on the address label and mail the package to Digital Equipment Corporation.

Return address label

Old module

ESD bag

Bubble pack

Shipping carton

24. Call Digital to update your hardware service contract.